
Oau A5303HI

A Simple Manual (English Version)

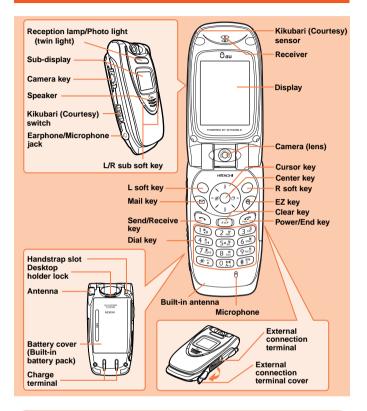

Turning the Power ON and OFF

Turning the power ON

Press and hold @ for more than one second.

Turning the power OFF

Press and hold @ for more than one second.

Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the A5303H will receive current date and time information for the local service area, and the date and time will be updated accordingly.

From the stand-by screen: press 🏵 [メニュー (Menu) → press 🏵 → press 👀 → press 👀

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press 🍥 [メニュー](Menu) → press 🕞 → select the item you want to display → press ⑥ [選択 (Select).

Making / Answering a Call

Making a Call

From the stand-by screen: enter the phone number you want to call press . To end the call: press @ or fold the phone.

Answering a Call

Press while the phone is ringing.

To adjust the receiver volume during a call; press (3).

Storing an Entry in the Phone Book / Retrieving a Phone **Book Entry**

Storing an Entry

From the stand-by screen: press 〇[アドレス帳](Phone book) for more than one second → press ③ to select the item you want to store → press ④ [選択 (Select) → enter the data → press ○ [登録 (Register).

To change character entry mode into English entry mode (MA), press O MB 5 lin the character entry display.

Retrieving an Entry

From the stand-by screen: press 〇 「アドレス帳 (Phone book) to display the Gyo (hiragana row: a, ka, sa, ta, na, ha, ma, ya, ra, wa, alphabet, others) Search screen → press ⋈ to select the hiragana row under which the entry is stored press to select the appropriate name ⇒ press (※)[選択](Select) to display the Phone Book Entry details screen.

Setting the E-mail and EZweb Default Settings

Before using the E-mail and EZweb services, you must set the default settings. From the stand-by screen: press ⊚ or ø → Check the message and press ⊚ [OK] → Check the E-mail address and press (OK]

Using E-mail and C-mail

E-mail

If you subscribed to the E-mail service when you purchased A5303H , you will be able to use the E-mail service immediately. If you did not, please contact the au shop where you purchased your phone for further information. Make sure that you set the default settings before using the E-mail and EZweb services for the first time. (See "Setting the E-mail/EZweb Default Settings" above.)

. Sending an E-mail Message

From the stand-by screen: press 🍽 → press 🕦 → select the 🗟 input field and press ⑥ [編集 (Edit) → press ⑥ [追加 (Add) → press 🖚 → enter the recipient's address → press ⑥ [登録 (Register) → press ○ [確定 (Decide) → select the 闘 input field and press ⑥ [編集 (Edit) → enter the subject → press ⑥ [登録 (Register) → select the 圓 input field and press ⑥ [編集 [(Edit) → enter your message → press ⑥ [登録] (Register) → press ○ [送信 (Send).

Reading a Received E-mail Message

When you receive an E-mail message, "新着EメールX件" (X New E-mail), where X represents the number of messages received, will be displayed on the stand-by screen. From the stand-by screen: press ⑥ [確認 [Check] → press ⑧ to select [メインフォル ダ (Main folder) → press ⑥ 表示 (Display) → press ⑥ to select the e-mail message you want to read → press ⑩ [表示 (Display).

Subscribers in the Tokyo and Chubu - incorporating Aichi, Gifu, and Mie prefectures metropolitan areas do not need to subscribe to use this service. For subscribers located outside of these areas, a separate subscription is required.

. Sending a C-mail Message

From the stand-by screen: press and hold ♥ for more than one second → press 🕒 → enter the message → press () [登録 [Register) → press () → enter the recipient's phone number → press ⑥ [登録] (Register) → press ⑥ [送信] (Send).

· Reading a Received C-mail Message

When you receive a C-mail message. "新着CメールX件" (X New C-mail), where X represents the number of messages received, will be displayed on the stand-by screen. From the stand-by screen; press ⑥ [確認 (Check).

Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your au mobile phone. You can enjoy this service wherever the signal reaches. To use EZweb service. separate subscription is needed. (Additional charge is needed.) If you did not subscribe to EZweb service when you purchased A5303H . please contact the au shop where you purchased your phone or contact the customer service by phone.

If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. Make sure that you set the default settings before using the Email and EZweb services for the first time. (See "Setting the E-mail/EZweb Default Settings" above)

From the stand-by screen; press $\mathfrak{P} \rightarrow \text{press} \longrightarrow \text{select the website you want to view.}$

Using the Camera (Photos/Movie Clips)

Taking a Photo

From the stand-by screen: press and hold Camera key downwards for more than one second → press ⑥ [撮影](Shoot) to shoot a photo → press ⑥ [保存](Store) again to store the photo

Pressing camera key upwards during Photo mode changes to Movie mode.

From the stand-by screen: press and hold Camera key downwards for more than one second ⇒ press // [撮影](Shoot) to shoot a photo ⇒ press // [保存](Store) again to

Recording a Movie Clip

From the stand-by screen; press and hold Camera key upwards for more than one second ⇒ press ⑥ [録画](Record) to start recording ⇒ press ⑥ [保存](Store) again to

Pressing ⑥ [停止 1/Stop) during recording stops recording.

Pressing camera key downwards during Movie mode changes to Photo mode

If A5303H is folded

From the stand-by screen; press and hold Camera key upwards for more than one second → press // [録画](Record) to start recording → press // [保存](Store) again to

Pressing // [停止](Stop) during recording stops recording.

Making an International Call



English Announcement Function

This function allows you to play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press (a) $[\times = -]$ (Menu) \Rightarrow press $(3.3) \Rightarrow$ press $(3.3) \Rightarrow$ press → press () [発信](Call).

Other Handy Features

 
Manner Mode

From the stand-by screen: change Kikubari (Courtesy) switch

Normal: Ringer tone sounds.

Safety: After ringer tone sounds, the caller hears the message indicating that you are driving and, the caller can leave a

Silent: After A5303H vibrates without ringing, the caller hears the message, then the caller can leave a message.



Setting the Voice Record Function

From the stand-by screen: press and hold ∩ [≯€](Memo) for more than one second. To disable the Voice Record function, press and hold ○ [メモ](Memo) for more than one second from the stand-by screen.

For inquiries, please contact

au Customer Service Center (General Information)

If you are calling from a landline phone: 😥 0077-7-111 (toll free)

If you are calling from an au mobile phone: 157 (toll free)