


# English Simple Manual (簡易英語版)

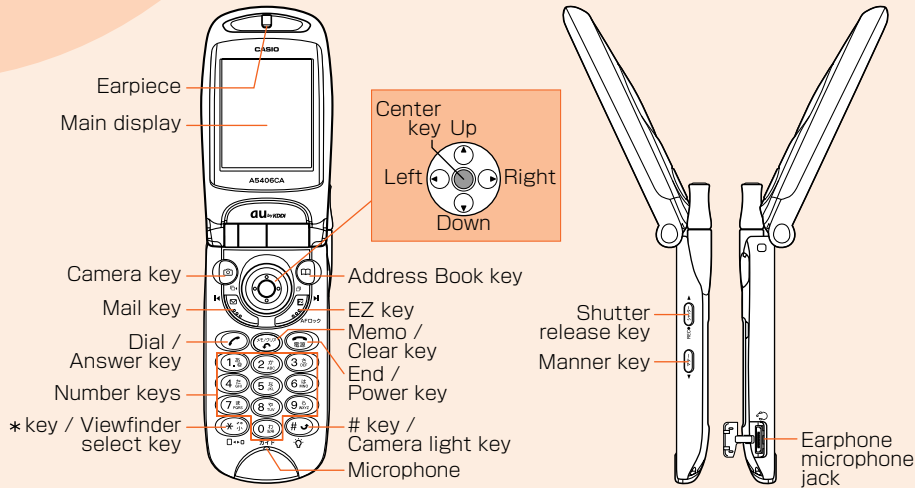

## Turning Power On and Off

- Turning power on: Hold down **[Power]** for a few seconds.
- Turning power off: Hold down **[Power]** for at least one second.

## Applying the Phone's Default Settings

From the stand-by screen: Press **[Menu]**. ▶ Press **[3.5]**.

## Checking Your Own Phone Number

From the stand-by screen: Press **[Menu]**. ▶ Press **[0.5]**.

## Placing and Answering a Call

- Placing a Call
  - From the stand-by screen: Enter the phone number you want to call.
  - ▶ Press **[Call]**.
  - To end a call: Press **[End]**.
- Answering a Call
  - When the phone starts ringing, press **[Call]**.
  - To adjust the earpiece volume during a call: Use **[Volume]**.

## Storing and Recalling an Address Book Data

- Storing Data
  - From the stand-by screen: Hold down **[Menu]** for at least one second.
  - ▶ Use **[Up]** to select the Address Book record you want to edit. ▶ Press **[Edit]** (編集).
  - ▶ Enter the data. ▶ Press **[Store]** (登録).
- Recalling Data
  - From the stand-by screen: Press **[Menu]** to display the Hiragana Row Search screen.
  - ▶ Use **[Up]** to select the hiragana row for the record you want.
  - ▶ Use **[Down]** to select the name of the record.
  - ▶ Press **[Display]** (表示) to display the Address Book record screen.

## Using the Camera (Movie and Snapshot)

- Recording a Movie Clip
  - From the stand-by screen: Hold down **[Camera]** for at least one second.
  - ▶ Press **[Record]** (録画) or **[Movie]** to start recording. ▶ Press **[End]** (終了) to stop recording.
  - ▶ Press **[Store]** (保存) to store the movie.
  - Pressing **[Pause]** (一時停止) during recording pauses recording.
  - Pressing **[Photo]** (フォト) in the Movie mode changes to the Photo mode.

### If the phone is folded

- From the stand-by screen: Hold down **[Movie]** for at least one second.
- ▶ Press **[Movie]** (ムービー) to start recording.
- ▶ Press **[Pause]** (一時停止) and then **[End]** (終了) to stop recording.
- ▶ Press **[Store]** (保存) to store the movie.
- Pressing **[Cancel]** (キャンセル) during recording cancels recording.

### ● Taking a Snapshot

 
- From the stand-by screen: Press **[Shutter]** (or hold down **[Movie]** for at least one second).
- ▶ Press **[Shutter]** (シャッター) or **[Shutter]** to record a snapshot.
- ▶ Press **[Store]** (保存) to store the photo.
- Pressing **[Movie]** (ムービー) in the Photo mode changes to the Movie mode.

### If the phone is folded

- From the stand-by screen: Hold down **[Snapshot]** for at least one second.
- ▶ Press **[Snapshot]** (撮影) to record a snapshot.
- ▶ Press **[Store]** (保存) to store the photo.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA



## English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.  
From the stand-by screen: Press **[Menu]**. ▶ Press **[8.0]**. ▶ Press **[1.5]**. ▶ Press **[6.5]**. ▶ Press **[Call]**.

## Other Handy Features

- Manner Mode
  - From the stand-by screen: Hold down **[Manner]** for at least one second.
  - Repeat the above operation to disable the Manner mode.
- Take A Message Feature (Voice Recording)
  - From the stand-by screen: Hold down **[Message]** for at least one second.
  - Repeat the above operation to disable the Take A Message feature.

### For inquiries, please contact

- au Customer Service Center (General Information)
  - If you are calling from a landline phone: **[F]** 0077-7-111 (toll free)
  - If you are calling from an au mobile phone: 157 (toll free)