 
 


## CONTENT

<b>CHAPTER 1 BEFORE USING YOUR MWg Atom V</b>	<b>6</b>
1.1 WHAT'S IN THE BOX	6
1.2 FAMILIARIZING YOURSELF WITH YOUR MWg Atom V	7
1.3 FEATURES	10
1.4 INSERT THE BATTERY & SIM CARD	11
1.5 SIM	12
1.6 BATTERY	12
1.7 LOCK/UNLOCK	13
1.8 POWER	14
<b>CHAPTER 2 GETTING STARTED</b>	<b>16</b>
2.1 DISPLAY INFORMATION	16
2.2 SCREEN ORIENTATION	25
2.3 SETTING TIME & DATE	26
2.4 USING THE STYLUS	26
2.5 SCREEN ALIGNMENT	26
2.6 INPUT METHOD	27
2.7 DRAWING ON THE SCREEN	29
2.8 RECORDING A MESSAGE	29
2.9 EDITING MY INFO	30
2.10 PASSWORD SETUP	30
2.11 MEMORY EXPANSION	30
2.12 DATA BACKUP	30
<b>CHAPTER 3 PHONE FUNCTIONS</b>	<b>32</b>
3.1 PHONE SCREEN AND KEY INTRODUCTION	32
3.2 MAKING A CALL	33
3.3 RECEIVING / IGNORING A CALL	33
3.4 INTERNATIONAL CALLS	33
3.5 EMERGENCY CALLS	34



3.6	VOLUME ADJUSTMENT	34
3.7	CONTACTS	34
3.8	CREATING A NEW CONTACT	35
3.9	CALL HISTORY	36
3.10	SETTING RING TONE AND PASSWORD	36
3.11	SIM MANAGER	37
<b>CHAPTER 4 SETTINGS</b>		<b>40</b>
4.1	PERSONAL SETTINGS	40
4.2	SYSTEM SETTINGS	43
<b>CHAPTER 5 SYNCHRONIZATION</b>		<b>48</b>
5.1	ABOUT SYNCHRONIZATION	48
5.2	INSTALLING ACTIVESYNC	49
5.3	CHOOSING YOUR SYNCHRONIZATION TYPE	50
5.4	USING ACTIVESYNC TOOLS	51
5.5	ACTIVESYNC ERRORS	53
<b>CHAPTER 6 GETTING CONNECTED</b>		<b>56</b>
6.1	WIRELESS MANAGER	56
6.2	GPRS	57
6.3	BLUETOOTH	58
6.4	WI-FI	63
6.5	USB CARD READER	64
6.6	INTERNET SHARING	64
6.7	CELL BROADCAST SETTING	65
6.8	CONNECTING TO THE INTERNET	65
<b>CHAPTER 7 MESSAGING</b>		<b>68</b>
7.1	SHORT MESSAGE (SMS)	69
7.2	MULTIMEDIA MESSAGES (MMS)	72
7.3	VOICE MAIL	77



 
7.4	E-MAIL	77
7.5	PUSH E-MAIL	79
7.6	WINDOWS LIVE MESSENGER	79

## **CHAPTER 8 MULTIMEDIA** **81**


8.1	CAMERA	82
8.2	VIDEO RECORDER	85
8.3	TAKING A GEO TAGGED PHOTO	87
8.4	PHOTO EDITOR	87
8.5	FM RADIO	88
8.6	PICTURES & VIDEOS	89
8.7	JAVA	89
8.8	STREAMING PLAYER	89
8.9	RECORDER	90
8.10	AUDIO MIXER	90

## **CHAPTER 9 APPLICATIONS** **92**

9.1	CALENDAR	92
9.2	TASKS	93
9.3	FILE EXPLORER	94
9.4	INTERNET EXPLORER	94
9.5	WINDOWS MEDIA	95
9.6	GAMES	96
9.7	CALCULATOR	96
9.8	ZIP	96
9.9	EXCEL MOBILE	96
9.10	POWERPOINT MOBILE	98
9.11	WORD MOBILE	99
9.12	NOTES	100
9.13	SEARCH	100
9.14	WINDOWS LIVE	101
9.15	GPS TRACKING	101






<b>CHAPTER 10 MANAGING YOUR MWg Atom V</b>	<b>104</b>
10.1 MEMORY MANAGEMENT	104
10.2 RUNNING PROGRAMS MANAGEMENT	104
10.3 ADDING OR REMOVING PROGRAMS	105
<b>CHAPTER 11 IMPORTANT SAFETY INFORMATION</b>	<b>108</b>
11.1 SAFETY INFORMATION	108
11.2 PHONE CARE	108
11.3 DRIVING SAFETY	110
11.4 ELECTRONIC DEVICES	110
11.5 OTHER SAFETY GUIDELINES	111
11.6 CAUTIONS	111
11.7 ABOUT THIS GUIDE	115
<b>CHAPTER 12 SPECIFICATIONS</b>	<b>118</b>
<b>CHAPTER 13 FAQs</b>	<b>122</b>
<b>Index</b>	<b>124</b>
<b>Warranty Card</b>	<b>128</b>

 


# **Chapter 1**

## **Before Using Your MWg Atom V**

    - 1.1 What's in the box**
- 1.2 Familiarizing yourself with your MWg Atom V**
- 1.3 Features**
- 1.4 Insert the battery & SIM card**
- 1.5 SIM**
- 1.6 Battery**
- 1.7 How to use the capsense keys**
- 1.8 Lock/Unlock**
- 1.9 Power**





# Chapter 1. Before Using Your MWg Atom V

## 1.1 What's in the box



Thank you for selecting MWg Atom V. Please check if your package comes with the following items. If any of them is missing, please contact your retailer.

 


## 1.2 Familiarizing yourself with your MWg Atom V

This section introduces you to the hardware of the device and its function keys.



No	Item	Function
1	Touch screen	Display screen. Use stylus to select items on the screen.
2	Left soft key	Press to execute the function displayed on the bottom left of the screen.
3	Right soft key	This is capsense key. Press to execute the function displayed on the bottom right of the screen.
4	Talk/Send key	You can make or answer a call by pressing <b>Talk/Send</b> key, or go to <b>Phone Dialer</b> screen.
5	End key	Press this key to end a call or to return to <b>Today</b> screen from any screen.
6	Windows  key	Press the Windows  key to open <b>Start</b> menu options.
7	OK key	To execute or terminate a selected function or application.
8	5- Way navigation key	The 5-way navigation key . Press up, down, left and right directions to navigate. Tap the center key to execute the selected function or application.
9	LED Indicator	The LED indicator indicates the status of your device by showing different colors. Blue: Bluetooth is activated. Orange: Wi-Fi is activated. Green: Mobile network is detected. Purple: GPS signal is detected Red: Notifications for e.g. missed calls, low battery, New SMS.




No	Item	Function
10	Power on/off	Press and hold Power key for a few seconds to power on/off your device.
11	Mini USB slot	Use USB connector to synchronize data with your desktop PC, transmit data or charge the battery.
12	Soft reset button	Press the button with stylus to soft reset your device.



No	Item	Function
12	Soft reset button	Press the button with stylus to soft reset your device.
13	Camera key	Press and hold Camera key to launch camera function. In Camera mode, press half way to focus and full press to capture pictures.
14	Volume key	Slide this key upwards or downwards to adjust volume. Press and hold this key to directly record voice note.
15	Micro SD card slot	You can insert your Micro SD card here.
16	Headset plug	Plug in headset, and then you can listen to the FM radio, music via the headset or use the device's hands-free kit.
17	Stylus holder & stylus	Use the stylus to touch the screen panel.




 

No	Item	Function
18	Speaker	Besides using stereo headset, you may play music/voice through the built-in speaker.
19	Flash light	Flash light for camera.
20	Camera lens	The CMOS camera on the back of the device supports 2-mega-pixel photo and high quality video.
21	Battery cover	Push and slide out the cover to replace battery and unlock SIM card hatch.

## 1

 Before Using Your MWG Atom V




## 1

### 1.3 Features

Your MWg Atom V not only having mobile phone features, it also integrates Personal Digital Assistant (PDA) capability. The following section provides more information about the device features:

 
- Touch screen: 2.8" TFT LCD display with 65,536 colors effective.
- 5-way navigation key, Windows key, OK key.
- Speaker.
- Mini-USB slot for connection and battery charging.
- Camera: 2.0 mega pixels.
- Connections: 3.5G, GPRS, Bluetooth, and Wireless LAN.
- Microsoft Windows Mobile 6: Windows Live, Windows Live Messenger, Pocket Outlook, Pocket Explorer, and Office tools (Word, Excel, and PowerPoint). Also features Encryption, Internet Sharing, Windows Update, Pictures & Videos, Calculator, Games, ActiveSync, and File Explorer.
- Other programs: SIM Manager, FM Radio, Zip, Java, Streaming Player, GPS Tracking, etc.




## 1.4 Insert the battery & SIM card

Before inserting/removing a SIM card, please make sure that your MWg Atom V is powered off and is not connected to any power supply by the USB cable or charger.

 
1. Look at the back of your MWg Atom V. Push and slide out the battery cover.

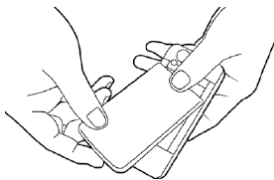

 
2. - Remove the Stylus.
  - Remove the battery by pulling at the top right hand lip.
  - Pull at the tag on the top left of the battery to remove the SIM carrier.

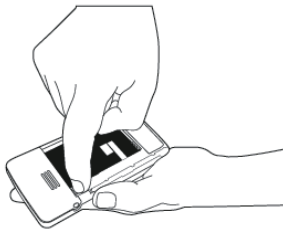

 
3. - Insert the SIM into the carrier, making sure the SIM is fully aligned inside the carrier.
  - Insert the SIM carrier back into the slot with the metal contacts on the SIM facing down. (do not force the carrier into the slot)

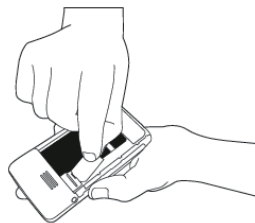

 4. Return the battery, battery cover and stylus back onto the device in that order.

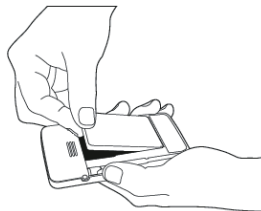


 5. Slide the battery cover back and push until you hear "click".

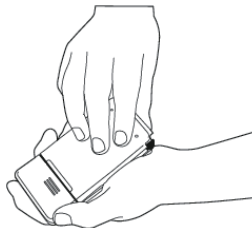

1

 Before Using Your MWg Atom V



## 1.5 SIM

Before using your MWg Atom V, you must contact a network operator to get a personal SIM (Subscriber Identity Module). The phone functions are unusable (except for emergency calls) until a valid SIM card is inserted.

**Please note:** If the device or the SIM card is lost or stolen, you should contact your network operator immediately in order to prevent unauthorized use.

## 1.6 Battery

Your MWg Atom V comes with a removable and rechargeable Lithium Polymer battery. The standby time and talk time will depend on your actual usage network coverage and whether the device is in standby mode. The battery life may also vary depending on how frequently the user switches between functions.

**Please note:** Using any battery pack or AC adapter (charger) not specified/endorsed by MWg on this phone may be dangerous and may invalidate any warranty and approval given to the device. Unplug the charger from the power supply when it is not in use.

 
### Charging the battery

Please make sure that the battery is installed and fully charged when using your MWg Atom V for the first time. You may charge the battery in the following ways:

1. Universal AC Adapter: Plug your AC adapter into a suitable main power socket and plug the connector to the charging slot of your MWg Atom V. The phone will start charging automatically.
2. USB cable: Connect your MWg Atom V to your PC's USB port with the USB cable supplied in your package.

**Note:** Charging by USB is, however, slower than charging from the mains power supply.

## 1.7 Lock/Unlock

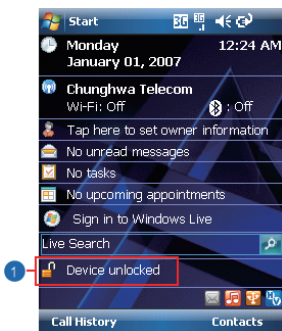


1. Lock the device: On **Today** screen, tap **Device unlocked** to lock your MWg Atom V. The device will not respond to touches on screen nor react to any input on the keypad when it is locked.

You may also enable the device lock automatically after the screen backlight is turned off.

2. Unlock the device:  
Tap **Unlock** on the bottom left of the screen.  
Then tap **Unlock** button on the newly appeared screen and the device is unlocked.

### To enable automatic lock:

 Tap **Start > Settings > System tab > Power > Extended** tab and **check lock device when device enter stand-by**. Your MWg Atom V will enable lock automatically during stand-by.

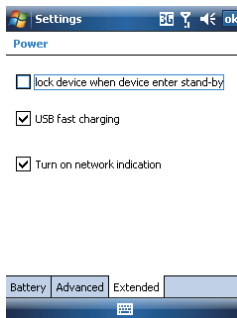

## 1.8 Power

### To power on your MWg Atom V

While the device is powered off, press **Power** key on the top of the device to power it on.

### To power off your MWg Atom V

 
 
While the power is on, press and hold **Power** key on the top of the device for about 3 seconds to turn it off. To reduce the power consumption of your device, you may change the backlight duration and brightness level. Also, you can save more power by setting the device to turn off automatically if it is not in use for a specific period of time.

 
### To check battery power level

Tap **Start > Settings > System tab > Power > Battery** tab. The bar indicates the remaining battery power level.

### To turn off the device automatically

Tap **Start > Settings > System tab > Power > Advanced** tab and select the duration before your MWg Atom V turns off by itself. This feature controls the screen standby time.


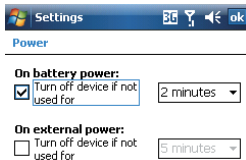






## **Chapter 2**

### **Getting Started**

    - 2.1 Display information**
- 2.2 Screen orientation**
- 2.3 Setting time & date**
- 2.4 Using the stylus**
- 2.5 Screen alignment**
- 2.6 Input method**
- 2.7 Drawing on the screen**
- 2.8 Recording a message**
- 2.9 Editing my info**
- 2.10 Password setup**
- 2.11 Memory expansion**
- 2.12 Data backup**






## Chapter 2 Getting Started

### 2.1 Display information

 The main screen displays the following information:

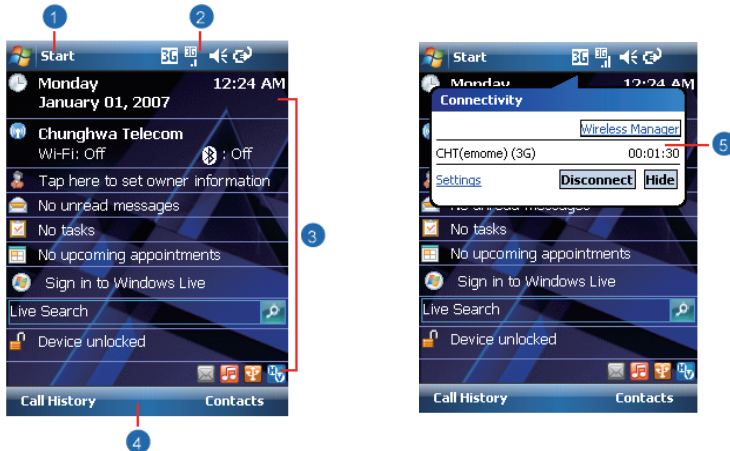

#### 1. Start menu

Tap here to open **Windows Start** menu on the top left of the screen. To return to **Today** screen at any time, tap **Start > Today**.

#### 2. Status & Icon area

Displays notification icons and system status. You can tap the icon to look into the detail or settings of the function.

#### 3. Today screen

On **Today** screen, this area contains shortcuts to certain programs and important information of today. To change **Today** screen settings, tap **Start > Settings > Personal** tab > **Today**.

#### 4. Command area

Depending on different mode, this area contains different features such as menu options, input panel and commands to create or edit a file.

#### 5. Pop up menu

This allows you to quickly access an item. Tap on the icon and tap again to perform an action. To cancel it, tap other areas of the screen.



## Start menu

 
Tap **Start** to bring up a list of menu:



## 2

 
Getting started

No	Description
1	Quick access to certain fixed Microsoft programs.
2	The most recent 5 programs you have used.
3	Tap on <b>Programs</b> to enter the <b>Programs</b> menu.
4	Tap on <b>Settings</b> to enter the <b>Settings</b> menu.
5	Tap on <b>Help</b> to see detail information about different features.







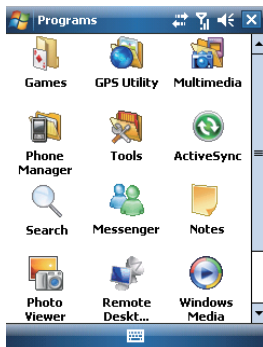

## Programs

 
You will see many application icons under your **Programs** menu. From **Programs** menu, you may tap the application icon that you desired to use to execute the application.









From **Today** screen > **Start** > **Programs**

Your MWg Atom V contains the following programs:


Icon	Programs	Description
	Multimedia	Audio Mixer, Camera, Photo Editor, Pictures & Videos, Recorder, JAVA, Streaming Player, FM Radio
	Tools	Calculator, Easy-Touch Menu, Pocket Remote, Restore to Default, Zip
	Phone Manager	Dial Kit, Internet Sharing, SIM Manager
	Games	Bubbles Breaker, Solitaire
	ActiveSync	Transmit data between your computer and the device.
	Messenger	Perform MSN functions.



Icon	Programs	Description
	Notes	Write notes, memo, or drawings.
	Search	Search for all data, programs, and files.
	Photo Viewer	View all the pictures on your MWg Atom V.
	Remote Desktop Mobile	To set up the desktop screen information and display.
	Windows Live	This is your gateway to help with Live Search.
	GPS Utility	GPS Tracking

## 2

 Getting started




## Settings

Your MWg Atom V contains **Personal**, **System**, and **Connections** setting items.


2

 Getting started

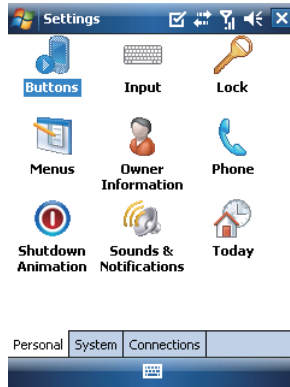


Tap **Start** > **Settings** > **Personal** tab:

Icon	Settings	Description
	Buttons	You may assign programs to a hardware button.
	Input	Set your preferred input method.
	Lock	You may set a personal password to lock your MWg Atom V.
	Menus	Select the programs to be displayed in <b>Start</b> menu.

 


Icon	Settings	Description
	Owner Information	Set your personal information.
	Phone	Settings for phone functions.
	Shutdown Animation	Settings for shutdown screen.
	Sounds & Notifications	Settings for alarm and notification sound type.
	Today	Settings for screen appearance and items displayed on the Today screen.

 Tap Start > Settings > System tab:

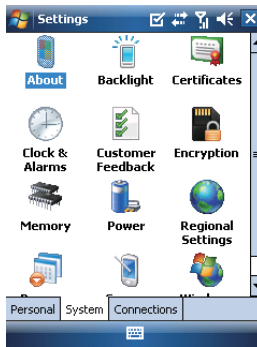

Icon	Settings	Description
	About	Contain information about your MWg Atom V.
	Backlight	Configure the backlight settings and adjusts the brightness level to save power.
	Certificates	Information about the certificate issuer and the expiration date.
	Clock & Alarms	Settings for time and alarms.

 



## 2







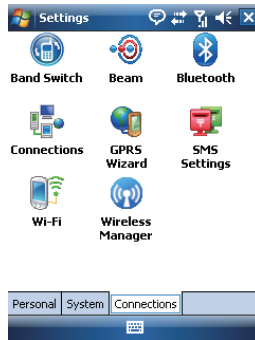 

 
Getting started

Icon	Settings	Description
	Customer Feedback	Customer Experience Improvement Program from Microsoft®.
	Encryption	Encrypt files.
	Memory	Display memory status and programs that are currently running.
	Power	Battery status and settings.
	Regional Settings	Settings for region, number, currency, time, and date format.
	Remove Programs	Remove programs from your MWg Atom V.
	Screen	Settings for screen orientation, screen alignment, and text size.
	Windows Update	Download updates for Windows Mobile setup.

Tap Start > Settings > Connections tab






Icon	Settings	Description
	Beam	You can choose to receive all incoming beams.
	Bluetooth	Settings for Bluetooth connection.
	Cell Broadcast Setting	Receive broadcast channel information and news from your service provider.
	Connections	Settings and management for modem connections.
	GPRS Wizard	Basic settings for GPRS connection.
	USB	Use your MWg Atom V as a micro SD card reader.
	Wi-Fi	Manage and configure your Wi-Fi settings.
	Wi-Fi Utility	Details of your Wi-Fi connection.
	Wireless Manager	Turn on/off Radio, 3G / GPRS data, Wi-Fi and Bluetooth.

## 2

 Getting started



## Status & Icon area

This area shows icons of basic system status or alerts. You can tap on the icons to get the definitions or go to the settings.

Status Type	Icon	Description
Battery		Main battery power is full. The level of battery power is shown in percentage.
		Low battery. Please recharge.
		Battery is charging.
Calls		Call forward.
		Call on hold.
		Data call.
		You have missed calls.
		Voice call in active.
	Connection	
		3G network is connected.
		GPRS is in range.
		GPRS is connected.
		Building connection to GPRS.
		Bluetooth is activated.
		Wi-Fi is activated; a Wi-Fi network is in range; Wi-Fi network is connected.
Signal		
		No signal.
		Roaming.
		GPS Tracking is trying to connect.
		GPS Tracking is connected.
Message		You have one or more new message(s).
		You have one or more new voice mail(s).
		You have one or more instant message(s).
Volume		System volume.
		Phone volume.
		Ringer is on.
		Ringer is off.

**Please note:** To choose reminder types and sounds for your MWg Atom V, tap **Start > Settings > Personal tab > Sounds & Notifications**.



## 2.2 Screen orientation

You can choose your screen display in Portrait or Landscape mode. The Portrait mode allows you to get a better view or a better operation of certain programs on your MWg Atom V, while Landscape may be optimal for viewing longer text files. You can also change the default screen display by following the steps below:

 
1. Tap **Start** > **Settings** > **System** tab > **Screen** > **General** tab.
2. On **General** tab screen, select your desired orientation, **Portrait**, **Landscape (right-handed)**, or **Landscape (left-handed)**.
3. Tap **OK**, and the screen will be changed accordingly.



Portrait



Landscape



## 2.3 Setting time & date

When using your MWg Atom V for the first time, you are required to set your time zone, time, and date. You can also tap on the clock icon on Today screen to setup time and date.

1. Tap **Start** > **Settings** > **System** tab > **Clock & Alarms** > **Time** tab.
2. Select **Home** or **Visiting**.
3. Select your time zone.
4. Select **AM** / **PM**.
5. Use the **up** and **down** arrow aside hour, minute and second to adjust the highlighted time unit.
6. Tap the **down** arrow aside the date to open a calendar, and select a desired month, date, and year.
7. Tap **OK**, a pop-up window will appear on your screen to confirm to **Save Changes to the clock settings**.
8. Tap **Yes** to save the changes and exit.

**Please note:** Change the time on Home zone may change your Calendar schedule.

## 2.4 Using the stylus

Use the stylus to touch or write on your screen. Using stylus can avoid damaging your screen. There are 2 ways to use your stylus:

- **Tap:** softly tap on a desired item by your stylus, and lift the pen from the screen.
- **Press:** touch and hold your stylus on a desired item for a few seconds until a blue dotted circle appears. This indicates that a pop-up menu is going to be activated.

## 2.5 Screen alignment



When using your MWg Atom V for the first time, screen alignment is required. If you find that the device does not accurately respond to your stylus taps, or you have performed a system reset, you need to align your screen again.

1. Tap **Start** > **Settings** > **System** tab > **Screen** > **General** tab.
2. Tap **Align Screen** on your screen.
3. On the align screen, use your stylus to touch the crosses on the screen accurately.
4. Tap **OK** to exit.


## 2.6 Input method


### Block Recognizer

With **Block Recognizer**, you can input character strokes (using the stylus) that are similar to those used on other devices.

 
1. On your screen keyboard, tap the arrow icon  next to the keyboard icon for more input methods. On the pop-up list, tap **Block Recognizer** .
2. Write letters and numbers in a corresponding field, the system will display the letters/numbers identified from your handwriting.
3. Do not write letters/numbers continually to prevent recognition error.
4. Do not write letters outside of the input fields.

### Keyboard




You can input data by using screen keyboard. Tap  icon on your screen to open the screen keyboard. Follow the steps below to input your data:

1. On your screen keyboard, tap **Shift** or **CAP** key to input a capital letter or to input multiple symbols.
2. Tap the key on your screen keyboard to delete.
3. To close the screen keyboard, tap  icon again on your screen to hide the screen keyboard.

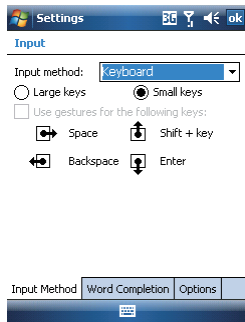**Please note:** To change the displayed keyboard size on the screen, tap the arrow beside keyboard icon and tap **Options**. Under **Input** screen, you may select either **Large keys** or **Small keys** by tapping on its radio button.





## Letter Recognizer


1. On your screen keyboard, tap the arrow  icon next to keyboard icon for more input methods. On the pop-up list, tap **Letter Recognizer** .
2. Write letters and numbers in a corresponding field on your **Letter Recognizer** screen. Your MWg Atom V will display the letters/numbers that you had just input in **Letter Recognizer** fields.
3. Tap the  key to delete an input.

 
## Transcriber

Transcriber allows you to write on the full screen using the stylus just as you would write on paper. Unlike **Letter Recognizer** and **Block Recognizer**, you can write a sentence or more than one sentence. Pause and let Transcriber change the written characters to typed characters.

1. On your screen keyboard, tap the arrow  icon next to keyboard icon for more input methods. On the pop-up list, tap **Transcriber** .
2. Position the cursor where you want text to appear.
3. Use the stylus to write anywhere on the screen. The handwriting will be converted to text after you lift the stylus from the screen.

## Learning how to write in Transcriber

1. Tap  on the tool bar.
2. A **Letter Shapes** screen will appear, select the character you wish to explore, tap the picture of this character on top of the screen, and it will demonstrate the writing sequence of the letter. Select how often you write the character using that method.
3. When you finish the practices, you can save these as a profile by tapping **File > Save**.

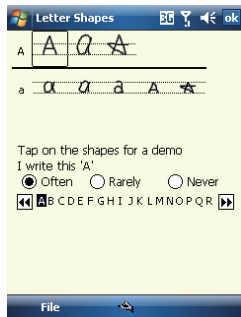


## 2.7 Drawing on the screen

You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

### Creating a drawing:

 Cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in or touching the drawing box become part of the drawing. Drawings that do not cross three ruled lines will be treated as writing.

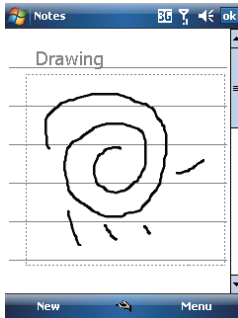

### Selecting a drawing

To edit drawing, select it first.

1. Tap and hold the stylus on the drawing until the selection handle appears. To select multiple drawings, deselect the pen button and drag to select drawings you want.
2. You can cut, copy, and paste selected drawings by tapping and holding the selected drawing and tapping an editing command on the pop-up menu, or



by tapping the command on **Edit** menu. To resize a drawing, make sure **Pen** button is not selected, and drag a selection handle. To change the zoom level so it is easier to work or view your drawing, tap **Tools** and select a zoom level.

 
## 2.8 Recording a message

In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In **Calendar**, **Tasks**, and **Contacts**, you can include a recording in **Notes** tab.

In **Notes**, you can either create a standalone recording, or include a recording in a written note. If you want to include the recording in a note, open the note first. In the Messaging program, you can also add a recording to an E-mail message.

### Creating a recording

1. To add a recording to a note, open the note before recording. Tap **Start > Programs > Notes**.
2. If there is no **Record/Playback** toolbar, tap **Menu > View Recording Toolbar**.
3. Hold your device's microphone near your mouth or another sound source.
4. To start recording, tap .
5. To stop recording, tap . The new recording appears in the note list.
6. To play a recording, tap in the open note or tap the recording in the note list. You can also access the **Record/Playback** tool bar by pressing down **Volume** key for a while. To quickly create a recording, hold down **Volume** key. When you hear the beep, recording has begun. Release the button when you are finished. The new recording is stored in the open note, or as a standalone recording, if no note is opened.



## 2.9 Editing my info

You can input your personal information to your MWg Atom V in **Owner Information**.

1. Tap **Start > Settings > Personal tab > Owner Information > Identification** tab.
2. Tap **Name** field and input your name.
3. Tap a desired input field and input your information.
4. Tap **Notes** tab to input other information you would like to display on your MWg Atom V.
5. If you want your information to be displayed on the starting screen, tap **Options** tab.

## 2.10 Password setup

You can set your own password to prevent unauthorized use of your MWg Atom V.

1. Tap **Start > Settings > Personal tab > Lock> Password** tab.
2. On **Password** tab screen, check **Prompt if device unused for**.
3. Select an appropriate time.
4. Select a password type in **Password type** field.
5. Input your password in **Password** field and reconfirm the password in **Confirm** field.
6. Tap **OK**, a pop-up window will appear to confirm, "**Do**

**you want to save password settings changes?":**

7. Tap **Yes** to finish settings and save the changes; **No** to cancel.
8. You may also input password hint message under **Hint** tab screen.
9. Tap **OK** to save your inputs.

 
**Please note:** If you forget your password, you need to perform system default, which will lose all your data and settings.

## 2.11 Memory expansion

To expand the memory of your MWg Atom V, you can insert a Micro SD card into the card slot located at the top of the phone. Make sure the card is inserted correctly.

## 2.12 Data backup




Your MWg Atom V supports 64MB RAM capacity; however, you may need to back up data and any new programs that you install in the RAM to guard against data loss. To back up your **Contact**, **Calendar**, etc., please set up the synchronization partnership with your PC and connect the phone with PC. **ActiveSync** will start automatically.



## **Chapter 3**

### **Phone Functions**

   - 3.1 Phone screen and key introduction**
- 3.2 Making a call**
- 3.3 Receiving / Ignoring a call**
- 3.4 International calls**
- 3.5 Emergency calls**
- 3.6 Volume adjustment**
- 3.7 Contacts**
- 3.8 Creating a new contact**
- 3.9 Call history**
- 3.10 Setting ring tone and password**
- 3.11 SIM manager**



## Chapter 3 Phone Functions

### 3.1 Phone Dialer screen and key Introduction

Press **Talk/Send** key to enter phone functions. Please insert a SIM card before using these functions.

#### Phone Dialer screen

From **Phone Dialer** screen, you can access **Contacts**, **Speed Dial**, **Call History**, and more options under **Menu**. This screen has the following features:

 
1. The name of the network provider
2. The number you entered
3. Touch screen keypad
4. Hide Keypad
5. Signal strength
6. Clear numbers
7. Speed Dial
8. Call History
9. Make/End a voice call
10. Menu to access more options



 
When a call is connected, the screen displays the following:

1. The calling status
2. The name and number of the contact you are calling
3. Speaker On/Off
4. Create a note for the call
5. Return to the dialer phone screen
6. Contact list
7. Mute the call
8. Hold the call
9. End the call
10. Menu to access more options

**Please note:** When there is a call comes in, press volume up / down will immediately silent off the alert.

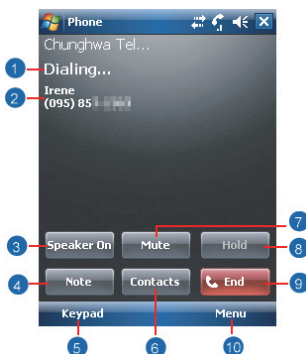





## 3.2 Making a call

With your MWg Atom V, you can make a call by entering the phone number, or selecting a number from **Contacts**, **Speed Dial**, and **Call History**.

1. After entering **Phone Dialer** screen you can dial a number using the numeric keypad or the keypad on the screen.
2. To delete an error input, use **←** key on the screen.
3. Tap **☎ Talk** to make a call.
4. Tap **☎ End** to end the call.

### Speed dial

You can set ten phone numbers in your speed dial list.

1. After entering **Phone Dialer** screen tap **Speed Dial** button on the screen to enter your **Speed Dial List**.
2. On **Speed Dial List** screen, you can select a contact on the list to see the contact's detailed information.
3. On **Speed Dial List** screen, tap **Menu** on the bottom right corner of the screen. You can perform **New**, **Edit**, or **Delete** contacts of the **Speed Dial List**.
4. To make a call, tap the corresponding number on the keypad to call the contact on **Speed Dial List**.
5. You can also use the navigation key to select a contact you want to call on **Speed Dial List** screen, and then press **Talk/Send** key to call.
6. Press **End** key to end the call.

## 3.3 Receiving / Ignoring a call

When you receive a phone call, a notification message will appear. To answer the incoming call, tap **Answer** or press **Talk/Send** key. To ignore or reject a call, tap **Ignore** to mute the phone and reject the call. This may divert the call to your voice mail, depending on your network operator.

## 3.4 International calls

When you make an international call from any country, you need to insert a special international access code. If you enter "+" symbol as a prefix before the number you are calling, then you do not need to enter the access code for the country you are calling from.

### To make an international call

1. Tap and hold **0** key until + sign appear. + replaces the international prefix of the country that you are calling from.
2. Enter the full phone number you want to dial. It should include the country code, area code (without the leading zero), and phone number.
3. Tap **Talk** or press **Talk/Send** key.

### 3.5 Emergency calls



 
Enter the international emergency number 112, and then tap **Talk** or press **Talk/Send** key. Additional emergency numbers may be included on your SIM card. Contact your network operator for more information.









If your MWg Atom V has entered **Device Lock** mode, you have to unlock the device first before making an emergency call.

1. Tap the **Unlock** on **Left Function Key**.
2. Tap "**Unlock**" displayed on the bottom left of the screen.

### 3.6 Volume adjustment



       
Tap  icon on the screen and the volume adjustment window will appear. Adjust the volume of alert tone for all programs tapping on  and adjust the ring volume by tapping on .

1. Press **Volume Adjustment** key on the left side manually or tap  >  to adjust incoming call volume.
2. If you press the **Volume Adjustment** key on the left side of your MWg Atom V or tap  >  icons during a call, you may adjust the in-call volume of the phone. You can only adjust it during a call.
3. When you select **Vibrate**,  icon will change to .
4. When you select **Off**,  icon on screen will change to .

### 3.7 Making a call from contacts

 On **Today** screen, you can tap **Contacts** on the bottom right of the screen to enter **Contacts**. Or under **Phone Dialer** screen, tap **Contacts** on the bottom left of the screen to enter **Contacts**.


1. Enter the contact or phone number you intend to search into the search field, the phone will search for the contacts



that match this condition.

2. Tap and hold **5 Way Navigation** key upwards or downwards to browse contacts by initial letters in **Contacts**. (This function is available for contacts synchronized with **Outlook** only).
3. Tap on any contact to view that contact's information.
4. Under **Contacts** screen, tap **Call** on the bottom left of the screen or tap **Left Soft** key to make a call to that person.
5. Under **Contacts** screen, tap **Menu** on the bottom right of the screen for more options.

 If you would like to make a call using a telephone, go to **Contacts** and highlight the person you would like to call. Tap **Menu** > **Sounds DTMF**; then aim your MWg Atom V to the telephone receiver. Your telephone will dial out to the desired contact upon reception of the DTMF sounds from your device.

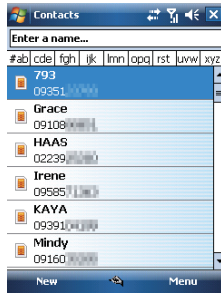


### 3.8 Creating a new contact

On Contacts screen, tap New on the bottom left of the screen. A blank record will appear.

1. You may set photos in **Picture** field for this contact, by which the contact's photo will display as an incoming call photo ID.
2. You may also tap Ring tone field to set different incoming call ring tones for your contacts.
3. Tap **OK** on the top right of the screen to save the new contact and exit.
 
### 3.9 Call history

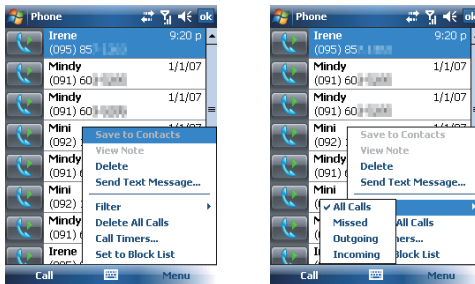

**Call History** contains all outgoing calls, incoming calls, and missed calls. You may choose to display all or only display highlighted items.

1. On **Today** screen, tap **Call History** on the bottom left of the screen.
2. Tap **Menu** on the bottom right of the screen.
3. Select a desired function to perform. You may change call history display method by selecting **Filter**; or select **Call Timers** to check incoming call numbers, call time, and manage incoming call history.
4. On **Call History** screen, select the icon on the upper left side of the main screen to redial this number at once.
5. On **Call History** screen, tap and hold on a phone number to open a drop-down menu for more options.

### 3.10 Setting ring tone and password

On **Phone Dialer** screen, tap **Menu** on the bottom right of the screen. Tap **Options** > **Phone** tab.

1. You may select a preferred ring type.
2. If you want to download ring tones, please use **ActiveSync** program in the computer and copy the ring tone file to **Application Data/ Sounds** folder in your MWG Atom V. The ring tone files will be added as the options.
3. You can set keypad tone for dialing.
4. You can set personal password to prevent unauthorized use from others.

## 3.11 SIM manager

### SIM card copy

 
Use this function to copy the contacts in SIM card to the device.

 
1. From **Start > Programs > Phone Manager > SIM Manager**
2. Choose the **SIM card contacts** on the top.
3. All contacts in SIM card will show on the screen.
4. Choose contacts you want to copy then select **Copy to phone contacts** and your contacts in SIM card will be copied to **Contacts** in this device.
5. If you choose **Recovery**, the contacts will be recovery to your SIM card.

### SIM card information


This function will show the information about your SIM card.

1. From **Start > Programs > Phone Manager > SIM Manager**
2. Choose **SIM card information** on the top.
3. Show the content of SIM card.

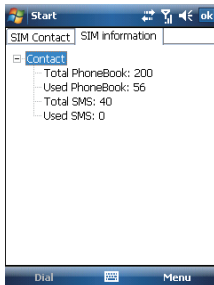



**3** Phone Functions



 


## **Chapter 4**

### **Settings**

**4.1 Personal settings**

   **4.2 System settings**



## Chapter 4 Settings

### 4.1 Personal settings

You may set your personalized settings by preference.

#### Buttons

You may assign programs to a hardware button.

 
You may set certain keys as the activation keys for your most commonly used programs.

1. Tap **Start > Settings > Personal tab > Buttons > Program Buttons** tab.

- Under **Select a button**, tap the button you want to assign to a program, and then select a program from **Assign a program**.

2. On **Up/Down Control** tab, **Delay before first repeat** changes the time elapsed before scrolling begins.


**Repeat rate** changes the time it takes to scroll from one item to the next.

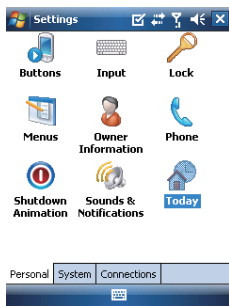

#### Input

Set your preferred input method.

1. Tap **Start > Settings > Personal tab > Input**.
2. On **Input Method** tab, select a desired input method.

On **Word Completion** tab, select the desired settings for word completion. On **Options** tab, select the desired options for writing and recording. These options apply to any program on your MWg Atom V where you can record or write. You can also change input options by tapping the  arrow and Options.

 
#### Lock

You may set a personal password to lock your MWg Atom V.

A strong password must have at least 7 characters that are a combination of uppercase and lower case letters, numerals, and punctuation.

1. Tap **Start > Settings > Personal tab > Lock**.
2. To enable this function, select how long your MWg Atom V must be turned off before the password is required for using your MWg Atom V by tapping **Prompt if device unused for**.
3. Select the type of password you would like to use: **Strong alphanumeric** or **Simple PIN**.
4. Enter the password and,
  - If your MWg Atom V is configured to connect to a network, use a strong password to help protect network security.
  - If you forget your password, you must hard reset before you can access your MWg Atom V. A hard reset will erase all files and data you have created and any programs you have installed.
  - If you have used **ActiveSync** to create a backup file, all of your program data can be restored.





## **Menu**

Select the programs to be displayed in **Start** menu.

Only 7 programs are allowed in **Start** menu. To add the programs you use most often to **Start** menu:

1. Tap **Start > Settings > Personal tab > Menu**.
2. Select the programs you want, and then tap **OK**.



## **Owner information**

Sets layout, items, color and background of **Today** display.

1. Tap **Start > Settings > Personal tab > Owner Information**.
2. On **Identification** tab, enter your personal information.
3. On **Notes** tab, enter any additional text you want to display when your MWg Atom V is turned on, such as: "Welcome!".
4. On **Options** tab, select which message will display when your MWg Atom V is turned on.



## **Phone**

Settings for phone functions.

You can easily view and change settings, such as the ring type and ring tone to be used for incoming calls, and the keypad tone to be used when entering phone numbers. You can also protect your device from unauthorized use. There are two ways to change phone settings:

- Tap **Start > Settings > Personal tab > Phone**.
- To change the phone settings from **Phone** screen, tap **Menu > Options**.

### *Phone tab*

Under **Phone** tab, you can set up the following items:

#### **Ring type**

You can change the way that you are notified of

incoming calls. For example, you can choose to be notified by a ring, a vibration, or a combination of both. Tap the **Ring type** list, and select the desired option.

#### **Ring tone**

Tap **Ring tone** list, and then select the sound you want to use.

1. To set .wav or .mid files as ring tones, use **ActiveSync** on your PC to copy the file to **(Windows) Rings** folder on your MWg Atom V. Select the sound from **Ring tone** list.
2. To download ring tones, you can make a connection to the Internet and then download ring tones that are compatible with the .wav or .mid formats.

#### **Keypad**

You can change the tone you hear when entering a phone number on the keypad. If set to **Long tones**, the tone is heard continuously for as long as the number on the keypad is pressed. If set to **Short tones**, the tone is heard only for one or two seconds.

1. Tap **Keypad** list; then select the option you want.
2. To prevent tones from being heard when entering a phone number, select **Off**.

 
#### **Security**

You may check **Require PIN when phone is used** to enhance your phone security. Tap **Change PIN** to change your SIM PIN number.

#### *Services tab*

Settings include **Call Barring, Caller ID, Call Forwarding, Call Waiting, Voice Mail and Text Messages**.

1. Tap **Start > Settings > Personal tab > Phone > Services tab**.
2. Check the items you want to select and tap **Get Settings...**
3. Tap **OK** to save settings and return to **Personal** tab screen.



Option	Description
Call Barring	Block incoming and/or outgoing calls.
Caller ID	Display your name and/or phone number for outgoing calls.
Call Forwarding	Forward all or selected incoming calls to a different phone number.
Call Waiting	Notify you an incoming call while you are on the phone.
Voice Mail and Text Messages	Set up voice mail and SMS service center.

**Please note:** All services in **Services** are provided by operators. Please contact your operator for enquiries regarding these services.

#### Network tab

Tap **Start > Settings > Personal tab > Phone > Network** tab.

- Under **Current network**, tap **Find Network** to automatically search for the network in use.
- Under **Network Selection**, select **Automatic** or **Manual** to select network automatically or manually.
- Under **Preferred networks**, tap **Set Networks** to set your preferred order of networks.



### Sounds & Notifications

Settings for alarm sound and notifications.

Turning off sounds and the notification helps conserve battery power. To change the ring type and volume:

1. Tap **Start > Settings > Personal tab > Sounds & Notifications**.
2. On **Sounds** tab, you can select the desired actions.
3. On **Notifications** tab, you can customize how you are notified about different events. Select the event name and then select the type of reminder. You can select a special sound, a message, a flash light, or vibrate.



### Today

Settings for screen appearance and items displayed on the **Today** screen.

To change the theme of your **Today** screen:

1. Tap **Start > Settings > Personal tab > Today**.
2. On **Appearance** tab, select the desired theme. To use your own background, select **Use this picture as the background** and then tap **Browse** to locate the desired file.
3. Choose a folder, tap the file you want, and tap **OK**.

**Please note:** The recommended picture size for the background is 240x320 pixels in jpeg file format. To beam a favorite theme to a friend, select the desired theme, and tap **Beam** on **Appearance** tab.

 
**Customizing the displayed information:**

1. Tap **Start > Settings > Personal tab > Today > Items** tab.
2. Select the information you want to be displayed on **Today** screen.
3. To customize the information further, select an information type, and then tap **Options** (not available for all information types).

## 4.2 System settings

### About

This function contains information about your MWg Atom V.

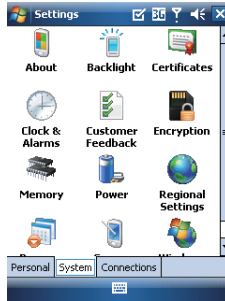

**Version** tab displays important device information, including the amount of memory installed. On the **Device ID** tab, you may need to change your device name if you are unable to connect to a network because another device with the same name is already connected.

### Backlight

Configure the backlight settings and adjusts the brightness level to save power.

Using the backlight on battery power substantially reduces battery life. Tap **Start > Settings > System tab > Backlight**.

- Tap **Battery power** tab to turn ON/OFF the backlight when using battery power.
- Tap **External power** tab to turn ON/OFF the backlight when using external power.
- Tap **Extended** tab to adjust the brightness level.

### Certificates

 
Information about the certificate issuer and the expiration date.

Tap **Certificates** to view the name of the certificate issuer and the expiration date.

### Clock & Alarms

Settings for time and alarms.

Tap **Start > Settings > System tab > Clock & Alarms**.



- If you visit a particular time zone often, select it as your Visiting time zone on **Time** tab so that you can quickly see the correct date and time.
- You can use your MWg Atom V as a travel alarm clock by setting a wake-up alarm on **Alarms** tab. Tap the alarm icon to select the type of alarm you want.
- To change the way the date or time is displayed on your MWg Atom V, go to **Regional Settings** by tapping **Start > Settings > System tab > Regional Settings**.



### Customer Feedback

Customer Experience Improvement Program from Microsoft®.

It is Customer Experience Improvement Program designed by Microsoft®. The purpose is to identifying trends and usage patterns to improve the software. You can check **Send Feedback** to participate or **Don't Send Feedback** to reject.



### Encryption

Encrypt files.

You can encrypt files stored on the micro SD card by simply checking **Encrypt files placed on storage card**. Once encrypted, such files are only readable by this device.



### Memory

Display memory status and programs that are currently running.

You may need to stop a program if it becomes unstable or the program memory is low. Tap **Start > Settings > System tab > Memory**.

- **Main** tab displays the amount of memory the system has allocated to file and data storage versus program storage. This tab also displays the amount of memory in use versus the available memory.
- **Storage Card** tab displays how much memory is available on the storage card that is inserted into your MWg Atom V.
- **Running Programs** tab displays the list of currently active programs. You can stop a program by selecting it in the list and then tapping **Stop**, or just tap **Stop All** to stop all the running programs.

 


### Power

Battery status and settings.

Tap **Start > Settings > System tab > Power**.

- **Battery** tab displays the amount of battery power remaining. Battery power depends on the battery type and how your MWg Atom V is being used.
  - Under **Advanced** tab, you can select options for turning off your MWg Atom V to conserve battery power.
  - Under **Extended** tab, you can check lock MWg Atom V when entering stand-by mode.
- When your MWg Atom V enters stand-by mode, it will automatically enable device lock.



## Regional settings

Settings for region, number, currency, time, and date format.

This feature allows you to customize the unit and format for the region you are in. To access this feature, tap **Start > Settings > System tab > Regional Settings**.

## Remove programs

Remove programs from your MWg Atom V.

**Remove Programs** allows you to uninstall programs that are saved in your device's storage memory. It also shows the total available storage memory. Select a program that you would like to remove from the program box and tap **Remove**.

## Screen

 
Settings for screen orientation, screen alignment, and text size.

- Under **General** tab, you can adjust the screen's orientation and align the screen.
- Under **Clear Type** tab, you can select **Enable Clear Type** to smooth the edges of screen fonts for many programs.
- Under **Text Size** tab, you can adjust the text size to see more content or increase the readability in many programs.


## System Info

Display the system information.

This feature displays the system information Including hardware information and software (ROM) version.



**4**  
Settings

 

## **Chapter 5**

# **Synchronization**

 
 
 
**5.1 About synchronization**

 
**5.2 Installing ActiveSync**

**5.3 Choosing your synchronization type**

**5.4 Using ActiveSync tools**

**5.5 ActiveSync errors**






## Chapter 5 Synchronization

### 5.1 About synchronization
 
#### 5

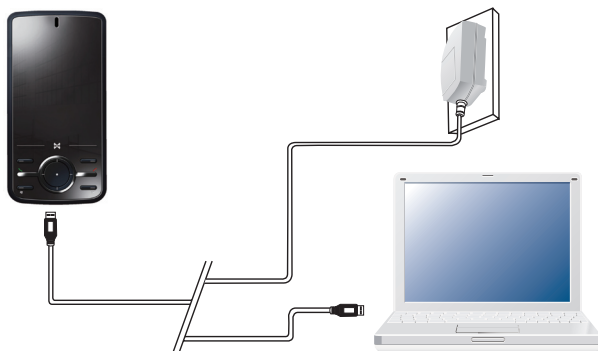

You can synchronize information between your PC or Microsoft® Exchange Server and your MWg Atom V with **ActiveSync** on both your MWg Atom V and PC. Before synchronizing information, please install **ActiveSync 4.5** on the PC. Then you can:


- Synchronize information to get the latest information in all locations.
- Add or remove programs on your device.
- Transfer files between your device and a PC.
- Change synchronization settings and the synchronization schedule.

Once you install **ActiveSync** on your PC, you will be prompted to connect your device and create a synchronization relationship with the device by using a USB cable or Bluetooth connection. While you are setting up this relationship you can choose the information you want to synchronize with either your PC or with Microsoft® Exchange Server.

**Note:** If your PC is using Windows Vista then you will not need to install ActiveSync. Vista already has Windows Mobile Device Centre installed which is used for synchronising your device and PC.




## 5.2 Installing ActiveSync

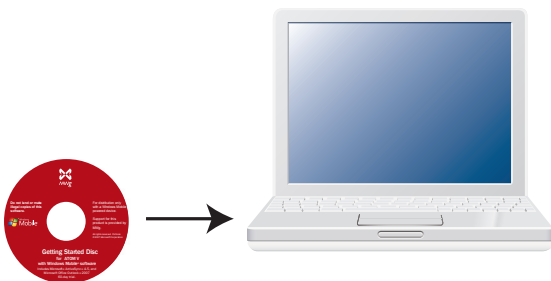 

Please do not connect your device to the PC before installing **ActiveSync 4.5** on the PC from the **Getting Started Disc** included in your package. You may only connect the device to the PC by USB cable or Bluetooth after **ActiveSync** is installed.

**Please note:** Your MWg Atom V has built-in **ActiveSync** already. To install **ActiveSync 4.5** in your PC, please follow the instructions given when you run the Getting Started Disc. After finish installing **ActiveSync** in your PC, you will be asked to build a partnership with your device using one of the following connection methods:

 - USB cable
- Bluetooth



## 5.3 Choosing your synchronization type

### USB cable

You can connect your device with other devices via a mini-USB connector. You can manually change the connection settings as follows. The new settings will be used when you connect your device to the PC next time.

1. Tap **Start > Programs > ActiveSync**.
2. Tap **Menu** tab > **Connections**.
3. Choose **USB** in the drop-down menu and check **Synchronize all PCs using this connection**.

### Bluetooth connection

You can also synchronize your information by using Bluetooth wireless connectivity technology, which allows your device to connect to a Bluetooth-compatible device within 10 meters. For best connection results, it is recommended that you connect the device to the PC using USB to establish a synchronization relationship before connecting via Bluetooth.

To synchronize via Bluetooth connection:

1. Execute **ActiveSync Help** on the PC and follow the instructions for configuring Bluetooth on your PC to support **ActiveSync**.
2. Tap **Start > Programs > ActiveSync**.
3. Tap **Menu > Connect via Bluetooth**. Make sure that the device and the PC are within 10 meters or shorter.
4. Tap **Sync**.
5. After finishing the synchronization, tap **Menu > Disconnect Bluetooth**.
6. Turn off Bluetooth to preserve battery power if not used.

**Please note:** Before you connect to this PC via Bluetooth, please make sure that you have set up a Bluetooth partnership with the PC: Tap **Start > Settings > Connections > Bluetooth**.

 
For more details, please refer to **Chapter 6 Getting Connected**.

## 5.4 Using ActiveSync tools

Once you've established the connection partnership between your device and pc, you can start synchronization. The information you can synchronize includes **Contacts**, **Calendar**, **Outlook E-mail**, **Tasks**, and **Notes**.

To select a specific data source:

1. Tap **Start > Programs > ActiveSync**.
2. Tap **Menu > Options**.
3. Launch **ActiveSync** on your PC, and turn the synchronization for specific information types on or off as necessary.

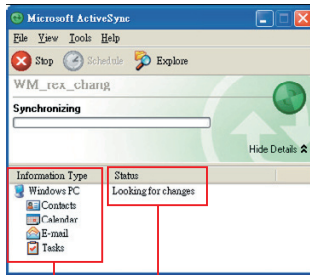

Information for synchronization      Status of synchronization

### Contacts

 
Contacts stored on your device can be synchronized with **Outlook** contacts stored on your PC or with Microsoft® Outlook® 2003 or later.

New items entered in one location are copied to the other during synchronization. Handwritten notes and drawings are saved as pictures when synchronizing with your PC, but are removed when synchronizing with a server. For more information on synchronization, see **ActiveSync Help** on the PC.

### Calendar

You can synchronize calendar items on your device with calendar items on your PC or Microsoft®Exchange Server. You can only synchronize information directly with a Microsoft® Exchange Server if you are running Microsoft® Outlook 2003 or later. Calendar synchronization is automatically selected in **ActiveSync**.

**Calendar** items entered on one computer are copied to the other during synchronization. Handwritten notes and drawings are saved as metafiles (pictures).



## Outlook E-mail

After you have selected **Inbox** for synchronization in **ActiveSync**, Microsoft® Outlook E-mail messages are synchronized as part of the general synchronization process. During synchronization:

- Messages are updated from the **Inbox** folder on your PC or the Microsoft® Exchange server to the **Inbox** folder of the Outlook E-mail account on your device. You can only synchronize information directly with an Microsoft® Exchange Server if you are running Microsoft® Outlook® 2003 or later. By default, you'll receive messages from the last three days only, the first 100 lines of each new message, and file attachments of less than 100KB in size.
- Messages in the **Outbox** folder on your device are transferred to Exchange or **Outlook** and then sent from those programs.
- Messages on the two computers are linked. When you delete a message on your device, the message will also be deleted from your PC the next time you synchronize.
- Messages in subfolders in other E-mail folders in **Outlook** are synchronized only if they have been selected for synchronization in **ActiveSync**. For information on initiating **Outlook** E-mail synchronization or changing synchronization settings, see **ActiveSync Help** on the PC or **Connections Help**.

**Please note:** Text messages (SMS) and Multimedia messages (MMS) are not received through synchronization. Instead, they are sent to your device via your network service provider.

## Tasks

 
**Tasks** stored on your device can be synchronized with **Outlook** on your PC. Task synchronization is automatically selected in **ActiveSync**. New items entered on one computer are copied to your device during synchronization. Handwritten notes and drawings are saved as metafiles (pictures). For more information on synchronization, see **ActiveSync Help** on the PC.

## Notes

**Notes** can be synchronized between your PC and phone either through notes synchronization or file synchronization. **Notes** synchronization synchronizes the notes on your device with **Outlook Notes** on your PC. File synchronization synchronizes all notes on your device with **My Documents** folder on your PC.

To synchronize your notes through notes synchronization, first select **Notes** information type for synchronization in **ActiveSync**. The next time you synchronize, all notes in **My Documents** and its subfolder on your device will appear in **Outlook Notes** on your PC. **Notes** that contain only text will appear as regular notes in **Outlook** on your PC, while notes containing written text or drawings will appear in the device format. In addition, all notes in **Notes** group in **Outlook** on the PC will appear in **Notes** on the device.

To synchronize your notes as files, in **ActiveSync**, select **Files** information type for synchronization and clear **Notes** information type. When you select **Files**, **My Documents** folder is created on your PC's desktop. All .pwi files placed in **My Documents** folder on your device and all .doc files placed in \ **My Documents** folder on your PC will be synchronized. Password-protected files cannot be synchronized. **ActiveSync** converts documents during synchronization. For more information on synchronization or file conversion, see **ActiveSync Help** on the PC.



**Please note:** When you delete or change an item on either your PC or device, the item is changed or deleted in the other location the next time you synchronize. If you synchronize your notes using file synchronization and then later decide to use notes synchronization, all of your notes will be synchronized with **Outlook** on your PC and will no longer be stored in **My Documents** folder.









## 5.5 ActiveSync errors

         
Whenever **ActiveSync** cannot successfully synchronize your information, it displays an error on your device and your PC.

### Viewing error information

Press Action button when the error text is displayed. **ActiveSync** will then display more information about the error that has occurred. Some types of errors can interfere with automatic synchronization. If you suspect that a scheduled automatic synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization will reset automatic synchronization. For more information, see **Synchronizing Information** section of **ActiveSync Help** on your PC.

**Please note:** Most firewall applications are intended to block network traffic and secure the PC from incoming network connections. Since **ActiveSync** uses TCP ports for data transfer with devices, to avoid this potential experience, you will need to manually allow this traffic to be un-blocked by Firewall applications for the Device using **ActiveSync**. You will need to add **ActiveSync** application processes into **Firewall Programs Exception List**.





## **Chapter 6**

### **Getting Connected**

**6.1 Wireless manager**

**6.2 GPRS**

**6.3 Bluetooth**

 
 
 
**6.4 Wi-Fi**

 
**6.5 USB card reader**

**6.6 Internet sharing**

**6.7 Cell broadcast setting**

**6.8 Connecting to the Internet**





## Chapter 6 Getting Connected

Your MWg Atom V has powerful networking functions that enable you to connect to the Internet or to other devices. You may use a number of different methods, for example, 3G, GPRS network or Wi-Fi to connect to the Internet. You can set up connections to the Internet and to a corporate network at work to browse the Internet, send and receive E-mail, use instant messages, and synchronize with **ActiveSync**. Via Bluetooth or USB functionalities, you can also transfer files between your MWg Atom V and other devices. There are two types of connection settings: **My ISP** and **My Work Network**. **My ISP** settings are used to connect to the Internet, and **My Work Network** settings can be used to connect to any private network, such as a corporate network. Fill in the settings and you are ready to connect to the Internet.

### 6.1 Wireless manager

 
Wireless Manager is an integrated interface that combines **GPRS**, **Bluetooth**, **Wireless LAN**, and **Phone** in one function page. To manage these wireless connections, tap **Start** > **Settings** > **Connections** tab > **Wireless Manager**. You may also access **Wireless Manager** from **Today** screen.

Tap **All** to turn on/off all wireless connections. If you only want to turn off Bluetooth, for example, tap **Bluetooth** and the button will become colorless. Tap **Menu** to set up these wireless connections.

 
#### Flight Mode

While flying, you can turn off the wireless connections while still using the MWg Atom V for other purposes.

1. Tap **Start** > **Settings**.
2. Tap the **Connections** > **Wireless Manager**.
3. Tap **All Wireless Off**, when all buttons are colorless, wireless functions are off. Your MWg Atom V is now safe to use on a flight.

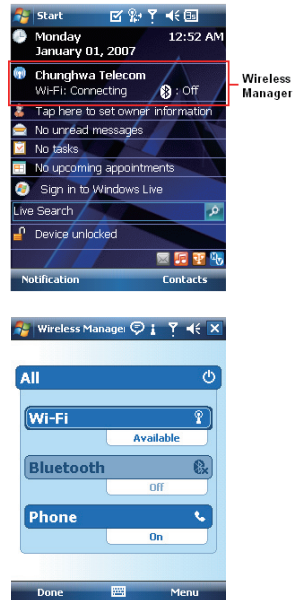





## 6.2 GPRS

Before using GPRS to connect to the Internet, please contact your network operator to confirm that the service is enabled and supported on your SIM card. Using GPRS is convenient for you while traveling or working at home. You can use this device to browse web pages, read or send E-mail or MMS messages, and sign in Windows Live Messenger through wireless network.

### GPRS connection settings

 

Your device comes installed with a configuration wizard to install the operator/ carrier settings relevant to your SIM card. This application should start and attempt to configure the device when you first turn it on. If your device needs to have the application run manually please follow the process below:


1. Tap > Start > Programs > Auto Config
2. Select your Country and Operator and select OK

If your Operator is not listed you will need to contact them directly with the number on your bill to help acquire and insert the relevant setting.

### Activating GPRS connection

1. Tap **Start > Internet Explorer**.
2. Input an URL address you desire to browse in address field and tap the arrow icon to go to the URL.
3. After completing connection,  icon will become  icon.
4. Or you may select **Start > Settings > Connections tab > Connections > Tasks tab > Manage Existing Connection >** tap and hold on a connection to open pop-up **Menu > Connect**. After completing connection, you may go Internet surfing or send and receive E-mail.

 **Please note:** If this device is under flight mode, please turn off flight mode beforehand. Tap  icon on Today screen, then tap **Wireless Manager** on the pop-up window. Tap on "Phone" to turn the phone function on. The  icon will appear on Today screen when GPRS is activated.



## 6.3 Bluetooth

Bluetooth is a short-range wireless communications technology. With Bluetooth, you don't need to line up the devices to beam information. The two devices only need to be within a range of about 10 meters. You may use Bluetooth in the following ways:

1. Exchange information, such as files, appointments, tasks, and contact cards, between devices that have Bluetooth capabilities. For example, if you and a co-worker each have a device with Bluetooth, you can beam items between your devices; these items could include files, contact cards, appointments, tasks, etc.
2. Create a dial-up modem connection between your device and a Bluetooth phone. You can then use the Bluetooth phone as a modem.

### Bluetooth settings

To access the Bluetooth settings screen, tap **Start > Settings > Connections tab > Bluetooth**. To turn on Bluetooth, check **Turn on Bluetooth** option; uncheck the option to turn off. If Bluetooth is turned off, you cannot use Bluetooth to either send or receive information. In order to conserve the battery power or where radio use is prohibited, you might want to turn Bluetooth off.

By default, Bluetooth is turned off. If you turn it on, and then turn off your device, the Bluetooth radio also turns off. When you turn on your device again, the Bluetooth radio automatically turns on the radio. If you wish to turn on the radio, turn off Bluetooth first, and then turn on the radio. To make your device visible to other Bluetooth devices, check **Make this device visible to other devices** option.

 
If Bluetooth radio is turned on, then all of the other Bluetooth devices within range (about 10 meters) can detect your device and attempt to beam information to it, establish a bond, or use a Bluetooth service. In this mode, other devices can detect your device whether or not a bond has been created; however, in order to receive a beam from another device, you must accept it on your device. Other Bluetooth devices can now detect your device and attempt to beam information to it, establish a bond, or use a Bluetooth service. Note that, to receive beamed information, you must accept it on your device by selecting **Make this device visible to other devices**; this also turns on your Bluetooth radio. If you no longer want your device to be visible, uncheck **Turn on Bluetooth** option or uncheck **Make this device visible to other devices** option to leave the radio on, but not allow detection by other devices.

### Bonds

To exchange information in a secure manner, you may use a bond to create a relationship between your MWg Atom V and another Bluetooth device. To create a bond, you need to enter the same pass code on the two devices that you want to bond. You need only create a bond once between two devices. Once a bond is created, the devices recognize the bond and are able to exchange information without your needing to enter **PIN** again.

#### To create a bond:

You can create a bond between your device and another device that has Bluetooth. Once you do this,



Bluetooth doesn't need to be in visible mode in order for you to beam information between the two devices; you only need to have the Bluetooth radio turned on.

1. Tap **Start** > **Settings** > **Connections** tab
2. Tap **Bluetooth** > **Devices** tab > **New Partnership**. Your device searches for other Bluetooth devices and displays them in the list.
3. Tap the name of the other device in the list, and then **Next**.
4. Enter a pass code of between 1 and 16 characters and tap **Next**.
5. Enter the same pass code on the other device.
6. In **Display Name**, edit the name of the other device if you want.
7. Tap **Finish**.

**Please note:** Make sure that the two devices are within 10 meters of one another and that Bluetooth is in visible mode on both devices.

**To accept a bond:**

1. Please make sure that Bluetooth is activated and visible to other devices.
2. When prompted to bond with the other device, tap **Yes**.
3. Enter a pass code of between 1 and 16 characters, and tap **Next**. You must enter the same pass code that was entered on the device requesting the bond.
4. In **Display Name**, edit the name of the device requesting the bond if you want.
5. Tap **Finish**.

The bond is created. You can now exchange information with the other device.

**To rename a bond:**

 
1. Tap **Start** > **Settings** > **Connections** tab.
2. Tap **Bluetooth** > **Devices** tab.
3. Tap the bond to rename.
4. In **Display Name**, enter a new name for the bond and then tap **Save**.

**To delete a bond:**

1. Tap **Start** > **Settings** > **Connections** tab.
2. Tap **Bluetooth** > **Devices** tab.
3. Tap and hold the bond and then tap **Delete**.

## Beaming information with Bluetooth

1. Tap and hold an item to beam, such as an appointment in **Calendar**, a task in **Tasks**, a contact card in **Contacts**, or a file in **File Explorer**.
2. Tap Beam type of item.
3. Tap the device to which you want to send the beam. The item is beamed to the device you selected. If the device that you want to beam does not appear in the list, make sure that it is turned on, in visible mode, and within 10 meters of your device. Also, make sure that your Bluetooth is turned on.



#### Receiving a Bluetooth beam:

1. Make sure that your device is configured to receive incoming beams and that Bluetooth is in visible mode.
2. Make sure that your device is within 10 meters of the device beaming the information.
3. When prompted to receive an incoming beam, tap **Yes**. The information is now stored on your device.

## 6

 
 
## Bluetooth headset

 
To set up your device with a Bluetooth headset, you may refer to the user guide that comes with your Bluetooth headset and the following instructions:

1. Tap **Start > Settings > Connections tab > Bluetooth > Mode** tab and check **Turn on Bluetooth** and **Make this device visible to other devices**.

2. Tap **Start > Settings > Connections tab > Bluetooth > Devices** tab and tap **Add new device** to scan for other Bluetooth devices.


3. Your device starts scanning for Bluetooth devices.

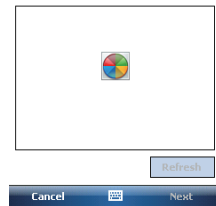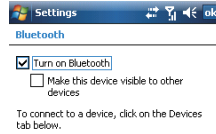




## 6

 4. Enter the pass code for the located Bluetooth device.  
For information, please refer to documents that come with your Bluetooth headset. This code is usually "0000".

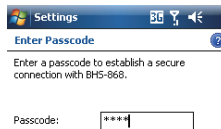


 5. Define the display name and the type of service your Bluetooth device offers.

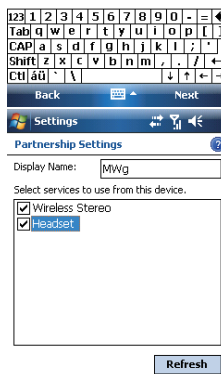

 6. When you finish setup, you will see the Bluetooth device displayed in the menu.
7. Also, there will be a Bluetooth headset icon indicating the active connection status.





## COM ports

For example, when you purchase a Bluetooth GPS-supported navigation software; you can register this device as an effective serial port by following the instructions on the manual of that product and the steps below:

Tap **Start** > **Settings** > **Connections** tab > **Bluetooth** > **COM Ports** tab. To register a new serial port:

1. Tap New Incoming Port to enter setup screen.
2. Select a port to be set.
3. Select Finish.

## 6.4 Wi-Fi

Wi-Fi is a type of wireless local area network that communicates between two devices by high frequency radio waves. Your MWg Atom V supports Wireless LAN, which is IEEE 802.11b/g compliant. It allows your device to connect to the Internet with detected wireless network.

### To activate Wi-Fi and connect to a local network

1. Tap **Start** > **Settings** > **Connections** tab > **Wireless Manager**.
2. Tap **Wi-Fi** to activate wireless network.
3. Once activated the device will immediately look for a local Wi-Fi network, and list those available.
4. Select the appropriate network and you will be prompted for a work or internet connection. Usually connect for The Internet
5. You will then be prompted to enter the network key which is unique for each Wi-Fi network. Enter this code, follow the prompts and the device will connect to the Wi-Fi network.

### To check your Wi-Fi status

Tap **Start** > **Settings** > **Connections** tab > **WiFi Utility** > **Wi-Fi Status** tab and you may see the details of your phone's wireless LAN connection, including Status, ESSID, BSSID, BSS Mode, Channel, Data Rate, IP Address, and Signal Strength.

### To configure Wi-Fi settings

Tap **Start** > **Settings** > **Connections** tab > **WiFi Utility** > **Setting** tab and scroll to set the desired value /mode for the following setting items: Adhoc Channel, Preamble, Data Rate, Power Save, Power strength, and Auto Power off. Tap **Set** button to confirm your setting.

 
### To update IP info

Tap **Start** > **Settings** > **Connections** tab > **WiFi Utility** > **IP Info** tab > **Renew** or **Ping** button to update IP information or locate the IP address of the other device.

### To search IP address

Tap **Start** > **Settings** > **Connections** tab > **WiFi Utility** > **Site Survey** tab > **Re-scan** button to search the ESSID, Channel, RSSI, and BSSID of the Wireless LAN.

### To change IP address



1. Tap **Start > Settings > Connections** tab > **Wi-Fi > Network Adapters** tab.
2. In **My network card connects to** drop-down list, tap either **The Internet** or **Work**. If you are connecting to your ISP at home, tap **The Internet**. If you are connecting to a private network such as a corporate network at work, tap **Work**.
3. Tap the appropriate adapter in **Tap an adapter to modify settings** box. The IP address will now appear in **IP Address** box on **IP Address** tab.
4. To change TCP/IP settings if your ISP or private network does not use dynamically assigned IP addresses, tap **Use specific IP address** and enter the requested information. Contact your ISP or network administrator to get the **IP address**, **Subnet mask**, and/or **Default gateway** (if needed).
5. To change DNS and WINS settings if your ISP or private network does not use dynamically assigned IP addresses, tap **Name Servers** tab and enter the requested information. Servers that require an assigned IP address may also require a way to map computer names to IP address. DNS and WINS are the resolution options supported on your MWg Atom V.

**Please note:** After activating Wi-Fi, a new window, New Network Detected, will appear if any is detected. Select **Connect** and enter your password to the local network. Tap **Connect** to connect this device with local network. You may use Wi-Fi for up to 2 hours. The actual use time will depend on the power status of your battery. When this feature is not in use, please disable it to save power.

## 6.5 USB card reader

You may use the device as a mass storage device or a micro SD card reader.

1. Tap **Start > Settings > Connections** tab > **USB**.
2. On **USB Connection Mode** screen, tap **SD-Card Reader**, and then tap **Change**.
3. Connect the phone to the computer with USB cable.
4. Your PC will automatically detect the new hardware. Now you can view or transfer files to and from your micro SD card.

## 6.6 Internet sharing

By using utility, you can set your MWg Atom V as a wireless modem. **Internet Sharing** allows your PC/Notebook be connected to a wireless network.

1. Tap **Start > Programs > Internet Sharing**.
2. Select a **USB** or **Bluetooth PAN** as **PC Connection** type.
3. Connect your device via USB cable or Bluetooth to a PC/Notebook, and then tap **Connect**.

**Please note:** Before you tap **Connect**, please make sure that you have installed a GPRS SIM card, and that you have connected this phone to your PC/Notebook by USB cable or Bluetooth and disabled **ActiveSync**.



## 6.7 Cell broadcast setting

You can receive broadcast channel information and news from your service provider (please check you're your service provider for this service). Tap **Start** > **Settings** > **Connections** tab > **Cell Broadcast Setting**.

 
## 6.8 Connecting to the Internet

 
Once connected, you can use **Internet Explorer** to surf the Internet. While surfing, you can also download files and programs to be installed on your device from the Internet or intranet. During synchronization with your PC, download your favorite links and mobile favorites that are stored in Favorites folder in Internet Explorer on the PC. To synchronize and download your favorite links from your PC, in your PC's ActiveSync, select **Favorites** on **Tools** menu > **Options** > **Sync options**.

 
### Browsing the Internet

Open **Internet Explorer** screen by tapping **Start** > **Internet Explorer**.

1. In the address bar that appears at the top of the screen, enter the Web address you want to connect to. Tap ▼ to choose from previously entered addresses.
2. Tap **Back** to go back to the previous page.
3. Tap **Menu** > **Refresh** to refresh the web page on the screen.
4. Tap **Menu** > **Home** to go back to the Home page.
5. Tap **Favorites**, and the favorite address you want to view. To add a favorite link while using your device, go to the page you want to add, tap and hold on the page, and tap **Add to Favorites** on the pop-up menu.

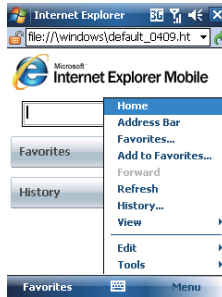









## **Chapter 7**

# **Messaging**

    - 7.1 Short message (SMS)**
- 7.2 Multimedia messages (MMS)**
- 7.3 Voice mail**
- 7.4 E-mail**
- 7.5 Push e-mail**
- 7.6 Windows Live Messenger**





## Chapter 7 Messaging

You can receive e-mails and text messages in **Messaging**. Text messages are sent and received through your network operator by using a phone number as the message address. Before receiving and sending your e-mails or messages, please make sure that your MWg Atom V has connected to a network.

Your MWg Atom V supports the following messaging services:

### SMS (Short Messaging Service)

SMS allows you to send short messages. For receiving and sending text messages (SMS), you only need to ensure that the phone function is activated by observing the satellite icon on the top of outline bar. It is not necessary to activate GPRS connection or establish new e-mail account and connection.

### MMS (Multimedia Messaging Service)

MMS allows you to send multimedia messages. You can include text, pictures, photos, sound files or recorded voice in an MMS message. To send an MMS message, you must register and configure the MMS service with your network provider.

### Voice Mail

You can forward a call to your voice mail box when you are unable to receive a call. The voice mail centre will send you a notification.

### E-mail

You can either use your MWg Atom V to directly send/receive e-mails from e-mail server or by synchronously updating the Microsoft Outlook / Microsoft Exchange Server E-mail in your MWg Atom V and PC.

### Push E-mail

The Direct Push technology enables you to have access to your new incoming e-mails in real time.

### Windows Live Messenger

 
Your MWg Atom V is equipped with **Windows Live Messenger**. To send instant messages, you need to connect to the Internet.

 
## 7.1 Short message (SMS)

### Writing a text message

1. Tap **Start** > **Messaging** > **Text Messages** > **Inbox** folder.
2. Tap **Menu** > **New**.



3. Tap **To** to enter the number of your recipient, and tap the blank content area to edit the message.
4. To access more editing options, tap **Menu**. The options inside enables you to:
  - **Add Recipient.**
  - Use predefined sentences in **My Text.**
  - Start **Spell Check** of your text.
  - **Check Names** of your recipients.
  - Choose to accept delivery notification by checking **Request message delivery notification** in **Message Options.**
5. To save the message to the draft box, tap **Menu** > **Save to Draft.**
4. To send the message, tap **Send.**

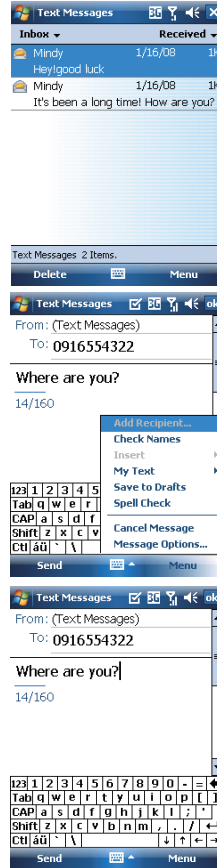



## Reading SMS messages

  1. Tap **Start > Messaging > Text Messages**.
2. Tap **Inbox** to view the sub-folders such as **Inbox**, **Outbox**, **Drafts**, **Sent Items**, or **Deleted Items**.
3. Tap **Menu** to access more options which enable you to:
  - **Delete** the selected message.
  - **Reply** to the sender or **Reply All** to the included recipients.
  - **Forward** the selected message.
  - **Move** the message to other folders.
  - **Mark** the message as **Read** or **Unread**.
  - **Go To** other accounts such as **Outlook E-mail** or **MMS**.
  - **Tools** to **Manage Folders**, **Empty Deleted Items**, **Clear "Text Messages"**, create a **New Account**, and more **Options**.

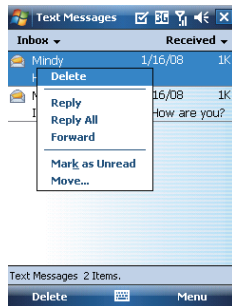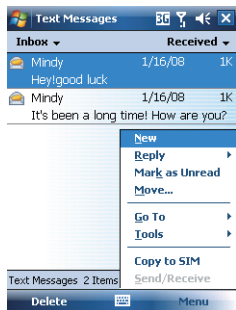


## SMS settings


Text Message settings allows you to customize your **Accounts**, **Message**, **Address** and **Storage**.

1. Tap **Start > Messaging** and select **Text Messages** and then **Inbox**.
2. Tap **Menu > Tools > Options**.

In **Options** you can tap the following tabs to modify the settings:

  - **Accounts** tab: Tap an account to change settings. For example, tap **\*Text Messages** to change **Request delivery notifications** and **Use Unicode when necessary**. Tap **New Account** to set up a new account. Or tap **Signatures** to use signatures to designate accounts.
- **Message** tab: Set up the following messaging features- When replying to e-mail, include body, Keep copies of sent items in Sent folder, and the After deleting or moving a message feature.
- **Address** tab: Select whether to get e-mails from all the contacts with e-mail addresses; alternatively, you can verify names by defining their e-mail addresses.
- **Storage** tab: Check the memory space of your device, storage card and attachments, **Store attachments on storage card** and specify how you want to empty your deleted items.

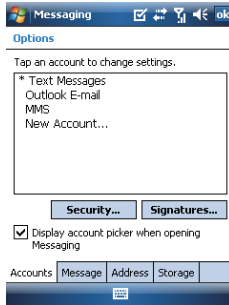



## 7.2 Multimedia messages (MMS)

Your MWg Atom V allows you to create and share your own MMS messages (with photos, videos, text, and audio) with your contacts. During editing the MMS content, you can use MWg Atom V built-in camera to snap photos, and they will be directly inserted in the content.

### Creating an MMS message

Messages are created by combining various slides. Each slide can consist of a photo or video, audio, and text. Select **New** from the menu of any message box screen to compose a new message. Here's a quick run-down of the Create screen:

1. Tap the \_\_\_\_\_ areas to manually input your address and message subject. Tap **To**: to select a contact from your address book. Tap the double **down** arrow to view the **Cc** and **Bcc** fields.
2. Tap here to insert a photo or video.
3. Tap here to input a text message.
4. Tap here to include an audio clip.
5. Tap here to play the message.
6. The message size and the slide number are shown here.
7. The menu lets you do a variety of things (explained later).
8. When you're ready to send your message, tap here.



If you would like to choose a pre-made message template instead of adding components yourself, choose **"New From Template"** from the Template option of **Menu**.

**Please note:** You may not automatically be taken to a blank message. If you are instead taken to a page that displays pre-made templates, choose the template you want. If you would prefer to create a blank message next time, check the **"Always choose custom"** box.



 
## Adding a photo or video

You can add either a still image or a video clip to each individual slide. After you've tapped the area to add a photo or video, you'll be allowed to select exactly what you want to include.



1. This pull-down lets you select a specific location that contains photos/videos.
2. Tap the specific photo or video clip that you want to add.

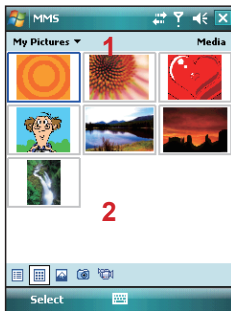


Tap and hold on a file to see the "Add to Message", "Large View", "File Info" and "Delete" options. "Add to Message" adds the selected photo/video to the slide. "Large View" displays individual photos or videos. "File Info" displays the file name, resolution, date, and size of a photo. When you are viewing video file information, the duration of the video is also listed. "Delete" deletes the file.

Tap **Select** to add the selected photo/video to the slide. Or tap **Cancel** to return to the previous screen.



The following options are available:

-  - Displays photos/videos as a file list.
-  - Displays thumbnails (as shown here).

-  - Displays individual photos.
  -  - Lets you take a new picture.\*
  -  - Lets you capture a new video.\*
- \*May not be available in all versions.

## Adding text


You can add text to any slide. You can either enter in new text with the keyboard, or use "My Text." You can also insert an emotion icon or a favorite website link into your message. My Text is previously saved words or phrases.

Tap the My Text icon to see a list of pre-saved text messages. Tap the one you want, and then tap **Select** to add it into the message.


Tap **"Menu"** in the My Text screen to view additional options:

 - New:** Lets you enter in a new canned text message.
- Edit:** Lets you modify an existing canned text message.
- Delete:** Removes the selected canned text from the list.






Tap the smiling face icon to see a table of Emoticon icons. Tap the one you want to add into the message.

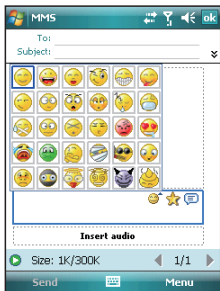 

Tap the star icon to see a list of favorite links. Tap the one you want, and then tap "Select" to add it into the message

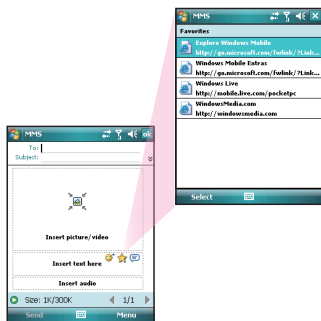 

### Adding audio

Single audio clips can be added to each slide. You can either include an existing sound file, or record a new one.

1. From the pull-down, select a location that contains audio files.
2. Tap the file you'd like to use.

You can view file information similar to the way you can with photos and videos. Tap and hold on a file, then choose "Play Audio," "File info" or "Delete." The file name, duration, date, and size are shown when you select "File info." You can also choose to delete the file. You can use the playback controls to preview the audio:



(Play/Pause and Stop controls are available.)



Highlight a file then tap "Select." Or tap "Cancel" to return to the previous screen.



- Tap this button to activate controls that allow you to record new audio:





**Record** - Tap this button to begin recording.

**Stop** - Tap this button to stop recording.

### Menu commands

The following commands are available along the bottom of the Create screen:



-  - Tap here to preview your message.
-  - Takes you to the previous slide.
-  - Takes you to the next slide.
-  - The first number indicates the current slide you are viewing. The second indicates the total number of slides. Tap here to see a pop-up list of slides; tap the number you wish to see.

## Menu options

**Add Recipients** - Choose and add recipients from your address book. (The option is only available when you are in the "To" field).

 
**Insert Media** - Insert a picture/video, audio track, or My Text into the current slide. This works the same as doing it on the slide directly.

**Remove Media** - Delete the picture/video, audio track, or text from the current slide. (The option is not available if you have not inserted media).

**Slides** - Insert a slide or delete the current slide. You can also press "Organize" to arrange the slide order and display the duration of each slide.

- Tap and drag a slide to move it to a different spot.
- Tap the directional arrows beneath each slide to increase or decrease the display time.
- Tap and hold for more options (move slide forward/backward, auto fit duration (adjusts duration to match audio length), delete).

**Insert** - Insert a slide into the message.

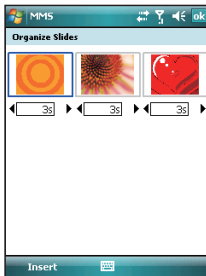

**Template** - Choose "New from Template..." to create a message with preset content. Choose "Save as Template" to save your current message as a new template.

**Capture** - Take a picture, or record video or audio. (Some or all these options may not be available).

**Attachments** - Attach a vCard, vCalendar, or other file (from the menu, select the type of file you wish to attach). You can delete any attachment as well.

**Send via SMS** - Sends the text content to the recipient via SMS.

**Cancel Message** - Cancels the creation of the message.

**Options** - Set the following options of the message.

**Background** - Choose a background color for the slide.

**Text Layout** - Choose a layout for the text in the slide.

**Text Size** - Choose small, normal or large text.

**Text Color** - Choose a color for the text.

 
**Text Background** - Choose a background color for the text.

**Send** - Sends the message.

**Send Options** - Here you can view and edit your send preferences:

- From the "Delivery" pull-down, select when you'd like to deliver the message.
- From the "Expiration" pull-down, select how long you'd like the message to be stored on the server. The server will stop attempting to deliver the message after the set time expires.
- Set the message priority from the "Priority" pull-down.
- Delivery report / Read report: By checking these boxes, you will be notified when your message is delivered and read, respectively.


Tap **Menu** to choose "Save as default" or "Restore factory default." Choose "Cancel" to return to the previous screen.

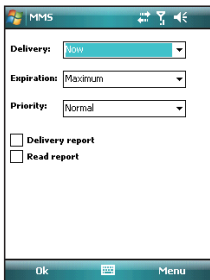


## Viewing MMS messages

When viewing messages that you receive or send, or when previewing a message you're working on, you have a variety of options.

Use the Play/Pause/Stop buttons to view the message.

Use the  button to display the message in full screen mode. Use the Left/Right Arrow buttons to skip among the various slides (if applicable.) You don't need to see the message straight through; you can skip among the various slides.

 Tap **Menu** to view detailed information of the message.

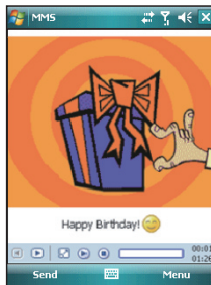

Tapping **Objects** displays a list of all the message components. Tap any component to open/view it.

**Info** displays the file name, resolution/duration, date, and size of an object.

**Menu** contains follow options:

- **Save** - Stores the current selected object.
- **Save into "My Text"** - Saves the text into the "My Text" list.
- **Assign to Contact** - Lets you associate the selected image file as a caller ID or audio file as ringer ID. (May not be available in all versions).

## MMS configuration

To view and edit your MMS configuration, choose "Tools" in the menu that appears at the bottom of the screen while viewing any message box, choose "Options", and then choose "MMS" in Accounts.

**Note:** Not all options are available in all versions.

**Retrieve messages immediately** - Typically, you receive a notification whenever a new message is available. Checking this box downloads new messages automatically. You can also choose to download only while on your home network.

**OK to download when roaming** - Downloads messages after your confirmation when you are roaming.

**Save sent messages** - Check this option to save a

copy of messages that you send.

**Reject all messages** - Check this option to refuse all incoming MMS messages.

**Deny anonymous messages / advertisement message** - Check this option to refuse all the incoming anonymous or advertisement MMS messages.

**Allow delivery report / Allow read report** - These commands allow delivery and read reports to be sent after you receive and read messages, respectively.

**Show sending prompt** - Check this option to display a prompt when you send a message.

**Show receiving prompt** - Check this option to display a prompt when you receive a message.

**Show sent successfully prompt** - Check this option to display a prompt when the message has been sent successfully.

**Show new message prompt** - Check this option to display a prompt when you receive a new message.

**Show download successfully prompt** - Check this option to display a prompt when the message download is finished.


**Show message details** - Check this option to display message information after playing a message.

**Disconnect network connection after MMS** - Check this option to disconnect the network connection after sending a message.

**Attempts before giving up** - This value sets the number of times the program will attempt to send your message before stopping.

**Creation mode** - Choose the mode to use when creating a message.

 **Photo resolution** - Choose the resolution for the images that you send. You may want to decrease the original resolution to shorten the send/receive time.

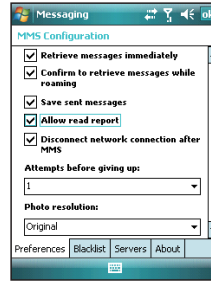

### 7.3 Voice mail

This function enables you to divert received calls to a voice mail center where callers can leave voice messages under the following circumstances:

- You are currently on the phone.
- Your phone is switched off or is not able to receive signals.
- You did not answer the call.

This voice mail service is SIM card and network dependent. If the voice mail service is not included in your mobile network operator's package, you will have to subscribe to the service separately and configure the settings manually. Once you have successfully subscribed this service, you will be notified of a voice mail message by an icon on **Today** screen.

 
#### Calling the voice mail center

Initiate Phone screen > Speed Dial and call Speed Dial 1. You will enter the voice mail center.

### 7.4 E-mail

#### Synchronously processing E-mail

With synchronization, messages are synchronized



between your MWg Atom V and the PC by using ActiveSync and Microsoft Exchange or Outlook. If you want to synchronously process E-mail, you must activate the **Inbox synchronization** function in ActiveSync beforehand. For more information on **Inbox synchronization**, please refer to Chapter 5 Synchronization.

Please be aware of the following Inbox Synchronization process rules:

- Please select a desired cooperation relationship on New Cooperation Relationship screen in computer to synchronously transmit information. If you select not to perform synchronization, you may manually copy or move E-mail messages between your MWg Atom V and the computer.
- Only the mails in Inbox of your computer will be synchronized.
- Only the mails in **Exchange** or **Outlook** can be synchronized.
- The mail from Outbox folder in your MWg Atom V will be sent to your computer first, and then it will be delivered through Microsoft Exchange Server or Microsoft Outlook.
- If a specific letter is deleted in your MWg Atom V, then it will also be deleted in your computer when you reconnect your device with computer.
- SMS in your device will not be synchronized.

### Establishing E-mail services

If you have E-mail accounts from ISP or company network, you may use **Messaging** to receive or send e-mails. Please refer to the following instructions to set up a new E-mail account in **Messaging**.

1. Please acquire the following information from ISP or company network administrator:
  - E-mail address, user name and password.
  - POP3 or IMAP4 server name of Intranet E-mail.
  - SMTP server name for outgoing E-mail.

2. Establish E-mail services:

Tap **Start > Messaging > Menu > Tools > New Account**, and then follow the instructions on the screen to set up a new E-mail account.

3. See **Section 6.1 Wireless Manager** to connect your MWg Atom V to a network and start receiving and sending e-mails and messages.

4. Connect with E-mail Server:

- Tap **Messaging > Menu > Send and Receive**.
- Tap **Messaging > Menu > Tools > Options > Accounts** tab to change E-mail account settings. When you finish, your new E-mail account will be displayed under this menu. You can start connecting to your E-mail server at this point. You can set up several E-mail accounts, including your Outlook E-mail account.

### Connecting to the server

You may directly receive new e-mails from E-mail server without connecting to a computer. You may select to use it online or offline; if it is online, you may directly read and reply mail when your MWg Atom V is connected to E-mail server. You can reply a mail directly by simply tapping **Send**.

You may select to disconnect to the internet after downloading only the subjects of new messages or partial messages and decide whether to download the full message later. When you reconnect next time, **Inbox** will download in accordance to appointed methods, and send out unsent e-mails in **Outbox**.

You may choose to read just the e-mails within the last few days, mail subjects only, or complete mail. You can also choose to receive only the attachments less than specific file size. To make these settings, tap **Start > Messaging > Menu > Tools > Options**, and change E-mail account setup by requirement.

## Composing and sending an e-mail

Tap **Start > Messaging > New** to write a new e-mail. After writing a new e-mail, select **Send** on the bottom left of the screen to send this new e-mail.

When composing a new e-mail, you can:

1. Tap **Bcc, Cc, To** fields to input recipients' E-mail addresses.
2. Tap **Subject** field to input a subject for your new e-mail.
3. You may enter mail content in the empty area on the bottom half of the screen.
4. Tap **Send** to start sending your e-mail.
5. Select the icon on the bottom center of the screen to activate or disable screen keypad.
6. Tap **Menu** to open menu.

## Reading and replying an e-mail

Tap **Start > Messaging > Menu**, and then select **Send** and **Receive** from **Menu** to start sending and receiving new e-mails. Select **Inbox** on the top left of the screen to view **Inbox**. Tap on any unread e-mail to view its content.

When reading e-mails, you can:

1. Tap on a contact in **Bcc, Cc, or To** field to save this contact as a new contact.
2. Tap **Reply** to compose a reply e-mail.
3. Tap **Menu** to open menu.

On the e-mail content screen, select and hold to activate pop-up **Menu**.

## 7.5 Push e-mail

With Push E-mail, you can access e-mails in real time. This Direct Push Technology can be enabled by the Exchange Server 2003 administrator, bringing the latest information to you. To use Push E-mail, please turn on Wi-Fi or GPRS to connect to the Exchange Server.

### Enabling Direct Push on your MWg Atom V

1. On your MWg Atom V, tap **Start > Programs > ActiveSync > Menu > Add Server Source**.
2. Input the address of your server in **Server Address**.
3. Input your network **User name, Password, and Domain**, and then tap **NEXT**.
4. In ActiveSync on your MWg Atom V, tap **Menu > Schedule**.
5. Set **Peak times to As items arrive** and **Off-peak times to As items arrive**. Tap **OK**.

Now you have established a cooperative relationship for your MWg Atom V and the Exchange Server. The next time when you tap **Start > Programs > ActiveSync > Sync**, you may synchronize with Exchange Server using Wi-Fi or GPRS.

Once you are connected to the network, you may look up your **Global Address List** over the air from your MWg Atom V by tapping **Contacts**. You may send an e-mail to a contact on your **Global Address List** following the same steps as sending E-mail to a contact saved on your MWg Atom V.

 
**Please note:** To be able to use direct push, you need to have an exchange server. Microsoft Exchange Server 2003 also supports useful functions such as remote device wipe. To find out more on the benefit and usage of Microsoft Exchange server, please consult your company administrator or visit Microsoft's website: <http://www.microsoft.com>

## 7.6 Windows Live Messenger

Windows Live Messenger provides functions including Messenger, Hotmail, and Sync. To use these functions, you will need to turn on GPRS or Wi-Fi.

### Signing in Windows Live Messenger

1. Select **Start > Programs > Messenger**.
2. Tap on the arrows to choose your sign in status and then tap "**Sign in**".
3. Enter your Windows Live Messenger or Hotmail email



- address and password.
4. Select **"Sign In"**.




### Composing Hotmail

  
1. After signing in Messenger, wait for the sync to finish and then select **Start > Messaging**.
2. Select Windows Live Inbox from the drop down menu on the top left corner.
3. Tap **Menu > New**.

### Hotmail

1. After signing in Messenger, wait for the sync to finish and then select **Start > Messaging**.
2. Select Windows Live Inbox from the drop down menu on the top left corner. You will find incoming emails to your Hotmail account in the Windows Live Inbox.

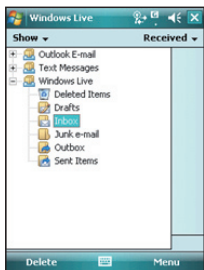








## **Chapter 8**

### **Multimedia**

   - 8.1 Camera**
- 8.2 Video recorder**
- 8.3 Taking a Geo tagged photo**
- 8.4 Photo editor**
- 8.5 FM radio**
- 8.6 Pictures & videos**
- 8.7 JAVA**
- 8.8 Streaming player**
- 8.9 Recorder**
- 8.10 Audio Mixer**





## Chapter 8 Multimedia

### 8.1 Camera








You may use camera function in your MWg Atom V to capture important moments.

 
Tap **Start > Programs > Camera**, or press down **Camera** key to launch camera.

#### Capture mode

During capture mode, you can tap the icons on the top of the screen to switch through different modes, or tap  to open the full camera options menu. To switch to Video mode, simply press the center navigation key or tap  to enter the video standby mode.



No.	Icon	Function	Description
1		Image Mode	Includes the following modes: Auto (default) / Day / Cloudy / Fluorescent and Night
2		Image Size	You can choose among:1600 x 1200 / 1280 x 960 / 800x 600 / 640 x 480 (default) / 320 x 240 / 160 x 120
3		Image Quality	Normal (default), Fine, Low.
4		Flash Light	Auto (default), On, Off.
5		Sequential Shot	18,12,6,3,Off (default)
6		Shutter Sound	On (default), Off
7		Zoom	Zoom Range: 1.0x (default) / 1.2x / 1.4x / 1.6x / 1.8x /2.0x / 2.2x / 2.4x




No	Icon	Function	Description
8		EV Compensation	Provides the following values: +2.0 / +1.5 / +1.0 / +0.5 / 0.0 (default) / -0.5 / -1.0 / -1.5 / -2.0
9		Macro/Normal mode	Tap this icon to switch between Macro (within 10~60 cm) mode and normal mode.
10		Remained Shots	Indicates estimate number of photos you can take using the current storage location.
11		Exit	Tap this icon to exit camera mode.
12		Options Menu	Tap this icon to open options menu, in which the following options are provided: Mode, Effect, EV , Size, Quality, Timer, Sequential Shot, Flash, Shutter Sound, Storage, Reset Camera Settings and Flicker Frequency.
13		Pictures & Videos	Tap this icon to go to Pictures & Videos where the taken photos and videos are stored.
14		Video Mode	Tap this icon to change to Video mode.


### Taking a photo

  1. On Camera capture mode, focus on the object.
2. You can also tap on the icons on the top or open options menu to change camera settings.
3. Half way press **Camera** key to auto-focus, fully press **Camera** key to take photo.
4. After you take a photo, the image will be categorized in **Pictures& Videos**.

**Please note:** The default storage location is phone memory.





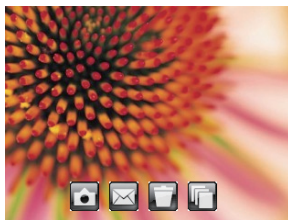

## Photo confirm screen





After taking a photo, you will enter the confirm screen where you can choose to delete or send out the image.

 
On this screen you can tap the following icons to:







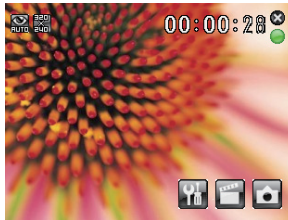

No	Icon	Function	Description
1		Camera	Return to camera capture mode.
2		Send	Choose to send out this photo via E-mail or MMS.
3		Delete	Delete the photo on screen.
4		Pictures & Videos	Go to Pictures & Videos.

## 8.2 Video recorder

The phone camera can also be used as a video recorder to record memorable moments of your life.

Tap **Start > Programs > Camera** > , or directly press **Camera** key >  to enter video mode.



 
No	Icon	Function	Description
1		Video Mode	Tap this icon to switch among the following modes: Auto (default) / Day / Cloudy /Fluorescent and Night.
2		Video Size	Set to be 320 x 240.
3		Remained Video Length	Indicates the estimated length of video you can take using the current storage location.
4		Exit	Tap this icon to exit video mode.
5		Prepared to record /Recording	Indicates the video recorder status.
6		Options Menu	Tap this icon to open options menu, in which the following options are provided: Mode, Effect, Video Format, MMS Video, Storage and Flicker Frequency.
7		Pictures & Videos	Tap this icon to go to Pictures & Videos where the taken clips are stored.
8		Video Mode	Tap this icon to change to Video mode.

## Recording a clip

1. On Video recorder mode, focus on the object. You can also tap on the icons on the top or open options menu to change video recorder settings.
2. Press **Camera** key to start video filming.
3. Press **Camera** key again to stop filming.
4. After you record a clip, it will be categorized in **Pictures & Videos**.



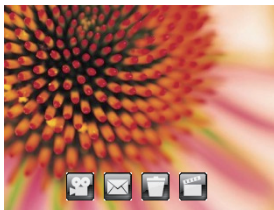

**Please note:** The default storage location is phone memory.


## Video confirm screen



 After recording, you will enter the confirm screen where you can choose to delete or send out the clip.





On this screen you can tap the following icons to:

No	Icon	Function	Description
1		Video	Return to video mode.
2		Send	Choose to send out this clip via E-mail or MMS.
3		Delete	Delete the photo on screen.
4		Pictures & Videos	Go to Pictures & Videos.



### 8.3 Taking a Geo tagged photo

You can take GeoTagged photos (photos that carry the coordinates of where you were when you took them) and easily share them with friends through online albums like flickr.

 
1. After turning on the camera, tap the GPS button  on the bottom left of the preview screen to enable/disable the GPS coordinates photograph function.
2. After turning on GPS, it will start searching the current GPS coordination and the GPS button will display as .
3. When the device GPS has successfully locked on satellite signals, the GPS button will present the status as GPS ON . Under this mode, the photos you take will carry the current coordinates of where you are at in EXIF.
4. Aim the camera at the item you would like to capture, press halfway to focus, full press to take the picture.
5. Tap the  button to view the photo you just took in "Pictures & Videos".

**Note:** For your ease of use, the filename of photos with coordinates always ends with (GPS) on this device. Example: Camera0024 (GPS).jpg





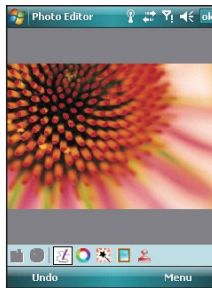


### 8.4 Photo editor

You can handwrite messages on photos, or apply colorful frames and stamps by tapping **Start > Programs > Photo Editor**.

On the editor screen, you can tap **Undo** to reverse the steps, or tap **Menu** to get further editing options.




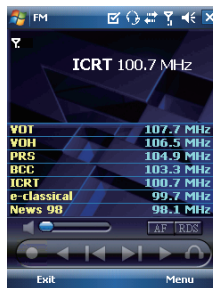 
The tool bar on the bottom also provides 7 functions:

No	Icon	Function	Description
1		Save	This button appears after you have modified a picture. Tap this to save the current image.
2		Undo	Revert
3		Pen Size	Choose a brush size.
4		Choose Color	Choose a color of your pen from color palette or mix a paint by yourself .
5		Effect	5 effects are available: Gray / Blur / Emboss / Negative / Classic
6		Choose Frame	3 photo frames are available: Star / Fall / Flower
7		Add Stamp	5 stamps for you to add more fun touches to your picture.






## 8.5 FM radio

You can listen to FM radio through your MWg Atom V by searching channels. Please plug in the stereo headset before listening to FM radio.

 
1. Select **Start > Programs > FM Radio**.
2. You may use function bar or number key on radio screen to enter your favorite channel.
3. Tap **Exit** to turn off the radio and exit, or
4. Tap  on the top right of screen to exit radio screen and play the radio on the background. Now the radio function is still running and you may use some other applications at the same time.




### Radio Function Bar:

1. Channel Tuner: you may use this bar to tune to your desired channel.
2. Tap  to switch to the next available channel.
3. Tap  to switch to the previous available channel.
4. Tap  to increase frequency by 0.1 MHz.
5. Tap  to decrease frequency by 0.1 MHz.
6. Tap  to switch between loudspeaker or headset mode.





7. Tap  to start recording the FM radio broadcast of the channel you are currently listening to. The recording time will be displayed on the top of screen. Tap "**STOP**" to stop recording.

### Options:

Tap Options for the following options:

- **About:** display information related to this program.
- **Recorded File:** display the radio recording folder.
- **Exit:** press exit to completely close radio function.

### Radio Volume Control Method:

You may adjust radio volume using the volume control key on the side of mobile phone. Slide the volume control key upwards or downwards, and then select a suitable volume by tapping on the pop-up volume adjustment bar.

## 8.6 Pictures & videos

You may use **Pictures & Videos** function to manage your photos or videos. By tapping **Start > Programs > Pictures & Videos**, you can:

1. Enter different folders.
2. Select photo arrangement.
3. Tap on a thumbnail picture to view the picture.
4. Select **Menu** for more options.

## 8.7 JAVA

This device supports JAVA, providing you the freedom of using JAVA applications and games. You can manage and execute the Java applications here.

### Installing JAVA applications

You can run the installation of a JAVA application stored on your device or storage card:

#### Please note:

A JAVA application suite normally consists of a .jad file and a .jar file that have the identical file name. They ought to be stored at the same location.

1. Tap **Start > Programs > JAVA > Menu > Install**, and select **My Documents, Storage Card, or From URL**.
2. Double tap the .jad file you wish to install.
3. Choose the category you wish the application to be placed in, and the installation will begin.

### Running JAVA applications

 
1. Once a JAVA application is successfully installed, you can tap **Start > Programs > JAVA**, and enter the category to locate the application.
2. Select the application and tap **Option > Launch** to execute it.
3. You can also choose **Make a shortcut** to create a shortcut in **Programs**.

## 8.8 Streaming player

You can use this function to watch TV or listen to the streaming video on internet or operator WAP portal. This function supports all the streaming files. TV and radio content are provided by your operator, click any streaming link on Pocket Internet Explorer will launch this player.



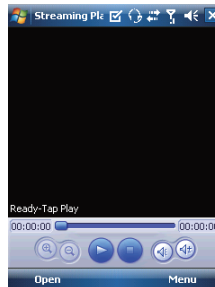


Go to **streaming client:**

**Today > Start > Streaming Player.**



## 8.9 Recorder

Use **Recorder** to record voice memo and make note taking simple and efficient. Tap **Start > Programs > Recorder**.

 
 
1. Tap  to activate sound recording function.
2. Tap  to stop recording sound.
3. Before you start recording, you may set the recording time in **Duration**.
4. Check **History** to show all your recorded files.
  - Tap on any recorded file on your history list to play the file.
5. Uncheck **History** to hide the history window.
6. Tap **Menu > Save** To to choose the file location.
7. Tap  to leave recorder screen while still keep recording on the background; or tap **Menu > Exit**, to stop recording and exit.
8. When recording in the background, tap  to return to Recorder. Tap  to stop recording.

 
**Please note:** If there is an incoming call during recording, answering the call will automatically terminate recording. If you want to continue recording after ending the call, you need to reactivate recording function.

## 8.10 Audio Mixer

Audio Mixer enables you to configure bass, treble, and 3D effect while listening to the music. Use Media Player to play your audio files and then activate Audio Mixer to adjust the settings. To activate Audio Mixer, tap Start> Programs > Multimedia > Audio Mixer.

**Note:** If you use an A2DP Bluetooth headset to listen to the music, Audio Mixer won't work.


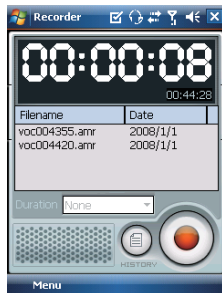
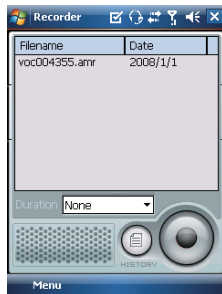





## **Chapter 9**

# **Applications**

    - 9.1 Calendar**
- 9.2 Tasks**
- 9.3 File explorer**
- 9.4 Internet explorer**
- 9.5 Windows media**
- 9.6 Games**
- 9.7 Calculator**
- 9.8 ZIP**
- 9.9 Excel mobile**
- 9.10 PowerPoint mobile**
- 9.11 Word mobile**
- 9.12 Notes**
- 9.13 Search**
- 9.14 Windows live**
- 9.15 GPS tracking**





## Chapter 9 Applications

### 9.1 Calendar

#### Appointments and meetings

You may use **Calendar** to arrange appointments, meetings, and other events. You may view your appointments in different display modes. You may select preferred display mode by tapping on the bottom left of screen to switch between day, week, month, and year.

1. Tap **Start > Calendar**. Select a date to go to the desired date.
2. Select an appointment on the list to view or edit appointment details.
3. Tap on **Day** (or **Week**, **Month**, **Year** and **Agenda**) on the bottom left of the screen to switch between display modes.
4. Tap on the keypad icon to activate or hide screen keypad.
5. Tap **Menu** on the bottom right of the screen to open menu.
6. Tap **Options** in **Menu**, you may change the display setup of Calendar by preference.

#### Creating an appointment

1. Tap **Start > Calendar**. Select the date and time of appointment.
2. Highlight the desired date and time, and then tap **Menu > New Appointment**.
3. Tap **OK** to save the entry and return to calendar.
4. Tap **Subject** to edit the field or select predefined text.
5. Tap **Location** to edit the field.
6. Tap **Start** to select the start time.
7. Tap **Ends** to change the end time.
8. You can add your personal notes in **Notes** tab.
9. Tap **OK** to save the appointment and return to Calendar screen.

 
If you select **Remind Me** in **Reminder** field, then your MWg Atom V will remind you according to the settings in **Start > Settings > Personal tab > Sounds & Notifications**.

#### Viewing and updating calendar

Select an appointment on **Calendar** to view appointment summary. If you want to change the details of an appointment, tap **Edit**.

#### Sending a meeting notice

You may use **Calendar** to set meeting notice by combining with the information on **Outlook** or **Pocket Outlook**. When you synchronize messages or connect your MWg Atom V with e-mail server, meeting reminders will be generated automatically. Tap **Calendar > Menu > Tools > Appointments** tab, and select desired meeting sending method in **Send meeting requests via** field.



## Generating a meeting notice

1. Tap **Start > Calendar > Menu > New Appointment**.
2. Tap **Attendees** field, and then tap **Add Required Attendee** and/or **Add Optional Attendee**. You will enter **Contacts**.
3. Select attendees from the e-mail addresses of your contacts.
4. The new meeting notice will be generated automatically and saved in **Outbox** folder.

## 9.2 Tasks

You may use **Tasks** to help you track unfinished tasks.

 
1. To add a new task, tap **Tap here to add a new task**.
2. "!" Represent first priority.
3. Select a single item to enter the details screen of this time.
4. Select a single item and hold to activate the pop-up menu.
5. You may change the arrangement of the tasks list. On **Tasks** screen, tap **Menu > Sort By**.
6. You may choose to display a specific task category on your tasks list. Tap **Menu > Filter**.

### Adding a new task

1. On **Tasks** screen, tap **Tap here to add a new task** to add the new text's subject. The newly created task will show on **Tasks** list.
2. Tap on the new task to enter the detail information screen of task.
3. Tap **Edit** to enter the editing screen.
4. Select **Starts** and **Due** field to set the first and the last day of the task.
4. You may select **Occurs** to select whether this task has periodicity.
5. You may select **Reminder** to set a time to remind you or select **None** (unnecessary to alert).
6. To appoint a task as certain category, tap on **Categories** field to select a category from the options list.
7. To add notes, tap **Note** tab and input desired content here.
8. Tap **OK** to save the task and return to tasks screen.

### Checking and updating tasks

You may select a task from tasks list to view task summary. To change the details of this task, select **Edit**.



## 9.3 File explorer

This feature allows you to view and manage all the files saved in your MWg Atom V or theme memory card. To access File Explorer, tap **Start > Programs > File Explorer**. Select the source of where the files are saved.

To sort files by its types, tap **Sort By** and select a sorting method: **Name**, **Date**, **Size**, and **Type**. Tap **Up** to go up a level on the file hierarchy.

Tap Menu to access options:

Option	Description
My Documents	Display files saved in My Document.
Open Path	Create a new path to open a file.
Send	Send the selected document via e-mail.
Beam File	Send the file via Infrared or Bluetooth.
Refresh	Refresh the document display screen.
Show All Files	Show all the stored files.
New Folder	Create a new folder.
Rename	Rename a file.
Delete	Delete a file.
Edit	Manage the file list by using Undo, Cut, Copy, Paste, Paste Shortcut, and Select All.

Tap and hold on a file for more options:

Option	Description
Set As Ringtone	Set the file (must be in music format) as your current ringtone.
Set As Today Background	Set the file (must be in picture format) as your <b>Today</b> background.
Add to Zip File	Compress the file.

## 9.4 Internet explorer

 
### Connecting to the web

1. Connect your MWg Atom V with the Internet using GPRS or WI-FI.

2. Tap **Start > Internet Explorer**.

3. Input website address in the blank text field.

- Select the arrow next to the blank field to go to the link.
- You may use navigation keys or the scroll on browser screen to adjust your screen browsing content.
- Tap **Back** to return to previous page.
- Tap the keypad icon in the bottom center to hide or reveal screen input panel or select input method.
- Tap **Menu** to open Menu.
- Select and hold any location of website content to open the pop-up menu.



## Viewing favorites

1. On browser screen, tap **Menu** > **Favorites**.
2. On **Favorites** screen, select the website you want to view.
  - Select the website you would like to go to.
  - You may add or delete folders or URL links.

## Mobile Favorites folder

After installing ActiveSync to your computer, **Mobile Favorites** folder will be added to **Favorites** in your computer. Only items saved in Mobile Favorites can be synchronized with your MWg Atom V. Follow the steps below to add your favorite website to **Mobile Favorites**:










1. On your computer, select **Internet Explorer** > **Tools** > **Create Mobile Favorites**.
2. To change name, enter the new name in the new window.
3. To change storage location, select **Create In** > to create a new folder or select a folder in the new window.
4. Click on OK to add this website to your **Mobile Favorites** folder.

## 9.5 Windows media

 
You can use Microsoft Windows Media Player 10 to play the audio and video files stored in your MWg Atom V or from Internet.

1. Tap **Start** > **Programs** > **Windows Media** to activate Windows Media Player.
2. Tap **Menu** > **Library** to display the library screen.
3. Select a library folder.
4. Tap **Menu**, and then select **Open File** to open files not in the library; Select **Update Library** to update library list.
5. Select and hold the file or folder for playing, and then select **Play** or **Queue Up**.
6. By tapping **Back** icon, you can return to the Windows Media Player control panel.

### Playing Audio or Video Files

1. Tap  to view in full screen.
2. Tap  to connect to Windows Media Mobile website, from which you can find the music and image.
3. you want to play.
4. Tap  to return to the beginning of current file or previous file.
5. Tap  or  to play or pause.
6. Tap  to skip to next file.
7. Tap  or  to adjust volume.
8. Tap the  icon to active or disable sound.

You may use synchronization to copy sound and image files from your computer to this device. The Windows Media Player in this device can play Windows Media and MP3 files.



## 9.6 Games

You may access **Games** to select games you like in your MWg Atom V for entertainment.

1. Tap **Start > Programs > Games**.
2. Tap **Bubble Breaker** or **Solitaire** to launch a game.

## 9.7 Calculator

Calculator allows you to run simple operations in your MWg Atom V.

Tap **Start > Programs > Calculator** to use your calculator.

## 9.8 ZIP

You can save storage space and increase efficiency of your MWg Atom V by compressing some of your files with this ZIP tool.

### Zippping files

1. To zip a file, tap **Start > File Explorer**.
2. Tap and hold on a file you would like to zip. A pop-up menu will appear.
3. Select **Add to Zip** file in the pop-up menu. In the newly appeared window, you may:
  - Select a zip method according to your need.
  - Set a password, which will be asked for when you unzip the file.
4. Tap **Start** to start compressing the file.

### Unzipping Files

1. To unzip a file, tap **Start > Programs > ZIP**.
2. Tap **Unzip** button on the pop-up window. A list of zipped files will appear.
3. You may select a different folder for more zip files. In the file list, tap on the file you would like to unzip.
4. Tap **OK** and enter the password (if required) to decompress the zip file.

## 9.9 Excel mobile

 
You may use **Excel Mobile** in your MWg Atom V with Microsoft Excel in your computer to easily copy or move files between your MWg Atom V and your computer. Through computer synchronization, you can keep updated content in both your MWg Atom V and your computer.

### Creating a new Excel document

Tap **Start > Office Mobile > Excel Mobile > New**, and the screen will open a new Excel file.

**Please note:** Your **Excel Mobile** can only open one file at a time. When you open a second file at the same time, your MWg Atom V will ask you to save first file. The saved Excel Mobile file in your MWg Atom V could be opened by selecting from **Excel Mobile** list screen.





## Deleting / copying or sending a document

To delete, copy or send a file, tap and hold the desired file name to open pop-up menu. Your **Excel Mobile** provides basic worksheet tools, for example, formula, function, sorting and filtering. To show toolbar, tap **View > Toolbar**.

## Synchronizing with Excel files on your PC

Excel Mobile workbooks can be synchronized with Excel workbooks on your PC. To synchronize files, select the Files type for synchronization in ActiveSync Options settings on your PC. When you select **Files**, a **My Documents** folder is created on your PC's desktop. Place all the files you want to synchronize with your MWg Atom V in this folder. Password-protected files cannot be synchronized. All Excel Mobile files that are stored in **My Documents** and its subfolders are synchronized with the PC. **ActiveSync** converts documents during synchronization. When you delete a file on your PC or your MWg Atom V, the file will be deleted in the other location the next time you synchronize. For more information on synchronization or file conversion, see **ActiveSync Help** on the PC.

## Workbook conversion

Excel files (.xls) and templates (.xlt), created in Excel version 5.0/95 or later on the PC, will be converted to Excel Mobile workbook (.pxl) or template (.pxt) files. The conversion takes place during the following actions:

- During file synchronization.
- When you copy an Excel file to your device from the PC.
- When you open an e-mail message with an Excel file as an attachment.

 
**Excel Mobile** workbooks are converted to **Excel** workbooks when they are synchronized or copied back to the PC.

### Tips:

When working with **Excel Mobile**, the following tips will help simplify your tasks:

1. Tap **View > Full Screen** to view in full screen. To exit full screen view, tap **View > Full Screen** to return to general view.
2. You can freeze panes: select a cell, then tap **View > Freeze Panes**. You may freeze the top and most left window cell on worksheet. Once you freeze the panes, you can see the frozen window cell no matter where the screen is scrolled.
3. You can split the worksheet to view different areas of this worksheet on the same screen. Tap **View > Split**, and then drag the split line to the desired location. To remove the split, select **View > Remove Split**.
4. Display or hide full horizontal and vertical lines. To hide a row or a column, select any cell on the row or column you wish to hide, then tap **Menu > Format > Row or Column > Hide**. To unhide a column or row, **Menu > Format > Row or Column >** and select **Unhide**.

**Please note:** When you are synchronizing or copying files from your MWg Atom V to PC, Excel Mobile files will be transformed into Excel files. While most of the settings will be kept during this transformation, some of the format and properties may be lost.



## 9.10 PowerPoint mobile

You may use **PowerPoint Mobile** in your MWg Atom V with Microsoft PowerPoint in your computer to easily copy or move document between your MWg Atom V and your computer. Through computer synchronization, you may keep the files in both your MWg Atom V and your computer updated. You may use PowerPoint Mobile to browse or play PowerPoint file.

### Opening a PowerPoint file

Tap **Start > Office Mobile > PowerPoint Mobile**, the screen will show your PowerPoint files list, from which select the file you want to open.




1. Select the folder type displayed in the list.
2. Select Name (or **Date**, **Size**, **Type**) to change the arrangement of list.
3. Select the document to open.
4. Select and hold a document to activate pop-up menu.
5. Tap **Open** to open a file.
6. Select the keypad icon to hide or reveal screen input panel and select input method.
7. Tap **Menu** for options.

 
### Overriding the playback options in a PowerPoint presentation

1. Tap **Start > Office Mobile > PowerPoint Mobile**.
2. Open the presentation file you want to view, tap ▲ > **Show Options**.
3. Tap **playback** tab, select the Override playback options for all files, and do any of the following:
  - To turn off builds and other animations, select **Show without animation**.
  - To prevent slide transitions from playing, select **Show without slide transition**.
  - To use the timings recorded with each slide in a presentation, select **Use timings, if present**.
  - To automatically advance to the first slide after the last slide in a presentation, select **Loop continuously**.
4. Tap **OK**.

### Zooming in / out

Zoom in to see a portion of a slide in more detail and zoom out to see the entire slide again.

1. In a PowerPoint Mobile presentation, tap▲ arrow > **Zoom In**.
2. Do one of the following:
  - To zoom in another level, tap .
  - To zoom out, tap .
  - To return to the slide show, tap .



## 9.11 Word mobile

You may use **Word Mobile** in your MWg Atom V with **Microsoft Word** in your computer to easily copy and move document between the phone and your computer. Through computer synchronization, you may keep updated contents in both your MWg Atom V and your computer. You may use **Word Mobile** to generate documents like letters, meeting minutes and reports.

### Generating a new word document

Tap **Start > Office Mobile > Word Mobile > New**, a new blank document will appear on screen. You may also select default settings from **Menu > Options**.

**Please note:** Your **Word Mobile** can only open one document at a time. When you open a second document at the same time, your MWg Atom V will ask you to save the first document first. When creating a new document or editing an old document, you may choose to save in the following format:

Word file, RTF file and text-only file.

The saved **Word Mobile** file in your MWg Atom V could be opened by selecting from Word Mobile list screen. To delete, copy, or send a file, select and hold desired file names to open pop-up menu. After opening a Word Mobile file, you may tap **View** to set **Toolbar**, **Wrap to Window**, and **Zoom**.

1. Select a folder category shown on list display field.
2. Tap **Name** (or **Date**, **Size**, **Type**) to change the arrangement of list.
3. Tap on a file to open it.
4. Tap and hold a file to open pop-up menu.
5. Tap **New** to create a new document.
6. Tap the keypad icon to show or hide screen input panel and select input method.
7. Tap **Menu** to open menu for more options.

 
### Synchronizing with Word files on you PC

**Word Mobile** documents can be synchronized with Word documents on your PC. To synchronize files, select the Files type for synchronization in ActiveSync Options settings on your PC. When you select Files, a **My Documents** folder is created on your PC's desktop. Place all the files you want to synchronize with your MWg Atom V in this folder. Please note that password protected files cannot be synchronized. All **Word Mobile** files that are stored in **My Documents** and its subfolders are synchronized with the PC. ActiveSync will convert the documents during synchronization. When you delete a file on your PC or your MWg Atom V, the file will be deleted in the other location the next time you synchronize. For more information on synchronization, or file conversion, see **ActiveSync Help** on the PC.

### Document Conversion

The Word documents (.doc) and templates (.dot), created in Word 6.0 or later on the PC, are converted to Word Mobile documents (.psw) and templates (.psw). The conversion takes place during the following actions:

- During file synchronization.
- When you copy a Word file from the PC to your MWg Atom V.
- When you open an e-mail message with an attached Word file on your MWg Atom V.



**Please note:** When you are synchronizing or copying files from your MWg Atom V to PC, Word Mobile files will be transformed into Word files. While most of the text and paragraphing will be kept during this transformation, some of the format and properties may be lost.

## 9.12 Notes

You may use text notes or voice notes to record information. You may also record voice in **Notes**. If a note file contains voice notes in addition to text, a small icon representing voice notes will appear in the content area of the note. If notes recording is done under the notes file list, then the recording content will be saved as a single file. You can also share your notes with others through e-mail and PC synchronization.

### Creating a new note

Tap **Menu > View Recording** Toolbar to show or hide recording tool bar. To add a new note:

1. On **Notes** screen, tap **New**.
2. You may generate notes by writing, drawing, text entry and recording.
  - Tap the keypad icon to hide or display screen input panel.
  - Tap **▲** next to the keypad icon to select input method.Applications
  - Tap **Menu** for Options.
  - Tap **OK** to save the note and return to **Notes** screen.
3. To insert the date in a note, deselect and make sure that no drawings are selected. Next, tap and hold anywhere on the note and tap **Insert Date**.

### Sending a note by e-mail

In **Notes**, **Word Mobile**, **Excel Mobile**, **PowerPoint Mobile**, and **Pictures & Videos**, you can send files and information to other devices via e-mail.

1. First you must set up **Messaging** to send and receive messages.
2. From the program, select the item you want to send.
3. Tap **Menu > Send**. A new message is created with the item attached.
4. Enter the recipient name and subject and tap **Send**. The message will be sent the next time you synchronize your MWg Atom V.

### Beaming a note

 
To beam a note, on the note list, tap and hold the note. On the pop-up menu, tap **Beam File**.

## 9.13 Search

This feature allows you to search a file easily.

### Finding a file

1. Tap **Start > Programs > Search**.
2. Enter the file name on **Search for** field and select a file type in **Type** field.



3. Tap Search to start searching and the result will be displayed in **Results** field.

## 9.14 Windows live

### Go to Windows Live:







**Today > Start > Programs > Windows Live**

 
Windows Live provides a rich set of Windows Live services including e-mail, IM, search and more.



1. Windows Live Messenger: Send IMs or join group chats to stay connected.
  - Set status (online, offline and mobile) and see the presence of friends and colleagues.
  - Send messages via voice as well as text.
  - Use emoticons to express exactly how you feel.
2. Windows Live Mail: Powerful, free e-mail with security features.
  - Get up-to-date access to Hotmail or Windows Live Mail.
  - View graphics, Web links, and contact photos in e-mails.
  - Respond to e-mails with voice recordings.
  - With push e-mail your inbox is always up-to-date.
3. Live Search: Quickly search the Web for information, directions, maps and images.
  - Find local listings for business and entertainment.
  - Access one-click calling to phone numbers.
  - Get maps and driving directions.
  - Get answers via SMS with Instant Answers.


## 9.15 GPS tracking

This feature allows you to record the routes you travel through GPS tracking. You can use any mapping software which supports .kml or .gpx file format, such as Google Earth, to display the routes.

1. Tap Start > Programs > GPS Application > GPS Tracking. After entering GPS Tracking, the device will activate GPS and search for the coordinates. The screen shows current connecting information, such as GPS status, Satellites, GPS Time, etc.
2. When GPS is connected, tap "Start" to start recording tracks.
3. During track recording, tap  to pause the route tracking, and tap  to resume.
4. Then GPS stays connected, tap  to create your own landmark (you can take a picture as your landmark). The next page allows you to add the name of the landmark and descriptions. Then tap  to save the landmark.
5. Tap  to stop recording routes. On the pop-up window, you may choose to save or cancel the records. If you want to save the record, edit the Beginning, Destination, and File Name; selecting File Type and Save to.
6. Tap  to clean up all the records unsaved.



 -  on task bar on Today screen shows that GPS is trying to connect.
-  on task bar on Today screen shows that GPS is connected.






## **Chapter 10**


# **Managing Your MWg Atom V**

**10.1 Memory management**

**10.2 Running programs management**

    **10.3 Adding or removing programs**





## Chapter 10 Managing Your MWg Atom V

### 10.1 Memory management

When the memory is insufficient, this device cannot automatically allocate memory, you may follow the steps below to free up more memory:

Moving some files to micro SD card

1. Tap **Start** > **Programs** > **File Explorer**.
2. Tap and hold selected items.
3. Tap **Cut** on the pop-up menu.
4. Switch to **Storage Card** category.
5. Tap and hold and then tap **Paste**.

#### Deleting the unwanted files

1. Tap **Start** > **Programs** > **File Explorer**.
2. Tap and hold selected items.
3. Select **Delete**.

#### Saving attachments to micro SD card

1. Tap **Start** > **Messaging** > **Menu** > **Tools** > **Options** > **Storage** tab.
2. If you have inserted a memory card, check **Store attachments on storage card**.
3. E-mail attachments will automatically be saved to memory card.

 
#### Clearing histories and deleting files from Internet Explorer

1. Tap **Start** > **Internet Explorer** > **Menu** > **Tools** > **Options** > **Memory** tab.
2. Tap **Clear History** and **Delete Files** to delete browsed web page related record.

### 10.2 Running programs management

1. Tap **Start** > **Settings** > **System** tab > **Memory** > **Main** tab:  
Display current memory status of this device.
2. Tap **Start** > **Settings** > **System** tab > **Memory** > **Storage Card** tab:  
Display the memory status of storage card in this device.
3. Tap **Start** > **Settings** > **System** tab > **Memory** > **Running Programs** tab:  
Display all current running programs in this device. Select any program from Running Programs List, you may select to Activate or Stop.





- Activate:** run the highlighted programs.  
**Stop:** stop running highlighted programs.  
**Stop All:** stop running all programs on Running Programs List.

## 10.3 Adding or removing programs

All programs pre-installed in the device will be saved in ROM (Read Only Memory) and are not removable. Data saved in ROM will not be lost by accident. All programs that you installed will be saved in RAM (Random Access Memory). As long as there is sufficient space in this device, you may install suitable programs by preference.

### Adding programs through ActiveSync

1. Before installing the program, please make sure that your MWg Atom V processor is suitable for the software. Tap **Start > Settings > System tab > About > Version** information to check for information of this device.
2. Download the desired software to your computer (Please select software that is designed for Pocket PC and this device).
3. Read installation instructions, readme file, or accompanied programs provided to you.
4. Connect your computer with this device.
5. Install executive file to your computer.

If this file contains installation program, the installation wizard will automatically activate. Please follow the instructions on screen. Once the installation on your computer is completed, the program will automatically be installed to this device. If this file does not contain any installation program, an error message will show on the screen and tell you this program is invalid, which is not suitable for your computer. You must move this program to this device manually. If you cannot find any installation instructions for this program, please use "Browse" function of **ActiveSync** to copy program file to **Program Files** folder in this device. After completing installation, tap **Start > Programs**, and then select the program icon to launch that program.

### Adding programs through Internet

You may download software suitable for this device from Internet.

1. Before installing the program, please make sure that your MWg Atom V processor is suitable for the software. Tap **Start > Settings > System tab > About > Version** tab to check information in this device.
2. Directly download programs to this device by using **Internet Explorer** in this device. (Please select programs designed for Pocket PC and this device).
3. Read installation instructions, readme file, or accompanied programs provided to you.
4. Run installation executive file in your computer.

 
### Adding programs to Start menu

Tap **Start > Settings > Personal tab > Menu**.

1. Check the programs to be displayed on **Start** menu.
2. Tap **OK** to save settings and return to Personal tab screen.


### Removing programs

Tap **Start > Settings > System tab > Remove Programs**.



Select the programs you would like to delete from **Programs in storage memory** list, and then select **Remove** to delete highlighted programs. If the installed programs list does not contain the program you intend to remove, you may use **File Explorer** in this device to find the program and delete it by selecting and holding the program's name and then select **Delete** from the pop-up menu.




## 10

 


## **Chapter 11**

### **Important Safety Information**

    - 11.1 Safety information**
- 11.2 Phone care**
- 11.3 Driving safety**
- 11.4 Electronic devices**
- 11.5 Other safety guidelines**
- 11.6 Cautions**
- 11.7 About this guide**





## Chapter 11 Important Safety Information

### 11.1 Safety information

#### Read this information

Your MWg Atom V Pocket PC Phone has been designed, manufactured and tested not to exceed the limits for exposure to electromagnetic fields recommended by the Council of the European Union. These limits are part of comprehensive guidelines developed by independent scientific organizations.

European standards provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a phone to be measured by reference to the Specific Absorption Rate (SAR). The SAR limit for the general public is currently 2 watts per kilogram averaged over 10 grams of body tissue.

The maximum SAR values for MWg Atom V are:

GSM900: 0.059 W/kg

DCS1800: 0.082 W/kg

WCDMA: 0.198 W/kg

### 11.2 Phone care

**You should never** attempt to open the phone casing. There are no user-serviceable parts inside and you might damage sensitive electronic circuits and components. Unauthorized disassembly will void the warranty.

**You should never** leave your phone in the window of your car or otherwise expose it to strong sunlight or excessive heat for a prolonged period. This may damage it.

You should never handle your phone with wet hands or expose it to moisture or liquids of any kind. Continuous changes from a cold a warm environment may lead to condensation inside the phone, resulting in corrosion and possible damage.

 
If you pack your phone in your suitcase during travel, beware damage. Cramming a suitcase may crack the LCD display. Remember to switch off your wireless connections during air travel.

As with all other radio devices, touching the built-in antenna area during telephone conversation may impair the quality and lead to shorter standby time due to increased power consumption.

#### The battery

Your phone is equipped with a high-performance Li-Ion battery. Optional battery types may be available; check with your local retailer. Observe the maintenance guidelines and your battery should give you a long service life.

1. At the beginning of the battery's life, fully charge and discharge (let it go flat) three times.
2. Do not overcharge the Li-Ion battery, as this can result in a reduction in battery performance and lifespan. The recommended maximum charge time is 4 hrs.
3. Avoid repeated short charging. It is preferable to let the battery o flat and then recharge it completely.



4. Avoid charging in strong heat or extreme cold. Ambient room temperature is preferable. The battery has its optimum performance in an ambient temperature of + 5 oC to + 50 oC.
5. Don't store a battery near a fire or heat source.
6. Use only the battery approved by the manufacturer.
7. Never replace the battery with a non-approved battery.
8. Never soak the battery in water or any other fluid.
9. Never try to open the battery as it contains substances that might be harmful if swallowed or allowed to come into contact with unprotected skin.
10. Never short-circuit the battery, as it may overheat and cause a fire. Keep it away from jewellery and other metal objects.
11. Never dispose of the battery in a fire. It could explode and release harmful substance into the environment.
12. Never dispose of the battery with your regular household waste. Take it to a hazardous material collection point.
13. Do not touch the battery terminals.

### The charger

 
1. Use only the charger supplied with your phone.
2. Never pull the charger cord to release it from the mains- pull the charger itself.

### Memory card

1. Do not remove or insert a memory card or turn off the handset while data on the card is being edited.
2. Do not touch the metal terminals with your hands or metal objects.
3. Do not bend the memory card or subject it to violent impacts. Keep it away from water and high temperatures.
4. Keep all memory cards out of the reach of small children.
5. Do not short circuit the contact points or expose it to liquids or moisture. When not in use, keep in the antistatic container it came in.
6. Do not use force when inserting or Handling the card, and do not expose it to excessive heat or strong magnetic fields.

### Cleaning and storing

1. Your phone should always be handled with care and protected from dirt, dust and dampness. To avoid scratches, never place your phone face down.
2. If cleaning is necessary, switch the phone off and wipe carefully with a soft, slightly damp (not wet) cloth. Use a cotton swab to clean the camera lens. Allow the phone to dry completely before switching it on. Never use solvents for cleaning.
3. If you are not going to use your phone for some time, fully charge the battery and store the phone in a dry place away from direct sunlight. Your phone should be switched off during storage. Recharge every 6 to 12 months.
4. Never expose your phone to heat or strong sunlight.
5. Never expose your phone to moisture or liquids of any kind.
6. Do not paint your phone or otherwise block the keypad, microphone or earpiece function, i.e. with stickers.



## 11.3 Driving safety

Never use th handheld phones while driving. It's an offence while driving to hold a phone or cradle it in your neck, at any point during the setup, making or taking of a phone call, text message or any other data related mobile communication. Use of fully installed car kits are still permitted, as are the use of alternate handsfree accessories.

In the interest of safety, we would recommend use of a cradle while using any form of handsfree accessory.

While driving, we recommend that you use voicemail wherever possible, and that you listen to your messages when you are not in the car. If you must make a handsfree call when driving, keep it brief.

An airbag inflates with great force. Do not place objects, including both installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## 11.4 Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your Pocket PC phone.

### Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six inches be maintained between a phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

1. Always keep your phone more than six inches from your pacemaker when turned on.
2. Do not carry your phone in a breast pocket.
3. Use the ear opposite the pacemaker to minimize the potential for interference.
4. If you have any reason to suspect that interference is taking place, turn your phone off immediately.

### Hearing aids

 
Some digital phones may interfere with some hearing aids. In the event of such interference, call MWg Customer Service to discuss alternatives.

### Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Turn your phone off in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment added to your vehicle.



## Posted facilities

Turn your phone off when posted notices so require.

## Magnetic media

Magnetic fields generated by PC Phone phones may damage data on magnetic storage media, such as credit cards, computer discs or tapes. Do not place your phone next to such media.

## 11.5 Other safety guidelines

### Aircraft

Regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft or turn off the wireless connections.

### Blasting areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in areas posted: turn off two-way radio. Obey all signs and instructions.

### Potentially explosive environments

Turn your phone off when in any area with a potentially explosive environment and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive environment are often, but not always, clearly marked. They include fuelling areas such as gas stations, below decks on boats, fuel or chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), area where the air contains chemicals or articles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle's engine.

 
### Choking

Keep your phone away from children as the SIM card and other small parts present a choking hazard.

## 11.6 Cautions

Your Pocket PC Phone is a high quality piece of equipment. Before operation, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. Do not use this equipment in an extreme environment where high temperature or high humidity exists.
2. Do not abuse the equipment. Avoid striking, shaking or giving it a shock. When not using the unit, lay it down to avoid possible damage due to instability.
3. Do not expose this equipment to rain or spilled beverages.
4. Do not use unauthorized accessories.
5. Do not disassemble the phone or its accessories. If service or repair is required, return the unit to an authorized service center. If the unit is disassembled, a risk of electric shock or fire may result.
6. Do not short-circuit the battery terminals with metal items.



### FCC Regulations:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

 
The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use at the ear is 0.422 W/kg for PCS Head SAR and 0.422 W/kg for WLAN Head SAR and when worn on the body, as described in this user guide, is 1.36 W/kg for PCS Body SAR and 1.36 W/kg for WLAN Body SAR. (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: UJU9QDENIM000.






For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

## European Union Notice

 Products with CE marking comply with the R&TTE Directive (99/5/ EC), the EMC Directive (89/336/EEC), and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards).

- o EN 60950-1 (IEC 60950-1)
- o Safety of Information Technology Equipment.
- o ETSI EN 301 511
- o Global system for mobile communications (GSM); Harmonized EN for mobile stations in the GSM 900 and GSM 1800 bands, covering essential requirements of article 3.2 of the R&TTE directive (1995/5/EC ).
- o ETSI EN 301 489-1
- o Electromagnetic compatibility and Radio spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.
- o ETSI EN 301 489-7
- o Electromagnetic compatibility and Radio spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).
- o ETSI EN 301 489-17
- o Electromagnetic compatibility and Radio spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment. Accessories Model NumberCradlePH15x.
- o ETSI EN 300 328
- o Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques.
- o EN 50360:2001
- o Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3 GHz).
- o EN 50371:2002



- o Generic standard to demonstrate the compliance of low power electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (10 MHz -300 GHz) - General public.

Warning! DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. TO REDUCE RISK OF FIRE OR BURNS, DO NOT DISASSEMBLE, CRUSH, PUNCTURE, SHORT EXTERNAL CONTACTS, EXPOSE TO TEMPERATURE ABOVE 60°C (140°F), OR DISPOSE OF IN FIRE OR WATER. REPLACE ONLY WITH SPECIFIED BATTERIES. RECYCLE OR DISPOSE OF USED BATTERIES ACCORDING TO THE LOCAL REGULATIONS OR REFERENCE GUIDE SUPPLIED WITH YOUR PRODUCT.

### WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

 

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery. The WEEE logo ( ) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and

collection points, please contact your local city centre, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

### PC Requirement to Run ActiveSync4.5

To connect your device to the PC, you have to installed Microsoft® ActiveSync® program on your PC. ActiveSync 4.5 is included in the Installation CD, which is compatible with the following operating systems and applications:

- o Microsoft® Windows® 2000 Service Pack 4
- o Microsoft® Windows® Server 2003 Service Pack 1
- o Microsoft® Windows® Server 2003 IA64 Edition Service Pack 1
- o Microsoft® Windows® Server 2003 x64 Edition Service Pack 1
- o Microsoft® Windows® XP Professional Service Packs 1 and 2
- o Microsoft® Windows® XP Home Service Packs 1 and 2
- o Microsoft® Windows® XP Tablet PC Edition 2005
- o Microsoft® Windows® XP Media Center Edition 2005
- o Microsoft® Windows® XP Professional x64 Edition
- o Microsoft® Outlook® 98, Microsoft® Outlook® 2000 and Microsoft® Outlook® XP, and Microsoft® Outlook®



2003 messaging and collaboration clients

Microsoft® Office 97, excluding Outlook

Microsoft® Office 2000

Microsoft® Office XP

Microsoft® Office 2003

Microsoft® Internet Explorer 4.01 or later (required)

Microsoft® Systems Management Server 2.0









## 11.7 About this guide

         
This document is provided as a user guide to the MWg Atom V Pocket PC Phone and to this system only. MWg Atom V is a trademark of the MWg group of companies.

The latest version of the user guide can be found on our website: [www.MWg.com](http://www.MWg.com)




Year of Manufacturing:2008








## Chapter 12 Specifications

   

 


## Chapter 12 Specifications









12

Specifications

 
Item	Specifications
System Information	
Operating System	Windows Mobile® 6 professional
Processor	PXA 270 Processor at 520 MHz
Memory	256 MB ROM, 64 MB RAM
Size	
Dimensions (mm)	116(L) x 59(W) x 14.95(T) mm
Weight (in grams)	133 g
Battery	
Battery capacity	Lithium Polymer battery, 1,300mAh
Standby time	150 Hr
Talk time	3.5 Hr
Charging time	
Charger	4 Hr
Display Characteristics	
Type	2.8" LTPS, 65K-colour TFT LCD display with touch panel
Resolution	320 x 240 QVGA
Band	
Band	HSDPA, WCDMA 2100MHz, GSM 850/900/1800/1900
Connectivity	
Bluetooth	2.0
WLAN	IEEE 802.11b/g
GPRS	EDGE class 12
WAP	Yes
CSD	Yes
USB	2.0
Image	
Format	JPG, BMP, GIF, PNG
Max size (per)	Depends on available RAM
Audio	
Format	MIDI, MP3, WMA, WAV, AMR, AAC, AAC+
Max size	Depends on available RAM



Item	Specifications
Video	
Format	3GPP, MP4, RTSP
Max size	Depends on available RAM
<b>Phonebook</b>	
Size	Depends on available RAM
<b>Ring tone</b>	
Type	MP3, WMA, WAV, MIDI
Polyphone	192 Polyphonic
Digital camera	
Type	CMOS
Camera	2 mega pixels
Auto focus	Yes
Video recording	Yes
Messaging	
Push E-mail	Windows Direct Push
SMS	Yes
MMS	Yes
E-mail	Yes
Windows Live Messenger	Yes
External memory	
Type	Micro SD CARD

      
 
 





 

## Chapter 13
    
### FAQs





## Chapter 13 FAQs

13

FAQs

### **Why can't I turn on my device as I press Power key?**

Either you didn't press the key long enough, or the device has shut down because the battery power level is too low to make calls. Please recharge the battery.

### **How do I suspend the screen display or wake up the device?**

Press and hold **Power** key to turn off the device. If the screen display is off, press **Power** key to wake up your device.

### **Why does the screen freezes and does not respond to my commands or input?**

Reboot the system to free up memory. The system shall operate more efficiently. If the system still lags after rebooting, you will need to clean boot your MWg Atom V. To clean boot, power off your MWg Atom V and then press down and hold Camera key and Power Key at the same time, for about 5 seconds. Your MWg Atom V will reset to factory defaults and reboot.

#### **Please note:**

When you perform a clean boot on this device, all your personalized settings, information, and programs installed will be removed. The system will reset to factory defaults.

### **Why does my device display "INSUFFICIENT MEMORY" when I open a file or a program?**

The device memory is shared by both storage and programs. You can free up some memory by removing some of the rarely used programs you installed or removing rarely used files.

### **How can I free up RAM memory?**

You can free up RAM memory by closing the programs that are running in the background. Tap the MWg Menu icon on the bottom of Today screen to view all the running programs. You could close the programs you do not need to use.

### **Why doesn't the screen respond accurately to my stylus taps?**

 
Tap **Start > Settings > System tab > Screen > General** tab. Select **Align Screen** to align the screen.

### **Why does my MWg Atom V launch wrong programs or ignore my command when I press a device key?**

Tap **Start > Settings > Personal tab > Buttons** and check whether the programs assigned to each key is correct. You can change these key assignments by preference.

### **My MWg Atom V can't form a successful connection with ActiveSync.**

Please make sure you have installed **ActiveSync 4.5** or later on your computer. You can find **ActiveSync** in the installation CD, or you can download the latest version from Microsoft's website. Please make sure you have connected your MWg Atom V to the computer by plugging in the USB cable to both your MWg Atom V and the computer. Make sure that you are not running another program that uses the same serial port. If the connection still



fails, remove **ActiveSync** on your computer and reinstall it.

**Why does my device display 'Insert SIM', what does this mean?**

Please insert the SIM card before you can use the device. If it is already installed, remove and clean the metal contacts area with a dry cloth, and then insert it again.

**Why does my device display 'EMERGENCY ONLY', what does this mean?**

You may not have your SIM card properly installed, or you are out of network range.

**Why does my device display 'NO NETWORK', what does this mean?**

You're outside network range. If you're inside a building or a basement, try moving towards a window.

**Why are there double entries in my Contacts list?**

You may have selected **Show SIM Contacts** in **Contacts** menu. If you have already copied your SIM contacts to the device, then you do not need to select this option.


**I found that some calls are not processed, why does it happen?**

Certain call barring function may have been set to restrict phone usage. Check the call barring status and cancel it as necessary.

**Can I send and receive emails and surf the Mobile Internet on my device?**

Your MWg Atom V allows you to access the Internet from your device. For sending and receiving emails, please refer to the user manual or contact MWg Customer Service.

**Why can't my device make any sound alerts?**

Tap on the speaker  icon on the top right corner of the screen, and then adjust the alert or ring volume. You could also use the volume key on the left side of the device to adjust volume.

**Where can I check why my device has gone wrong?**

 
Please have your warranty card and device ready and contact your local dealer.

**Why do I need to upgrade / reflash my ROM?**

A ROM upgrade/ Reflash may help to solve the following issues--slow response, no response, device freeze and drop calls"

**Where can I find the Rom upgrade?**

You can go to [www.MWg.com](http://www.MWg.com) an look under 'Support'.



# Index

## A

About 2,4,10,14,17,21,37  
42,43,47,48,53,58  
89,105,107,114  
115,122

ActiveSync Tool 2,47,51

Applications 3,53,88,89,91,92  
100,114

Attachments 52,71,75,78,104

## B

Background 41,42,75,88,90,94  
122

Backlight 13,14,21,43

Backup 2,15,30,40

Battery 1,5,6,7,8,9,10,11  
12,14,22,24,42,43  
44,50,58,64  
108,109,111  
114,118,122

Beam 23,42,58,59,60,94  
100

Block Recognizer 27,28

Bluetooth 2,7,10,23,24,48,49  
50,55,56,58,59,60  
61,62,63,64,90,  
118

Buttons 20,40,56,76,122

## C

Calculator 3,10,18,91,96

Calendar 3,26,29,30,51,59  
75,91

Call Barring 42,123  
Call Forwarding 42  
Call History 2,31,32,33,36  
Call Waiting 41,42  
Caller ID 42,76  
Camera 3,8,10,18,72,81,82  
83,84,85,86,87,  
109,119

Cell Broadcast Setting 2,23,55,65  
Certificates 21,43  
Connections 10,20,22,23,50,52  
56,57,58,59,61,63  
,64,65,108,111  
Contacts 2,11,29,31,32,33,  
34,35,37,51,59,71  
,72,79,93,114,123

## D

Device Lock 13,34,44  
DNS 64  
Download 22,36,41,65,76,77  
78,105,122

 
## E

E-mail 3,29,51,52,56,57  
67,68,70,71,77  
3,91,96,97,100

## F

Favorites 65,95  
File Explorer 3,10,59,91,94,96  
104,106  
87,88

## G



Games 3,10,18,89,91,96  
 GPRS 2,10,23,24,55,56  
 57,64,68,68,79,94  
 118  
 GPS 3,7,10,19,24,63,87  
 91,101,102

## H

## I

Input 7, 13, 16, 20, 27,  
 28, 29, 31, 45, 46,  
 64  
 Input Method 1, 15, 20, 27, 28,  
 29, 46, 104, 109,  
 110, 113

Insert the battery & SIM card  
 Installing ActiveSync  
 Internet Explorer

Internet Sharing  
 ISP

## J

JAVA 3,10,18,81,89

## K

Keyboard 27 28 73

## L

Landscape 25  
 Letter Recognizer 28  
 Lock 1,5,9,13,20,31,34  
 40,44,87

## M

Making a call 1,31,33,34  
 Memory 1,4,15,22,30,43  
 44,45,71,83,86,94  
 103,104,105,106  
 109,118,119,122  
 20,41,50  
 2,29,67,68,69,70  
 71,78,79,80,  
 100,104,115,119  
 69,78,79  
 2,52,67,68,72

Menus  
 Messaging

Microsoft® Exchange Server  
 Multimedia messages (MMS)

## N

 
Navigation Key 7,10,33,35,82,94  
 Notes 3,19,29,30,41,51  
 52,53,91,92,93,  
 100

## O


Owner Information 21,30,41

## P

Password 1,2,15,20,30,31  
 36,40,52,64,78,79  
 80,96,97,99



Personal settings	2,39,40	Reset	8,26,40,53,75,83, 122
Phone	1,4,6,7,10,12,18,21 24,29,30,31,32,33, 34,35,36,37,41,42, 56,58,64,68,77,83, 85,86,89,99,101, 107,108,109,110,111, 113,115,123	<b>S</b>	
Photo Editor	3,18,81,87	Screen	1,7,8,10,13,14,15,16 18,19,21,22,25,26, 27,28,29,30,32,33, 34,35,36,37,41,42, 45,56,57,58,63,64, 65,72,73,74,76,77, 78,79,82,84,86,87, 88,89,90,92,93,94, 95,96,96,97,98,99, 100,101,102,105, 122,123
Pictures & Videos	3,10,18,81,83,84,85 86,87,89,100	Search	3,19,34,42,59,63, 87,88,91,100,101, 110,112
,		Shutter Sound	82,83
PIN	40,41,58	SIM	1,2,5,9,10,11,12,31 32,34,37,40,41,44, 57,84,74,77,78,82, 90,96,97,111,123
POP3	78	SMS	2,7,42,52,67,68,69 70,71,75,78,101,119
Portrait	25	Sounds & Notifications	24,42,92
Power	1,5,6,8,11,12,13,14 21,22,24,43,44,50 58,63,64,108,112, 114,122	Speed Dial	32,33,77
Power on/off	8	System Info	45,118
PowerPoint Mobile	3,91,98,100		
Programs	4,10,16,17,18,19,20 22,25,29,30,34,37, 40,41,44,45,48, 50,51,52,53,57,64 65,79,82,87,88,89, 90,94,95,96,100, 101,103,104,015 106,122	<b>T</b>	
		Tasks	3,29,51,52,57,58,59 91,93,97,102
<b>R</b>		Today	7,13,16,18,21,26,34 41,42,56,57,77,89, 94,101,102,122
Recorder	3,18,81,85,86,90	Transcriber	28
Recording Time	89,90		
Regional Settings	22,44,45		
Remove Programs	22, 54, 56, 120		

 

## U

USB Cable 6,11,12,48,49,50,64  
122

## V

 
Vibrate 34,42  
Voice Mail 2,24,33,41,42,67,68  
77

## W

Wi-Fi 2,7,23,24,55,56,63  
64,79,94  
Wi-Fi Utility 23,63  
Windows Media 3,91,95  
Wireless LAN 10,56,63  
Wireless Manager 2,23,55,56,57,63,  
78  
Word Mobile 3,91,99,100

## Z

ZIP 3,10,18,91,94,96



## **MWG WARRANTY CARD**

---

**CONGRATULATIONS ON THE PURCHASE OF THIS MWg PRODUCT.**

### **ON-LINE HELP**

 
If you have any questions about your MWg device, please visit our website at [www.mwg.com](http://www.mwg.com) and click **Tutorials** **User tips**. You can also contact our Helpdesk by completing the form **Support** **Contact Us** **Helpdesk**.

### **WARRANTY**

We warrant that your MWg device is at the time of its original purchase free of defects in materials and workmanship. For Limited Warranty Statement, please go to [www.mwg.com](http://www.mwg.com) and select your device within the "Support". To claim warranty service, please go to [www.mwg.com](http://www.mwg.com) and select **Support** **Contact Us** **Collection Points**.

**PLEASE DO NOT REMOVE THIS PAGE. COMPLETE THE SALES RECORD ON THE NEXT PAGE. YOU WILL NEED TO PRESENT THIS BOOKLET AND PROOF OF PURCHASE AT THE COLLECTION POINT, IF YOU REQUIRE WARRANTY SERVICE.**





## **CUSTOMER SALES RECORD**

**NAME:** \_\_\_\_\_

**IMEI NUMBER:** \_\_\_\_\_

**MAKE & MODEL:** \_\_\_\_\_

**DATE OF PURCHASE:** \_\_\_\_\_ / \_\_\_\_\_ / \_\_\_\_\_

\_\_\_\_\_  
**DEALER SIGNATURE AND STAMP**

**COMPLETE THE SALES RECORD WITH DEALER STAMP. PRESENT THIS BOOKLET AND YOUR PROOF OF PURCHASE AT THE COLLECTION POINT IF YOU NEED REPAIR OR SERVICE.**

