

GREETINGS

Thank you for purchasing OPPO products!

This user manual lends support for you to operate this player securely, so please read it carefully before operating.

The OPPO homepage, provides you with product introduction, other related information, solution to common problems, firmware upgrading and the latest information about OPPO products.

You may achieve helpful information from "User Forum" and get appropriate online support through your ID log in. Furthermore, you may receive news E-mail, such as the latest products, firmware upgrading and promotion information.

PRECAUTIONS

WORKING DIRECTIONS

- Avoid places with too high temperature (above 35°C), too low temperature (below -5°C) or too much humidity.
- Never strike this player severely and never place heavy objects on it.
- Prevent foreign materials from entering into this player.
- Never touch with chemical materials such as benzene or thinner.
- Prevent from splashing or dripping.
- Keep away from direct beam or heat radiation object.
- Keep away from ash-rich places.
- Never disassemble, repair or refit yourself.

ABOUT TRAFFIC SAFETY

- Do not use headphones when riding a bicycle or motorcycle, for it is very dangerous and that you are likely to go against traffic rules. When walking (especially through zebra lines), it will be very dangerous if the headphone volume is too big.

PRECAUTIONS

HEARING PROTECTION

- According to doctor's suggestion, if you listen into high volume for a long time, your hearing will probably be damaged. When tinnitus appears, please decrease volume or stop using.

WORKING DIRECTIONS OF LITHIUM BATTERY


- If you do not change with correct battery, explosion will occur. You can only change with the same type or the equal effect battery.
- If you do not use for a long time, the battery capacity may probably be too low that you cannot power on. Now please charge for half an hour and then use it.

All images in this manual are sketch illustrations for reference only, so please take actual objects as standard.



QUICK OPERATION

ILLUSTRATION OF BUTTONS AND JACKS	3
POWER ON/OFF	5
PLAY MUSIC	6
TUNING	8
RECORD	9
CHARGE	10

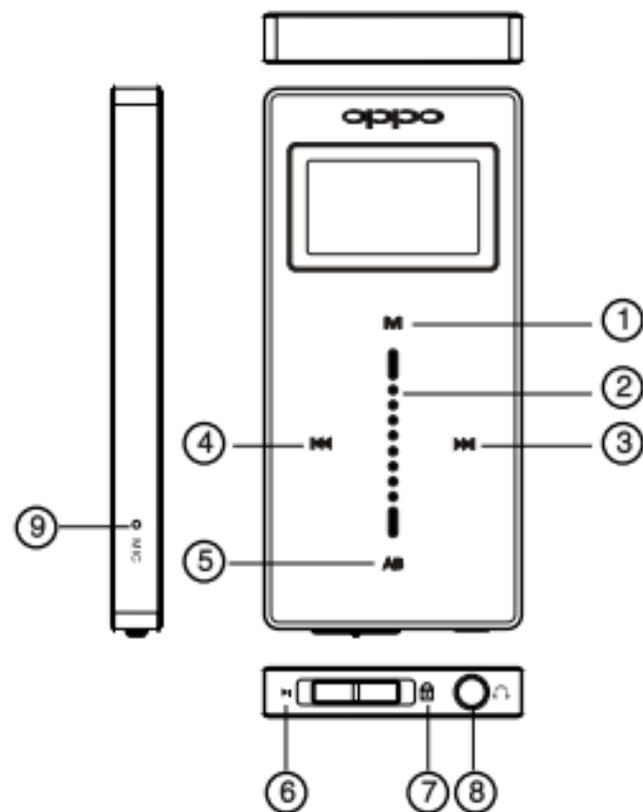① **M** :

- Press in playback mode → pause playing
- Press for long in any case → enter main menu
- Press in tuning mode → switch in PRESET and SCAN mode
- Press for long in recording mode → exit recording
- Press in menu mode → enter the selected item or confirm the setup (the same as that of **▶||** button)

② **+ -** :

- Slide when in playing and tuning interface → adjust volume
- Slide when in menu state → move cursor upwards or downwards

③ **▶||** ④ **◀◀** :

- Press in playback mode → the next/previous track
- Press for long in playback mode → fast forward/backward
- Press in tuning PRESET mode → select channel

- Press in tuning SCAN mode → manual scanning
- Press for long intuning Preset mode → full auto scanning
- Press for long intuning SCAN mode → auto-manual scanning
- Menu mode → move cursor or set item
- Press  in menu mode → cancel and exit, or return to the previous menu

⑤  :

- press when in playing state → A-B repeat
- Press for long when playing musical file (non recording file) → switch sound effect
- Press when in file browsing interface → delete file
- Press for long when in menu state → enter recording
- Press when in tuning SCAN state → save radio station
- Press for long when in tuning state → enter FM recording

⑥  :

- Push in power-off state → power on
- Push for long in power-on state → power off
- Push when in playing state → pause playing
- Push when in recording state → pause recording
- Push when in tuning state → mute
- Push when in menu state → enter the item or confirm the setting (the same with  button)

- ⑦ HOLD button: lock buttons when pushing towards  direction and unlock when pushing towards the opposite direction.

⑧ Headphone jack, USB jack

⑨ MIC: microphone

Caution: In my sound effect setup mode,  and  are left and right cursor, and  is exit button.

- POWER ON



Push  button to power on, and the power-on motion picture displays to enter My Music.


- POWER OFF



Push  button for long to power off.

CAUTION:

- If functions of playing, tuning and recording are not used during a specified period, Mp3 PLAYER will power off automatically.

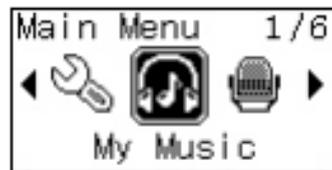

In "My Music", after selecting musical file after sliding **+**/**-** button, press **M** button to begin playing this song.



Select "Resume Play" in "Main Menu", and it plays from the place that the music stopped last time.

➤ PLAY/PAUSE



When playing music, pressing or pushing may switch between "Play" and "Pause".

➤ NEXT and PREV



When playing music, press this button to skip into the next or previous track.

➤ FF and FB




When playing music, press this button for long into fast forward or backward.



➤ Adjust volume



When playing music, sliding this button may adjust volume.

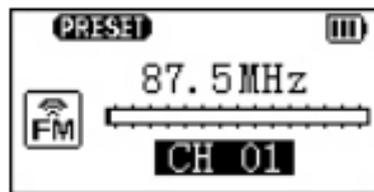



In main menu, press / button to select "FM Radio" and enter tuning mode. Now insert headphone and you may listen to the radio. Press button for long to exit tuning mode.

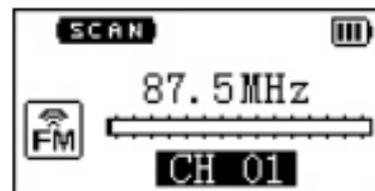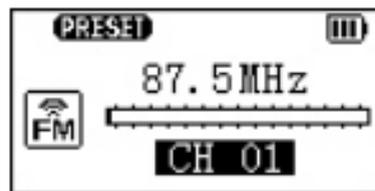

After entering tuning mode, press button to switch between PRESET and SCAN modes. In PRESET mode, press / button to select channel, press / button for long to scan full automatically; in SCAN mode, press / button to adjust frequency, press / button for long to scan auto manually.



RECORD

In main menu, select "Record" to enter record mode and pressing **M** button may pause recording. When recording, pressing **M** button for long may generate record files and then quit.

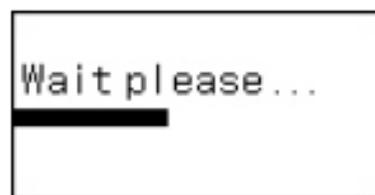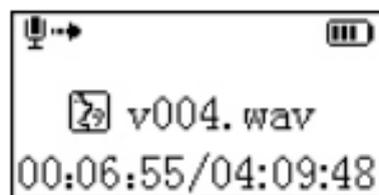

CAUTION:

- To avoid sudden power-off when recording, you cannot record when in low battery and when disc is fully written. If you are recording, it indicates "Disk Full" and exits recording.
- When recording with microphone, if you press buttons and the sound of pressing may probably be recorded.

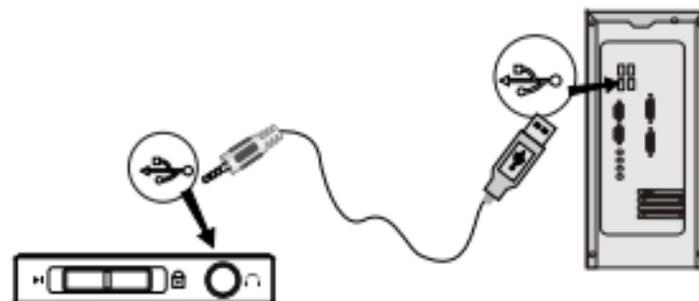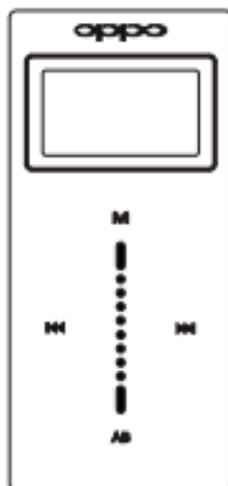

This player adopts Lithium-ion battery to supply power. In any time, use USB transmission line to connect MP3 player to computer and charge will start automatically. After fully charged, charge stops automatically.

CAUTION:

- If battery charge is too low, at the beginning of charge, the screen may probably have no display.
- It takes 3 hours to charge battery with computer and power adapter.
- Please operate safely, Before connecting USB line, please power off firstly and you'd better not connect USB line when operating normally. Before unplugging USB line, please stop using USB memory function firstly. The player may probably be damaged if you unplug it directly.



USAGE INTRODUCTION

FUNCTIONS AND FEATURES

MAIN MENU ILLUSTRATION

PLAYING INTERFACE ILLUSTRATION.....

TUNING INTERFACE ILLUSTRATION.....15

RECORDING INTERFACE ILLUSTRATION.....16

- **Philips PNX0101 audio decode chip**

Adopt famous Philips PNX0101 audio decode chip, special for Hi-Fi MP3 player, forcefully making up audio signal loss when compressing MP3 to revert audio signal better.

- **Play MP3/WMA/WAV files**

Support 16kbps~320kbps MP3 file and 8kbps~192kbps WMA file.

- **Mobile storage function**

Capable of downloading files from Windows resource manager.

- **FM tuning**

Full-auto, auto manual and manual scanning function may listen to FM radio station program more easily.

- **Voice recording function**

May be used to record in class, meeting and interview.

- **USB 2.0 transmission (full speed)**


USB 2.0 full speed data transmission.

- **Support firmware upgrading function**


Support upgrading function. You may add new function to the built-in program of this player conveniently.




- **My music**
Memorize music file.
- **My Voice**
Memorize microphone recording file, such as meeting, classroom and interview recording, etc.
- **Resume Play**
Select "Resume Play" and the player begins to play from the position that music stopped playing last time.
- **REC**
Select "REC" to enter recording mode .
- **FM Radio**
Select " FM Radio" to enter radio mode.
- **System Setup**
Select " System Setup" to set system items.

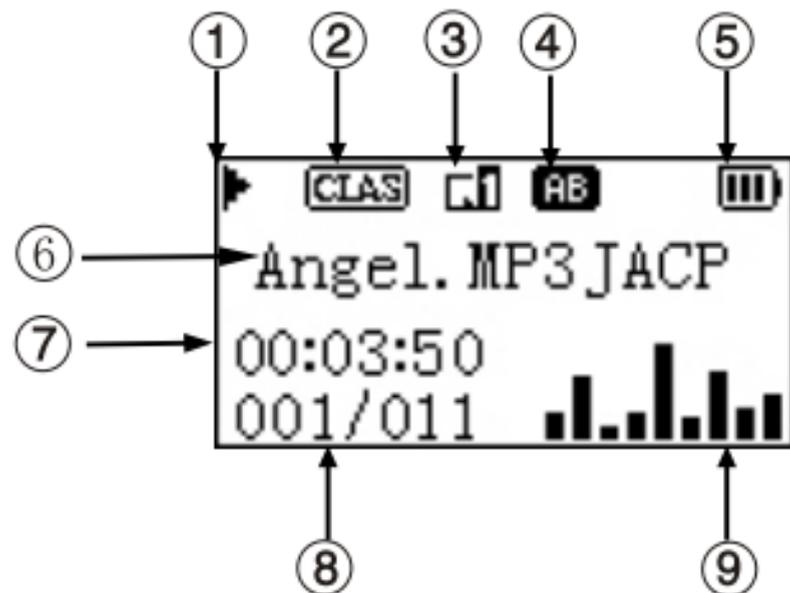

1、 Play State
2、 Sound effect mode
3、 Playback mode
4、 Repeat state
5、 Battery capacity
6、 Song name and Singer
7、 Time that has been played
8、 Number of tracks
9、 Spectrum display

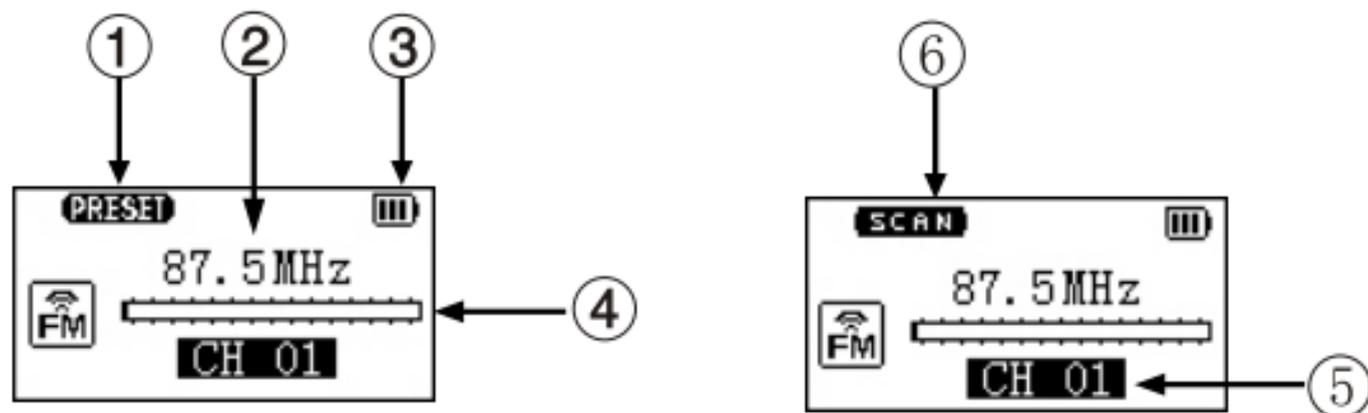

1. PRESET mode (normal receiving)	4. Frequency bar
2. Frequency of the current radio station	5. PRESET channel display
3. Battery capacity	6. SCAN mode (scanning)

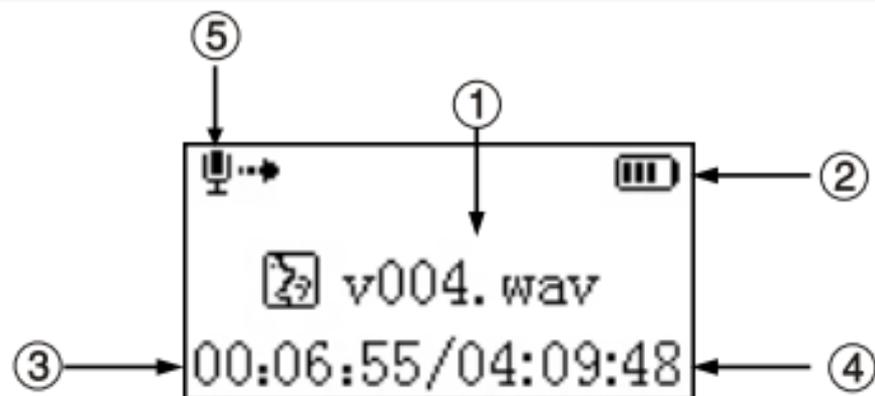

1. Name of recorded file	4. The left recordable time
2. Battery capacity	5. Recording state
3. Time that has been recorded	

As for the name of recorded file "V001.WAV": 001 is serial number of the current recorded track and arranged according to sequence; WAV is file format after recording








BASIC OPERATION

INSTALL USB DRIVE PROGRAM	18
DISCONNECT USB SAFELY.....	20
USE MOBILE STORAGE FUNCTION	20
BROWSE /CANCEL FILE	21
PLAY MUSIC.....	23
A-B REPEAT FUNCTION	25
RECORDING	26
TUNING	27

If your computer is Windows 98, you must install drive program if you want to use the mobile storage function of MP3 player in computer.

1. Download drive program from OPPO website.
2. Connect MP3 player to computer, the computer will automatically give prompt that new firmware device has been found and then run the installation guide, shown in the following figure: Users only need find the downloaded drive information file according to prompt to finish the installation of drive program.
3. After installation finishes, restart the computer and you may use the mobile storage function normally. Shown as the following figure:

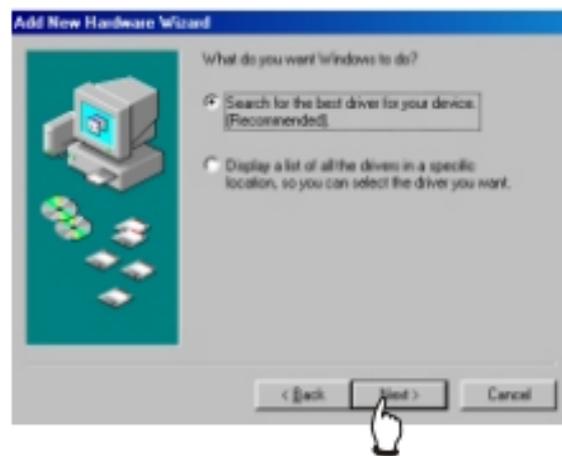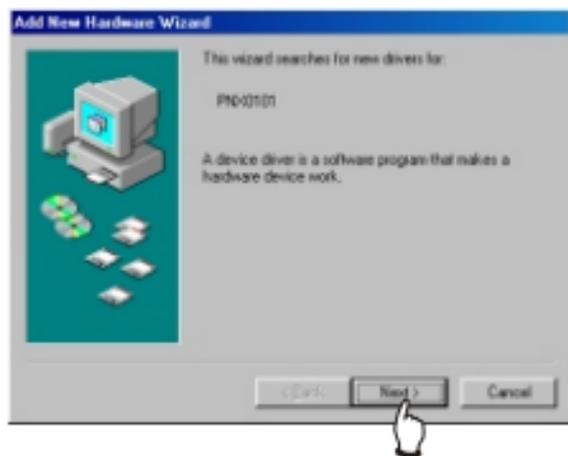

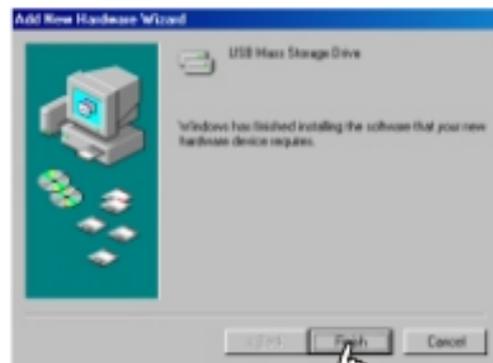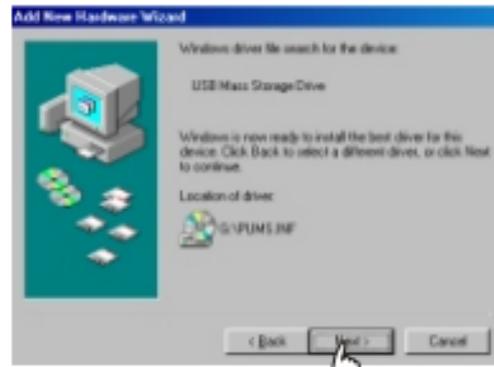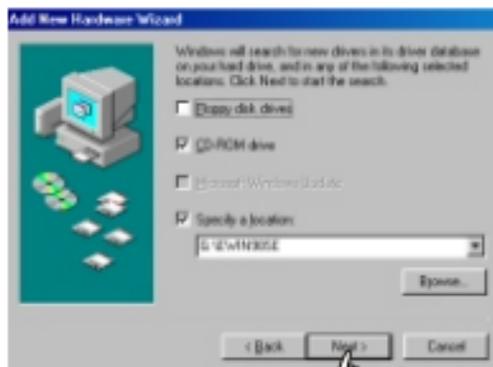

This player can be used as mobile storage in Windows ME/2000/XP operating system. In Windows 98SE and Mac operating system, drive program must be installed firstly and then used as mobile storage.

Connect MP3 PLAYER and computer with USB transmission line. After the bottom right corner of desktop appears "" symbol, the mobile storage function of MP3 PLAYER may be used normally.

- NOTE:**
- To avoid abnormality of the player appears, you are suggested to power off firstly before connecting MP3 PLAYER with computer, and then use USB transmission line to connect Mp3 PLAYER, then connect computer.
 - In Windows 98 system, there is no "" symbol.

After operation finishes, click "" symbol on bottom right corner of Windows desktop with right button of mouse, and disconnect USB safely according to the computer prompt.



➤ BROWSE FILE

In any case, press **M** button for long to enter "Main menu". Musicaland record files are separately saved in the front two options of "MyMusic" and "My Record" in the main menu. Slide **+**/**-** button upwards and downwards to select files to browse, shown in the figure:



➤ CANCEL FILE

When browsing files, press **AB** button and the cancel dialogue box will popup. Press **▶▶** / **◀◀** button to select "YES" and then press **M** button to cancel the file. Select "NO" to exit.



▶ PLAY MUSIC

In "My Music", slide **+**/**-** button to select songs; press **M** button or select "Play" in main menu to begin playing music and display playing interface at the same time.

▶ PAUSE PLAYING MUSIC

When playing, press **M** button or push **▶||** button once to switch in pause playing state; and press **M** button or push **▶||** button again to continue playing.

**▶ NEXT and PREV**

When playing, pressing **▶▶** button may skip to the next track to play. If playback time of the current track is less than 5 seconds, pressing **◀◀** button may skip to the previous track to play, otherwise the current track will be played again if playback time is more than 5 seconds.

➤ FF and FB

When playing, pressing  button for long may realize fast forward.



When playing, pressing  button for long may realize fast backward.

**CAUTION:**

Fast forward and fast backward operation are only for the current track. After fast backward/forward to the beginning/ending of track, it switches into normal playback automatically.

➤ Adjust volume


When in playing and listening to radio set, sliding  /  button may adjust volume.

CAUTION:

- Music playback will be paused when browsing file.
- In some operating system (such as complex font Windows), the operation of copying lyrics/song file and changing song's name may probably lead to incorrect display. When playing WMA songs of VBR, pressing buttons may probably have slow response or have no lyrics display. When playing some non-standard songs or songs with special format, noise may probably occur.

When playing, if you want to listen to a certain segment repeatedly, please use A-B repeat function. Press  button for the first time to select the beginning point that you desire to repeat play and screen displays ""; press it for the second time to select the ending point that you desire to repeat play and screen displays "", and system begins to repeat play between A-B segment. Press  button for the third time to cancel repeat and continue to play.

When recording, press **M** button to pause and press **M** button for long to exit recording and then make files.

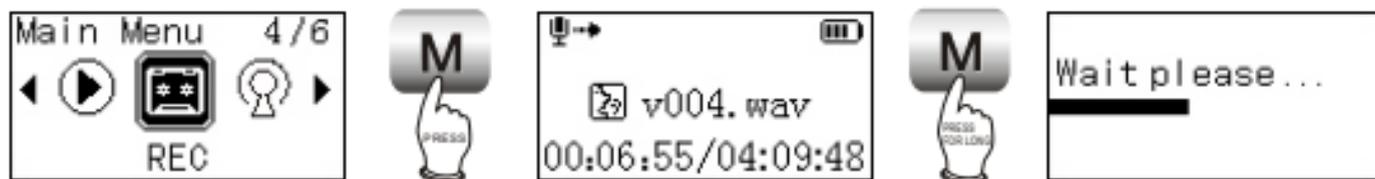**CAUTION:**

- To avoid sudden power-off when recording, you cannot record when in low battery and when disc is fully written. If you are recording, it indicates "DISC FULL" and exits recording.
- When recording with microphone, if you press buttons and the sound of pressing may probably be recorded.

➤ ENTER TUNING MODE

Select "FM Radio" in main menu and press **M** button to listen to radio.

➤ EXIT TUNING MODE

When listening to radio, press **M** button for long to return to main menu.

➤ PRESET/SCAN MODE SWITCH

When listening to radio, press **M** button to switch between PRESET and SCAN mode.



1. PRESET mode

➤ ADJUST CHANNEL

Press  button to enter the next channel, and press  button to enter the previous channel.

➤ FULL AUTO SCANNING

In PRESET mode, press  /  button for long to begin full auto scanning. All scanned radio stations will be saved in PRESET channel automatically.



2. SCAN MODE

➤ MANUAL/AUTOMANUAL SCANNING

Press  button to increase 0.1MHz each time; and press  button to decrease 0.1MHz each time.
Press  button to save radio station.

Press  button for long to increase frequency continuously and stop until radio station has been searched. Press  button to save radio station.

Press  button for long to decrease frequency continuously and stop until radio station has been searched. Press  button to save radio station.

➤ SAVE RADIO STATION

Select channel in Preset mode firstly, and then switch to SCAN mode to adjust frequency (manually or automatically). After scanning desired frequency, press  button to save into the current PRESET channel.

CAUTION:

In the course of full auto/automanual scanning, press  or  /  button to stop scanning.

➤ FM record

In tuning state, press **AB** button for long to enter FM record. When in FM record, pressing **M** button may pause recording; and pressing **M** button may generate record files and then quit FM record. The record files generated from FM record are WAV format.





SETTINGS

PLAY MODE.....	29
EQ SELECT	30
REC SET	31
SLEEP	31
PLAYLIST.....	32
FM BAND	34
SCREEN SAVE	34
ADVANCED	35

SETTINGS

SETTINGS

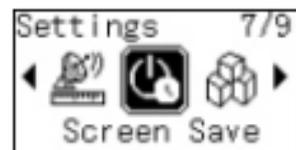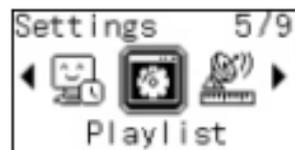


- **Play Mode**
 - Normal
 - Shuffle
 - Playlist
 - Intro
 - REP One
 - REP ALL

- **EQ Select**
 - Normal
 - 3D
 - PURE
 - POP
 - Clas
 - Jazz
 - Rock
 - Dbass
 - Disco
 - My EQ

- **REC Set**
 - High
 - Middle
 - Low
- **FM Band**
 - Genral
 - Campus

- **Sleep**
 - Disable~120Min
- **Screen Save**
 - Disable~5Min
- **Playlist**
 - Browse
 - Edit
 - Delete

- **Advanced**
 - My EQ
 - Format
 - Load Default
 - System Info
 - Language
 - Upgrade

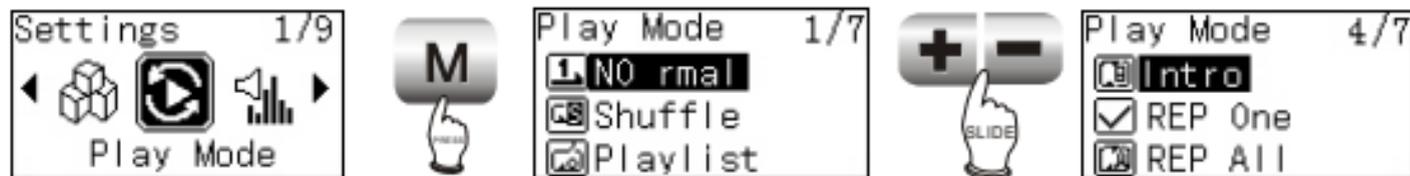

The playback symbol display on playback interface is shown as follows:


- | | |
|--|--|
|  : play according to track sequence. |  : repeat play single track. |
|  : random play any one track. |  : repeat play all tracks. |
|  : play the track edited in program list. |  : repeat play all tracks in this Folder. |
|  : browse play each track for 10 seconds. | |

- CAUTION:**
- Play mode is defaulted to "Normal" each time when power on.
 - Files in "My Voice" only support sequence playback.
 - When playing files in "My Voice", there is no "Play mode" item.

SETTINGS

EQ SELECT

Press **M** button to enter "EQ Select", and then use **- / +** to move cursor, shown as follows:

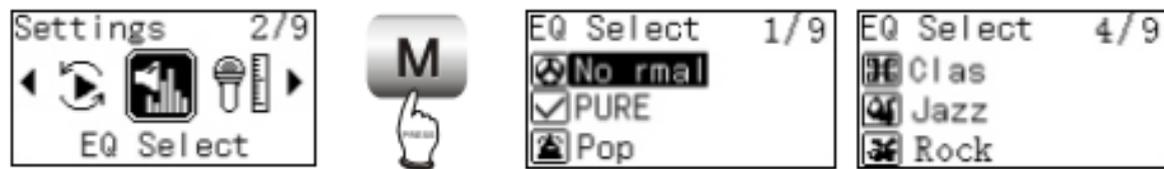

The corresponding icons of each EQ select in playback mode are shown as follows:



Select "MY EQ", and correspond with the sound effect that you have preset in "MAIN MENU->SYSTEM SETUP->ADVANCED". If you have not set it, it defaults "MYEQ" to "NORMAL" sound effect.

When the cursor moves to a certain sound effect mode, the sound effect mode played by MP3 player will switch to that in the cursor for the moment to facilitate you to select your desired sound effect mode.

Press **M** button to confirm this sound effect mode.

- CAUTION:**
- When playing files in "REC", there is no "EQ Select" item.
 - When playing songs with low bit rate, adjusting sound effect quickly and repeatedly may probably lead to system failure.

SETTINGS

REC SET



Here to set the recording quality, The recording quality is higher, the sound quality is better and the used space is more. Three kinds of recording quality adopt IMA-ADPCM format coding.



SETTINGS

SLEEP

Slide / button to adjust timing power-off time. After setting is ok, press button to save and then exit; press button not to save and then exit. Suppose timing power-off time is set in 15 Min, MP3 player will power off automatically after 15 minutes.

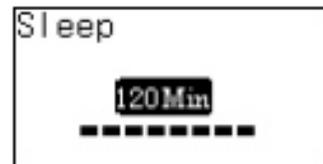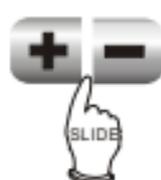

CAUTION:

- It is defaulted to be invalid each time when power on.
- Timing power-on time is a rough time, and may have difference.




➤ Browse

Select "Browse", and you may check how many songs have been programmed into playlist. When browsing playlist. Pressing **M** button may begin playing.



Note: Playback will be paused when in "Browse" or "Edit" list.


➤ Edit

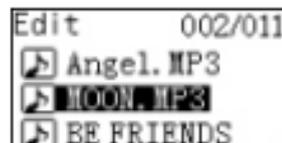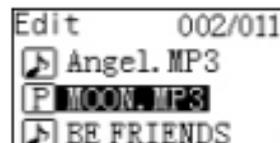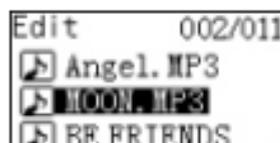

As in the above illustration, enter "Edit" and browse files. The icon before songs in the playlist is "P". Select a song not in the playlist and press **M** button to add into the list. Select a song in the playlist, and press **M** button to cancel it from the playlist, You can add 15 songs into the playlist at most.

► Delete

Select "Delete". After dialogue box pops up, select "YES", and press **M** button to confirm and the playlist is cleared.

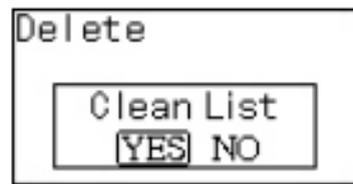


NOTE:

- If the operation of fading or cancelling music files is detected, MP3PLAYER will clear the playlist automatically.
- You cannot enter "Edit list" and "Clear list" when in program playback.

SETTINGS

FM BAND

In "FM BAND", you may select FM tuning range. The tuning range of Campus is 76~87.5MHz, and that of General is 87.5~108MHz.

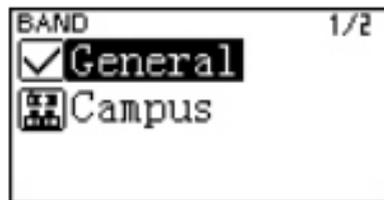

CAUTION: It is defaulted to "General" each time when power on.


SETTINGS

SCREEN SAVE

Slide / button to adjust screen saver setup time. After setting is ok, press button to save and then exit; press button not to save and then exit. Suppose screen saver time is set in 3Min and no operation happens within the 3 minutes, MP3 player will enter screen saver state automatically.

SETTINGS

SCREEN SAVE


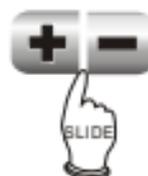


CAUTION: Screen save time is a rough time and may have differences when playing songs with different formats.

SETTINGS



ADVANCED

Advanced items include some other system internal setup, such as user sound effect setup, default setup and system information.


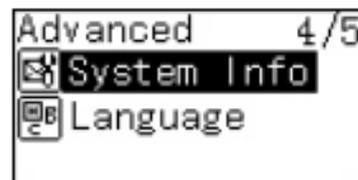
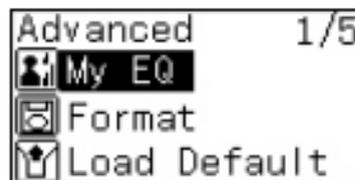


➤ My EQ

In "My EQ" interface, you may see the decibel (dB) of each frequency.

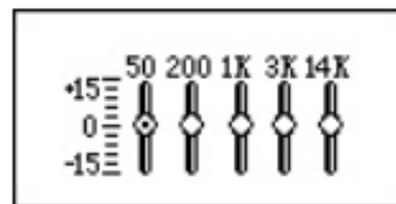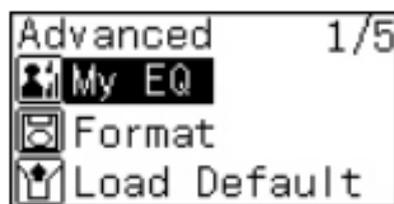




If you want to adjust the decibel of mediant (1kHz), operate according to the below illustration.

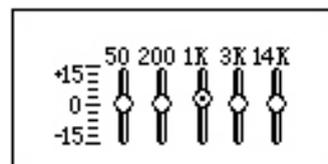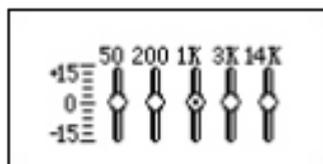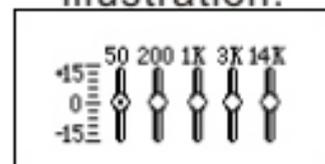




When adjusting width, take 3dB as a step and the max adjustable range is ± 15 dB. After setup finishes, press **M** button to confirm and exit, and press **▶||** button to exit with the original setup not being changed.

➤ Format

Enter this menu, and you may format harddisk. When dialogue box pops up, Press  /  button to move cursor to "YES", and then press  button to confirm to finish formatting operation.

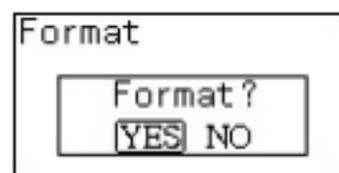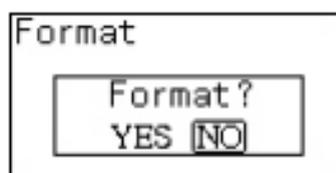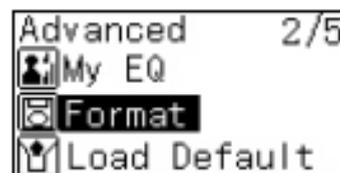

➤ Load Default

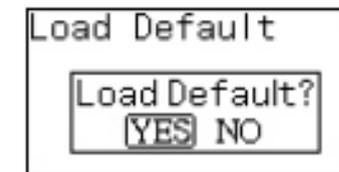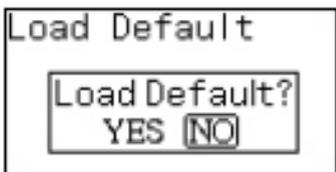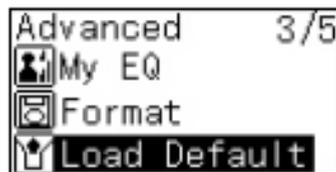

If you want to restore MP3 PLAYER to factory setup state (data and song files cannot be cancelled), you may select "Load Default". After dialog box pops up, select "YES", press **M** button to confirm and then exit to restore to default state. Select "NO" or to cancel.

CAUTION: Restore to "Default" state is effective only when power on again.

➤ System Info

You may find information of firmware version, total disc capacity and left disc capacity. In system information menu, press **⏪** button to return to the previous menu.



CAUTION: Because firmware will use some space, the displayed content capacity may probably be different from the actual capacity.

➤ Language

Chinese and English are supported.

➤ Upgrade

Download the latest firmware upgrading file from OPPO website firstly, such as "OPPO_D19.ebn" and "D19_Resource.bin", copy the two files into MP3PLAYER at the same time, and then power on again. Find "Upgrade" item in "ADVANCED" of "SETTINGS", and pressing **M** button may start upgrading. After upgrading finishes, MP3 PLAYER will power on again.

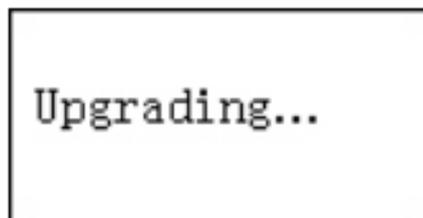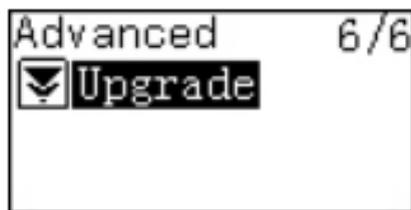

NOTE:

- Only MP3 player detects that there is upgrading file in system when this player power on, "Upgrade" menu will appear in "ADVANCED" item.
- Make sure MP3 PLAYER has enough quantity of electric charge before upgrading.
- To ensure successful firmware upgrading, do not power off during the course of upgrading.
- Upgrading will last about 10 seconds or more, please try your best not to operate any buttons during this course.
- After upgrading finishes the player will cancel the used upgrading file.
- After firmware upgrading finishes, some function or interface may probably be different from user manual, so please take real object as standard.



OTHER INFORMATION

TROUBLE SHOOTING
ADDITIONAL INFORMATION
SPECIFICATION

I have lost my data?

- The loss of some data is because of unstable power supply in the course of downloading (You are suggested to reserve data firstly. As for the loss of user's data, our company will not take any responsibility.).
-

Cannot connect to computer correctly?

- Windows 98SE: Connect again after installing USB drive program.
 - Windows Me: Delete USB drive program, install again and connect.
 - Windows 2000/XP: Connect again after restarting up computer.
-

Space obviously exists, but computer indicates that disc space is full and cannot copy files continuously?

- Because of limitation of file system, please make sure whether the files copied into MP3 PLAYER are excessive or not. It is recommended that you compress all non-music files which need to copy into one file on computer firstly, and then copy the compressed file into MP3 PLAYER or set a new file folder.

Drive program/upgrading program does not work?

- Please refer to recommended PC configuration.
-

Why does the operation function of my MP3 PLAYER response slowly?

- A large number of files are saved in Mp3 player. After repeatedly operation of deleting and copy, file system will produce many fragments which will lead to slow response in operation function. In this case, please copy the data that you need to save into computer firstly, and then directly use Windows tools to format.
-

Why different songs have different volume?

- Because volume level adjustment parameter is different in the course of recording, you may hear different volume.
-

Cannot download file.

- Please confirm whether drive program in computer has been correctly installed.
- Please confirm whether computer and player has been correctly connected.
- Please confirm whether disc is fully used. Examine the left capacity in system information.

MP3 PLAYER is power off.

- If function of playing, tuning or recording has not been used in a specified period, MP3 PLAYER will power off automatically.
-

MP3 PLAYER is failing and cannot be operated?

- If the player is failing and cannot be operated, please reset it. Take off the batteries to reset to player. After reset you may power on again to use it.
-

Cannot power on Mp3 PLAYER?

- Battery capacity will probably be low if not used for a long time, so please charge the battery for half an hour and then use it.
-

Why some WMA format songs cannot play after they are downloaded into MP3 PLAYER?

- To protect rights and benefits of song owners, some WMA songs on site are with DRM (license) copyright protection, and cannot play unless been authorised.

Why MP3 PLAYER has random characters after upgrading?

- It is caused by mismatching of current software and font library resource. Before upgrading, please make sure copy the two upgrading files achieved from OPPO website into MP3 PLAYER at the same time. If random characters appear, please copy the matched font library resource, such as "X17KM_Resource.bin", into Mp3 PLAYER again.
-

MP3 PLAYER is failing and cannot be operated?

- If the player is failing and cannot be operated, please reset it. Push ► || button and hold for 10 seconds to reset player, then you power on again to use it.
-

Why buttons function is in disorder?

- Please keep clean of machine panel without any water drip and oil. After clearing it, re-start the system and then use.

➤ The longest playback time

- In the state of volume 15, "NORMAL" sound effect and screen saver, play MP3 music file with 128kbps, and 44.1kHz, the longest playback time of this player is about 8 hours. In other cases, playback times will be different.

➤ Accessories

- Headphone
- User manual
- USB transmission line
- Warranty card

➤ The lowest computer configuration requirements

- Above Windows98SE/2000/XP/ME, Mac8.5
- Pentium 200MHz centre processor or above
- CD-ROM drive
- 40MB spare hard disc space
- 32MB EMS memory
- USB jack

Model	D19L
EMS memory	1G
Continuous playback time	The longest time is about 8 hours
Dimensions/weight	75mm×36mm×6.9mm about 30.5g
Audio SNR	≥90dB
Headphone out	9mW+9mW (32ohm impedance) / 18mW+18mW (16ohm impedance)
Frequency range	18Hz~20kHz
FM tuning range	76MHz~108MHz
Working temperature	0°C ~40°C
Files supported	MPEG 1/2/2.5 Layer 3 (16kbps~320kbps)、 WMA (8kbps~192kbps)、WAV