



1 About Your Camera

English

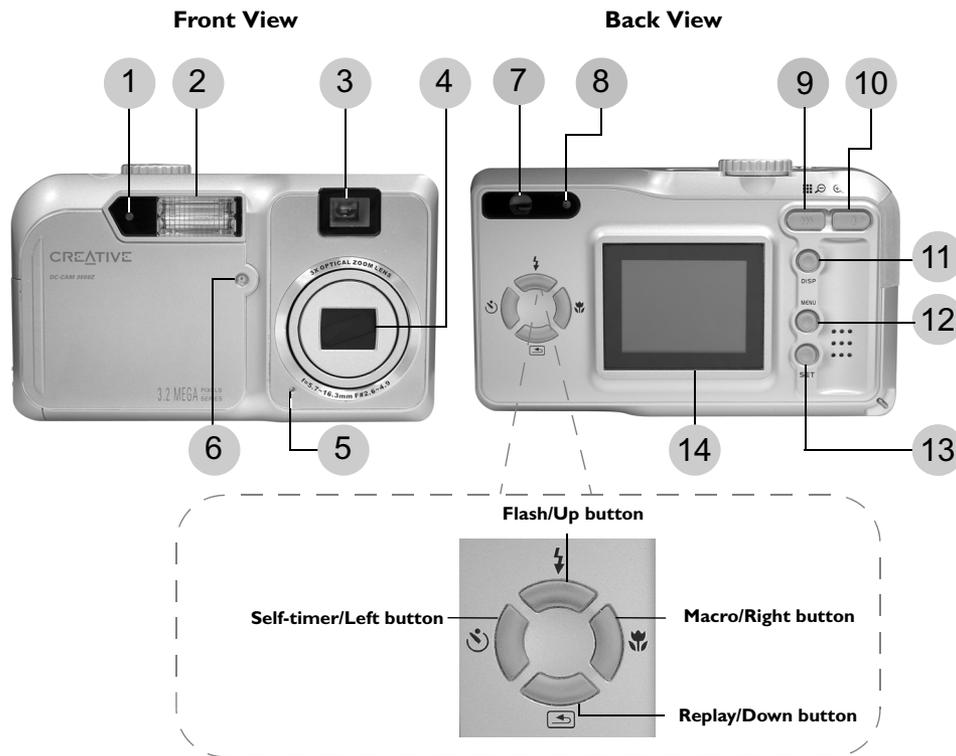


1. Self-timer lamp
2. Flash
3. Viewfinder
4. Lens
5. Microphone
6. Exposure sensor
7. Viewfinder
8. Operation lamp
9. Zoom Out button
10. Zoom In button
11. Display button
12. Menu button
13. Set button
14. LCD screen

Top View

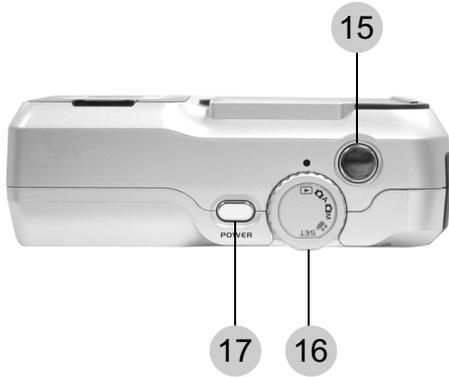

Side View

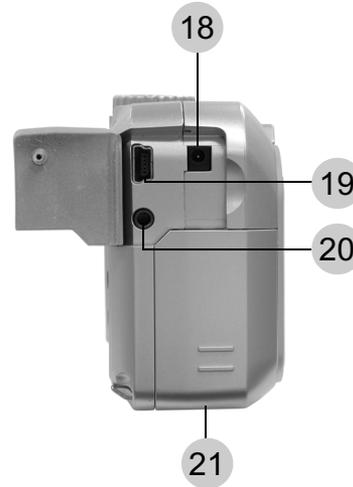

- 15. Shutter button
- 16. Mode dial
- 17. Power button
- 18. DC In terminal
- 19. USB I.I port
- 20. Video Out terminal
- 21. Battery and SD memory card/
MultiMediaCard cover



2 Set Up the Camera

1 Open the memory card cover

Open the SD (Secure Digital) memory card/MultiMediaCard cover as shown.




2 Insert the batteries

Insert new batteries as shown.



Do not mix old and new batteries of different types together.



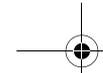


3 Insert the memory card (optional)

Insert the SD memory card/
MultiMediaCard as shown, and then
close the cover.
Refer to the arrow indicator on the
card for insertion direction and card
orientation.




The SD memory card or
MultiMediaCard is available separately.

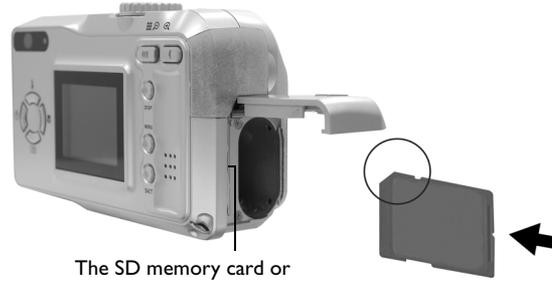


The SD memory card or
MultiMediaCard slot is
located next to the battery
compartment

4 Turn on the camera

Press and hold down the **Power**
button on your camera.
The **Operation** lamp lights up and
the LCD screen is activated.

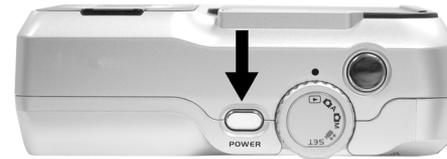

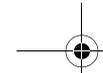

3 Install the Drivers and Camera



Installing the Drivers and Software


DO NOT connect the camera to your computer yet!

1. Insert the Installation CD into your CD-ROM drive. Do not connect your camera to your computer yet. The disc supports Windows Autoplay mode and starts running automatically. If not, click **Start-> Run**. In the **Open** dialog box, type **d:\install.exe** (replace **d:** with the drive letter of your CD-ROM drive), and then click the **OK** button.
2. Click the names of the drivers and applications you want to install in your computer.
3. Follow the onscreen instructions. When prompted, restart your computer.

Installing Hardware


1. Connect the camera to an available USB port on your computer.
2. Press and hold down the **Power** button to turn on your camera. The **Operation** lamp lights up in green. Windows automatically detects the device and your camera appears as a removable disk named **DIGITAL CAM** in Windows Explorer.

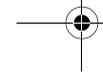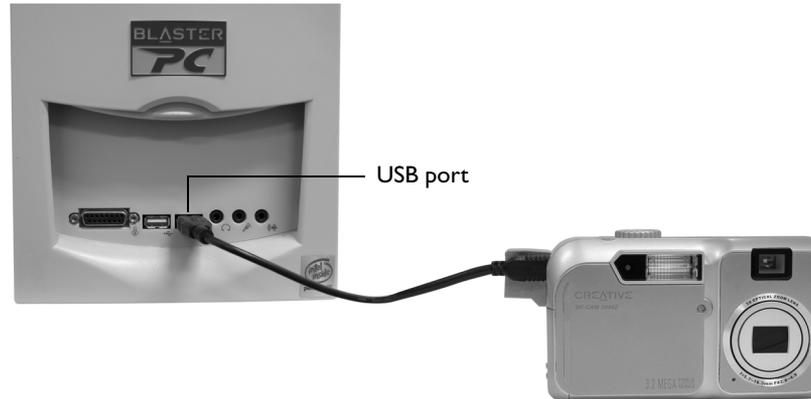

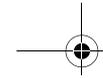

4 Adjust the Mode

Your camera has five modes that allow you to take pictures and videos, or customize settings. Select a mode by aligning the **Mode** dial to the mode that you want.

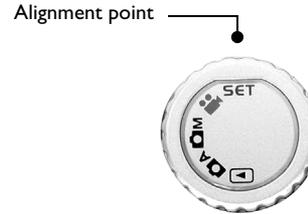

Auto Photo Mode

This mode automatically adjusts the exposure and white balance values for your environment.

Manual Photo Mode

This mode allows you to manually set the exposure value, shutter speed and white balance value before taking a picture.

Playback Mode

This mode allows you to replay or delete images from your camera's memory.


Video Mode

This mode allows you to manually set the exposure and white balance before recording a movie.

Set Mode SET

This mode brings up the Set-up menu, which allows you to customize your camera's settings.



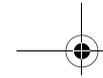

5 Take a Digital Camera Picture or Video

Taking and viewing a photo

1. Disconnect your camera from your computer.
2. Set the **Mode** dial to **Auto**  or **Manual**  , and then turn the camera on.
3. Lightly press the **Shutter** button halfway down and look through the Viewfinder to focus on your subject. When the focus is locked, the auto focus mark turns green and the **Operation** lamp lights up in green.
4. Fully press down the **Shutter** button to take a picture. A beep sound is heard.
5. Set the **Mode** dial to **Playback**  . The last photo taken is displayed.
6. Use the **Macro/Right**  and **Self-Timer/Left**  buttons to view other photos.



If the Focus Indicator setting is disabled, the Auto Focus Indicator will not appear.

If the beeper setting is disabled, the camera will not beep.

For more information on adjusting your camera's settings, refer to the User's Guide (on CD). Go to `d:\manual\English>manual.pdf` (replace `d:/` with the drive letter of your CD-ROM drive).

Taking and viewing a video


1. Disconnect your camera from your computer.
2. Turn the camera on and set the **Mode** dial to **Video**  .
3. Press the **Shutter** button to start recording.
4. Press **Shutter** button again to stop recording.
5. Press the **Replay/Down** button  to play your video.



In **Video** mode, the camera's resolution is set at 320 x 240 pixels.

The maximum video length depends on the available memory space. The video recording automatically ends if the camera's memory is full.

Do not block the microphone when recording a video.

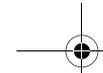

6 Other Information

User's Guide

For more details on using your camera, read the User's Guide (on CD): **d:\manual\English\manual.pdf**

Product Registration

Enjoy a host of benefits by registering your product during installation, or at **<http://www.creative.com/register>**.

Benefits include:

- Service and product support from Creative
- Exclusive updates on promotions and events

Technical Support and Warranty

For Technical Support information, go to **d:\support\<language>\support.pdf**

For Warranty information, go to **d:\warranty\<region>\<language>\warranty.pdf**

Please keep your Proof of Purchase for the duration of the warranty period.

(replace **d:** with the drive letter of your CD-ROM drive, **<region>** with the region that you are in, and **<language>** with the language that your document is in)

Creative Knowledgebase

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledgebase. Go to **<http://www.creative.com>** and select your region.

Copyright © 2003 Creative Technology Ltd. All rights reserved. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other brand and product names are trademarks or registered trademarks of their respective holders and are hereby recognized as such.

