

# **muratec**

**Muratec**

**F-110**

**Operating Instructions**



## **Trademarks**

- SmarThru, MailBox, Image Manager, Scan Manager, Copy Manager, Image Viewer, AnyPage are trademarks of Samsung Electronics.
- Windows, Windows 95, Windows 98, Windows Me, Windows NT, Windows 2000 and Windows XP are trademarks of Microsoft corporation.
- Other names and trademarks mentioned in this manual are trademarks of their respective holders.

# Contents

## Chapter 1

## Getting Started

---

### Introduction

Welcome! .....	1.1
Contents .....	1.3
Identifying Parts .....	1.4

### Setting Up Your Machine

Choosing a Location .....	1.9
Preparing Your Machine for Use .....	1.9
Attaching the Supports .....	1.10
Connecting to the Phone Line .....	1.12
Connecting to the Computer .....	1.14
Plugging In the Power .....	1.15
Loading Paper .....	1.15
Installing the Toner Cartridge .....	1.18
Setting the Date and Time .....	1.20
Setting Your Fax Number and Name .....	1.21
Testing the Machine .....	1.21

## Chapter 2

## Installing Muratec Software

---

### Samsung SmarThru

About Samsung SmarThru Software .....	2.1
---------------------------------------	-----

### Installing Software

System Requirements .....	2.2
Installing the Muratec Software .....	2.3
Configuring the Fax and Internet Gates .....	2.7
Uninstalling Software .....	2.11

## Setting Up Stand-alone Fax System

Setting Volume -----	3.1
Setting Alert Tones -----	3.2
Setting User-Selectable System Options -----	3.2

## Sending a Fax

Preparing Documents for Faxing or Copying -----	3.8
Setting Document Resolution and Contrast -----	3.9
Loading Documents -----	3.10
Sending a Fax Automatically -----	3.11
Sending a Fax After Talking -----	3.12
Voice Request -----	3.13

## Receiving a Fax

About Reception Modes -----	3.14
Loading Paper for Receiving Faxes -----	3.15
Receiving Automatically in FAX Mode -----	3.15
Receiving in AUTO Mode -----	3.16
Receiving Automatically in ANS/FAX Mode -----	3.16
Receiving Manually in TEL Mode -----	3.17
Receiving Manually Using an Extension telephone-----	3.17

## Making a Copy

Copying Overview -----	3.18
Making a Single Copy -----	3.18
Using Advanced Copy Features -----	3.19

## Automatic Dialling

How To Enter a Name Using the Number Keys -----	3.20
One-Touch Dialling -----	3.22
Speed Dialling -----	3.24
Using the Phonebook on Your Computer -----	3.26
Searching for a Number in the Memory -----	3.28

## Advanced Fax

Broadcasting -----	3.29
Delayed Fax -----	3.30
Priority Fax -----	3.32
Send Polling -----	3.33
Adding Documents To a Scheduled Operation -----	3.35
Cancelling a Scheduled Operation -----	3.35

# Contents (continued)

Chapter

3

## Stand-alone Fax (continued)

---

### Additional Functions

Sending a Flash .....	3.36
Monitoring a Dual Job Status .....	3.36
Forwarding Received Faxes .....	3.37
Printing Reports .....	3.39
Group Dialling (for Multi-Address Transmission) .....	3.41

Chapter

4

## Printing

---

### Print Media

Selecting Print Media .....	4.1
Using the Automatic Paper Input Tray .....	4.3
Using the Manual Paper Input Tray .....	4.5
Specialty Paper Guidelines .....	4.8

### Printing

Printing a Document .....	4.9
Cancelling a Print Job .....	4.12
Printing Help .....	4.13
Printing Several Pages Per Sheet .....	4.14
Scaling Your Document .....	4.15
Fitting Your Document to a Selected Paper Size .....	4.16
Printing Posters .....	4.17
Printing Watermarks .....	4.18
Using Page Overlays .....	4.20
Printing in a Network Environment .....	4.24

Chapter  
**5**

## Maintenance

---

Guidelines for Maintenance .....	5.1
Clearing Memory .....	5.1
Cleaning the OPC Drum .....	5.2
Adjusting Shading .....	5.2
Sending Toner Low Information to the Service Company .....	5.3
Cleaning the Machine .....	5.4
Managing the Toner Cartridge .....	5.7
Automatic Document Feeder Rubber Pad Replacement .....	5.10

Chapter  
**6**

## Troubleshooting

---

Clearing Paper Jams .....	6.1
LCD Error Messages .....	6.5
Fax Problems .....	6.7
General Printing Problems .....	6.9
Print Quality Problems .....	6.11

## Appendix

---

Connecting Other Devices to the Phone line .....	A.1
Specifications .....	A.4
Safety Information .....	A.6
Index .....	A.10

## Environmental and Safety Consideration

### Laser Safety Statement

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, chapter 1 Subchapter J for Class I(1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 825.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service condition.

#### **WARNING**

Never operate or service the printer with the protective cover removed from Laser/Scanner assembly. The reflected beam, although invisible, can damage your eyes.



**CAUTION** - INVISIBLE LASER RADIATION WHEN THIS COVER OPEN. DO NOT OPEN THIS COVER.

<b>VORSICHT</b>	- UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
<b>ATTENTION</b>	- RAYONNEMENT LASER INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DAN GEREUSE AU FAISCEAU.
<b>ATTENZIONE</b>	- RADIAZIONE LASER INVISIBILE IN CASO DI APERTURA. EVITARE L'ESPOSIZIONE AL FASCIO.
<b>PRECAUCION</b>	- RADIACION LASER IVISIBLE CUANDO SE ABRE. EVITAR EXPONERSE AL RAYO.
<b>ADVARSEL</b>	- USYNLIG LASERSTRÅLNING VED ÅBNING NÅR SIKKERHEDSBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSAETTELSE FOR STRÅLNING.
<b>ADVARSER</b>	- USYNLIG LASERSTRÅLNING NÅR DEKSEL ÅPNES. STIRR IKKE INN I STRÅLEN. UNNGÅ EKSPONERING FOR STRÅLEN.
<b>VARNING</b>	- OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPAND OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN. STRÅLEN ÄR FARLIG.
<b>VARO!</b>	- AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE ÄLÄ KATSO SÄTEESEEN.

## Ozone Safety



During normal operation, the Muratec F-110 produces ozone. the ozone produced does not present a hazard to the operator. However, it is advisable that the machine be operated in a well ventilated area.

If you need additional information about ozone, please request your nearest Muratec dealer.

## Power Saver



This printer contains advanced energy conservation technology that reduces power consumption when it is not in active use.

When the printer does not receive data for an extended period of time, power consumption is automatically lowered.

The energy star emblem does not represent EPA endorsement of any product or service.

## **FCC regulations**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless specified in the manual. If such changes or modifications should be made, you could be required to stop operating the equipment. Use of a shielded cable is required to comply with Class B limits in Subpart of Part 15 of FCC Rules.

## **Canadian radio interference regulations**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par Industrie Canada.

## **FCC DECLARATION OF CONFORMITY according to FCC Part 15**

1. Product Name : Laser Facsimile, Printer, Scanner, PC-FAX
2. Model Number : F-110
3. FCC Rules : TESTED TO COMPLY WITH FCC PART 15  
CLASS B

4. Operating Environment : FOR HOME OR OFFICE USE

5. FCC Compliance Statement

This device complies with Part 15 FCC rules. Operating is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that can any cause undesired operation.

6. Information to User

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

**CAUTION :** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### **Party Responsible for Product Compliance**

Muratec America, Inc.  
6400 International Parkway, Suite 1500  
Plano, Texas 75093

## Chapter

# 1

# *Getting Started*

Congratulations on the purchase of your F-110! This chapter provides information on the following topics:

### **Introduction**

- ◆ Welcome!
- ◆ Contents
- ◆ Identifying Parts

### **Setting Up Your Machine**

- ◆ Choosing a Location
- ◆ Preparing Your Machine for Use
- ◆ Attaching the Supports
- ◆ Connecting to the Phone Line
- ◆ Connecting to the Computer
- ◆ Plugging In the Power
- ◆ Loading Paper
- ◆ Installing the Toner Cartridge
- ◆ Setting the Date and Time
- ◆ Setting Your Fax Number and Name
- ◆ Testing the Machine

# Introduction

---


## Welcome!

Thank you for purchasing the Muratec F-110, a powerful business tool with the capabilities of a full range of office equipment. With the Muratec F-110, you can:



### Fax

Use the Muratec F-110 as a **full-featured stand-alone fax machine** to send and receive faxes. Perform advanced tasks such as delayed transmission, broadcasting, and unattended memory sending.

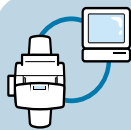

### Print

You can get 600 x 600 dpi high-quality laserjet printing from the Muratec F-110 machine. You can create professional documents using the creative printing features on the various kinds of print media, such as plain papers, envelopes, transparencies, label, and so on.



### Copy

Make up to **99 copies** of a 20-pages document without having to connect to a PC. You can adjust the contrast, enlarge or reduce the copies, collate, and more. If you use the Samsung SmarThru software on the PC, you can copy a scanned image using various copy options, such as multiple pages on a sheet, poster printing, and a cloning feature.



## Scan

Scan important documents to create electronic files. Use the scanner to add photo or graphic images to other software applications or to jazz up your projects. AnyPage OCR (Optical Character Recognition) software lets you scan text directly into your word processing program.



## Use Samsung SmarThru software


Samsung SmarThru program consists of several components that provide particular functionality as follows:

- **MailBox** — Mailbox is intended for storing fax and e-mail messages.
- **Image Manager** — Image Manager is intended for storing and editing images.
- **Scan Wizard** — Scan Wizard is intended for the quick launch of several scanning procedures.
- **Fax Manager** — This is a wizard for creating and sending fax messages.
- **New Message** — This program is intended for creating, editing, and sending e-mail and/or fax messages, and for reading incoming messages.
- **Scan Manager** — It scans documents to the Image Manager's database.
- **Copy Manager** — It copies documents by scanning and subsequent printing.
- **Fax Cover Page Editor** — The editor is intended for creating and editing fax cover pages (the very first page of a fax). Cover pages contain information specific to a particular message, such as recipient's name, phone number, subject, etc.
- **AnyPage** — AnyPage is an optical character recognition (OCR) program. Using the AnyPage you can convert scanned document to a text file, which can be edited afterwards.


---

## Contents


Here's what comes with the F-110.

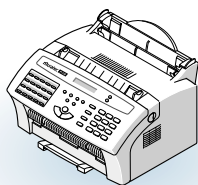


F-110 machine

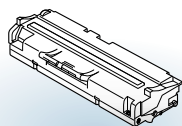

Toner cartridge

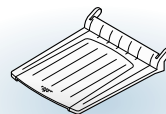

Document output support

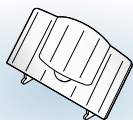


Document input support




Telephone line cord



Power cord

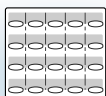

One-touch label  
for the front panel

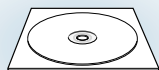

software CD-ROM



ADF Rubber

### Notes:


- You should use the Telephone line cord which is supplied with the machine. If you are replacing it with the other vendor's part, it should be AWG #26 or lower gage.
- Power cord must be plugged in grounded power socket.

## Identifying Parts

Before setting up your machine, make sure you identify the following parts related to the scanner and paper print paths.


### Identifying Scanner Path Parts

Items that are to be faxed, copied, or scanned use the scanner path which consists of the following parts:

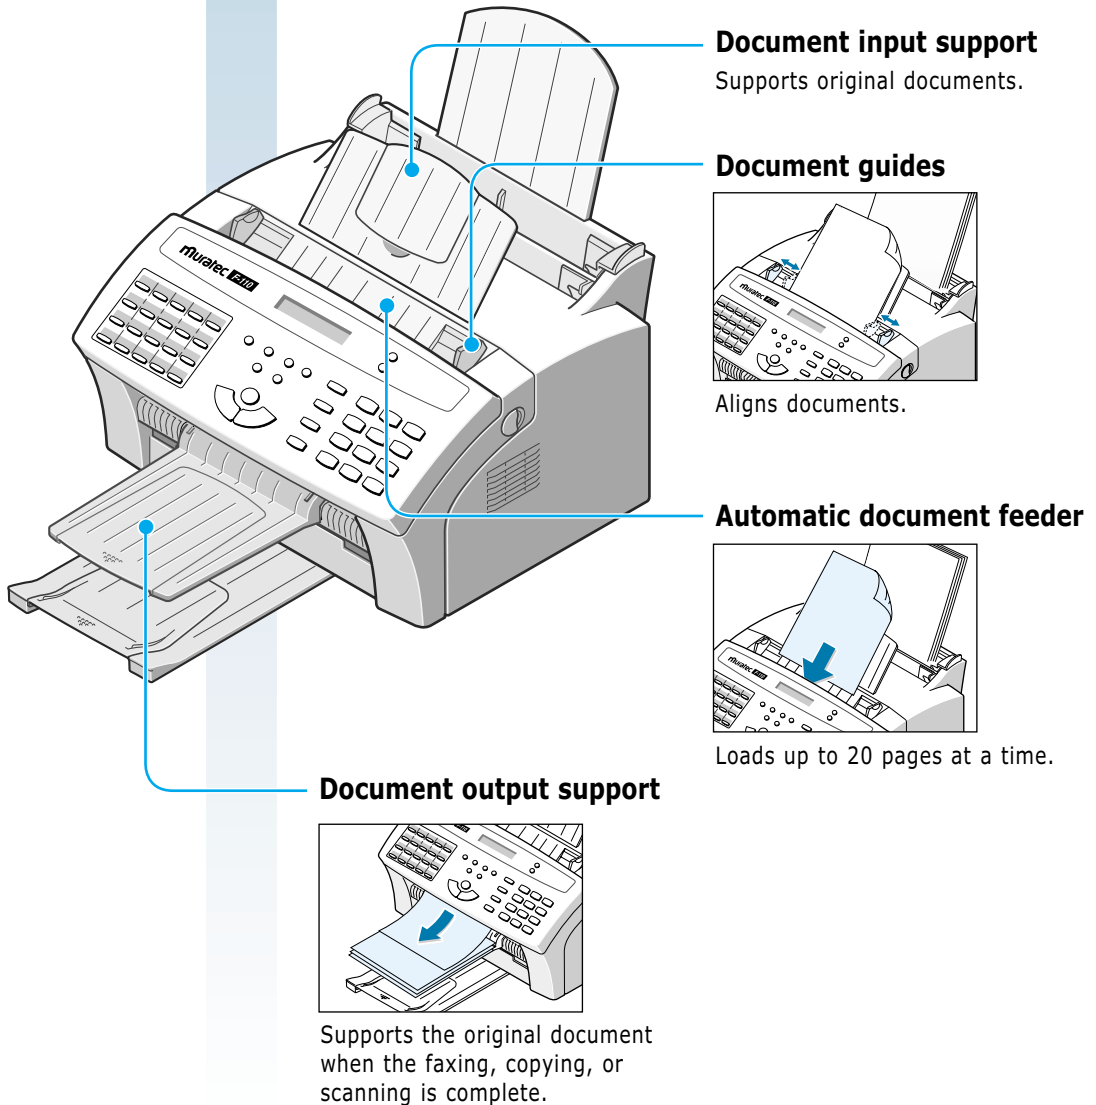

## Identifying Printer Path Parts

Paper for printing, receiving faxes and copying follow the printer path. This path consists of the following parts:

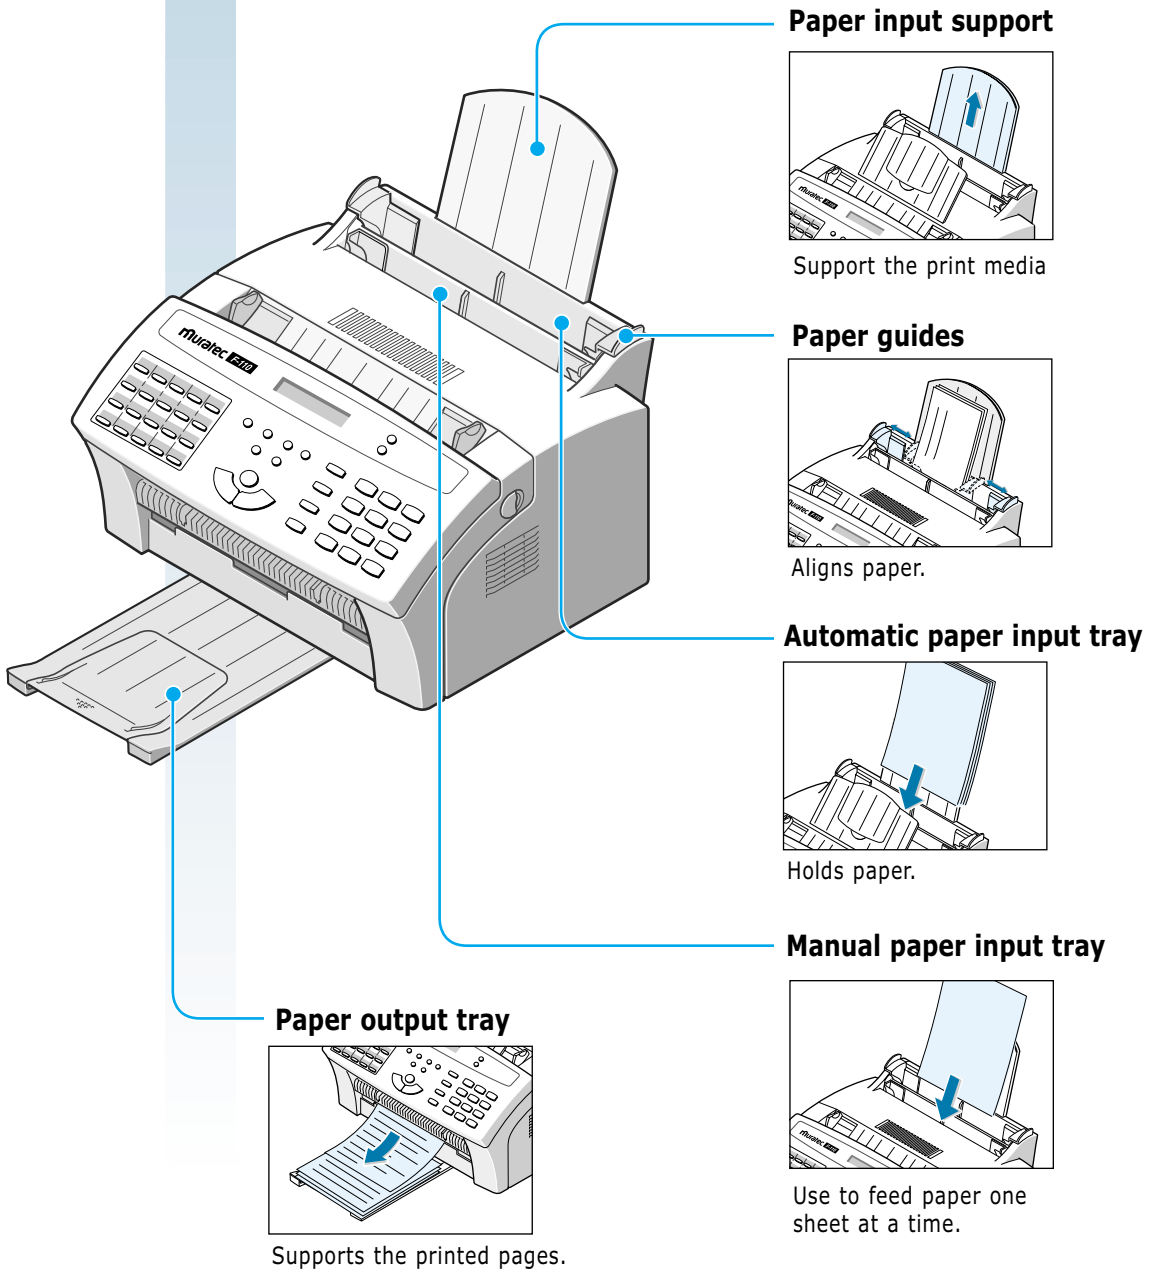

## Identifying Front Panel Features

Look for the following keys and features on the front panel. These features are used to fax documents, make copies, and adjust settings.

### SET UP

Use to set up various system options.

### ADVANCED FAX

Use to access advanced fax operations.

### SEARCH / DELETE

Use to search for a number in memory or to delete the last digit when typing text.

### FAX FORWARD

Allows you to forward the received faxes to the defined remote fax machine at a specified duration.

### SCROLL / VOLUME


Use to scroll the menu items or use to move the cursor left or right through the display. Also, use to adjust the ringer volume.

### Twenty One-Touch Buttons

Store frequently dialed fax numbers.

### LCD Display

Displays messages and menu settings.

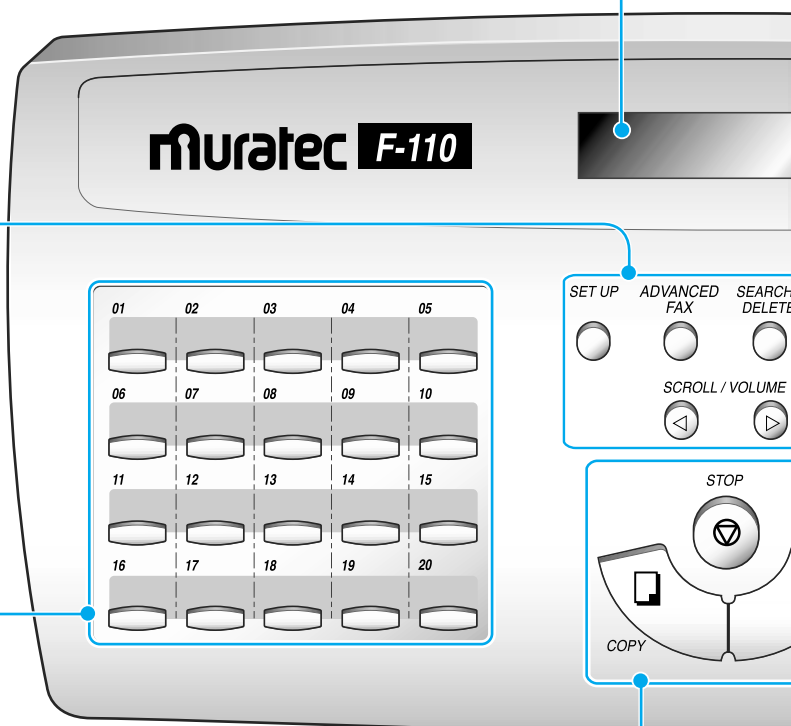

### STOP

Stops an operation at any time.

### COPY

Makes a copy of a document.

### START / ENTER

Starts a job. Also use to activate the selection shown on the display.

## RESOLUTION


Select the resolution of documents.

## RECEIVE MODE/CONTRAST

When a document is loaded, choose the contrast characteristic of copied or transmitted documents.

When a document is not loaded, choose the receive mode to use.

The selected mode is displayed in Standby mode.

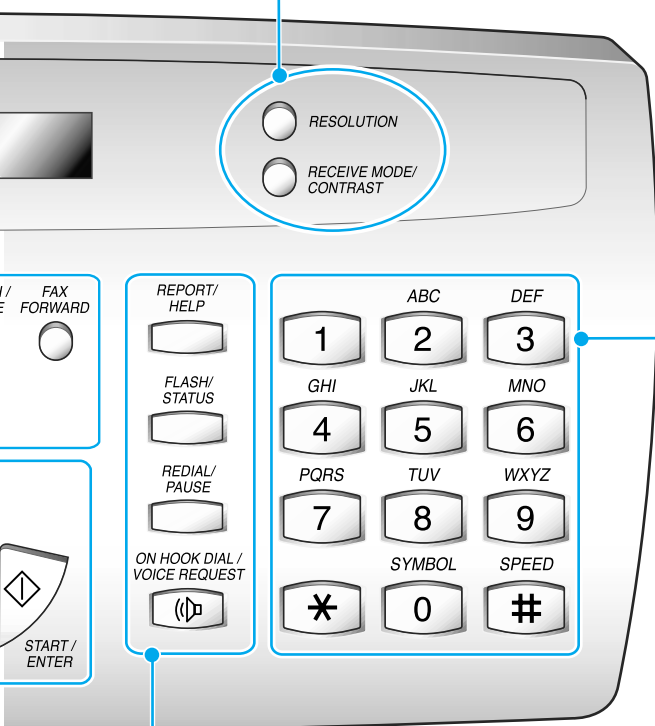

## Number Keypad

Use to enter fax numbers manually or to enter letters.

## SPEED (#)

Use to send documents by entering a registered 2-digit number.

\*

Prints a demo page to test your machine.

## REPORT/HELP

Use to print various reports and the help list.

## FLASH/STATUS

Performs a switch-hook operation.

Also, use to switch the display status while performing dual jobs.


## REDIAL/PAUSE

Use to redial the last fax number or to insert a pause into a fax number.

## ON HOOK DIAL / VOICE REQUEST

Use to dial numbers without picking up the handset. Also use to make a voice call after sending or receiving a fax.

## Identifying Connecting Parts and Others

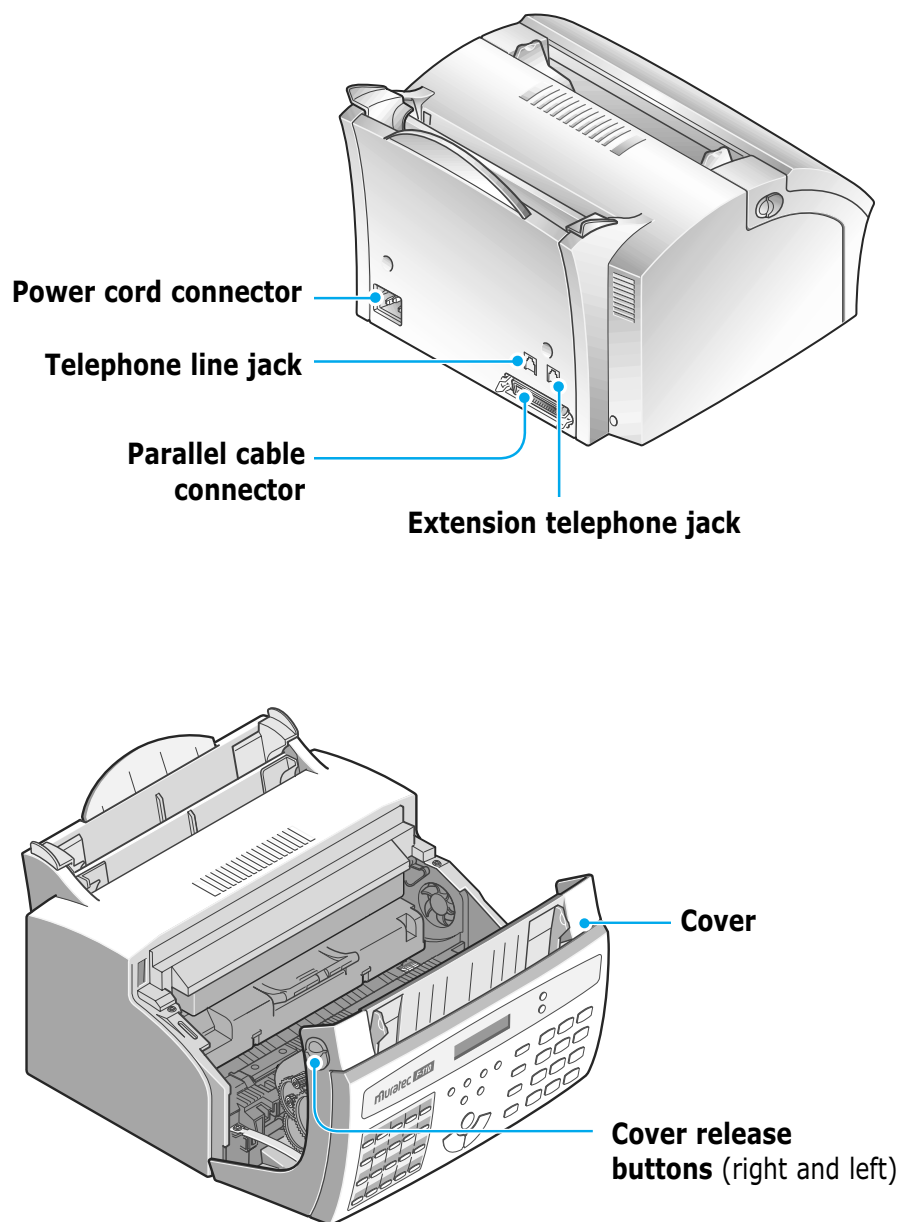

# Setting Up Your Machine

---

## Choosing a Location

For the trouble-free operation of your machine, place it on a flat, stable surface near your workstation. Leave enough space to allow for easy paper loading and exiting, as well as opening the front cover.

Do not place your machine:


- In direct sunlight.
- Near heat sources or air conditioners.
- In a dusty or dirty environment.

---

## Preparing Your Machine for Use

When you take the F-110 out the box, note that it has been packaged for protection during shipping. Before you use the machine, make certain that you check for the following items:


- Remove all tapes.
- Remove all packing materials.

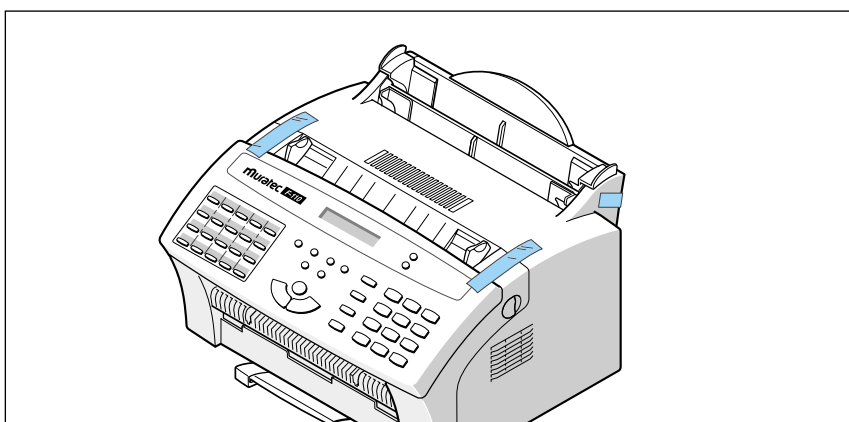

## Attaching the Supports


### Document Input Support

Insert the document input support with the groove pointing to the rear top of the machine.

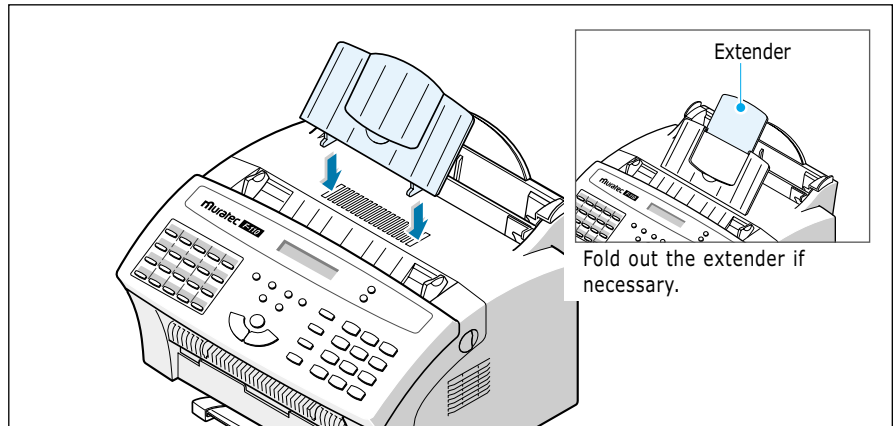


### Document Output Support

Insert the two tabs on the document output support into the slots on the front of your machine.

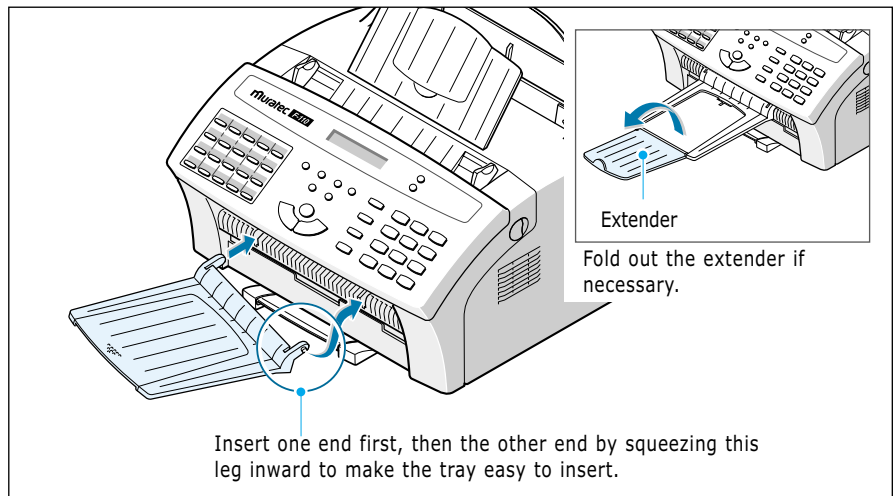


**Note:** The F-110 is shipped with the paper output tray already installed. Extend the tray to use.

Fold out the extender if necessary.

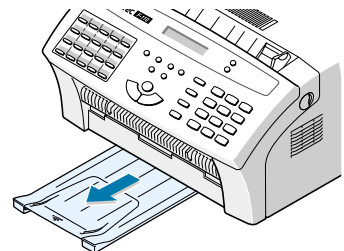


## Handset and Handset Cradle (Handset sold as option)


1. Remove the handset cradle cover of your machine.

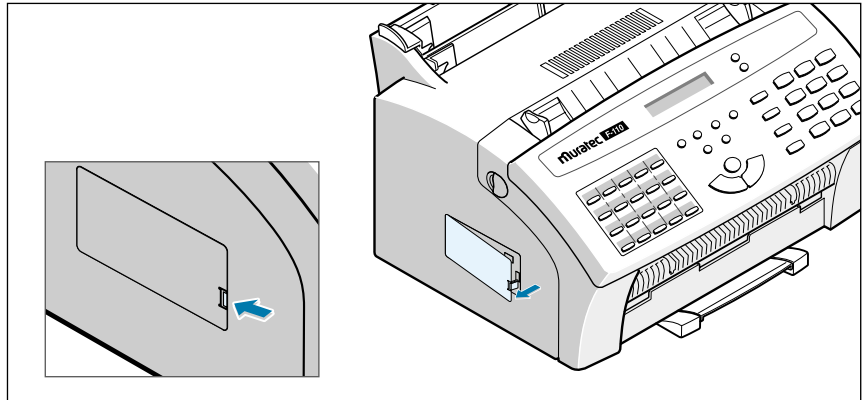

2. Plug the handset cord into the jack on the left side of your machine.

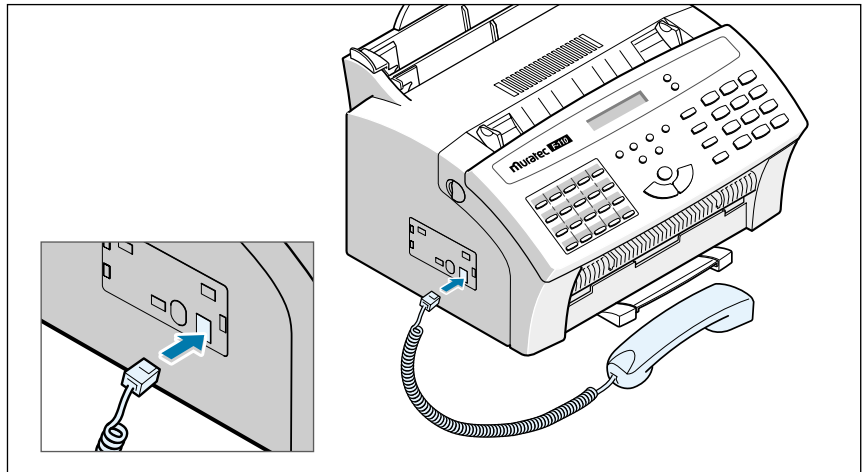


3. Hold the cradle using your hand as shown.

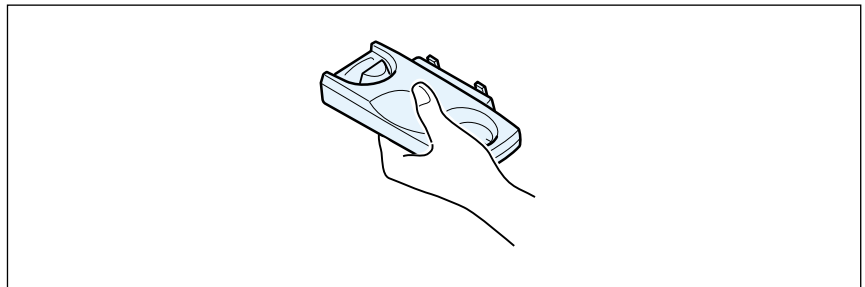


#### 4. Attach the handset cradle to the main body.

Insert the two tabs of the cradle into the slots on the left side of the machine as shown, and while pressing part **A** on the bottom of the cradle, push the cradle toward the machine until it clicks into place.

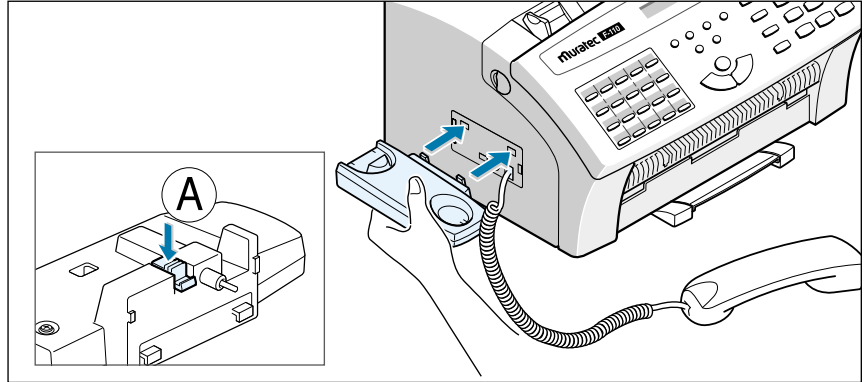

#### Notes:

- If you want to remove the cradle, while pushing up the part **A**, on the bottom of the cradle, slide the cradle down, then take it out.

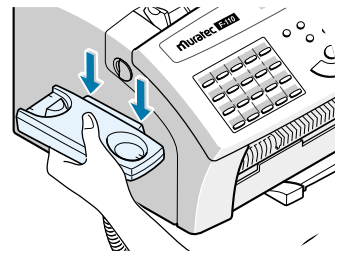

---


## Connecting to the Phone Line

For proper operation, the F-110 must be connected to the wall jack. Once you have decided which wall jack you will be using, check a box below and follow the instructions.

- ☐ **I only have one phone line coming to this wall jack.** (This includes two phone numbers on one line with distinctive ring service.) Go to "To Connect to a Wall Jack that has Only One Phone Line" on [next page](#).
- ☐ **I have two phone lines coming to this wall jack.** Go to "You have two phone lines coming into one wall jack" on [page A.2](#).

## To Connect to a Wall Jack that has Only One Phone Line

1. Plug the enclosed telephone cord into the jack on the back of the unit marked by the word **LINE**.

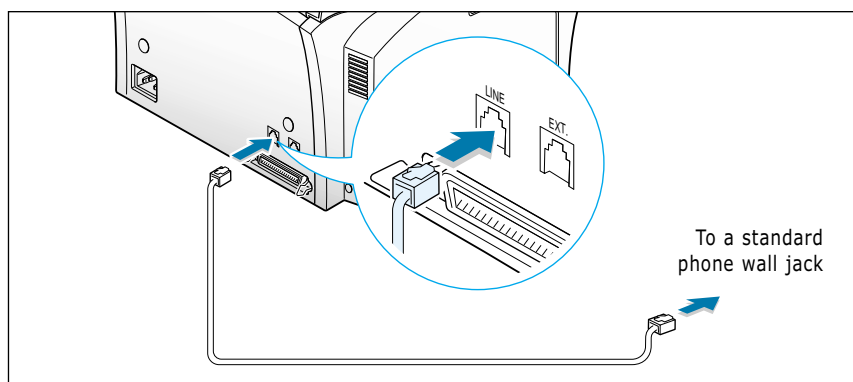

2. If a telephone cord is plugged into the wall jack, unplug the cord and set it aside.
3. Plug the other end of the phone cord into the wall jack.

### Notes:

- If you are connecting other devices such as a telephone to the phone line, go to Appendix "Connecting Other Devices To the Phone Line" on [page A.1](#).
- If you are not connecting other devices, go to "Plugging In the Power" on [page 1.15](#).

## To Connect to a Wall Jack that Has Two Phone Lines

1. Plug the telephone cord into the jack on the back of the unit marked by the word **LINE**.
2. If a telephone cord is plugged into the wall jack, unplug it and set it aside.
3. If you do not have a wall jack that has a built-in splitter, plug a phone unit splitter (not included) into the wall jack.
4. Plug the cord into the side of the phone unit splitter for the fax number.

### Notes:

- If you are connecting other devices such as a telephone to the same phone line, go to Appendix "Connecting Other Devices To the Phone Line" on [page A.1](#).
- If you are not connecting other devices, go to "Plugging In the Power" on [page 1.15](#).


---

## Connecting to the Computer

Your machine has an optional parallel port which allows use with a Windows PC.

### Connecting to the Computer Using the Parallel interface

1. Plug the parallel printer cable into the connector on the back of your machine. Push the metal clips down to fit inside the notches on the cable plug.

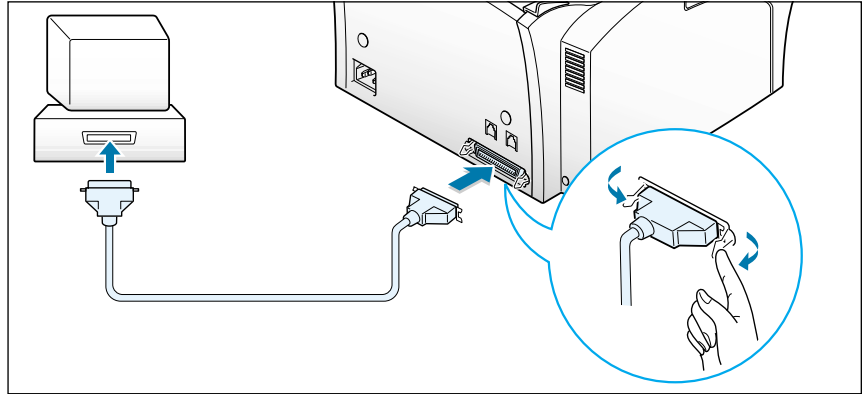

2. Connect the other end of the cable to the parallel interface port on your computer. See your computer documentation for more information.


**Note:** To connect the machine to the parallel port of the computer requires a certified parallel cable. You will need to buy the IEEE1284 compliant cable.

---

## Plugging In the Power

Plug one end of the cord into the back of the machine and the other end into a standard AC power outlet.

The F-110 will turn on and the display will read 'SYSTEM INITIAL'. If there is no paper loaded, the displays will show 'NO PAPER.' then if there is no cartridge installed, the display will show 'JAM/NO CARTRIDGE'.

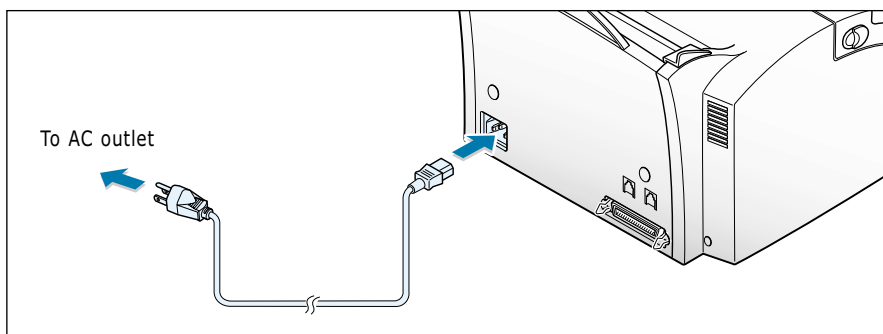

To turn off, unplug the power cord.


---

## Loading Paper


For the best results, use high quality xerographic paper. The automatic paper input tray can hold a maximum of 150 sheets of plain paper. The maximum capacity may be less, depending on the paper thickness.

**Note:** For stand-alone copy and fax operations, the F-110 product supports A4, letter, and legal paper. After loading paper, make sure that you select the correct paper size. For more information on setting the paper size, see 'Setting User-Selectable System Options' on [page 3.2](#).


1. Pull the paper input support completely out of the unit.

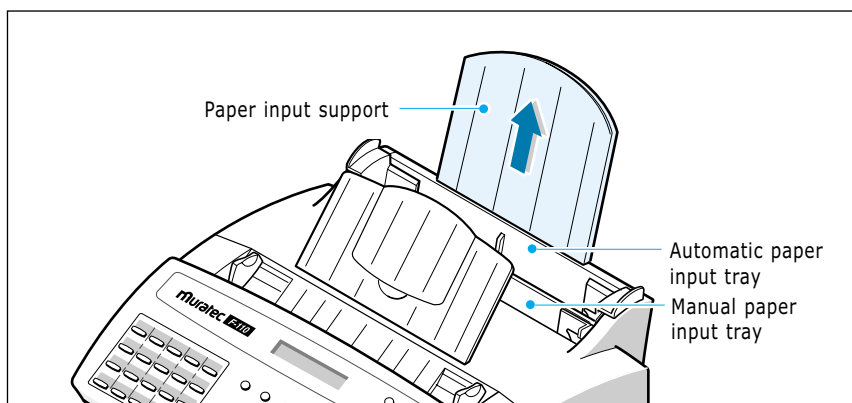


2. Remove a stack of paper from its packaging. Tap the stack on a flat surface to even it up.

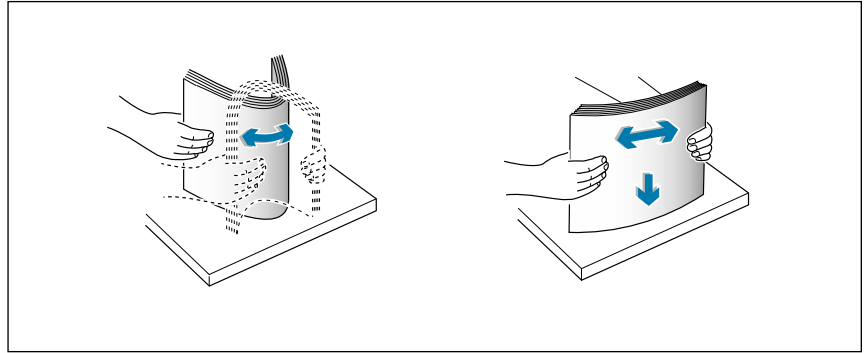

3. Insert the paper with the print side facing you.

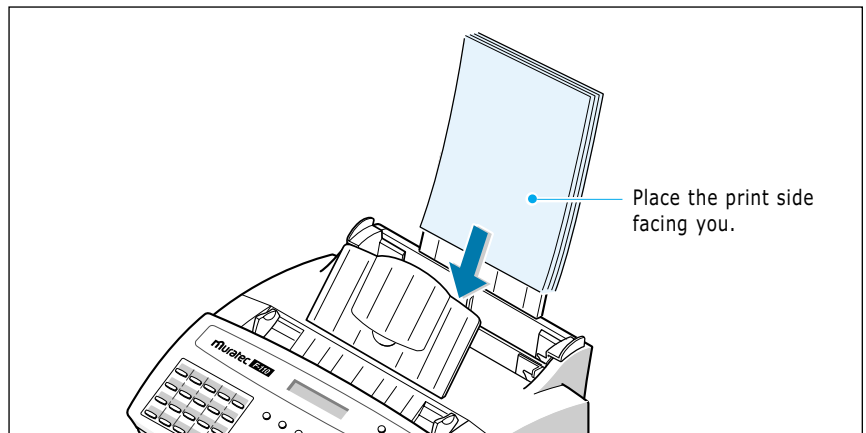

4. Adjust the paper guides to the width of the print media. Slide the guides until they lightly touch the stack of print media. Do not bend the print material.

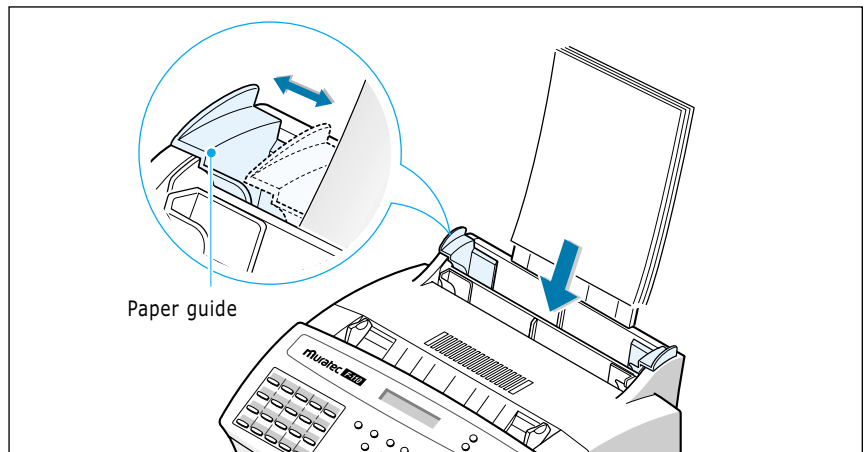

## Paper Type and Size

Satisfactory print and receive quality can be obtained with many types of plain paper. Since the quality of plain paper varies widely, test the print quality before buying large quantities of paper. Your machine uses a variety of papers including:

- Xerographic paper
- Bond paper
- Dual-purpose paper

Because all papers vary in physical characteristics, you can receive mixed results from different packages of paper even through the packages contain the same paper. If you encounter undesirable results, try the other side of the paper, a different type, or another package of the same kind of paper.

DO NOT use the following types of paper with your machine:

- Continuous form feed paper
- Synthetic paper
- Thermal paper
- Multi-sheet forms and documents
- Chemically treated paper
- Papers with raised, embossed lettering

To load paper with a preferred print side:

- If you are using xerographic paper, load the paper with the preferred print side facing down.
- If you are using letterhead or bond paper, load the paper with the preferred side facing up.


The following papers can be used in your machine for fax:

- Letter : 216 x 279 mm (8.5 x 11.0 in.) - 60 g/m<sup>2</sup> ~ 90 g/m<sup>2</sup> (16 ~ 24 lb)
- A4 : 210 x 297 mm (8.3 x 11.7 in.) - 60 g/m<sup>2</sup> ~ 90 g/m<sup>2</sup> (16 ~ 24 lb)
- Legal : 216 x 356 mm (8.5 x 14.0 in.) - 60 g/m<sup>2</sup> ~ 90 g/m<sup>2</sup> (16 ~ 24 lb)


---

## Installing the Toner Cartridge


1. Pulling the cover release buttons found on both sides of the machine toward you, open the cover.

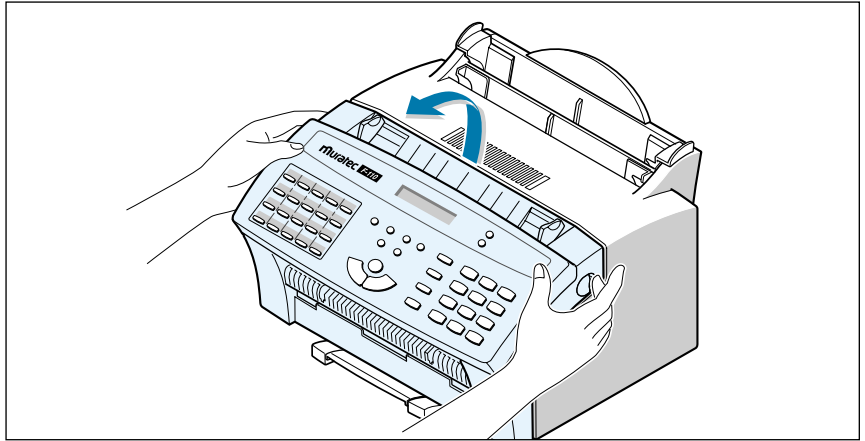


2. Unpack the cartridge from its plastic bag, and then remove the paper which is wrapped around the cartridge.

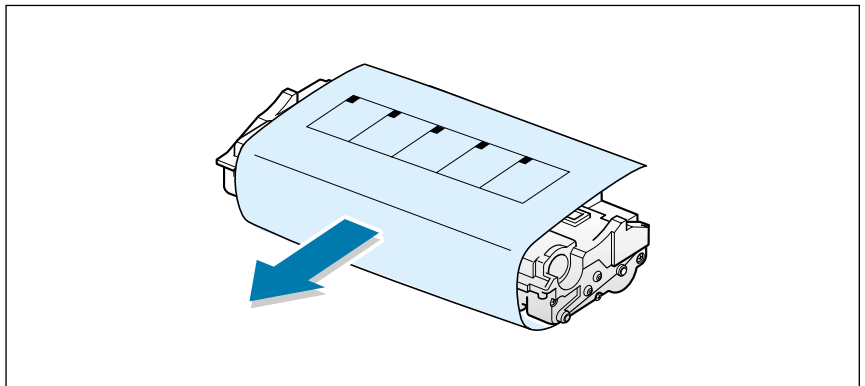


3. Shake the cartridge from side to side 5 or 6 times to redistribute the toner evenly inside the cartridge.

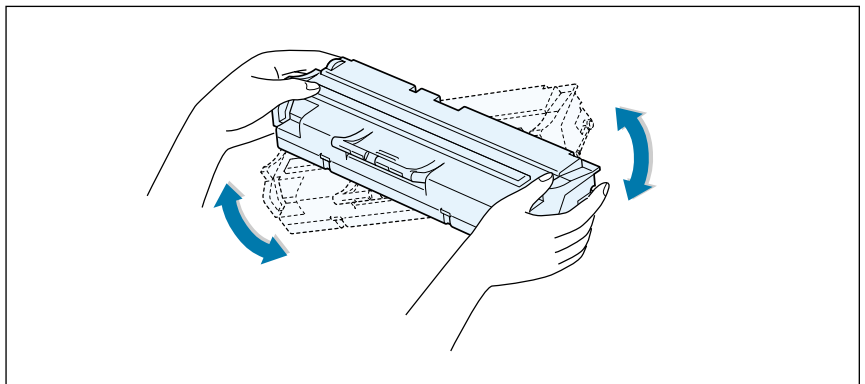


4. Find the cartridge slots inside the machine, one on each side.

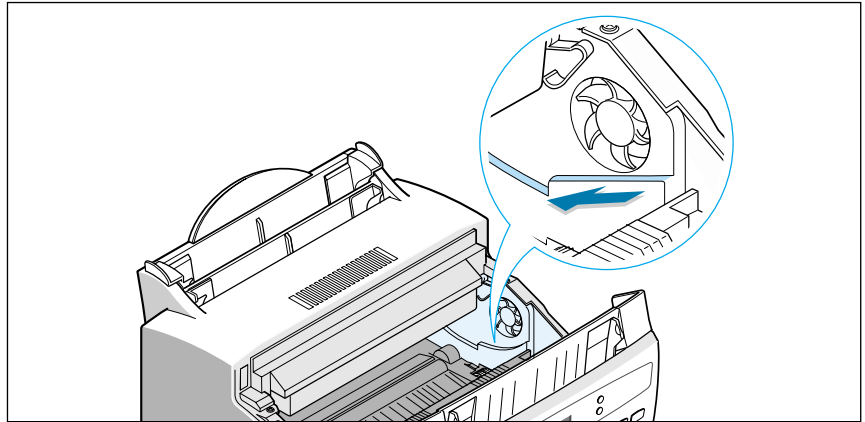

5. Grasp the handle at the front of the cartridge and slide it down between the cartridge slots pushing it firmly.

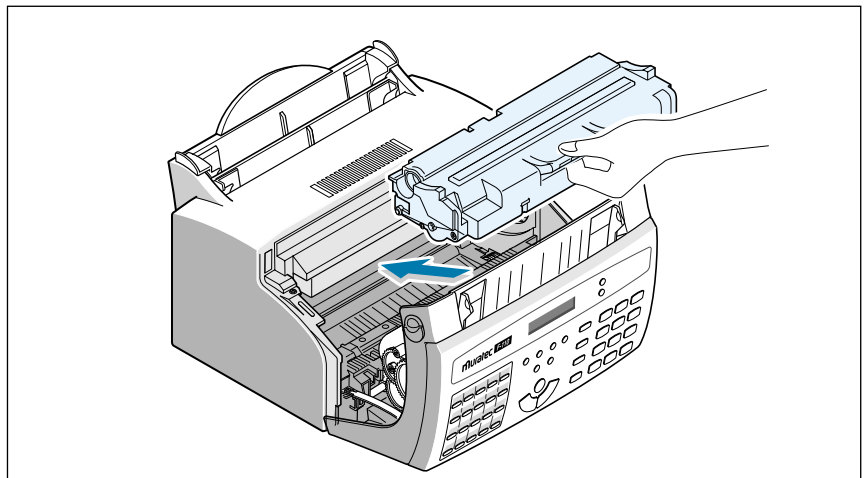

6. Close the cover. Make sure that the cover is securely closed.

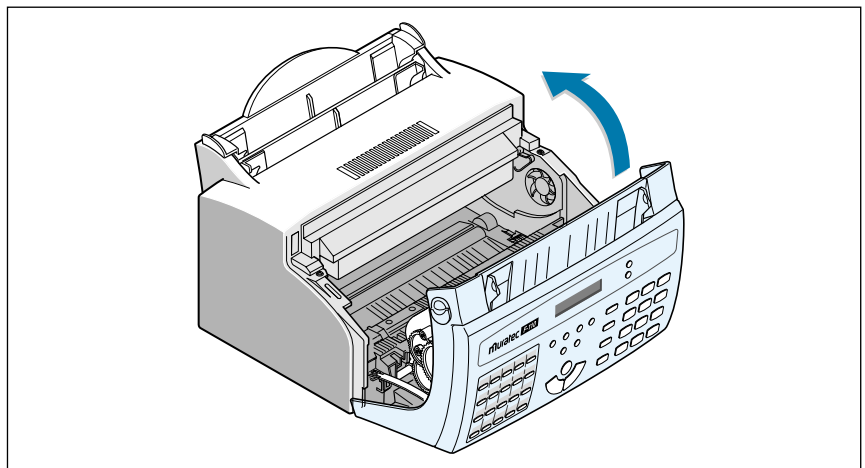


---

## Setting the Date and Time

The current date and time are shown on the display when the machine is on and ready for use (Standby mode). The date and time are printed on all transmitted faxes.


When you install the F-110 for the first time, or when the product is without power for about 15 seconds, the display prompts you to reset the date and time.

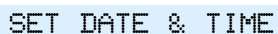A rectangular LCD display with a light blue background and a thin black border. The text "SET DATE & TIME" is displayed in a black, pixelated font, centered on the screen.

1. Press **SET UP** on the front panel. the display shows the first setup menu; FAX NUMBER/NAME.
2. Press ◀ or ▶ until 'TIME/DATE SETUP' appears, then press **START/ENTER** to access the Time/Date Setup menu.
3. The display asks you to choose a date format. Press **START/ENTER**.
4. Press ◀ or ▶ until you find the desired date format, then press **START/ENTER**.

If you select USA, the date appears in format of Month-Day-Year. The EUROPE format will be displayed in format of Day-Month-Year.

The display shows the currently set date and time using the selected date format and asks you to set the month.

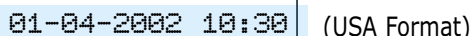A rectangular LCD display with a light blue background and a thin black border. The text "01-04-2002 10:30" is displayed in a black, pixelated font, centered on the screen. To the right of the display, the text "(USA Format)" is written in a standard sans-serif font.

5. Enter the correct date and time for each item using the number keypad. Each time you enter the appropriate number, the display asks you to enter the next item in the following order: MONTH, DATE, YEAR, HOUR, and MINUTE.

Enter the time in 24-hour format. For example, enter 2230 for 10:30 P.M.

If you enter an invalid number, the display does not proceed to the next step. If this happens, re-enter the correct number.

6. When you are finished, press **START/ENTER** to save the setting. The display returns to Standby mode and shows the date and time you have set.

A rectangular LCD display with a light blue background and a thin black border. The text "JAN-04 12:30 FAX" is displayed in a black, pixelated font, centered on the screen. To the right of the display, the text "(USA Format)" is written in a standard sans-serif font.

---

## Setting Your Fax Number and Name

Your fax number and name can be printed at the top of each page transmitted.

1. Press **SET UP** on the front panel. The display shows the first setup menu; FAX NUMBER/NAME.
2. Press **START/ENTER** to access the Fax Number/Name menu. The display shows 'FAX NUMBER'.
3. Press **START/ENTER**.  
If there is a number already set, the number will appear.

TEL: \_

4. Enter the telephone number that your machine is connected to. You can enter up to 20 digits.  
  
Press \* for plus sign (+) and # for a hyphen. If you entered a wrong number, press **SEARCH/DELETE** to delete it.
5. Press **START/ENTER** when the number on the display is correct. If there is a name already set, the name will appear.

NAME: \_

6. Enter your name using the numeric keypad. You can enter up to 40 characters.  
  
For details on how to use the number keypad to enter alphanumeric characters, see [page 3.20](#).
7. Press **START/ENTER** when the name on the display is correct.

---

## Testing the Machine

After installation, you may want to run a simple test on your machine by printing out a demo page.

Press and hold down the \* button on the front panel for 2 seconds, and the machine will begin printing a demo page.

Chapter

# 2

## *Installing Muratec Software*

This chapter provides information on installing the supplied Muratec software. You **MUST** install the Muratec software to use your machine as a printer and scanner.

The topics included in this chapter are:

### **Samsung SmarThru**

- ◆ About Samsung SmarThru Software

### **Installing Software**

- ◆ System Requirements
- ◆ Installing the Muratec Software
- ◆ Configuring the Fax and Internet Gates
- ◆ Uninstalling Software

# *Samsung SmarThru*

---

## About Samsung SmarThru Software

You must install the SmarThru CD-ROM after you have setup your machine and connected it to your computer. The SmarThru CD-ROM includes the following:

- MFP Driver
- SmarThru Software
- OCR Software (AnyPage Lite)

### MFP Driver

To use this machine as a printer, scanner or phonebook, you **MUST** install the MFP driver.

### SmarThru Software

SmarThru is the accompanying software for your multifunctional product. SmarThru contains a powerful image editor that allows you to edit images in many ways and also includes powerful Internet mail client software.

With SmarThru, you can save the scanned images in a dedicated storage area for subsequent editing, sending via e-mail or fax, printing, and processing by other programs of your choice.

### OCR Software (AnyPage Lite)

OCR (Optical Character Recognition) is software that has the ability to recognize most character formats, so that a scanned document can be read and edited with word processing software.

# Installing Software

---

## System Requirements

Before you begin, ensure you have the following computer setup:

Minimal requirements:

- **Operating systems:** Windows 95 OSR2/Windows 98/Windows 98 SE/Windows Me/Windows NT 4 Workstation or Server with Service Pack 3/Windows 2000/ Windows XP
- **Disk space:** 120 MB for installation (for complete SmarThru installation including OCR software)
- **Memory:** 64 MB (Windows 9x/Me: 32 MB, Windows NT/2000/XP: 64MB)
- **CPU:** Pentium II 233
- **Required software:** Internet Explorer 4.01
- **User rights:**
  - Windows 95 versions prior to OSR2 are not supported.
  - Administrative rights should be set for installation on Windows NT and Windows 2000.


Recommended

- **Operating systems:** Windows 95 OSR2/Windows 98/Windows 98 SE/Windows Me/Windows NT 4 Workstation or Server with Service Pack 3/Windows 2000 Professional or Advabced Server/Windows XP Professional/Home Edition
- **Disk space:** 220 MB (120 MB for complete SmarThru installation including OCR software, 100 MB for message/image database)
- **Memory:** 128 MB
- **CPU:** Pentium II 400
- **Required software:** Internet Explorer 4.01 or above (5.5 recommended)
- **User rights:**
  - Windows 95 versions prior to OSR2 are not supported.
  - Administrative rights should be set for installation on Windows NT and Windows 2000.

## Installing the Muratec Software

**Note:** For Windows 95/98/Me/NT 4.0/2000/XP users, close "New Hardware Found" screen when the computer boots up.

1. Insert the supplied CD-ROM into your CD-ROM drive.

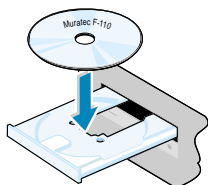

The SmarThru CD-ROM is automatically running and the opening window appears.


If the opening window does not appear, click **Start**, and then select **Run**. Type **X:Autorun.exe**, replacing "X" with the letter of your drive, and click **OK**.

2. Click **Install the Muratec Software on your PC**.



3. Follow the on-screen instructions and click **Next**.


4. The SmarThru installation supports three types of setup:
- **Typical:** Program will be installed with the most common options and is recommended for most users.
  - **Compact:** Only the MFP driver will be installed.
  - **Custom:** You may choose the options you want to install. Recommended for advanced users.

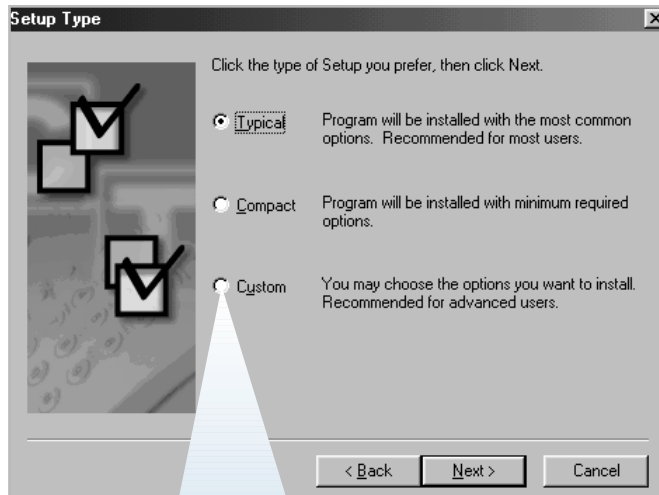

If you select the **Custom** installation, you may choose the options you want to install.

SmarThru software to scan and edit images and work with electronic documents.

AnyPage Lite software to enable OCR.

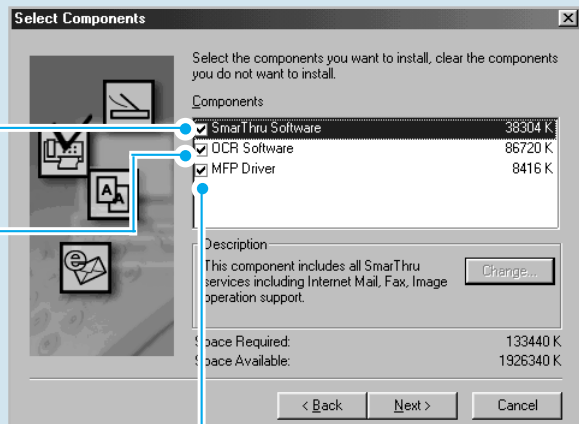


MFP driver to print, scan and phonebook.


5. Selecting the type, Click **Next**.

6. You can choose **Network Configuration** option. This feature allows you to share the modems on your computer and the product as a scan device via a network or to access these shared devices located on other computers.

**Stand-alone configuration** does not allow you to use any networking features such as Remote Fax or Remote Scan service.

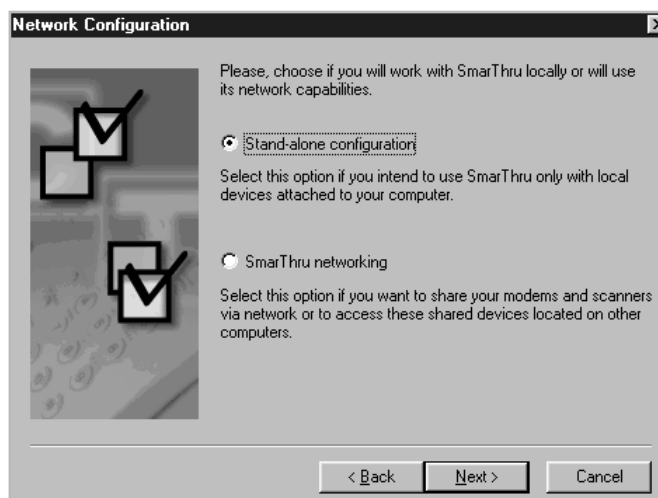


If you selected **SmarThru networking**, you can select to install server, client, or both.

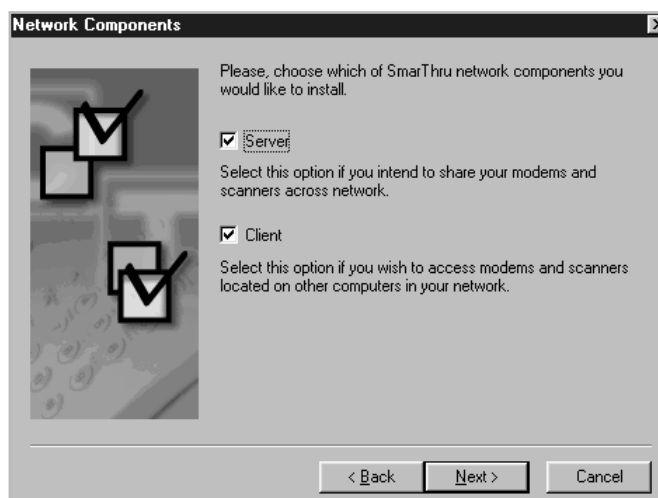

**Server** allows you to share local fax modem and/or scanner over a LAN. You can control sharing by managing remote service user. **Client** allows you to use Remote Fax or Remote Scan services provided by SmarThru Remote Services Server over a LAN. You need to have a client account. These accounts are provided by the server. For details on Remote Fax/Scan Services, please refer to the SmarThru Help.

7. Click **Next**.

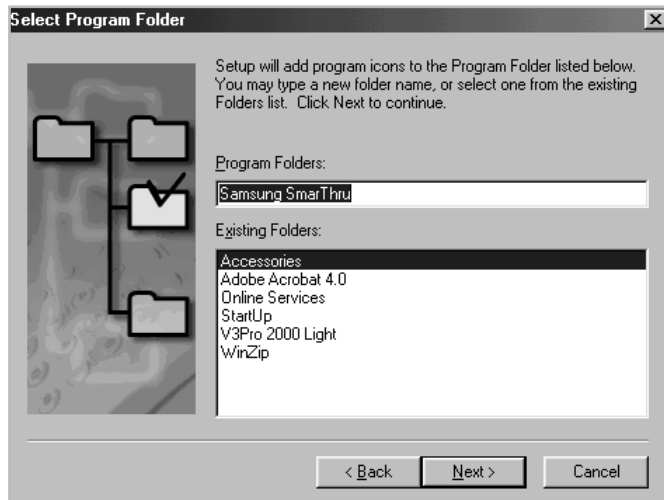

8. When the installation is completed, shut down and restart your computer.

If your computer does not shut down and restart automatically, you must shut it down manually and restart it before the changes will be saved.

**Note:** When you install the software, the Digital Signature Not Found window appears in Windows 2000 and Windows XP. Click **OK** in Windows 2000 and click **Continue Anyway** in Windows XP.

---


## Configuring Fax and Internet Gates

If you select **Network Configuration** Server option (see [page 2.5](#)), when your computer restarts after the Muratec software has installed, you will be prompted to configure the fax and Internet gates allowing you to send and receive faxes and e-mails on the SmarThru system.

If you select the **Stand-alone configuration** or **SmarThru networking** option (see [page 2.5](#)), the following wizards appear only the first time you try to launch Mailbox in the SmarThru program. For information on SmarThru, please refer to the SmarThru Help.

**Note:** To configure the Internet gate, you must enter your e-mail address, incoming (POP3 or IMAP4) and outgoing (SMTP) mail server address, and account name. Ask your Internet service provider or on-line service provider for the information on your Internet gate configuration.

1. When the New Modem Wizard appears, choose the system modem installed in your system and then click **Next**. This fax modem will be used by SmarThru Fax Gate for sending and/or receiving faxes.

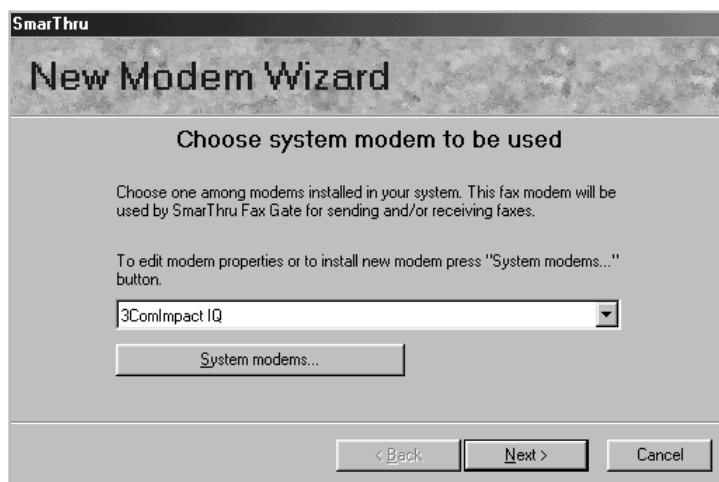

**Notes:** The SmarThru FAX feature is available only if there is a FAX modem installed in your PC. Press **Cancel** if there is no FAX modem installed in your PC.

2. Click **Finish** to save the modem setting.

### Notes:

- The Windows NT or 2000 users must click **System modems...** to open install New Modem dialogue book. Follow the instructions on screen to install fax modem on your computer.
- If there is no fax modem installed in your PC, you cannot use the PC fax feature. Purchase an internal or external fax modem and install into your PC and then configure the fax modem.

3. Enter your name and e-mail address, then click **Next**. The e-mail address has been assigned to you by your Internet service provider.

The screenshot shows a window titled "SmarThru" with a header "New Mail Account Wizard". The main section is titled "Internet E-Mail Address". It contains two text input fields. The first is labeled "Enter your name:" and contains the text "f\_110". Below it is an example: "For example: John A. Smith". The second field is labeled "Enter your e-mail address:" and contains "f\_110@muratec.com". Below it is an example: "For example: mailbox@company.com". A note states: "Note: Your e-mail address is the address other people use to send e-mail messages to you. This address has been assigned to you by your Internet service provider." At the bottom are three buttons: "< Back", "Next >", and "Cancel".

4. Enter the addresses of your incoming and outgoing mail servers. Choose the incoming mail server type, then click **Next**. Your Internet service provider will be able to provide you with this information.

The screenshot shows a window titled "SmarThru" with a header "New Mail Account Wizard". The main section is titled "E-Mail Server Addresses". It contains the instruction "Type the addresses of your incoming and outgoing mail servers." There are two text input fields. The first is labeled "Incoming (POP3 or IMAP4) mail server address:" and contains "muratec.com". Below it is an example: "For example: company.com". The second field is labeled "Outgoing (SMTP) mail server address:" and contains "muratec.com". Below it is an example: "For example: company.com". At the bottom right, there is a dropdown menu labeled "Incoming mail server protocol type:" with "POP3" selected. At the bottom are three buttons: "< Back", "Next >", and "Cancel".

5. Enter your account name and password to access your Internet mail server, then click **Next**. Your Internet service provider will be able to provide you with this information.

The screenshot shows a window titled "SmarThru" with a header "New Mail Account Wizard". The main heading is "Incoming mail server". Below it, a message reads: "Please type your POP3 or IMAP4 account user name and password to access your Internet mail server. Your Internet service provider must give you this information." There are two input fields: "Account user name:" containing "L110" and "Password:" containing "xxxxxx". A note below the password field states: "(Your password will appear in asterisks to prevent others from reading it.)". At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

6. Enter the account record name, then click **Next**.

The screenshot shows a window titled "SmarThru" with a header "New Mail Account Wizard". The main heading is "Account record name". Below it, a message reads: "Please type account record name. This name will be used to refer it in Internet Gate Configuration and any incoming mail information notifications." There is one input field labeled "Account name:" containing the text "muratec". At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

7. Click **Finish** to quit the wizard and enable Internet e-mail service.



**Note:** If you wish, you can reconfigure the Internet gate later by using SmarThru Configuration. For details, refer to the SmarThru Help.

---


## Uninstalling Software

Uninstall is required if you are upgrading the software or if your installation fails. You can uninstall all software including SmarThru and MFP drivers using the SmarThru CD or selectively uninstall the desired item using the Windows unInstallShield.

**Note:** Before beginning un-installation, ensure all applications are closed on your PC. A system reboot is required after the software is uninstalled.

### Uninstalling the MFP Driver

1. From the **Start** menu, select **Programs**, then select **Muratec F-110**.

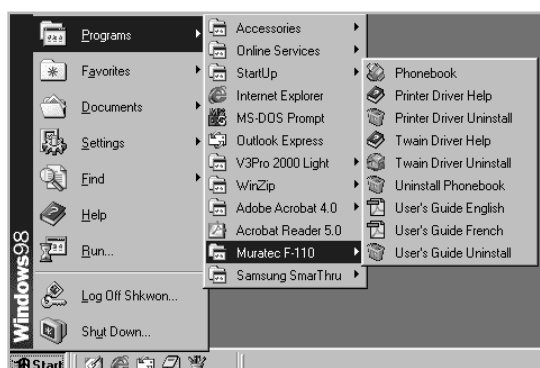

2. You can select the component in the MFP driver to uninstall individually.

If you want to uninstall the printer driver, select **Print Driver Uninstall**.

If you want to uninstall the scan driver, select **TWAIN Driver Uninstall**.

If you want to uninstall the Phonebook, select **Uninstall Phonebook**.

If you want to uninstall the User's Guide, select **User's Guide Uninstall**.

3. When your computer confirms your selection, click **Yes**. The selected printer driver and all its components are removed from your computer.




4. When the uninstallation is done, click **OK**.
5. The message box recommends you restart your computer. Click **OK**, then restart Windows.


**Note:** If you want to install the printer driver or the scan driver using the SmarThru CD-ROM, make sure that you select the Setup Type to **Compact**. Or select **Custom** then select **MFP Driver**. For details, see [page 2.4](#).

## Uninstalling SmarThru

1. From the **Start** menu, select **Programs**.
2. Select **Samsung SmarThru**, then select **SmarThru 3 Uninstall**.

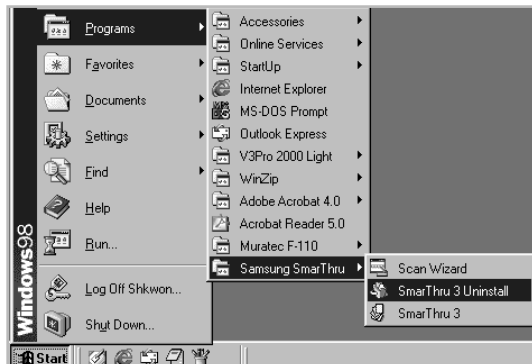

3. When your computer asks you to confirm your selection, click **Yes**. The Uninstall Options dialogue box appears.

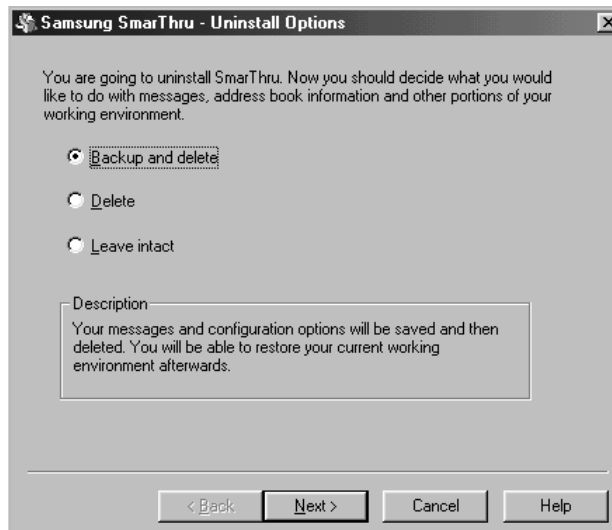

Uninstall options are:

- **Backup and delete:** Backs up all your data and options to a safe place. Then removes SmarThru system including the data.
- **Delete:** Deletes all the SmarThru data and options. No backup or copying takes place. Be careful while using this option as you can easily lose your data.
- **Leave intact:** Uninstalls SmarThru software leaving data and option intact. This can be useful, if, for example, you decide to install Stand Alone configuration over SmarThru Networking. In this case, uninstall Samsung SmarThru having Leave intact option set and install SmarThru Stand Alone configuration.

4. After selecting the uninstall option, click **Next**.
5. Follow the on-screen instructions to complete the un-installation. The SmarThru software and all components will be removed.



6. When uninstalling is done, click **OK**. The message box recommends restarting your computer.
7. Click **OK**.

Shut down and restart your computer to complete the un-installation process and save your changes.


## Using the SmarThru CD-ROM

You can un-install both the MFP driver and the SmarThru software with the CD-ROM you have used to install the software.

1. Insert the SmarThru CD-ROM into your CD-ROM drive.

The SmarThru CD-ROM should automatically run and the opening window appears. (If the opening window does not appear, select **Run** from the **Start** menu, then type **X:Autoren.exe**, replacing "**X**" with the letter of your drive and click **OK**.

2. Click **Uninstall the Muratec software on your PC**.

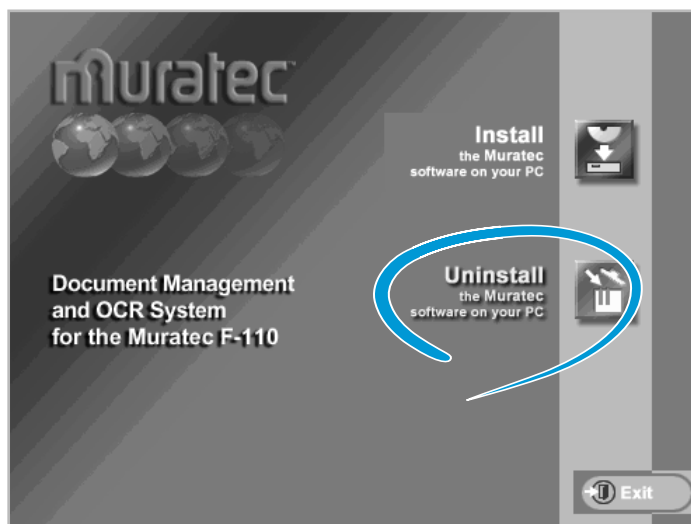

3. Follow the on-screen instructions to complete un-installation.

You must shut down and restart your computer before any changes you have made will take affect.

Chapter

# 3

## ***Stand-alone Fax***

This chapter explains how to send and receive faxes from the front panel of the F-110. This chapter also demonstrates how to use advanced fax features and change the settings on the fax system.

This chapter provides information on the following topics:

- ◆ Setting Up Stand-alone Fax System
- ◆ Sending a Fax
- ◆ Receiving a Fax
- ◆ Making a Copy
- ◆ Automatic Dialling
- ◆ Advanced Fax
- ◆ Additional Functions

# Setting up Stand-alone Fax System

---

## Setting Volume

### Ringer Volume

You can adjust the volume of the ringer to your desired volume.

1. Press ◀ or ▶ in Standby mode.  
The display shows the current ringer volume setting.



RINGER VOL.[2]


2. Press ◀ or ▶ until you find your desired loudness. Four levels are available; 0~3.

You will hear the selected volume and the display will show the level. Setting '0' turns the ringer off. The machine will work normally even if the ringer is set to off.

3. Press **START/ENTER** to save the setting.

### Speaker Volume

1. Press **OH HOOK DIAL/VOICE REQUEST** to adjust the speaker volume. If you cannot hear a dial tone, check the phone line connection.
2. Press ◀ or ▶ repeatedly until you find the desired loudness.  
The display will show the current volume level.

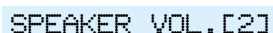

SPEAKER VOL.[2]

3. After choosing the desired volume level, press **OH HOOK DIAL/VOICE REQUEST**.

---

## Setting Alert Tones

You can choose an alarm tone to sound when an error occurs (ALARM VOLUME) or when any key is pressed (KEY VOLUME).

1. Press **SET UP** on the front panel. The display will show the first setup menu; FAX NUMBER/NAME.
2. Press ◀ or ▶ until 'VOLUME SETUP' appears, then press **START/ENTER**. The display shows 'ALARM VOLUME'.
3. Press **START/ENTER** to access the Alarm Volume menu. To access the Key Volume menu, press ◀ or ▶ until 'KEY VOLUME' appears, then press **START/ENTER**.
4. Press ◀ or ▶ to turn the sound ON or OFF, then press **START/ENTER** to save the setting.
5. To return to Standby mode, press **STOP**.

---

## Setting User-Selectable System Options

Your machine has various user-selectable system options. These options are preset at the factory but you may need to change them. To find out how the options are currently set, print the System Data list. For more information on printing the list, see above.

### Setting an Option

1. Press **SET UP** on the front panel. The display shows the first menu; FAX NUMBER/NAME.
2. Press ◀ or ▶ until 'SYSTEM SETUP' appears, then press **START/ENTER**. The display shows the first option menu; LANGUAGE.
3. Scroll through the options by pressing ◀ or ▶ repeatedly.
4. When the option you want appears on the display, press **START/ENTER**.
5. Choose the desired status by pressing ◀ or ▶ repeatedly, or enter the desired value using the number keypad.

6. When setting is done, press **START/ENTER** to save the setting.

You can exit from setup mode at any time by pressing **STOP**. The machine returns to Standby mode without saving the setting you have already changed.

## Selectable Options

These instructions assume you have followed the steps on [page 3.2](#) under 'Setting an Option' and the machine is prompting you to change one of the options listed here.

- **LANGUAGE** — You can select the display language. The available languages are **ENGLISH**, **GERMAN**, **FRENCH**, **ITALIAN**, **SPANISH**, **PORTUGUESE** and **DUTCH**.

- **SEND FROM MEMORY**—Enables all transmission documents to be automatically scanned into the memory before transmission.

Select **ON** to enable.

Select **OFF** to disable.

- **SENDING CONFIRM** — A confirmation report shows whether the last transmission was successful or not, how many pages were sent, etc.

Select **ERROR** to print only when an error occurs and the transmission was not successful.

Select **ON** to print a confirmation report automatically each time you send a fax.

Select **OFF** to turn off.

- **FAX PAPER SIZE** — Select the paper size you will use for recording. **LETTER**, **A4** and **LEGAL** sizes are available.

**Note:** If you set the Auto Reduction menu option, your machine will determine the reduction rate according to this setting.

- **TONER SAVER MODE** — You can preserve the toner supply with this mode.

Select **ON** to turn this feature on. The machine prints documents using less toner. The print quality may be reduced.


Select **OFF** to turn this feature off.

- **POWER SAVE MODE** — The power saving menu item lets you reduce power usage when the printer is idle.

Select the desired time to turn this feature on. The time you choose determines the length of time the printer waits after a job is printed before it switches to a reduced power state. The available time are **5MIN, 10MIN** and **15MIN**.

Select **OFF** to turn this feature off. It keeps the printer ready to print with minimum warm-up time.

- **AUTO REDUCTION** — When receiving a document as long or longer than the paper loaded in your machine, the machine can reduce the data in the document to fit into your recording paper size.

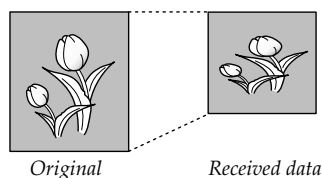

Turn this feature on to reduce an incoming page that may need to be divided into two pages with only a few lines on the second page. If the fax machine cannot reduce the data to fit onto one page with this feature enabled, the data will be divided and printed in actual size on two or more sheets if necessary.

Select **ON** to enable. Note that this feature does not apply to the copy mode.

Select **OFF** to turn this feature off. The overflow data will be printed out on a second page.

- **DISCARD SIZE** — When receiving or copying a document as long as or longer than the paper installed in your machine, you can set the machine to discard any excess image at the bottom of the page to fit onto the recording paper size.

Enter the desired discard size from 0 through 30 mm using the number keypad.

If the received page is outside the margin set, it will be printed on two sheets of paper at the actual size.

If the data is within the margin, and the Auto Reduction feature is on, it will be reduced to fit onto the appropriate size paper (Discard does not take place). If the Auto Reduction feature is turned OFF or fails, the data within the margin will be discarded.

- **RINGS TO ANSWER** —You can select the number of times your machine rings before answering an incoming call. If you are using your machine as both a telephone and a fax machine, we suggest you set the ring count to at least 4 to give you time to answer.

- **STAMP RCV. NAME**—Allows the machine to automatically print the page number, and the date and time of the reception at the bottom of each page of a received document.

Select **ON** to enable.

Select **OFF** to disable.

- **RCV. START CODE** — The remote receive start code allows you to initiate fax reception from an extension phone plugged into the EXT. jack on the back of your machine. If you pick up the extension phone and hear fax tones, enter the remote code and the machine will start receiving. The password is preset to `\* 9\*` at the factory.

Enter the desired code 0 to 9 on the number keypad.

- **ECM MODE** (Error Correction Mode) — This mode compensates for poor line quality and ensures accurate, error-free transmission with another ECM-equipped facsimile machine. If the line quality is poor, transmission time may be increased when the ECM is enabled.

Select **ON** to enable.

Select **OFF** to disable.

- **CALLER ID** — When you receive a call, you can see the number of the person calling you if it is available from the network on which the call was made. (This option may not work when connected to a PABX.)

Select **ON** to turn on caller ID display.

Select **OFF** to disable.

- **JUNK FAX BARRIER** — With this feature set to ON, the system will only accept a fax sent from the remote station of which the fax number is stored in memory as a one-touch or two-digit speed dial number. This feature is useful for blocking any unwanted fax.

Select **ON** to turn this feature on. You can receive only from the registered stations.

Select **OFF** to turn this feature off. Anybody can send you a fax.

**Note:** This feature needs the number reported by the remote fax to be an exact match to a one-touch or speed dial number in the F-110. If you have a problem receiving faxes, turn this feature off.

- **DRPD MODE** — "Distinctive Ring" is a telephone company service which enables a user to use a single telephone line to answer several different telephone numbers. The particular number someone uses to call you on is identified by different ringing patterns, which consist of various combinations of long and short ringing sounds. This feature is often used by answering services who answer telephones for many different clients and need to know which number someone is calling in on to properly answer the phone.

Using the Distinctive Ring Pattern Detection feature, your fax machine can "learn" the ring pattern you designate to be answered by the FAX machine. Unless you change it, this ringing pattern will continue to be recognised and answered as a FAX call, and all other ringing patterns will be forwarded to the extension telephone or answering machine plugged into the EXT. jack.

You can easily suspend or change Distinctive Ring Pattern Detection at any time.

Before using the Distinctive Ring Pattern Detection option, Distinctive Ring service must be installed on your telephone line by the telephone company. To setup Distinctive Ring Pattern Detection, you will need another telephone line at your location, or someone available to dial your FAX number from outside.

Select **ON** to turn this feature on.

Select **OFF** to turn this feature off.

Select **SET** to setup or change the Distinctive Ring Pattern Detection. The LCD displays 'WAITING RING'. Call your fax number from another telephone. It is not necessary to place the call from a fax machine. When your machine begins to ring, do not answer the call. The machine requires several rings to learn the pattern.

When the machine completes learning, the LCD displays 'END DRPD SETUP'.

With the DRPD feature active, 'DRPD' appears in the display and the previously set reception mode is ignored. If you turn off DRPD, the machine returns to any previously set reception mode.

**Notes:**

- DRPD must be set up again if you re-assign your fax number, or connect the machine to another telephone line.
- After DRPD has been set up, call your fax number again to verify that the machine answers with a fax tone. Then have a call placed to a different number assigned to that same line to be sure the call is forwarded to the extension telephone or answering machine plugged into the EXT. jack.

# ***Sending a Fax***

---

## **Preparing Documents for Faxing or Copying**

To fax or copy documents that are printed on standard letter or A4 size paper, follow these guidelines.

- Do not attempt to feed the following types of documents into the machine:
  - wrinkled, curled, or folded paper
  - chemically processed paper (pressure-sensitive paper, carbon-coated paper, etc.)
  - coated paper (glossy, etc.)
  - thin paper (onion skin, airmail paper, etc.)
  - thick paper
  - small or short paper (such as a label, voucher, etc.)
  - paper made of cloth or metal

To feed any of these documents, make copies using a standard copy machine and insert the copies into the document tray.

- Remove all staples and paper clips before feeding the document.
- Ensure any glue, ink, or correction fluid on the paper is completely dry before feeding the document.
- Do not feed documents with pages that are different sizes or different thicknesses.

### **ACCEPTABLE DOCUMENTS (for ADF<sup>1</sup>)**

		<b>Single Sheet</b>	<b>2 or More Sheets</b>
Document Size	Max.	8.5 in. (W) x 39.3 in. (L) (216 mm x 1000 mm)	8.5 in. (W) x 14 in. (L) (216 mm x 356 mm)
	Min.	5.8 in. (W) x 5.0 in. (L) (148 mm x 128 mm)	
Effective Scanning Width		8.2 in. (208 mm)	
Number of sheets which can be loaded at a time			Up to 20
Thickness of document		0.05 mm ~ 0.07 mm 0.15 mm ~ 0.2 mm	0.075 mm ~ 0.12 mm
Print Quality		Uncoated on both sides	

<sup>1</sup> ADF stands for Automatic Document Feeder. It allows you to stack original documents, which will be faxed or copied one by one.

---

## Setting Document Resolution and Contrast

We recommend sending documents printed using a typewriter, felt tip pen, black ink or laserwriter. The paper should be white or very light, and of normal weight – not cardboard. Blue lines on a ruled pad do not fax well.

To send normal documents, there is no need to adjust the resolution and the contrast.

To send documents with unusual contrast characteristics, including photographs, adjust the resolution and contrast.

### Resolution

To increase sharpness and clarity, press the **RESOLUTION** button repeatedly after loading a document until you find the desired mode. You can choose between STANDARD, FINE, or SUPER FINE mode.

**STANDARD** (203X 98 dpi) works well for documents with normal sized characters.

**FINE** (203 X 196 dpi) is good for documents containing small characters, thin lines, or print from a dot-matrix printer.

**SUPER FINE** (300 X 300 dpi) works well for documents containing extremely fine details. SUPER FINE works only if the remote machine also has the SUPER FINE features.

### Contrast

To compensate for the brightness or darkness of your document, press the **RECEIVE MODE/CONTRAST** button repeatedly after loading a document until you find the desired mode. You can choose between NORMAL, DARKEN, LIGHTEN, or PHOTO.

**NORMAL** works well for normal documents.

**DARKEN** works well for light print or faint pencil markings. The light image and text on the document will be darker on the printed page.


**LIGHTEN** works well for dark print. The dark image and text on the document will be lighter on the printed page.

**PHOTO** is used when faxing photographs or other documents containing color or shades of gray. When you choose this mode, you should set the resolution to **FINE**.

---

## Loading Documents

1. Load your document **face down** with the top edge first going into the document feeder.
2. Adjust the document guides for the width of the document.
3. Slide the sheet down into the document feeder until it is in the feed area.

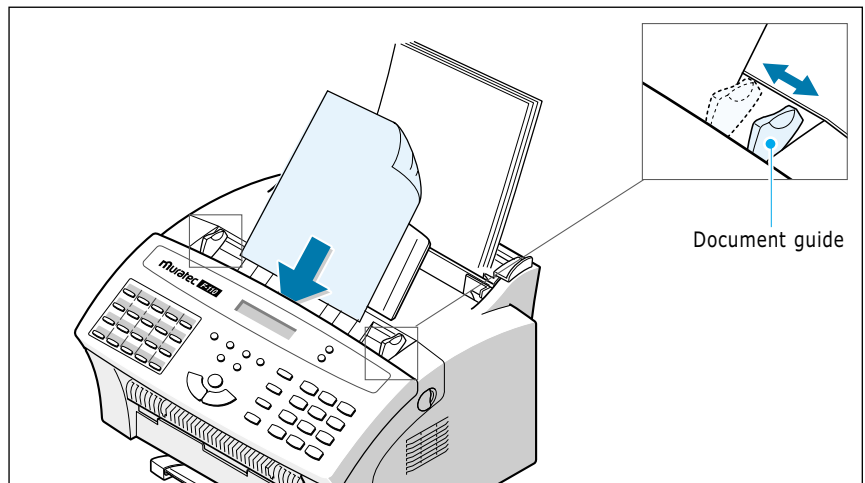

You can insert up to **20 sheets at a time**. If you insert more than one sheet, ensure the bottom sheet enters first. Stagger the leading edge of the document slightly, and insert the document with a slight push to ensure they feed smoothly.

To add pages while the fax is being sent, place them on top of the already loaded sheets.

4. If necessary, use the **RESOLUTION** and **RECEIVE MODE/CONTRAST** buttons to change the resolution and the contrast (see [page 3.9](#)).

---

## Sending a Fax Automatically

1. After loading a document, enter the number of the remote fax using the keypad.

One-touch or speed dialling is also available if you have already stored the number into a one-touch or speed dial number. For information on storing and using numbers in the memory, see [page 3.20](#).

If you make a mistake while entering a number, press **SEARCH/DELETE** to delete the number.

2. Press **START/ENTER** when the number appears correctly on the display. The machine dials the number and begins to transmit.

### Cancelling a Transmission

Press **STOP** any time during transmission. The machine continues to send the fax and the display shows a message warning that the machine is in use. Press **STOP** again.

### Confirming a Transmission

When the last document has been sent successfully, the machine beeps and returns to the Standby mode.

If something went wrong during your fax transmission, an error message appears on the display. For a listing of error messages and their meanings, see [page 6.5](#). When you receive an error message, press **STOP** to clear the message and resend the document.

You can print out a confirmation report automatically each time sending is completed. For more information, see 'Setting User-Selectable System Options' on [page 3.2](#).

### Automatic Redialling

If the number you have dialled is busy or there is no answer, the machine will automatically redial the number every three minutes up to a maximum of two times.

The display shows 'RETRY REDIAL?.' To redial the number without waiting, press **START/ENTER**. To cancel the automatic redialling, press **STOP**.

## Last Number Redialling

Press **REDIAL/PAUSE** with a document loaded in the feeder, the machine begins to send.

The redial memory in your machine retains the last 10 numbers called. To search through the redial memory, do as follows:

1. Press and hold **REDIAL/PAUSE** for about 2 seconds.
2. Press ◀ or ▶ to search through the memory until you find the desired number.
3. When the desired number appears on the display, press **START/ENTER** to dial.

---

## Sending a Fax After Talking

You can send a fax after talking with the remote location.

1. After loading a document, pick up the handset and call the remote machine.

You can also use the extension phone to call the remote machine.

2. If the remote party answers, talk with her/him.
3. Press **START/ENTER** after you finish talking. The machine begins to transmit.
4. Replace the handset.

---

## Voice Request

If you are sending or receiving a document and need to speak to the other person during the same phone call, use Voice Request to alert the person at the remote site. You can also respond to a Voice Request made by the person at the remote end.

### Sending a Voice Request

1. Press **ON HOOK DIAL/VOICE REQUEST** while a document is being sent or received. Voice Request signal is stored and then sent to the remote fax machine after the document has been sent or received.
2. When the phone rings, pick up the handset and answer it.

You can cancel a Voice Request by pressing **ON HOOK DIAL/VOICE REQUEST** again while you are sending or receiving a document.

### Answering a Voice Request

When the phone rings after sending or receiving a fax, pick up the handset and answer it.

If you do not answer the Voice Request, the machine prints out the number that made the Voice Request, as well as the time and date that the request was made.


# Receiving a Fax

---

## About Reception Modes

Your machine has four reception modes:

- In **FAX** mode, the machine answers an incoming call and immediately goes into receive mode.
- In **AUTO** mode, the machine answers an incoming call expecting to receive a fax. If the machine does not sense a fax signal, it will continue to sound the ringing tone to tell you it is a phone call. If you do not lift the handset during the ringing, the machine will switch to automatic fax reception mode.
- In **ANS/FAX** mode, the answering machine answers an incoming call, and the caller can leave a message on the answering machine. If the fax machine senses a fax tone on the line, the call automatically switches to the fax machine.

 **Note:** To use the ANS/FAX mode, attach an answering machine to the EXT. jack on the back of your machine (see [page A.1](#)).

- In **TEL** mode, the automatic fax reception is turned off. You can receive a fax by picking up the handset or pressing the ON HOOK DIAL, and then pressing **START/ENTER** on the front panel of your F-110 product.
- In **DRPD** mode, you can receive a call using the Distinctive Ring Pattern Detection (DRPD) feature. "Distinctive Ring" is a telephone company service which enables a user to use a single telephone line to answer several different telephone numbers. This mode is displayed when you have set up the distinctive ring pattern. For details on this feature, see [page 3.6](#).

The current reception mode is displayed when the machine is in Standby mode.



If you seldom use the fax line for voice conversations, set your machine to receive a fax automatically by selecting FAX mode.

---

## Loading Paper for Receiving Faxes

The instructions for loading paper in the paper input tray are the same whether you are printing, faxing, or copying, except that faxes can only be printed on letter-, A4-, or legal-sized paper. See "Loading Paper" on [page 1.15](#) for instructions.

After loading paper for receiving faxes, set the paper size to the size of paper you normally load in the paper input tray. The F-110 uses this setting when printing reports and determining autoreduction for incoming faxes. See [page 3.3](#) to set the paper size.

---

## Receiving Automatically in FAX Mode

The F-110 is preset to the FAX mode at the factory. If you have changed the fax mode, take the following steps to receive faxes automatically:

1. Press and hold down **RECEIVE MODE/CONTRAST** on the front panel repeatedly until the display shows 'FAX MODE'.
2. When you receive a call, the machine answers the call on a specified number of rings and receives a fax automatically. To change the number of rings. See 'Setting User-Selectable System Options' on [page 3.2](#).

To adjust the ringer volume, see 'Setting Volume' on [page 3.1](#).

---

## Receiving in AUTO Mode

1. Press and hold down **RECEIVE MODE/CONTRAST** on the front panel repeatedly until the display shows 'AUTO MODE'.
2. When you get a call, the machine answers it.

If a fax is being sent, the machine goes into reception mode.

If the machine does not detect a fax signal, it will continue ringing to tell you it is a phone call. You should pick up the handset to answer the call, or it will switch to automatic reception mode.

---

## Receiving Automatically in ANS/FAX Mode

For this mode, you **MUST** attach an answering machine to the **EXT.** jack on the back of your machine (see [page A.1](#)).

1. Press and hold down **RECEIVE MODE/CONTRAST** on the front panel repeatedly until the display shows 'ANS/FAX MODE'.
2. When you receive a call, the answering machine will answer.

If the caller leaves a message, the answering machine stores the message as it would normally. If your machine hears a fax tone on the line, it automatically starts to receive fax.

### Notes:

- If you have set your machine to ANS/FAX mode and your answering machine is switched off, or no answering machine is connected to your machine, your machine will automatically go into FAX mode after 6 rings.
- If your answering machine has a 'user-selectable ring counter', set the machine to answer incoming calls within 1 ring.
- If you are in TEL mode (manual reception) when the answering machine is connected to your machine, you must switch off the answering machine, or the outgoing message from the answering machine will interrupt your phone conversation.

---

## Receiving Manually in TEL Mode

You can answer calls using the handset, and start the machine to receive a fax.

1. Press and hold down **RECEIVE MODE/CONTRAST** repeatedly until the display shows 'TEL MODE'.
2. When the telephone rings, pick up the handset and answer it.
3. If you hear a fax tone, or if the person on the other end asks you to receive a document, press **START/ENTER**.
4. Replace the handset. The machine begins receiving and returns to Standby mode when the reception is complete.

---

## Receiving Manually Using an Extension Telephone

This feature works best when you are using an extension telephone connected to the **EXT.** jack on back of your machine (see [page A.1](#)). You can receive a fax from someone you are talking to on the extension telephone without having to go to the fax machine.

1. When you receive a call on the extension phone and hear fax tones, press the keys "**\* 9 \***" (star nine star) on the extension telephone.

The machine receives the document.

Press the buttons slowly in sequence. If you still hear the fax tone from the remote machine, try pressing "**\* 9 \***" once again.

"**\* 9 \***" is the remote receive start code preset at the factory. The first and the last asterisks are fixed, but you can change the middle number to whatever you choose. For more information, see [page 3.5](#).

2. When you have finished speaking and receiving documents, replace the handset of the extension telephone.

# Making a Copy

---

## Copying Overview

The resolution is automatically set to SUPER FINE while the copy feature is in use. However, the contrast can be changed to produce optimal copy quality for a particular document containing faint markings, dark image, photographs, or other halftone images.

- **Copy quantity** : 1 to 99 copies of the document can be made.
- **Custom sizing**: You can reduce or expand the image size by 1% increments from 50% to 200%.
- **Print order and sorting** : When the COLLATE COPY menu is set to YES, the machine sorts the print jobs. All pages of the document are printed in reverse order before the next copy is printed. For example, if you copy a three-page job to print 2 copies, the machine prints page 3, page 2, page 1, page 3, page 2, page 1.

---

## Making a Single Copy

To make a single copy without setting options, take the following steps:


1. Load a document with the print side facing down.
2. Press **COPY** twice. Your machine starts copying.

## Using Advanced Copy Features

You can adjust the quantity, size, and print order for copying. Take the following steps:

1. Load your document **face down** with the top edge first going into the document feeder. If necessary, press **RECEIVE MODE/CONTRAST** to change the contrast. For details on the Contrast, see [page 3.9](#).
2. Press **COPY**. The display asks you to enter the copy quantity (1 to 99).
3. If you need two or more copies, enter the desired number and press **START/ENTER**.
4. If you want to reduce or expand the image size, enter the number of the desired zoom rate, then press **START/ENTER**.
5. The display asks you to set the COLLATE COPY menu. Press ◀ or ▶ to choose YES or NO. Setting YES will reverse the print order and sort the print job.

**Example:** 2 copies of a 3-page document

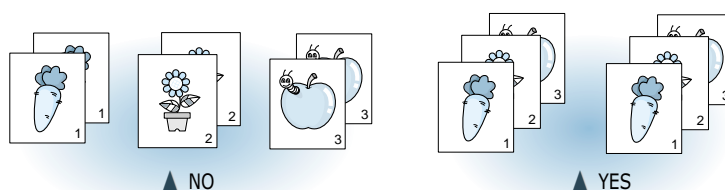

6. When the desired setting is selected, press **START/ENTER** or **COPY** to begin the copying.

**Note:** Pressing **COPY** at any time begins the copy operation immediately without displaying the remaining options.


# Automatic Dialling

---

## How To Enter a Name Using the Number Keys

As you perform various tasks, you will need to enter names and numbers. For example, when you set up your machine, you have to enter your name (or your company's name) and telephone number. When you store a one-touch dial or speed dial, you also enter the telephone numbers and names.

When the display asks you to enter a name, the LCD display reads:




NAME: \_

Use the procedures described below to enter alphanumeric characters, special symbols, or spaces.

### Entering Alphanumeric Characters

You can also include special symbols in the name by using the **0** key. See 'Keypad Character Assignments' on the [next page](#).

1. Locate the button labelled with the letter you want – then press the button repeatedly until the correct letter appears in the display.

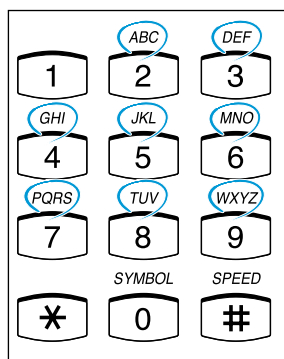

For example, to enter an 'R', press **7** (labelled PRQS). Each time you press **7**, the display shows a different letter—first 'P', then 'Q', 'R', 'S', and finally '7.'

The letter appears on the display as shown below.

NAME:R

2. When the letter you want appears on the display, press another number key labelled with the next letter you want.

If the next letter is printed on the same number button, move the cursor right by pressing ►, then press the button.

The blinking cursor moves right and the next letter appears on the display.

NAME:RP

3. Select additional letters in the same way. When you have finished entering the letters, press **START/ENTER**.

#### KEYPAD CHARACTER ASSIGNMENTS

Key	Assigned numbers, letters, or characters
1	Space → 1
2	A → B → C → 2
3	D → E → F → 3
4	G → H → I → 4
5	J → K → L → 5
6	M → N → O → 6
7	P → Q → R → S → 7
8	T → U → V → 8
9	W → X → Y → Z → 9
0	+ → - → , → . → ' → / → * → # → & → 0

## Editing Name

If you make a mistake while entering a number or name, move the cursor under the incorrect digit by ◀ or ▶. Then, press the correct number to change, or press **SEARCH/DELETE** to delete the number.

## Inserting a Pause While Entering a Number

Some telephone systems require an access code (9, for example) and listen for a second dial tone before dialling an outside number. In such cases, you must insert a pause in the number when setting up a one-touch or a speed dial number.

To insert a pause, press **REDIAL/PAUSE** while entering the number.

When you dial a number, the dialling process pauses for a specified time at the point where you pressed **REDIAL/PAUSE**.

For a longer pause, press **REDIAL/PAUSE** twice.

---

## One-Touch Dialling

One-Touch dialling lets you use any of the 20 one-touch buttons to automatically dial a number.

### Storing a Number for One-Touch Dialling

1. Press and hold one of ten one-touch buttons for about 2 seconds. The display shows 'Txx:', where 'xx' represents the selected one-touch button number.



Txx: \_

If a number has already been stored in the location you chose, the display shows the number. To edit the number, see the [next page](#).

If you press and hold the button used for group dial number, the display shows 'GROUP ASSIGNED', then asks you to press another one-touch button.

2. Enter the number you want to store by using the number keypad, then press **START/ENTER**.

To insert a pause between numbers, press **REDIAL/PAUSE**; a 'P' appears on the display.

If you make a mistake while entering a number, press **SEARCH/DELETE** and re-enter the correct number.

3. The display asks you to enter a name. For information on how to enter names, see [page 3.20](#).


Or, if you do not want to assign a name, skip this step.

4. Press **START/ENTER** when the name appears correctly or without entering a name. The display asks you to press another one-touch number.
5. To set another one-touch number, press the desired one-touch button and repeat steps 2 through 4.

Or, to return to Standby mode, press **STOP**.

### Editing a Number for One-Touch Dialling

1. Press and hold the one-touch button where the phone number has been stored.

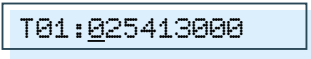

T01:025413000

2. Press ◀ or ▶ to move the cursor to the desired number and edit the number.

**Note:** When you press the One-Touch dial number stored for group dial, the display briefly shows 'G - REGISTERED' to indicate that the number is used for group dial, then you can edit the number.

3. When you have finished editing, press **START/ENTER**.


### Sending a Fax Using a One-Touch Number

1. Load the document **face down** with the top edge first going into the document feeder.
2. Press the one-touch button where you stored a number. The number will be automatically dialled and the document transmitted when the remote fax machine answers.

## Using Address Label


A One-touch label sheet is included with your machine. As you store numbers in one-touch dial buttons, make a note of the numbers on the label to remind you which number is stored in each position.

1. Remove the clear cover and label.

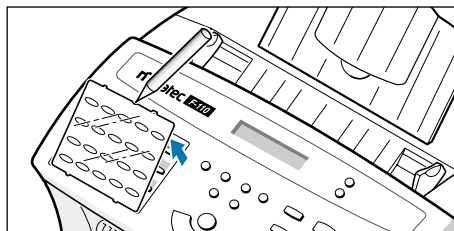

2. Write information on the label and replace the label and cover.

You may want to use pencil in case you wish to change these numbers later.

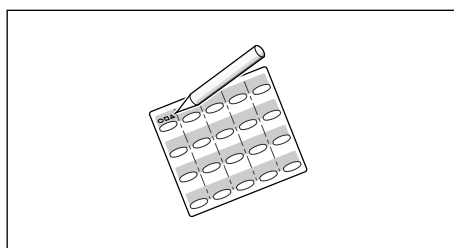

---

## Speed Dialling

You can store up to 80 numbers in 2-digit Speed Dial locations (01-80).

### Storing a Number for Speed Dialling

1. Press and hold **SPEED(#)** for about 2 seconds.

LOC. [01-80] ►##

2. Enter a 2-digit location number (01 through 80) where you want to store a number, then press **START/ENTER**.

If a number has already been stored in a location, the display shows the number. To edit the number, see the [next page](#).

3. Enter the number you want to store, then press **START/ENTER**.

Sxx:05512637522\_

where xx represents the speed location you have selected at step 2.

4. To assign a name to the number, enter the desired name. For information on how to enter names, see [page 3.20](#).

If you do not want to assign a name, skip this step.


5. Press **START/ENTER** when the name appears correctly or without entering a name. The display asks you to select another location.
6. To store more speed dial numbers, repeat steps 2 through 5.

Or,

To return to Standby mode, press **STOP**.

### Editing a Number for Speed Dialling

1. Press and hold **SPEED(#)** for 2 seconds.
2. Enter the 2-digit location number where the phone number you want to edit has been stored, then press **START/ENTER**. The display shows the number.

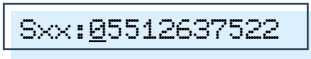

Sxx:05512637522

3. Press ◀ or ▶ to move the cursor to the desired number and edit the number.

**Note:** When you press the speed dial number stored for group dial, the display briefly shows 'G - REGISTERED' to indicate that the number is used for group dial, you can then edit the number.

4. When you have finished editing, press **START/ENTER**.

### Sending a Fax Using a Speed Number


1. Load the document **face down** with the top edge first going into the document feeder.
2. Press **SPEED(#)**, then enter a 2-digit speed dial location number.
3. Press **START/ENTER** to dial the number. The number will dial automatically and transmit when the remote fax machine answers.

## Using the Phonebook on Your Computer


When you install the printer's software on your computer, the Phonebook feature is automatically installed. With the Phonebook feature, you can set up one-touch dial or 2-digit speed dial numbers in your computer and download the information to your F-110 machine.

Before using the Phonebook feature, you must install SmarThru programme in your computer. Refer to the [chapter 2](#), "Installing Muratec Software."

1. Start Windows.
2. Click the **Start** menu, and select **Programs**.
3. Select **Muratec F-110** on the Programs menu, and select **Phonebook**.
4. The Phonebook dialogue box appears.

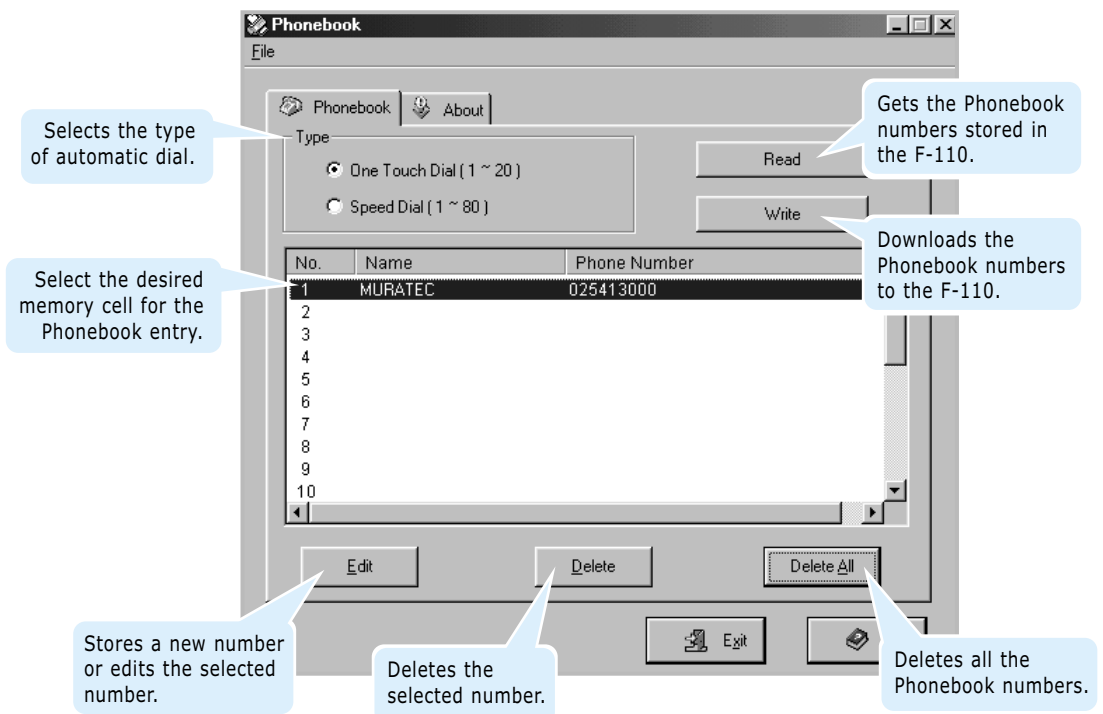

5. If necessary, press **Read** to get the numbers currently stored in your F-110 machine. The one-touch or speed dial numbers will be uploaded and displayed in the Phonebook dialogue box.
6. Select the desired Phonebook number in the Phonebook list and click **Edit**. The Edit dialogue box will appear.

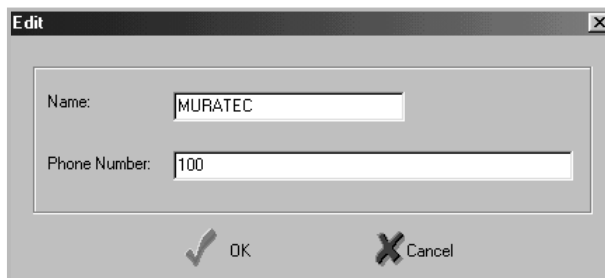

The image shows a screenshot of a software dialog box titled "Edit". Inside the dialog box, there are two text input fields. The first field is labeled "Name:" and contains the text "MURATEC". The second field is labeled "Phone Number:" and contains the text "100". At the bottom of the dialog box, there are two buttons: "OK" with a checkmark icon and "Cancel" with an "X" icon.

7. Enter any name and number, and click **OK** to save the information you just entered.
8. Repeat steps 6 and 7 to store more numbers.
9. When you have finished, you must click **Write** to download the numbers to your F-110 machine.
10. Click **Exit**.

---

## Searching for a Number in the Memory

There are two ways to search for a number in memory. You can either scan from **A** to **Z** sequentially, or you can search using the first letter of the name associated with the number.

### Searching Sequentially through Memory

1. Press **SEARCH/DELETE** on the front panel.



PRESS ◀ ▶ A-Z

2. Press ◀ or ▶ to scroll through the memory until you find the name and number you want.

Pressing ◀ or ▶ allows you to search downward through the entire memory in alphabetical order (from **A** to **Z**).

While searching through the machine's memory, you will see that each entry is preceded by one of three letters: '**T**' for one-touch dial, '**S**' for speed, or '**G**' for group dial number. These letters tell you how the number is stored.

3. When the name and number you want appears on the display, press **START/ENTER** to dial.

If a document is loaded, the document begins to transmit when the remote fax machine answers.

### Searching with a Particular First Letter

1. Press **SEARCH/DELETE**, then press the button labelled with the letter you want to search for. A name beginning with the letter will appear on the display.

For example, if you want to find the name 'MOBILE,' press the '**6**' button, which is labelled with 'MNO.'

2. Press ◀ or ▶ to display the next name in the list.
3. When the name and number you want appears, press **START/ENTER** to dial.

# Advanced Fax

---


## Broadcasting

This feature will allow documents to be sent to multiple locations. After sending, the documents are erased from memory.

1. Load your document **face down** with the top edge going into the document feeder first. Adjust the resolution and contrast, if necessary. For details, see [page 3.9](#).
2. Press **ADVANCED FAX** on the front panel. The display will show the first menu; BROADCASTING.
3. Press **START/ENTER** to access the Broadcasting menu.
4. Enter the number of the remote machine using the numeric keypad.

You can also press a one-touch button that includes group dial buttons. If not, press **SPEED(#)**, enter a 2-digit speed dial number, then press **START/ENTER**. The stored number will appear on the display.

5. Press **START/ENTER** to confirm the number. The display will ask you to enter another fax number.
6. If you want to send to more than one location, repeat steps 4 and 5.

 **Note:** You cannot use Group dial numbers for another fax number.

Or,

To send to one location or when you complete the last fax number setting, press **START/ENTER**.

7. The document will be scanned into memory. The display shows the memory capacity and the number of pages being stored. The machine begins sending the documents in order of the numbers you entered.

#### Notes:

- If 'MEMORY FULL' occurs while scanning into the memory, the display will show:

JOB ► CANCEL ► DONE

Press ◀ or ▶ to select the option you want. If you select **CANCEL**, broadcasting will be cancelled. If you select **DONE**, your machine will only broadcast previously scanned pages.

- If an error occurs while sending to a specific number, the machine transmits the document to all the other numbers, then retries the number that previously recorded an error. After completing transmission, your machine will print the multi-communication report.

---

## Delayed Fax

The F-110 can be set to send a fax at a future time.

1. Load your document **face down** with the top edge going into the document feeder first. Adjust the Resolution and Contrast, if necessary. For details, see [page 3.9](#).
2. Press **ADVANCED FAX** on the front panel. The display will show the first menu; BROADCASTING.
3. Press ◀ or ▶ until 'DELAYED FAX' appears, and press **START/ENTER** to access the Delayed FAX menu.
4. Enter the number of the remote machine using the ten number keypad.

You can also press a one-touch button that includes group dial buttons. If not, press **SPEED(#)**, enter a 2-digit speed dial number, then press **START/ENTER**. The stored number appears on the display.

5. Press **START/ENTER** to confirm the number. The display asks if you want to enter another fax number.

ENTER ANOTHER NO

6. If you want to send to more than one location, repeat steps 4 and 5.

**Note:** You cannot use Group dial numbers for another fax number.

Or,

To send to one location or when you complete the last fax number setting, press **START/ENTER**.

7. The display asks you to enter a name. If you want to assign a name to the transmission, enter the name. If not, skip this step.

For details on how to enter the name using the numeric keypad, see [page 3.20](#).

8. Press **START/ENTER**. The display will show the current time and asks you at what time is the fax to be sent.



The current time

9. Enter the time by using the numeric keypad, then press **START/ENTER**.

Enter the time in 24-hour format. For example, enter 2230 for 10:30 P.M. If you set a time earlier than the current time, the document will be sent at that time on the following day.

10. The document will be scanned into memory. The display shows the memory capacity and the number of pages being stored.

11. The machine returns to Standby mode and the display will alternate messages as a reminder that you are in Standby mode and that a Delayed Transmission is set.

**Note:** To cancel the operation reserved in memory, see 'Cancelling a Scheduled Operation' on [page 3.35](#).

---

## Priority Fax

When the priority fax is enabled, a high priority document can be transmitted ahead of reserved operations. The document is scanned into the memory, then transmitted when the current operation is concluded. In addition, a priority transmission will interrupt a broadcast operation between stations (i.e., when transmission to station A ends, before transmission to station B begins) or between redial attempts.

1. Load the document face down. If necessary, adjust Resolution, or Contrast. For details, see [page 3.9](#).
2. Press **ADVANCED FAX** on the front panel. The display shows the first menu; BROADCASTING.
3. Press ◀ or ▶ until 'PRIORITY FAX' appears, then press **START/ENTER** to access the Priority Fax menu.
4. Enter the number of the remote machine using the ten number keypad.

You can also press a one-touch button. If not, press **SPEED(#)**, enter a 2-digit speed dial number, then press **START/ENTER**. The stored number appears on the display.

5. Press **START/ENTER** to confirm the number. The display asks you to enter a name.
6. If you want to assign a name to the transmission, enter the name. If not, skip over this step.

For details on how to enter a name using the number keypad, see [page 3.20](#).

7. Press **START/ENTER**. The document will be scanned into memory. The display shows the memory capacity and the number of pages being stored.
8. The machine shows the number being dialled, then begins transmitting the document.

---

## Send Polling


### What is Polling?

Polling is used when one fax machine requests another to send a document. This is useful when the person with the original document is not in the office. The person to receive the document calls the machine holding the original and requests that the document be sent. In other words, it "polls" the machine holding the original.

### Polling Transmission

You can program the fax machine to send documents in your absence when polled by a remote fax machine. A polling code is used to prevent unauthorized polling of your machine. When you secure your machine in this manner, only those who know the poll code can poll your machine.

1. Load your document **face down** with the top edge going into the document feeder first, and adjust the resolution and contrast. For details, see [page 3.9](#).
2. Press **ADVANCED FAX** on the front panel. The display shows the first menu; BROADCASTING.
3. Press ◀ or ▶ until 'SEND POLLING' appears, and press **START/ENTER** to access the Send Polling menu.
4. The display asks you to enter a 4-digit poll code. The poll code is preset to 0000 at the factory which represents no poll code.

A rectangular LCD display showing the text "POLLCODE [0000]" in a monospaced font. The display is framed by a light blue border.

5. To use a poll code, enter the 4-digit code (except for 0000), then press **START/ENTER**. Or,

If you do not want to secure the transmission with a poll code, press **START/ENTER** when the display shows 0000 for the poll code, or press **0000**.

6. The display asks you to store the document in the machine's bulletin memory.

A rectangular LCD display showing the text "BULLETIN>YES>NO" in a monospaced font. The display is framed by a light blue border.

7. Press ◀ or ▶ to highlight **YES** or **NO**, then press **START/ENTER**.

If you want to store the document in bulletin board memory, select **YES**. More than one remote station can poll that document from your machine.

If not, the document will be automatically erased after being polled by a remote machine.

8. The machine will store the document in memory. The display counts the number of pages being stored in memory and the memory capacity remaining.

The machine returns to Standby mode and the display shows a reminder that a Polling Transmission is set. The machine automatically switches to FAX mode (automatic receiving) when set to be polled.

### Polling Reception

You can set your machine to automatically receive documents from one or more unattended remote fax machines. This feature permits unattended polling in the evening hours when telephone rates are lower.

**Note:** The remote machine must be ready for polling.

1. Press **ON HOOK DIAL/VOICE REQUEST** or pick up the handset and when you hear a dial tone, call the remote fax machine.
2. When you hear the fax tone, press **ADVANCED FAX**. Then, 'RECEIVE POLLING?' appears.
3. Press **START/ENTER**. The display asks you for a 4-digit code. Poll code '0000' represents no code.
4. If the remote machine is secured with a poll code, you must enter the correct code, and press **START/ENTER**. Or,

If the remote machine is not secured with a poll code, press **START/ENTER** to accept [0000] which represents no code.

5. The machine will begin to receive polling.

#### Notes:

- To cancel the operation, press **STOP** at any time.
- Not all fax machines have polling capability, and polling incompatibility can occur between different manufacturers.

---

## Adding Documents To a Scheduled Operation

You can add documents to the delayed transmission previously reserved in memory.

1. Load the document **face down**, and adjust Resolution, or Contrast, if necessary. For details, see [page 3.9](#).
2. Press **ADVANCED FAX** on the front panel. The display shows the first menu; BROADCASTING.
3. Press ◀ or ▶ until 'ADD SCHEDULE' appears, and press **START/ENTER**. The display shows the operation, time and name currently reserved in memory.
4. Press ◀ or ▶ repeatedly until you find the operation in which you want to add documents, then press **START/ENTER**.

The machine will automatically store the documents in memory, and the display shows the memory capacity and the number of pages.

5. After storing, the machine displays the total number of pages, then returns to Standby mode.

---

## Cancelling a Scheduled Operation

1. Press **ADVANCED FAX** on the front panel. The display shows the first menu; BROADCASTING.
2. Press ◀ or ▶ until 'CANCEL SCHEDULE' appears, and press **START/ENTER**. The display shows the operation, time and number currently reserved in the memory.
3. Press ◀ or ▶ repeatedly until you find the operation you want to cancel, then press **START/ENTER**. The display asks you to confirm your selection.
4. Press **START/ENTER** to cancel the selected operation. The operation is deleted from memory.

# *Additional Functions*

---

## **Sending a Flash**

Some special phone services require a switch-hook signal for proper operation. For example, if you have call-waiting, you can put a call on hold and take a second call on the same line by pressing **FLASH/STATUS**.

1. When you are on the telephone and hear the call waiting signal, press **FLASH/STATUS** once. The first caller is on hold and you are speaking to the second caller.
2. Press **FLASH/STATUS** again to talk to the first caller again.

 **Note:** If you do not have a special service that uses the switch-hook signal, do not press **FLASH/STATUS** during a call. If you do, you could disconnect the line.

---

## **Monitoring a Dual Job Status**

Your machine can perform more than one function at once. For example, you can;

- Receive a fax into the memory while making a copy.
- Store a fax document for later transmission while printing an incoming fax.

When the machine performs dual tasks, press **FLASH/STATUS** to see the current status on the display of the other operation. Each time you press **FLASH/STATUS**, the current status of the two operations displays alternatively.

---

## Forwarding Received Faxes

You can forward all faxes which you receive during the specified period to a specified remote station. This can be useful when you are out of your work station and want to receive your faxes through another station.

### Setting Time and Destination for Forwarding Faxes

To forward the received fax, you must define the remote fax machine where the fax is to be sent and the start time and end time of a period when the Fax Forward feature operates.

1. Press and hold down **FAX FORWARD** for about 2 seconds on front panel.
2. Enter the number of a designated fax machine to where the faxes are delivered using the ten number keypad.

You can also use one of one-touch dial button or a speed dial number.

**Note:** You cannot use the Group dial number for forwarding a fax.

3. When the correct number displays, press **START/ENTER**.  
The displays prompts you to enter the start time.
4. Enter the date and time when the Fax Forwarding feature starts to operate and press **START/ENTER**.  
The displays prompts you to enter the end time.
5. Enter the date and time when the Fax Forwarding feature ends and press **START/ENTER**.

## Turning the Fax Forwarding Feature On or Off

Press **FAX FORWARD** on front panel to turn this feature on or off.

- If the LED is on, Fax Forwarding activates. All faxes delivered to your machine during the specified period will be automatically forwarded to a registered station.
- If the LED is off, Fax Forwarding deactivates.

### Notes:

- If an error occurs during forwarding a fax, your machine will automatically redial the number every three minutes up to a maximum of two times, just like normal fax operation.
- The Sending Confirmation report showing the time when faxes are forwarded, the designated fax number, the transmission result and the contents of the fax will automatically print right before the end time.

---

## Printing Reports

You can print help reports as well as reports containing useful information.

**Notes:** The list you have set to print out automatically will not print out when the paper quantity is at zero or when a paper jam has occurred.

### Help

Shows the machine's basic functions and commands, and can be used as a quick reference guide.

### Sent Journal

Shows information concerning recent fax transmissions.

### Received Journal

Shows information concerning recent fax receptions.

### Phonebook

Lists all numbers currently stored in memory such as One-touch dial numbers, Speed dial numbers and Group dial numbers.

### Sending Confirmation

Shows the fax number, number of pages, elapsed time of the operation, communication mode and the communication results.

You can print the confirmation report in one of the following ways according to your setting in System Setup(see [page 3.3](#)):

- Automatically after each transmission (ON)
- Automatically only if an error occurs during transmission (ERROR)
- No report printed at all (OFF). You can print this report manually.

### Schedule Information

Shows documents currently stored for Delayed transmission, Priority transmission, Broadcasting and Send polling. The list shows the starting time, type of operation, etc.

### **System Data List**

Shows the status of the user-selectable options. After you change any setting, print this list to confirm your changes.

### **Multi-Communication Report**

Is printed automatically after sending documents to or receiving documents from more than one location.

### **Callback Message**

Is printed out automatically when you do not respond to a remote operator's Voice Request.

### **Power Failure Report**

Is printed out automatically when power is restored after a power failure. This report shows data erased by the power failure.

## **TO PRINT LISTS**

1. Press **REPORT/HELP** on the front panel. The display shows the first menu.



HELP

2. Press ◀ or ▶ until you find the list you want to print, then press **START/ENTER**. The selected list will be printed.


---

## Group Dialling (for Multi-Address Transmission)

Multiple one-touch and speed dial numbers can be registered as a group. By using the group number, you can send a document to multiple parties in a single operation. The machine will dial the remote numbers in stored sequence. If the number is busy, the machine will dial the next stored number. After dialing all of the stored numbers, the unit will automatically redial any number that was busy. Before you can use this feature, you must program the group numbers desired.

### Storing One-Touch or Speed Dial Numbers for Group Dialling

1. Press **SET UP** on the front panel.  
The display shows the first menu; FAX NUMBER/NAME.
2. Press ◀ or ▶ until 'GROUP DIAL SETUP' appears, and press **START/ENTER**.
3. Press one of the 20 one-touch buttons that you want to use for group dial.
4. The display asks you to confirm that you use this button for group dialing.

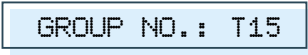


GROUP NO.: T15

Press **START/ENTER** to confirm.

If you do not want to use the one-touch number, press **STOP**. Then, press another one-touch button.


**Note:** If the button you chose has already been used for one-touch dialing, the display will warn of the duplication.



T15 USED !

Then you are allowed to select 'OTHER' or 'RENEW' by pressing ◀ or ▶. To replace that number and continue, select **RENEW** and to start over with a different location, select **OTHER**. When the desired option is displayed, press **START/ENTER**.

5. The display asks you to press a one-touch button or to enter a 2-digit speed dial number that you wish to include in the group.
6. Press the one-touch button where the fax number you wish to include in the group is stored.  
Or,  
Enter a 2-digit speed dial location where the fax number you wish to include in the group is stored.
7. Press **START/ENTER**. The display will show the fax number which was stored in the selected location.
8. Repeat step 6 to 7 to enter additional numbers into the selected group.
9. Press **START/ENTER** when you have entered all the desired destinations. The display will then ask you to enter a name.
10. To assign a name to the group, enter the desired name.  
See [page 3.20](#) for entering letters.  
Or,  
If you do not want to assign a name, skip this procedure.
11. Press **START/ENTER**. The display will ask you to select a one-touch number for another group dial.
12. To continue storing, press the desired one-touch button and repeat steps 4 through 11.
13. To stop storing, press **STOP**. The display will return to Standby mode.

 **Note:** You cannot include one group dial number in another group dial number.

## Editing Group Dial Numbers

You can edit one-touch or speed dial numbers stored for group dialling.

1. Press **SET UP** on the front panel.  
The display shows the first menu; FAX NAME/NUMBER.
2. Press ◀ or ▶ until you find 'GROUP DIAL SETUP', then press **START/ENTER**.
3. Press the one-touch group dial button used for the group dial number you want to edit.
4. Press ◀ or ▶ to select the option you want, then press **START/ENTER**.

Select **MEMBER ADD** to add a number, and enter as many numbers as needed. To stop entering numbers, press **START/ENTER**. Note that you cannot include one group number in another group dial number.

Select **MEMBER DELETE** to delete a number. When the number that you want to delete is displayed, press **START/ENTER**.

5. When you are finished editing, press **STOP**.

## Sending a Fax Using Group Dialing (Multi-Address Transmission)

You can use Group Dialing for the Delayed Transmission or Memory Transmission.

Follow the procedure of the desired operation (Broadcasting transmission - [page 3.29](#), Delayed transmission - [page 3.30](#)). When the display asks you to enter the remote fax number, press the one-touch button where you stored the group number. You can use only one group number for each operation. Continue the procedure to complete the desired operation.

The machine will automatically scan the document into memory and dial each of the numbers included in the group.

## Chapter

# 4

# *Printing*

Read this chapter to learn how to select and load print media and how to use the print settings.

The topics included in this chapter are:

### Print Media

- ◆ Selecting Print Media
- ◆ Using the Automatic Paper Input Tray
- ◆ Using the Manual Paper Input Tray
- ◆ Specialty Paper Guidelines

### Printing

- ◆ Printing a Document
- ◆ Cancelling a Print Job
- ◆ Printing Help
- ◆ Printing Several Pages Per Sheet
- ◆ Scaling Your Document
- ◆ Fitting Your Document to a Selected Paper Size
- ◆ Printing Posters
- ◆ Printing Watermarks
- ◆ Using Page Overlays
- ◆ Printing in a Network Environment

# Print Media

---

## Selecting Print Media

The type of media you select affects the performance and print quality.

### Selecting Media Types

Most photocopy paper, postcards, index cards, transparencies, envelopes, and labels will work your printer, particularly paper that is marked for use in laser printers. For the best results, use one of the papers developed especially for laser printers.

### What to Consider

- **Desired outcome.** The paper you choose should be appropriate for the project. For example, use greeting card paper when making party invitations.
- **Size.** Choose any size paper that fits easily within the paper adjusters of the printer.
- **Weight.** Use 20~24-pound or 75~90 g/m<sup>2</sup> plain paper for multipurpose, everyday use.
- **Brightness.** Some papers are whiter than others and produce sharper, more vibrant colors. Use premium photo paper for documents with photographs. Use white paper for documents with any other pictures.
- **Surface smoothness.** The smoothness of the paper affects how crisp the printing looks on the paper. Glossy, coated paper works well for pictures and charts where you want crisp lines.

### Get the Right Paper

Your Muratec F-110 is designed to work well on most common office paper types and with quality 25% cotton bond paper. Because your printer uses toner to produce an image, paper that accepts toner produces the best results. Be sure to test a variety of paper types before buying large quantities.


### **Paper that Might Not Work**

- Highly textured stock, such as linen, may not print evenly because the toner can bleed.
- Extremely smooth, shiny, or coated papers not specifically designed for laser printers can jam the printer and repel toner.
- Multi-part forms, such as duplicate or triplicate forms can wrinkle and jam; the toner is also more likely to smear.
- Paper in poor condition — with tears, dust, wrinkles, curled or bent edges, or that doesn't lie flat can jam the printer.
- Envelopes with thick or crooked edges; envelopes that are damaged, curled, wrinkled, or irregularly shaped; envelopes that are shiny or embossed; or envelopes with clasps or windows.

### **Selecting Media Sizes**

The paper input tray can hold **up to 150 sheets** of 20 lb (75 g/m<sup>2</sup>) paper. The single-sheet manual input tray is designed to hold one sheet. Both can be adjusted to hold media measuring **from 3.87 by 6.38 inches** (98.5 by 162 mm) **to 8.5 by 14 inches** (216 by 356 mm). This includes, the following paper and envelope sizes:

• <b>A4:</b>	8.25 by 11.75 in.; 210 by 297 mm
• <b>A5:</b>	5.82 by 8.25 in.; 148 by 210 mm
• <b>B5(JIS):</b>	7.16 by 10.12 in.; 182 by 257 mm
• <b>Letter:</b>	8.5 by 11 in.; 216 by 279 mm
• <b>Folio:</b>	8.5 by 13 in.; 216 by 330 mm
• <b>Legal:</b>	8.5 by 14 in.; 216 by 356 mm
• <b>Executive:</b>	7.25 by 10.5 in.; 184 by 267 mm
• <b>No.10 Envelopes:</b>	4.12 by 9.5 in.; 105 by 241 mm
• <b>DL Envelopes:</b>	4.33 by 8.66 in.; 110 by 220 mm
• <b>C5 Envelopes:</b>	6.38 by 9.01 in.; 162 by 229 mm
• <b>C6 Envelopes:</b>	4.49 by 6.38 in.; 114 by 162 mm
• <b>B5 Envelopes:</b>	6.93 by 9.84 in.; 176 by 250 mm
• <b>Monarch Envelopes:</b>	3.87 by 7.5 in.; 98.5 by 190.5 mm

 **Note:** Insert all media vertically (portrait orientation) into the paper input tray or single-sheet manual input tray. To print horizontally (landscape orientation), make this selection through software. Do not print on paper smaller than 3.87 by 6.38 inches (98.5 by 162 mm).


## Using the Automatic Paper Input Tray

You can stack paper or transparencies in the automatic paper tray to feed automatically. The automatic tray can hold a maximum of 150 sheets of plain paper. The maximum capacity may be reduced depending on the thickness.

For best results, adjust the paper settings each time you change paper (see [page 4.10](#)).

**Note:** If you experience feeding problems, try printing one at a time from the manual input tray. See [page 4.5](#).


1. Pull the paper input support completely out of the unit.

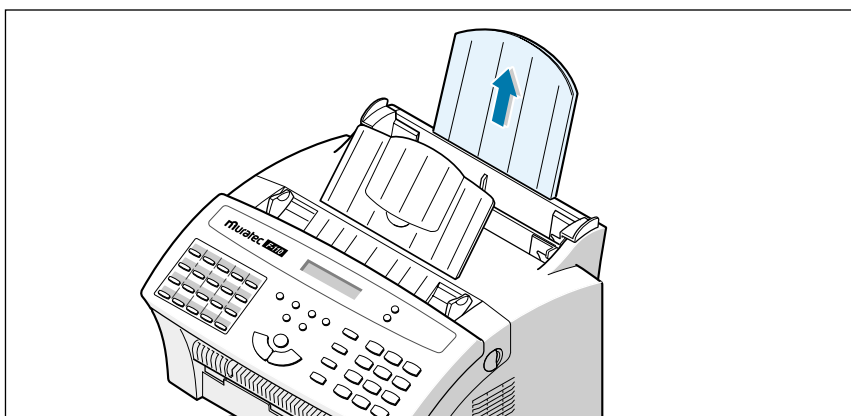

2. Prepare the print material for loading.


- **For paper:**

- Flex or fan the paper back and forth. Do not fold or crease the paper. Straighten the edges on a level surface.

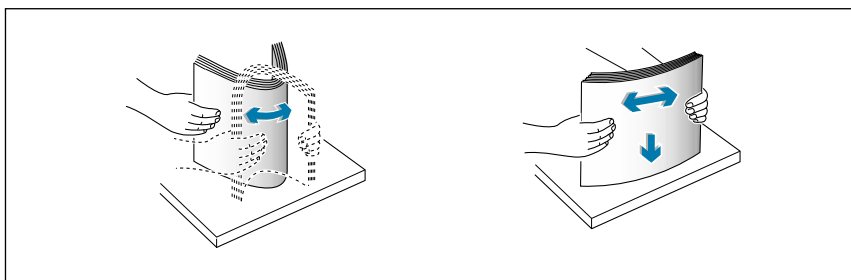


- **For transparencies:**

- Hold the transparencies by the edges and avoid touching the print side.
- Fan the stack of transparencies to prevent feeding failures.  
Be careful not to scratch or leave fingerprints on the print sides.

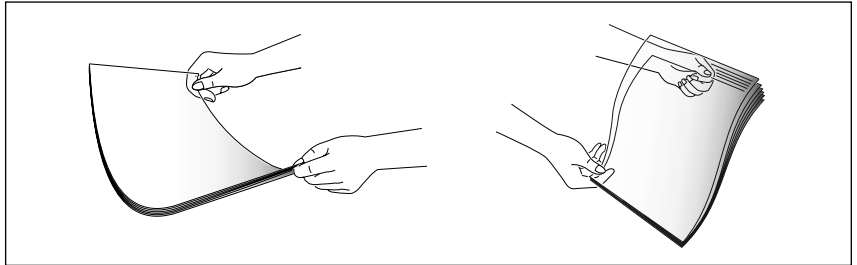


3. Load the print material into the paper tray. Do not overload the tray. Neatly stacking the paper before loading will help prevent print problems. Do not mix types. See the following directions to load each type of print material.


- Load paper with the print side facing up.

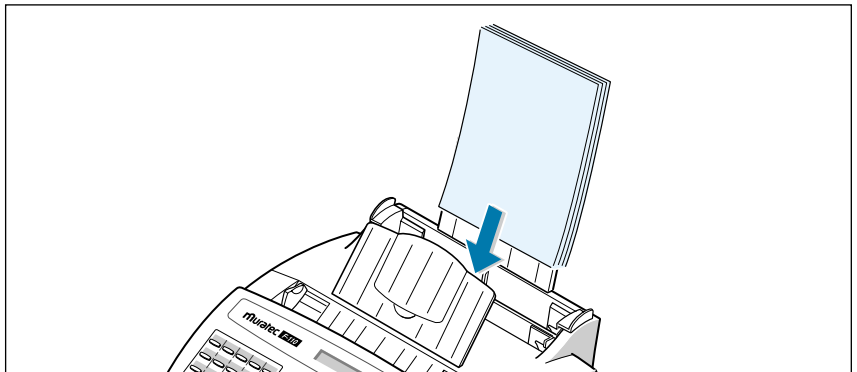

- Load letterhead paper **face up with the top of the page going into the tray first.**

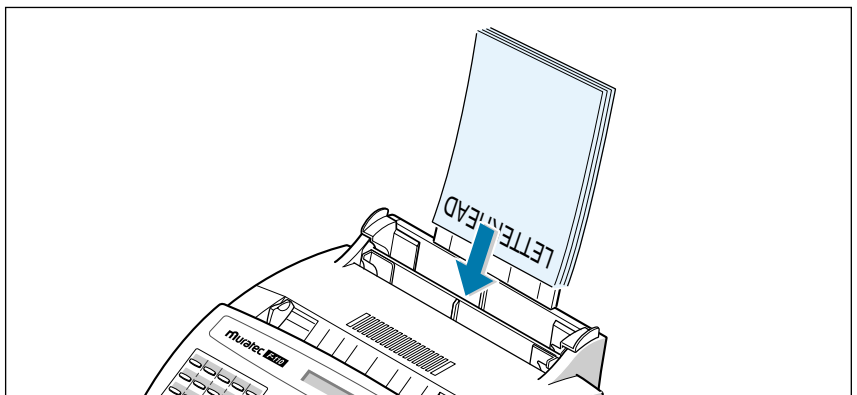

4. Slide both paper adjusters to fit against the paper's edges. **Ensure that the paper line is flat in the tray.**

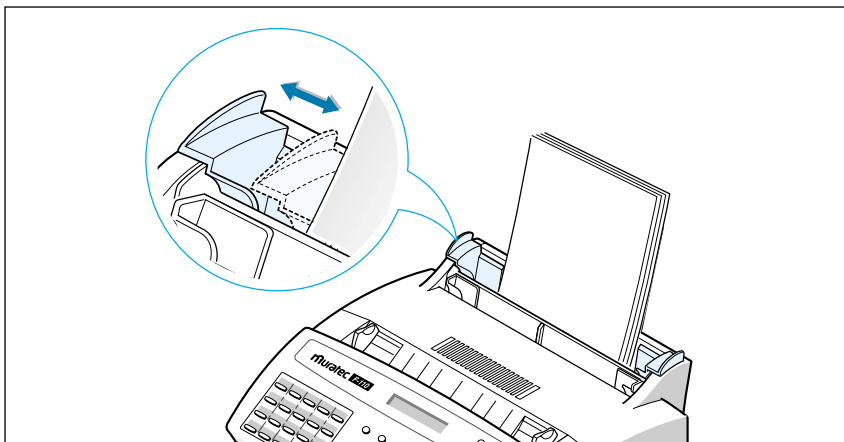


### Print Side Up

Most paper prints better on one side than on the other. This is especially true for coated or specially treated paper. The print side is usually indicated on the paper package. Be sure to insert the paper into the paper tray of the printer with the **print side up**.

---

## Using the Manual Paper Input Tray

To load a single envelope, card stock, or specialty paper, use the manual paper input tray. When you use the manual input tray, you must feed one piece of media at a time. Manual feeding is helpful when printing on heavy paper or when experiencing a paper jam with the automatic paper input tray.

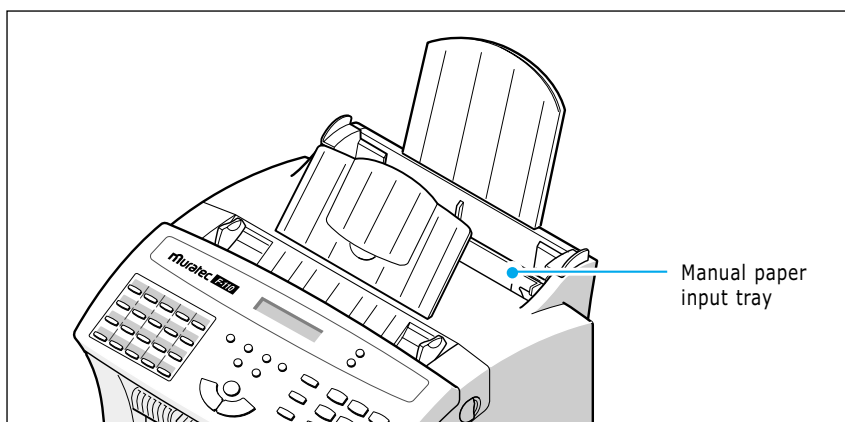


### Notes:


- Make sure that you select the **Manual** for **Paper Source** and the correct paper size and type from your software application before starting your print job. See [page 4.10](#).
- When you use the manual paper tray, the paper must be loaded in the automatic paper tray. By doing so, you can prevent a paper jam which could occur in the manual tray.

1. Place the print media in the manual input tray with print side facing up and adjust the paper guides to the width of the print media.


- Load a sheet of the envelope **with the flap side facing away from you**. Make sure that the stamp area is at the top left and the end of the envelope where the stamp area enters the tray.

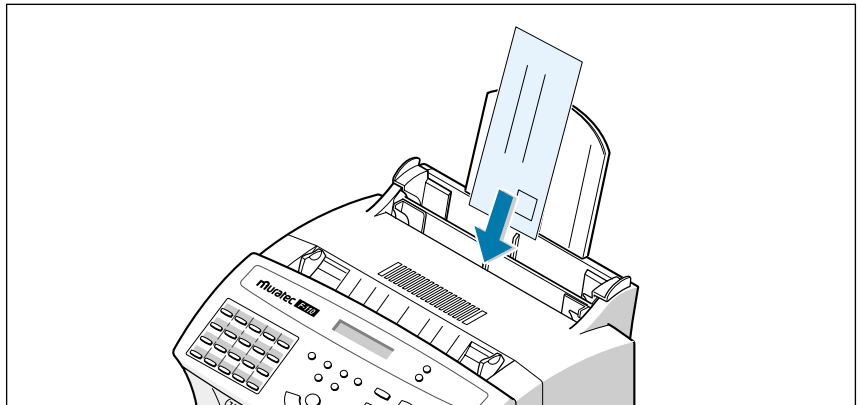


- Load transparencies **face up with the adhesive strip on top going into the tray first**.

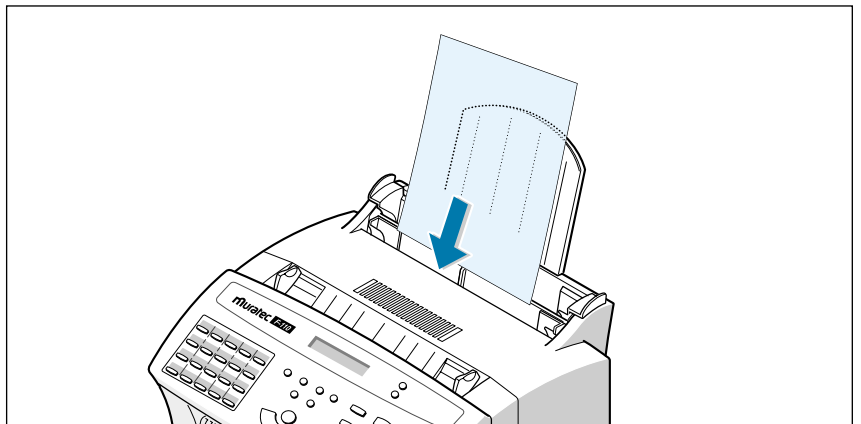


- Load a sheet of the label **with the adhesive backing facing away from you.**

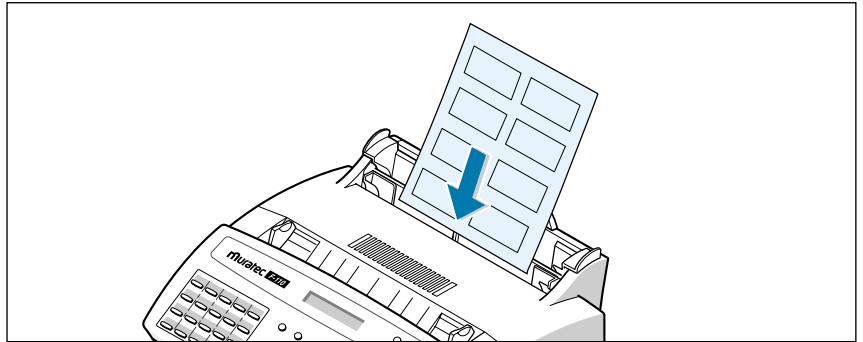

- Load a sheet of the card stock **with print side up, short edge first.**

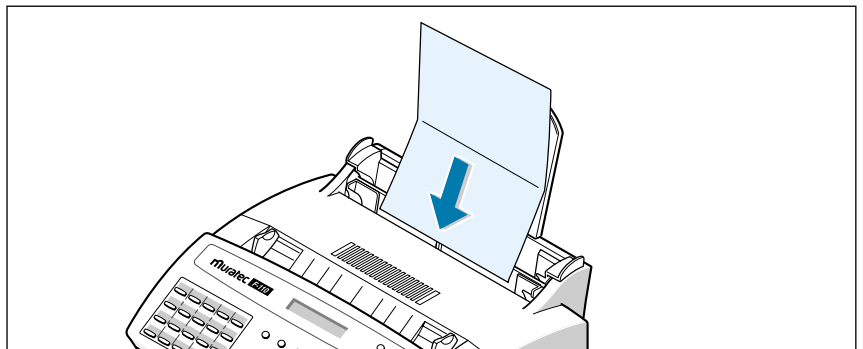

2. In your computer, start printing the document. the display on the front panel will display 'PC PRINTING...' and 'PRESS START.'
3. Press **START/ENTER** to start manual feeding. If you have more than one page to print, press **START/ENTER** for each page.

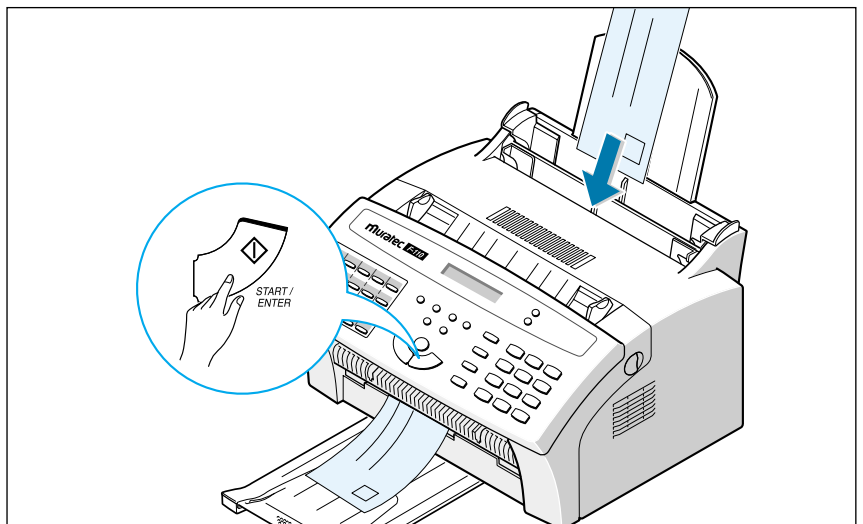

---

## Specialty Paper Guidelines

- Read all instructions that come with specialty paper for important information regarding how to achieve the highest print quality.
- It is recommended to feed one sheet at a time for special paper types.
- For transparency film, follow these guidelines:
  - Let printed sheets of film dry completely before storing.
  - When a sheet of film has dried completely, cover its printed side with a sheet of plain (not coated) paper before storing; This is recommended even if placed in a clear file or plastic holder.
  - Do not leave the film in the paper tray for long periods of time as dust and dirt can accumulate, resulting in poor copy quality.
  - To avoid fading, do not expose the printed film to prolonged direct sunlight.
  - Store unused papers and films flat. Do not remove papers from their protective packaging until ready for use.
  - Store unused film at temperatures between 59°F to 86°F (15°C to 30 °C). The relative humidity should be between 10% and 70%.
- For labels, follow these guidelines:
  - Verify that the labels' adhesive material can tolerate fusing temperatures of 200°C (392°F) for 0.1 second.
  - Make sure that there is no exposed adhesive material between the labels. Exposed areas can cause labels to peel off during printing, which can cause paper jams. Exposed adhesive can also cause damage to printer components.
  - Do not feed a sheet of labels through the printer more than once. The adhesive backing is designed for one pass through the printer.
  - Do not use labels that are separating from the backing sheet or are wrinkled, bubbled, or otherwise damaged.
- If the print density of your page is very high, light paper stock may curl slightly due to the large amount of toner. To print dense graphics, try printing on heavier stock.
- Do not use paper that is thicker than the specifications as it may damage the toner cartridge.


# Printing

## Printing a Document

The following procedure describes the steps required for printing from various Windows applications. The exact steps for printing a document may vary depending on the application program. Refer to your software application's documentation for the exact printing procedure.

1. Start the program to create a document, or open the document you want to print.
2. Select **Print** from the **File** menu. You will see the Print dialogue box for your application (the Print dialogue box for your application may look slightly different).

The basic print settings you required are usually selected within the Print dialogue box. These settings include the number of copies, paper size, and page orientation.

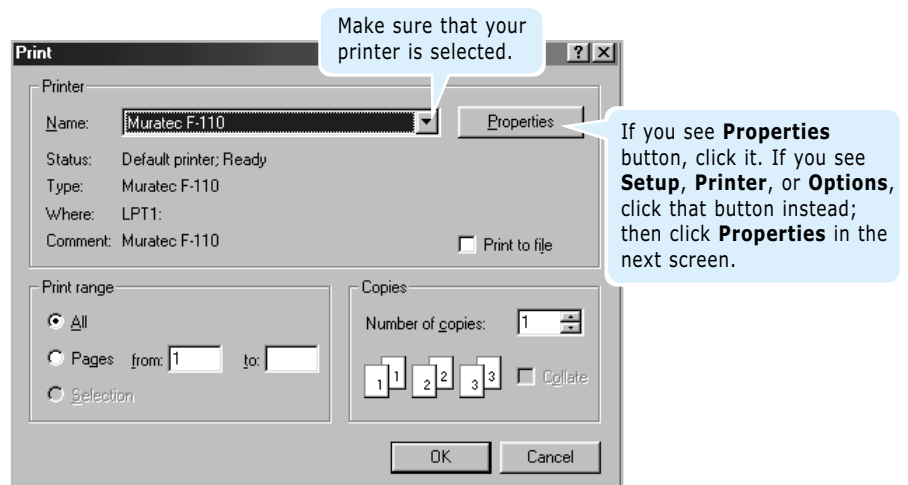


3. To take advantage of the printer features provided by the Muratec F-110, click **Properties** in the application's Print dialogue box and go to step 4.

If you see **Setup, Printer, or Options**, click that button instead. Then click **Properties** in the next screen.

4. The dialogue box allows you to access all the necessary information for using your printer.

If necessary, click the **Paper** tab to display the settings shown below. The Paper tab contains the options for setting the basic paper handling.

Select the number of copies to be printed.

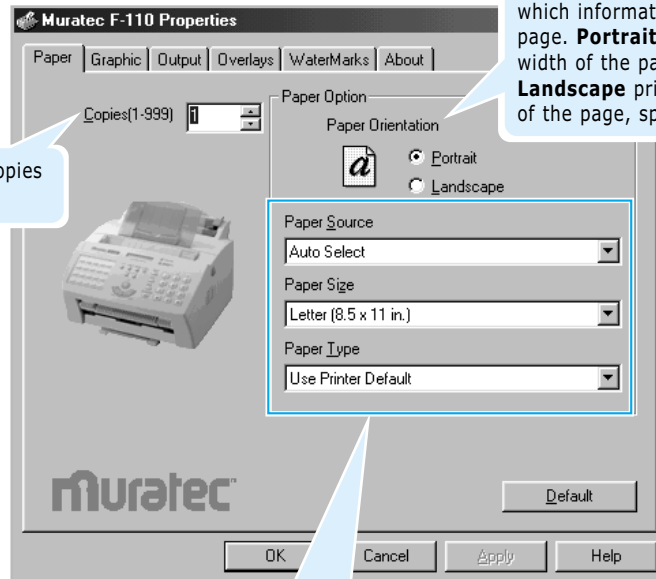

- **Paper Source:** Make sure the **Paper Source** is set to **Auto Select**. If you use the manual input slot on the back of the printer (see [page 4.5](#)), select **Manual**.
- **Paper Size:** Select the paper size you have loaded in your printer.
- **Paper Type:** The **Paper Type** option allows you to select the paper type you want to use.

5. If you want to change the setting for print quality, click the **Graphic** tab.

The **Resolution** option allows you to select the print resolution. The higher the setting, the sharper the clarity of printed characters. Higher settings may increase the time it takes to print a document.

The **Toner Save Mode** option allows the printer to use less toner on each page.

- **Printer Setting:** this feature is determined by the setting you've made on the control panel of the printer.
- **Standard:** does not save toner to print a document.
- **Economy:** allows the printer to use less toner on each page.

**Advanced Options:**


- **Altitude Correction:** To optimize print quality, the **Altitude Correction** should be checked for high place.
- **Dark Text:** When the **Dark Text** is checked, all text in your document is allowed to print darker than a normal document.
- **All Text to Black:** When the **All Text to Black** is checked, all text in your document is allowed to print solid black, regardless of its on screen color. When it is not checked, colored text is allowed to print in shades of gray.

6. When you finish changing print settings, click **OK** until you see the Print dialogue box again.

7. Click **OK** to start printing.

### Notes:

- Most Windows applications will override the settings you specified in the printer driver. Change all print settings in the software application first, and any remaining settings with the printer driver.
- The settings you change here remain in effect while you are using the current program. **To make your changes permanent**, make them in the Printers folder as follows:
  1. Click the Windows **Start** button.
  2. Select **Settings**, then **Printers** to open the Printers window.

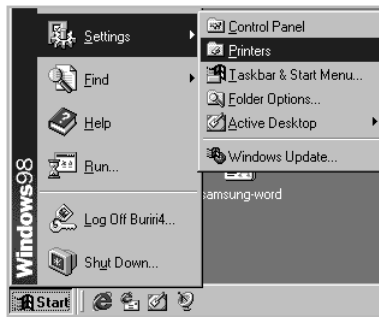

3. Select the **Muratec F-110**.
4. Click the right mouse button and select **Properties** to open the properties window.

---

## Cancelling a Print Job

There are two ways to cancel a print job:

 
- If your print job has not started to print, cancel from the print spooler in Windows 95, 98, Me, NT 4.0, 2000 or XP.
- If your print job is currently printing, press **STOP** twice on the front panel of your printer.

**CAUTION:** If a fax job is currently being transmitted or received, this procedure will also clear it.

---


## Printing Help

The F-110 printer has several help screens that can be activated from the **Help** button in the printer properties dialogue box. These help screens give detailed information about the printer features provided by the F-110 print driver.

From the upper right hand corner, click  then click on a setting for more information.


To restore default printer properties setting when you change the print settings, click **Default** in the properties dialogue box.

## Printing Several Pages Per Sheet

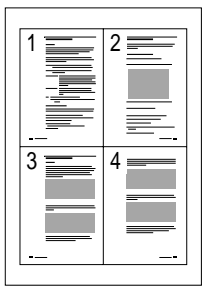


Your printer is equipped with an option that prints several pages on one sheet of paper by reducing the size of each page and organizing them in rows and columns.

1. Load letter or A4 paper into the paper input tray.
2. To change the print settings from your software application, access the printers properties. See [page 4.9](#) to access the printer properties. From the **Paper** tab, select the paper orientation, source and size.
3. Click the **Output** tab, and choose **Multiple Pages Per Side** in the **Type** drop down list under the **Output Mode** section.
4. Select the number of pages to print per sheet (2, 4, 9, or 16) in the **Pages per sheet** drop-down list. When you make a selection, the graphic above the option changes to show how the printed page will look.
5. Click **Print Page Borders** when you want each page image in your document to print with a border.

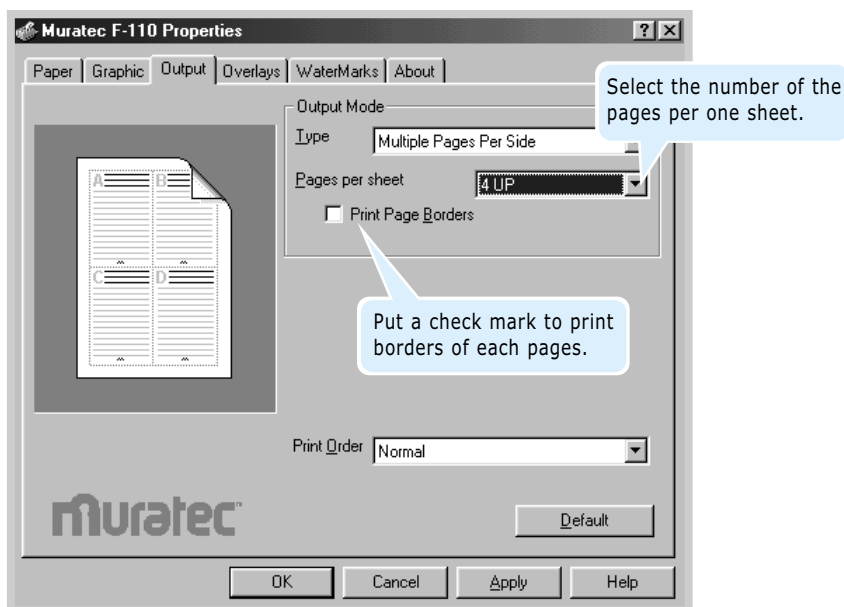

6. Click **OK**, then start printing.


## Scaling Your Document

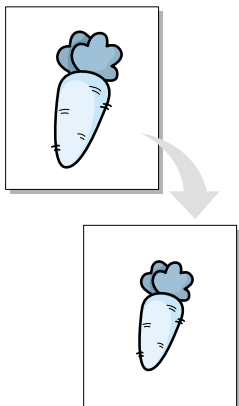

This printer feature allows you to scale your print job on a page.


1. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.
2. Click the **Output** tab, and select **Scale Printing** in the **Type** drop down list under the **Output Mode** section.
3. Enter the desired scaling rate in the **Scale** input field.

You can also click the ▲ or ▼ buttons.

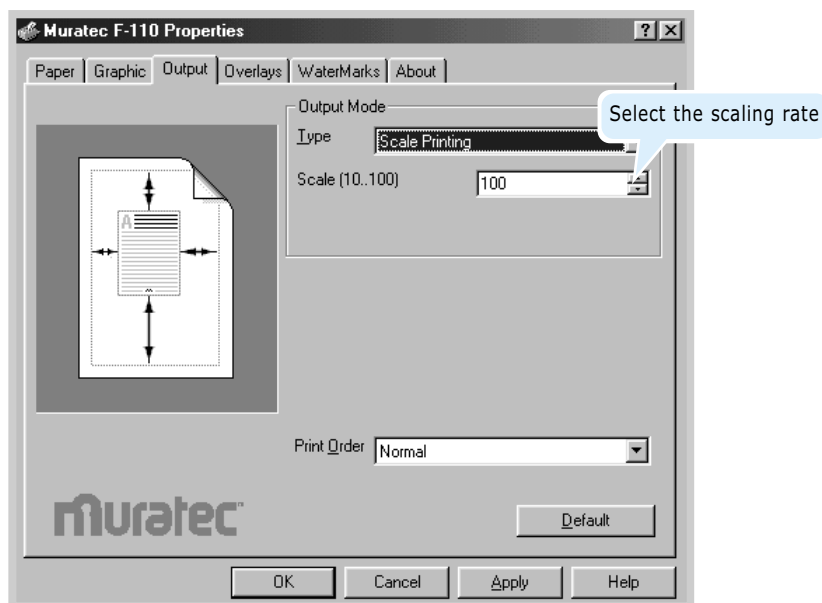


4. Click **OK**, then start printing.

## Fitting Your Document To a Selected Paper Size

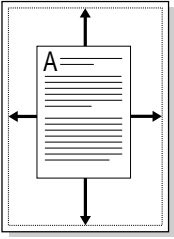


This printer feature allows you to scale your print job to any selected paper size regardless of the digital document size. This can be useful when you want to check the fine details in a small document.

1. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.
2. Click the **Output** tab, and select **Fit to Page** in the **Type** drop down list under the **Output Mode** section.
3. You'll see the **Application Paper Size** and be prompted to select the **Fit to paper Size**. Select the correct size from the drop-down list.

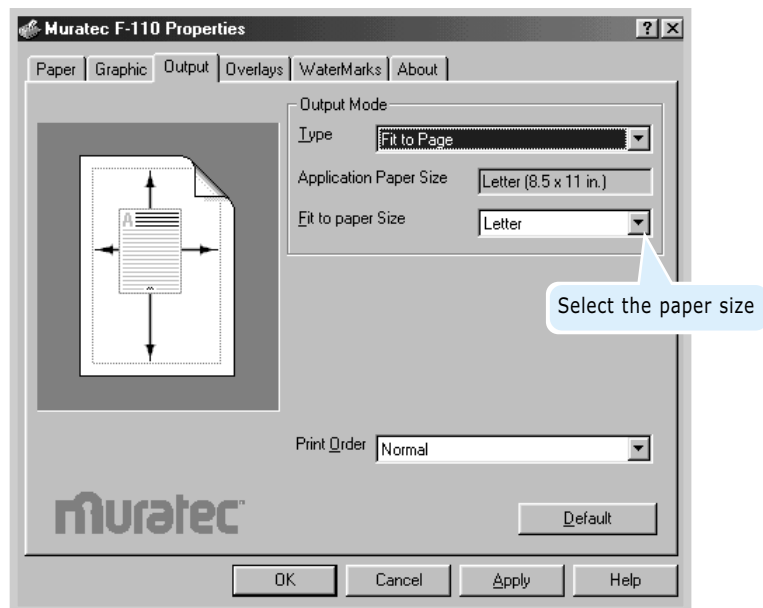

4. Click **OK**, then start printing.

## Printing Posters

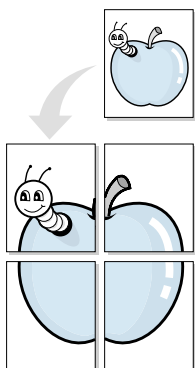


This feature allows you to print a single-page document on up to 16 sheets of paper which can be pasted together to form one poster-size document.

1. To change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.


From the **Paper** tab, select the paper orientation, source and size.

2. Click the **Output** tab, and **Poster Printing** in the **Type** drop down list under the **Output Mode** section.

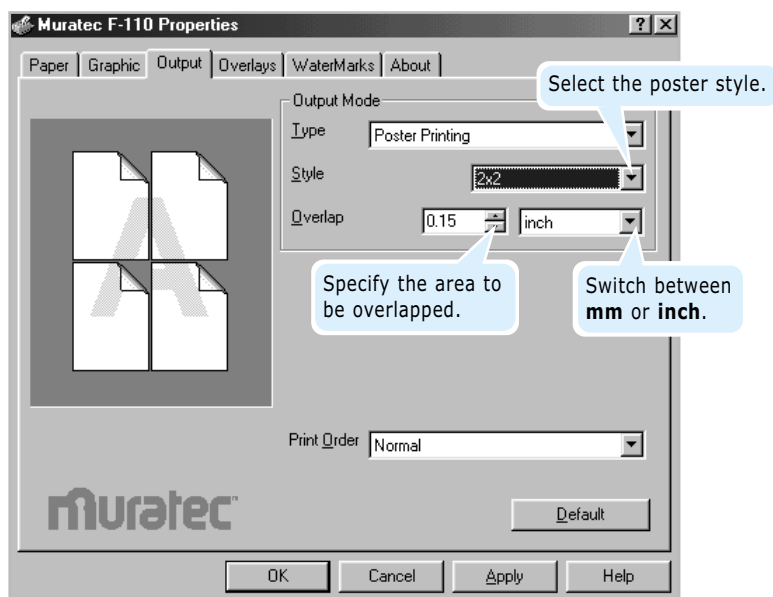


3. To determine the scaling factor, select the Style; 2x2, 3x3 or 4x4.

For example, if you select 2x2, the output will be automatically stretched to cover 4 physical pages.

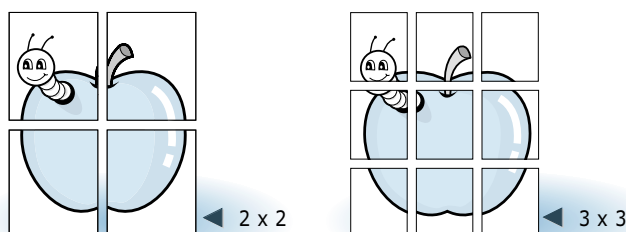

4. You may specify an overlap in millimeter or inch to make it easier to reconstruct the resulting poster.

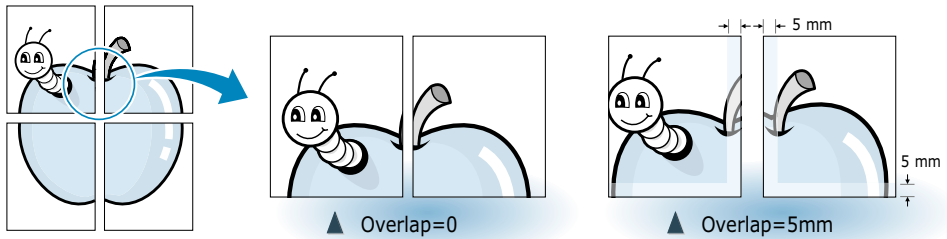

5. Click **OK**, then start printing.

---

## Printing Watermarks




The Watermark option allows you to print text over an existing document. For example, you may want to have large gray letters reading "DRAFT" or "CONFIDENTIAL" printed across the first page or all pages of a document.

There are several predefined watermarks that come with the F-110, and they can be modified or you can add new ones to the list.

### To use an existing watermark


1. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.
2. Click the **Watermark** tab, and select the desired watermark in the **Message** drop-down list. You will see the selected watermark in the preview window.

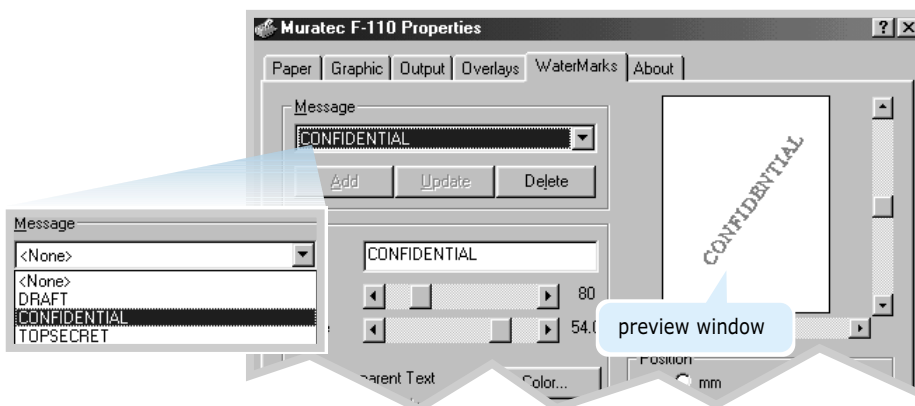

- 3 Click **OK**, then start printing.

## To create or edit a watermark

1. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access printer properties.
2. Click the **Watermark** tab, and enter the desired text message in the Text field. This will be displayed in the preview window. The preview window is provided so that you can see how the watermark will appear on the printed page.
3. Select the desired watermark options. You can select the font type and size, color and angle. There are three checkboxes at the bottom of the dialog box:
  - **Transparent Text** – Allows the document to show through the watermark.
  - **As Outline only** – Prints the text outline of the watermark. This setting globally effects all watermarks in the list.
  - **On First Page only** – Prints the watermark only on the first page.

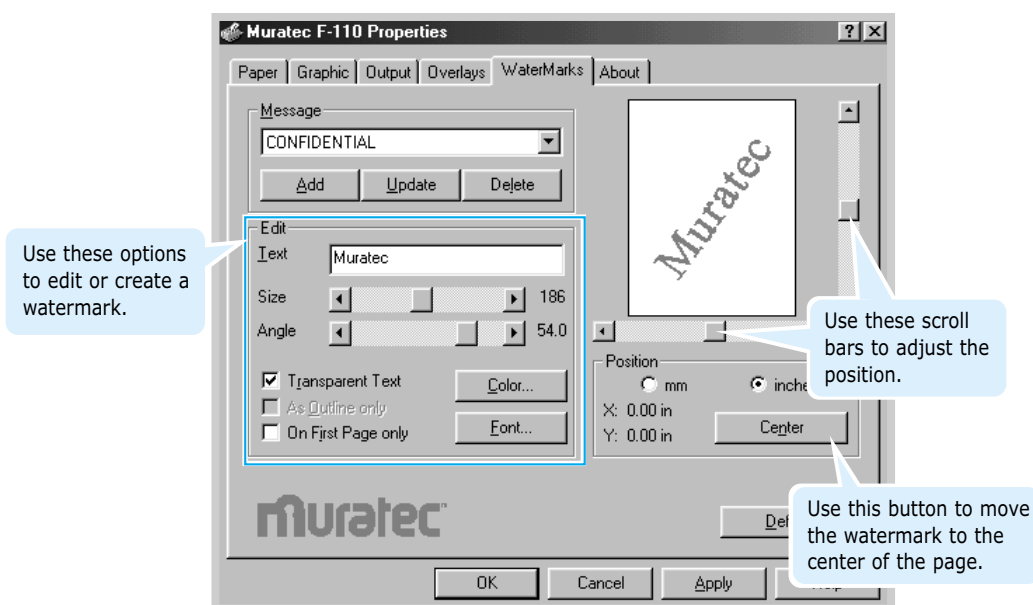

4. If you have created a new or edited an existing watermark, the **Add** and **Update** button is enabled.

To add a new watermark to the list, click **Add**.

5. If you want to edit, select the desired watermark from the list, edit, then click **Update**.

6. When you complete the edit, click **OK**, then start printing.


To stop printing the watermark, select **None** in the Message drop-down list.

## To delete a watermark

1. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.
2. From the **Watermark** tab, select the watermark you want to delete in the **Messages** drop-down list.
3. Click **Delete**.
4. Click **OK**.

---

## Using Page Overlays

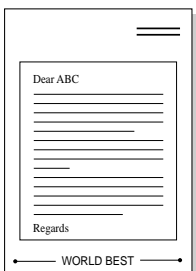


### What is an Overlay?

An overlay is text and/or images stored in the computer HDD as a special file format that can be printed on any document you choose. Overlays are often used to take the place of preprinted forms and letterhead paper. Rather than using preprinted letterhead, for example, you can create an overlay containing the exact same information as is currently on your letterhead. Then when you want to print a letter with your company's letterhead, you do not need to load preprinted letterhead paper in the printer. You need only to tell the printer to print the letterhead overlay on your document.


## Creating a New Page Overlay

To use a page overlay, you must create a new page overlay containing your logo or image.

1. Create or open a document containing a text or image you want to use for page overlay. Position the items exactly as you wish them to appear when printed as an overlay. If needed, save the file for later use.
2. Select **Print** from the **File** menu. Then click **Properties** in the application's Print dialog box to access the printer properties. For details, see [page 4.9](#).
3. Click the **Overlays** tab, and click **Create Overlay**.

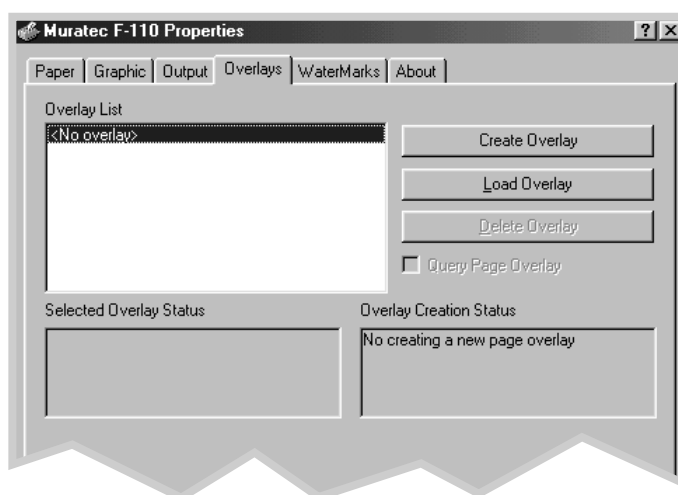

4. In the Create Overlay dialog box, type a name of up to eight characters in the File name box. Select the destination path if necessary.

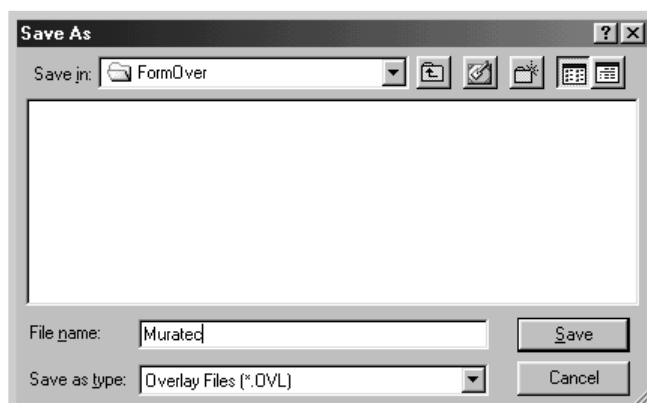

5. Click **Save**. You will see the name in the Overlay List box.
6. Click **OK** or **Yes** until you complete the creation.


The file is not printed out. Instead it will be stored on your computer HDD disk.

**Note:** The overlay document size must be the same as documents you will print with the overlay.

## Using Page Overlay


After an overlay has been created, it is ready to be printed with your document. To print an overlay with a document:

1. Create or open the document you want to print.
2. When you change the print settings from your software application, access the printer properties. See [page 4.9](#) to access the printer properties.
3. Click the **Overlays** tab, and select the desired overlay from the Overlay List box.
4. If the desired overlay file does not appear in the Overlay List box, click **Load Overlay**, and select the overlay file.

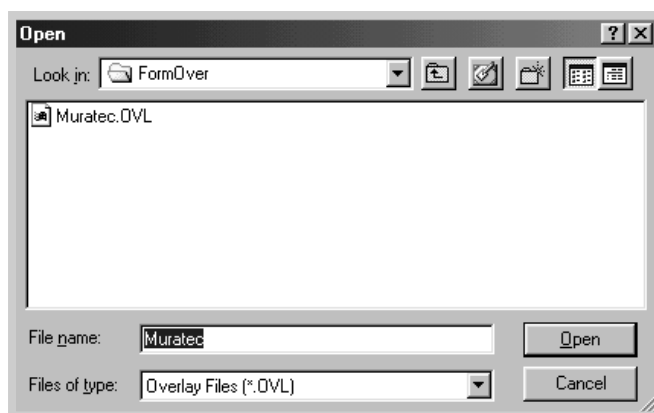

If you have stored the overlay file you want to use into an external source, you can also load the file when you access this Load Overlay window.

After you select the file, click **Open**. The file is now shown in the Overlay List box and is available for printing. Select the overlay from the Overlay List box.

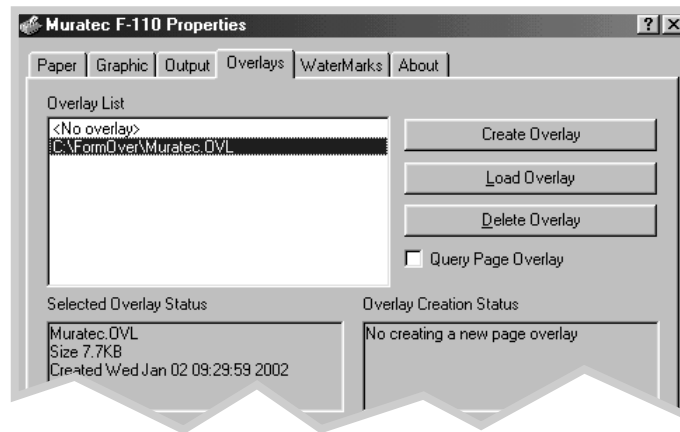

5. If necessary, click the **Query Page Overlay** check box. If this box is checked, a message box will appear each time you submit a document for printing, asking you to confirm printing an overlay on your document.

Answering **Yes** to the message box means that the selected overlay will be printed with your document.

Answering **No** to the message box cancels overlay printing.

If this box is empty, and an overlay has been selected, the overlay will be automatically printed with your document.

6. Click **OK** or **Yes** until the printing starts.

The selected overlay will be downloaded with your print job and printed on your document.

### Deleting a Page Overlay

You can delete page overlays that are no longer used.

1. In the printer properties dialog box, click the **Overlays** tab.
2. Select the overlay you want to delete from the Overlay List box.
3. Click **Delete Overlay**.
4. Click **OK** until you exit the Print dialog box.

---

## Printing in a Network Environment

If you work in a network environment, you can connect your F-110 printer directly to a selected computer (called the "host computer") on the network. The printer can then be shared by other users on the network through a Windows 9x, Me, NT 4.0, 2000 or XP network printer connection.

**Note:** You need to install the Muratec F-110 print driver on each computer that will send documents to the printer.

### Setting Up Host Computer

1. Start Windows.
2. From the **Start** menu, select **Control Panel**, and double-click on the **Network** icon.
3. Check the **File and Print Sharing** box, then click **OK**. Close the window.
4. Click **Start** and select **Printers** from **Settings**, then double-click your printer name.
5. Select **Properties** in the Printers menu.
6. Click the **Sharing** tab, then check the **Shared As** box. Fill in the **Shared Name** field, then click **OK**.

### Setting Up Client PC

1. Right-click the **Start** menu, and select **Explorer**.
2. Open your network folder in the left column.
3. Right-click the shared name, and select **Capture Printer Port**.
4. Select the port you want, check the **Reconnect at log on** box, then click **OK**.
5. From the **Start** menu, select **Settings**, then **Printers**.

6. Double-click your printer icon.
7. From the **Printers** menu, select **Properties**.
8. Press the **Details** tab, select the printer port, then click **OK**.

## Printing a Document

Print your document following the procedures described in [page 4.9](#).

Chapter

# 5

## ***Maintenance***

This chapter provides suggestions for high-quality and economical operating and information for maintaining the toner cartridge and the machine.

The topics included in this chapter are:

- ◆ Guidelines for Maintenance
- ◆ Clearing Memory
- ◆ Cleaning the OPC Drum
- ◆ Adjusting Shading
- ◆ Sending Toner Low Information to the Service Company
- ◆ Cleaning the Machine
- ◆ Managing the Toner Cartridge
- ◆ Automatic Document Feeder Rubber Pad Replacement

---

## Guidelines for Maintenance

To achieve optimal performance from your F-110, follow these guidelines:

- Place the machine on a stable surface.
- Do not install your machine near devices that contain magnets or generate magnetic fields, such as speakers.
- Keep your machine clean. Dust accumulation can prevent the unit from operating properly.
- Unplug the power cord from the machine during electrical storms.
- Lift the machine from the bottom only. Do not lift the unit by the front panel or any of the trays.

---

## Clearing Memory

You can selectively clear information stored in your machine's memory.

1. Press **SET UP** on the front panel. The display shows the first menu; FAX NUMBER/NAME.
  2. Press ◀ or ▶ until 'MEMORY CLEAR' appears, then press **START/ENTER**. The display shows the items you can clear.
    - **FAX NUMBER/NAME**: your fax number and name are cleared from the machine's memory.
    - **DIAL/SCHEDULE**: clears the one-touch, speed dial, or group dial numbers stored in the memory. In addition, all the Schedule Job operations you have reserved are also cancelled.
    - **JOURNAL**: clears all records of transmissions & receptions.
    - **DEFAULT SETUP**: restores all the option settings to factory default.
  3. Press ◀ or ▶ until you find the item you want to clear, then press **START/ENTER**. The display asks you to confirm your selection.
  4. Press **START/ENTER** to confirm. The selected memory is cleared, then the display asks you to continue clearing the next item.
  5. Repeat steps 3 through 5 to clear another item.
- Or, to return to Standby mode, press **STOP**.

---

## Cleaning the OPC Drum

If you are getting streaks or spots on your print, you may need to clean the OPC drum.

1. Make sure that the paper is loaded in the automatic input tray.
2. Press **SET UP** on the front panel.  
The display shows the first setup menu; FAX NUMBER/NAME.
3. Press ◀ or ▶ until 'MAINTENANCE' appears, then press **START/ENTER**.
4. The display will show the first menu, 'CLEAN DRUM', press **START/ENTER**.

The machine automatically pulls in a sheet of paper, and prints it out. The toner particles on the OPC drum surface are fixed to the paper.

5. Press **STOP** to return to Standby mode.

---

## Adjusting Shading

If the scanning unit becomes dirty, it can alter the shading value. If your print has black lines or it is blurred, adjust the shading setting. Take the following steps:

1. Load a sheet of white paper into the document feeder.
2. Press **SET UP** on the front panel.  
The display will show the first setup menu; FAX NUMBER/NAME.
3. Press ◀ or ▶ until 'MAINTENANCE' appears, then press **START/ENTER**. The display will show the first menu; CLEAN DRUM.
4. Press ◀ or ▶ until you find 'ADJUST SHADING', then press **START/ENTER**.

The white paper is scanned through the document feeder.

---

## Sending Toner Low Information to the Service Company

If you have set the **NOTIFY TONER LOW** menu option to ON, your machine will automatically send a fax to your service company or your dealer to notify them when your machine requires a new toner cartridge. This feature will be activated only when the phone number of the service company or the dealer is stored in your machine's memory by technician. Ask your dealer for more information.

1. Press **SET UP** on the front panel.  
The display will show the first setup menu; FAX NUMBER/NAME.
2. Press ◀ or ▶ until 'MAINTENANCE' appears, then press **START/ENTER**. The display will show the first menu; CLEAN DRUM.
3. Press ◀ or ▶ until you find 'NOTIFY TONER LOW', then press **START/ENTER**.
4. Press ◀ or ▶ to turn this feature ON or OFF, then press **START/ENTER**.
5. Press **STOP** to return to Standby mode.

---

## Cleaning the Machine

To maintain a high print quality, follow the cleaning procedures below every time the toner cartridge is replaced or whenever print quality problems occur. Keep your machine free from dust and debris.

### Note:

- Do not use ammonia-based sprays or volatile solvents such as thinner to clean the machine, as these can damage the machine's surface.
- While cleaning the inside of the machine, be careful not to touch the transfer roller (located underneath the toner cartridge). The oil from your hands on the roller can cause print quality problems.

## Cleaning the Outside

Wipe the outside surface of your machine with a soft, clean, and lint-free cloth. You can dampen the cloth slightly with water, but be careful not to let any water drip onto the machine or inside it.

## Cleaning the Inside

During the printing process, paper, toner, and dust particles can accumulate inside the machine. Over time, this buildup can cause print quality problems such as toner specks or smearing. Cleaning inside the printer will eliminate or reduce these problems.

1. Turn the machine off and unplug the power cord, then **wait for the machine to cool**.
2. Pulling the cover release buttons toward you, open the cover and carefully remove the toner cartridge.

**Note:** To prevent damage to the toner cartridge, do not expose it to light for more than a few minutes. If necessary, cover it with a piece of paper, .


3. With a dry, lint-free cloth, wipe away any dust and spilled toner from the toner cartridge area and the toner cartridge cavity.

## Cleaning the Document Scanner


To keep your machine working properly, occasionally clean the white roller, ADF rubber, and the scanning glass.

**Note:** Do not turn the power off to clean the scanner, as documents stored in the memory will be lost.


1. Lift the front panel by grabbing the panel along the top edge and open the cover.
2. Disassemble the white roller as follows:  
Pull the handle of the bushing located at the end of the roller slightly outward(A), rotate it until it reaches a slot(B), then pull the roller upward.

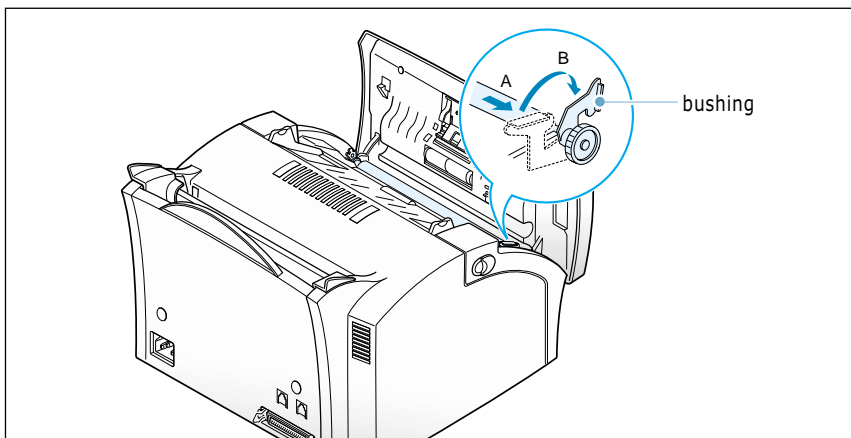

3. Wipe the roller surface with a soft cloth dampened with water.

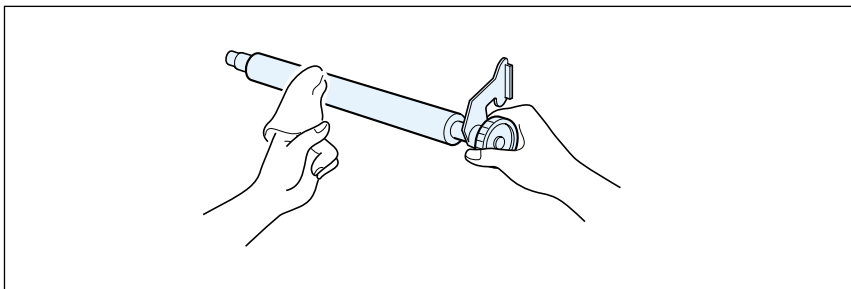


4. Clean the ADF rubber piece.

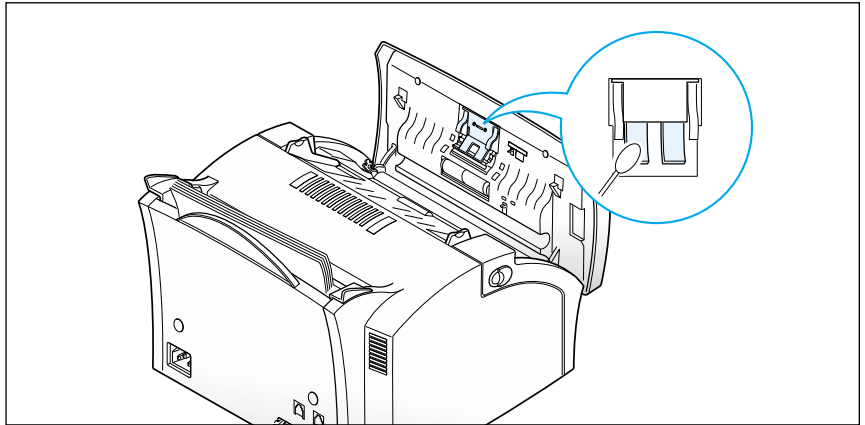

5. Carefully wipe the scanning glass with a soft, dry cloth.

If the glass is dirty, first wipe it with a slightly dampened cloth, then with a dry cloth. Be careful not to scratch the glass surface.

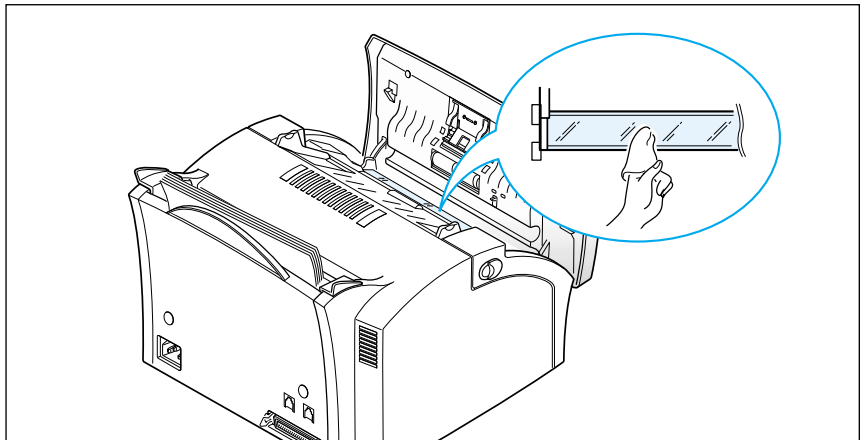

6. Replace the roller in reverse order, and then close the front panel firmly until it clicks into place.

---

## Managing the Toner Cartridge

### Expected Cartridge Life


The life of your toner cartridge depends on the amount of toner used in each print job. For instance, when you print a typical business letter with about 5% page coverage, you can expect a toner cartridge life of approximately 2,500 pages (1,000 pages only for the toner cartridge shipped with your machine). The actual number may vary according to the print density of the page you print. If you print a lot of graphics, you may need to change the cartridge more often.

You can extend the life of your toner cartridge by using Toner Save Mode on the printer properties ([page 4.11](#)) or on the front panel ([page 3.3](#)). The Toner Save Mode uses less toner than normal printing. The printed image is much lighter, and is adequate for printing drafts or proofs.

### Replacing the Toner Cartridge

When the toner cartridge is near the end of its life, white streaks or hue changes will occur. You can temporarily re-establish the print quality by re-distributing the remaining toner in the cartridge.

1. Open the cover and remove the toner cartridge.
2. Gently shake the cartridge to distribute the toner evenly inside the cartridge.

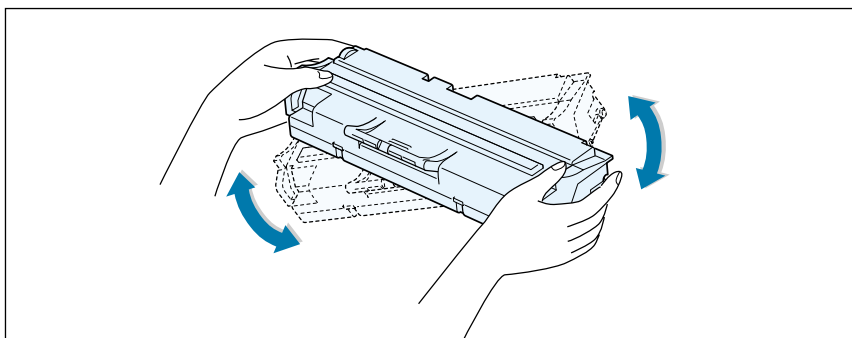


3. Reinstall the cartridge and close the cover.


This is typically successful one time only. When the toner eventually runs out, only blank pages will print when a print job is sent, or when a fax is received. At this stage, the toner cartridge needs to be replaced. See the [following page](#).

Take the following steps to replace the toner cartridge:


1. Pulling the cover release buttons toward you, open the cover.

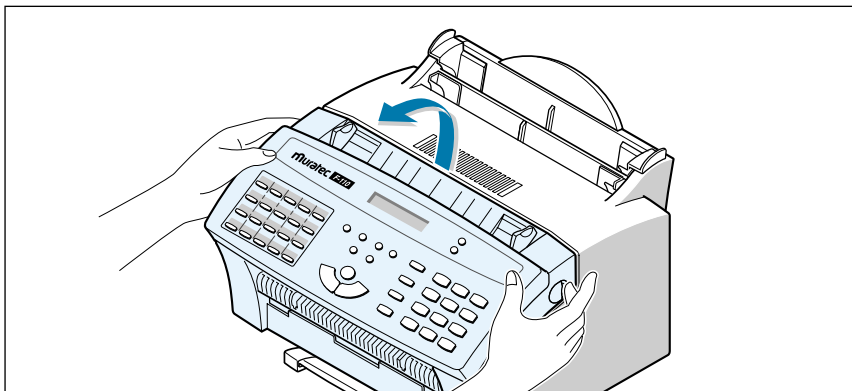


2. Remove the old toner cartridge.

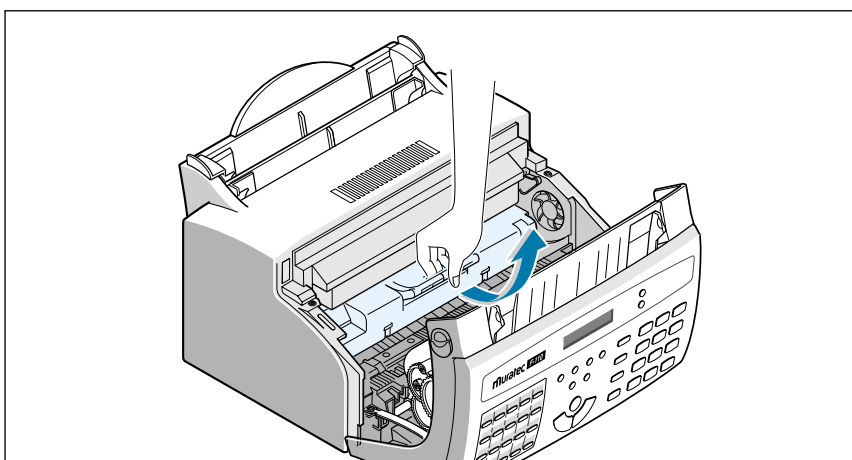


3. Unpack a new toner cartridge from its plastic bag, and then remove the paper rolled the cartridge.

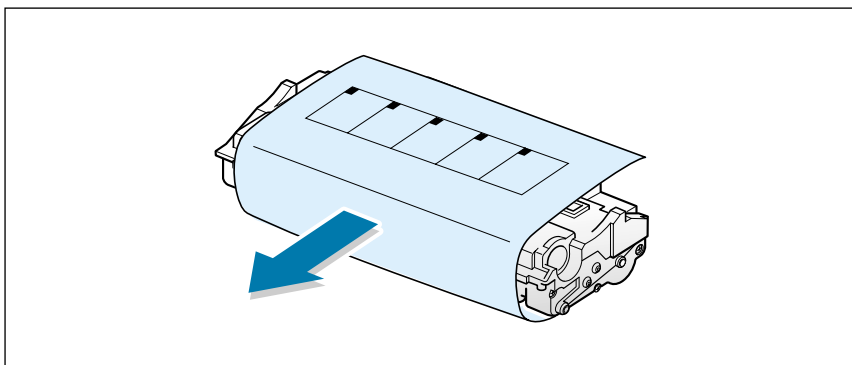


4. Shake the cartridge from side to side 5 or 6 times to distribute the toner evenly inside the cartridge.

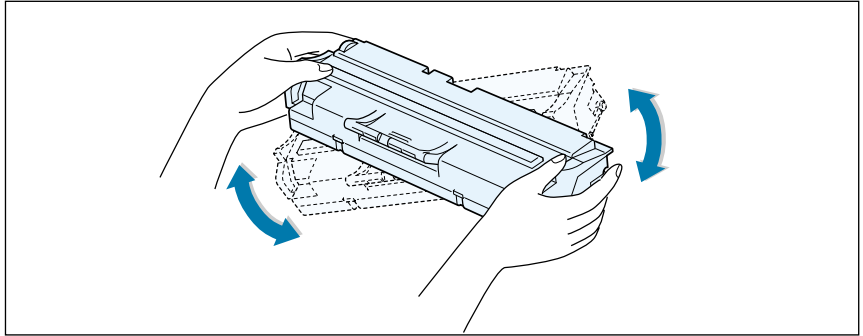

5. Find the cartridge slots inside the machine, one on each side. Grasp the handle and slide the cartridge down between the cartridge slots until it drops into place.

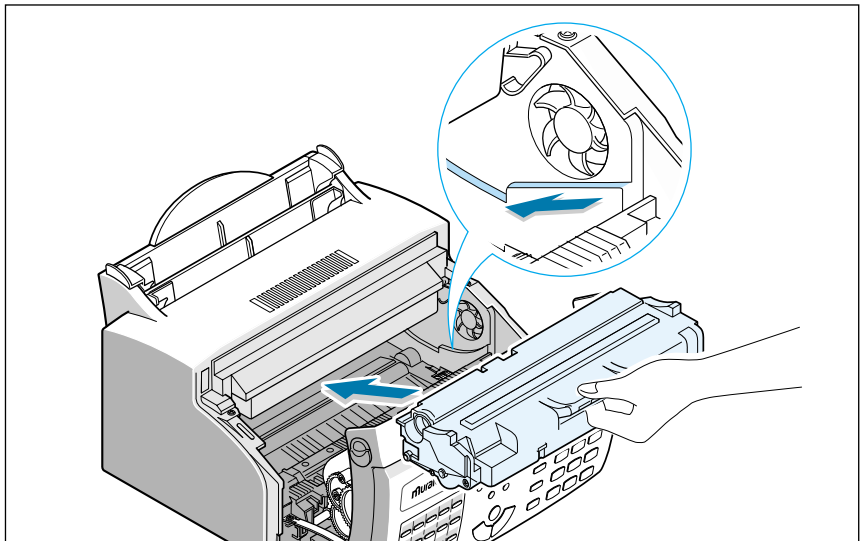

6. Close the cover firmly until it snaps closed.

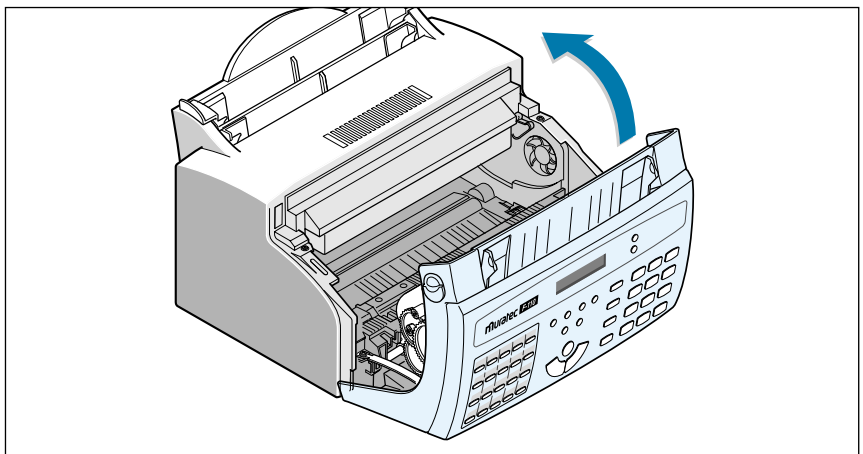


---

## Automatic Document Feeder Rubber Pad Replacement

You can purchase the ADF rubber from an authorized Muratec dealer.

1. Open the Front Panel Cover.
2. Insert a small flat blade screwdriver under the right and left sides of the ADF Holder.

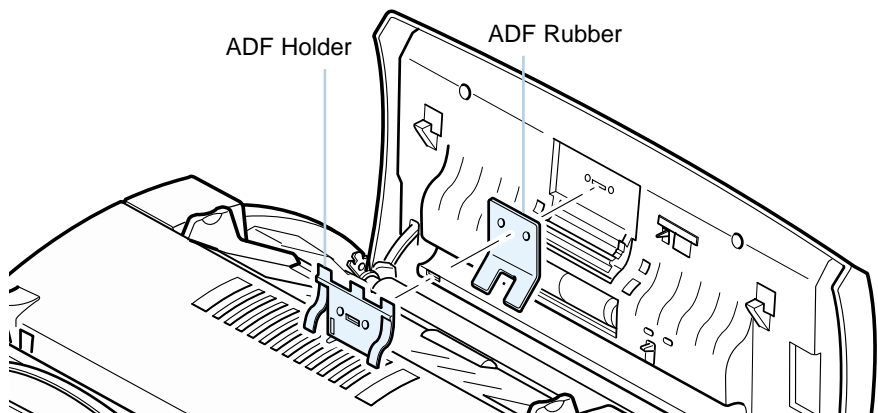

3. Apply upward pressure to release the two locking tabs on each side of the assembly.
4. Remove the assembly and replace the ADF Rubber.
5. Reassemble the components in the order shown in the diagram above.
6. Place the assembly back onto the ADF Holder.
7. Press down on the assembly until it locks into position.
8. Close the Front Panel.

# Memo

Chapter

# 6

## *Troubleshooting*

This chapter gives helpful information for what to do if you encounter a operating error.

It provides information on the following topics:

- ◆ Clearing Paper Jams
- ◆ LCD Error Messages
- ◆ Fax Problems
- ◆ General Printing Problems
- ◆ Print Quality Problems


---

## Clearing Paper Jams


### Document Jams While Sending a Fax

If a document jams while you are sending it, 'DOCUMENT JAM' will appear on the display. Do not pull the document out of the slot. If you do this, it could harm your machine.


1. Lift the front panel by grabbing the panel along the top edge.

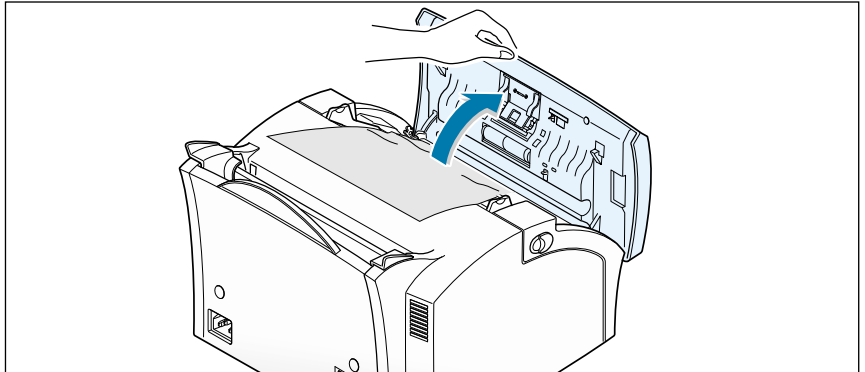

2. Carefully remove the jammed document.

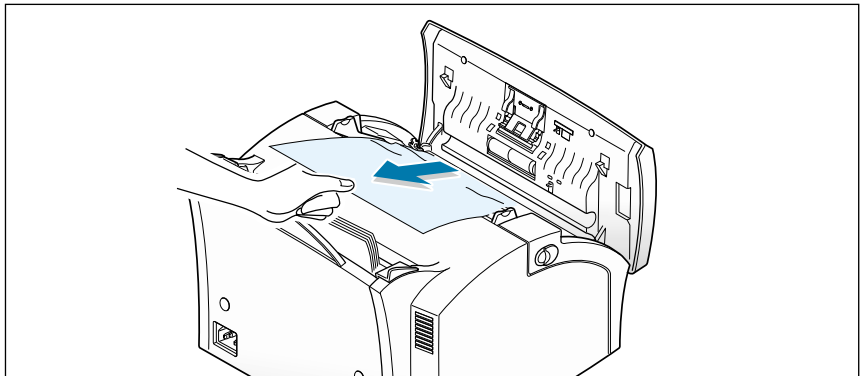

3. Close the front panel firmly until it clicks into place.

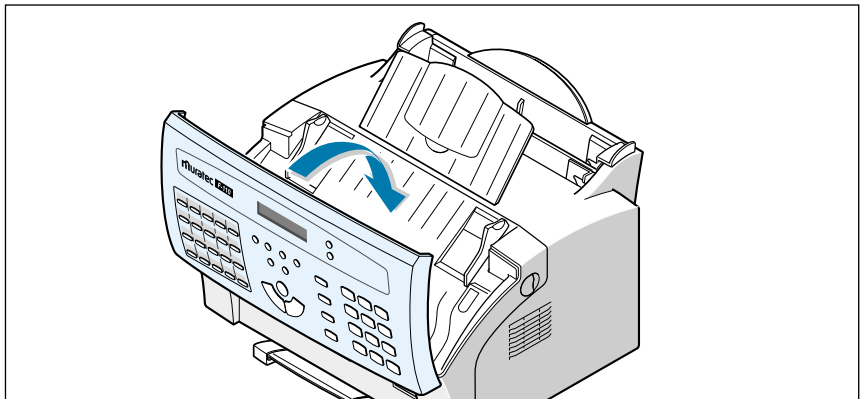


## Paper Jams While the Machine is Printing

By carefully selecting the paper type and by loading paper properly, you should be able to avoid most paper jams. If paper jams occur, an error message will appear on the display. Follow the steps below to clear the jam. To avoid tearing the paper, pull the jammed paper out gently and slowly.

### IF JAMMED IN THE PAPER INPUT TRAY


1. Remove the jammed paper by carefully pulling it out of the tray.

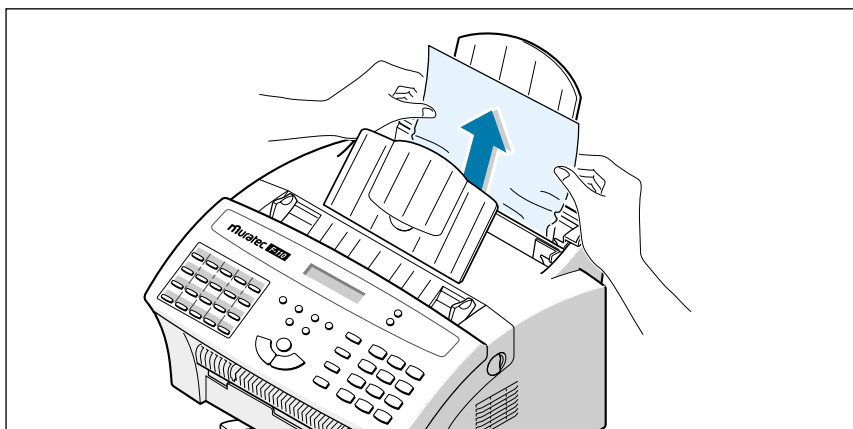

2. After you have removed the jammed paper, load new paper with the print side facing you.

### IF JAMMED IN THE PAPER OUTPUT AREA


If the paper jams as it exits to the paper output tray, and a long portion of the paper is visible, pull the paper straight out.

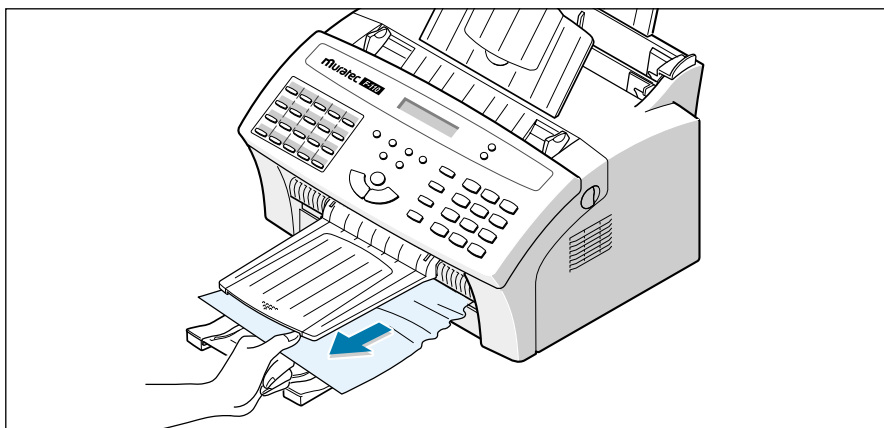


If there is any resistance, and the paper does not move immediately when you pull, stop pulling. Continue with the next step.

## IF JAMMED INSIDE THE MACHINE


1. Pulling the cover release buttons toward you, open the cover.

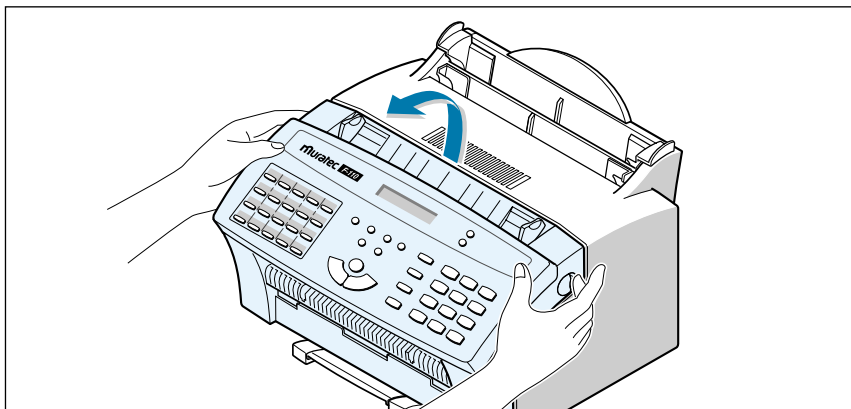

2. Remove the toner cartridge.

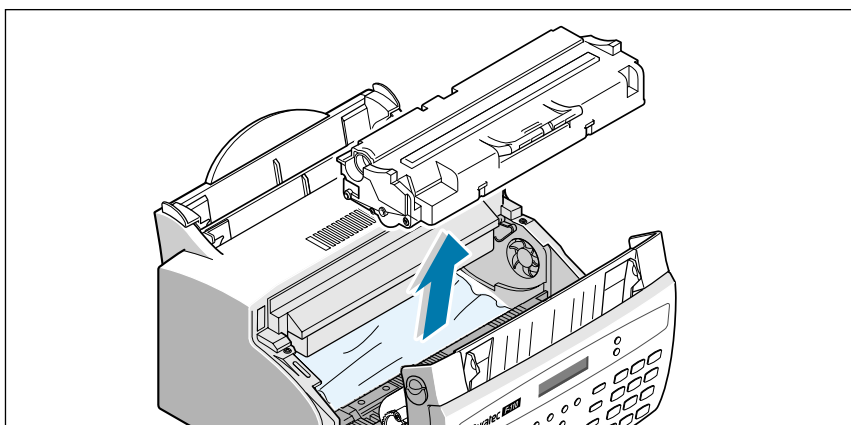

3. Remove the jammed paper by carefully pulling it out of the machine.

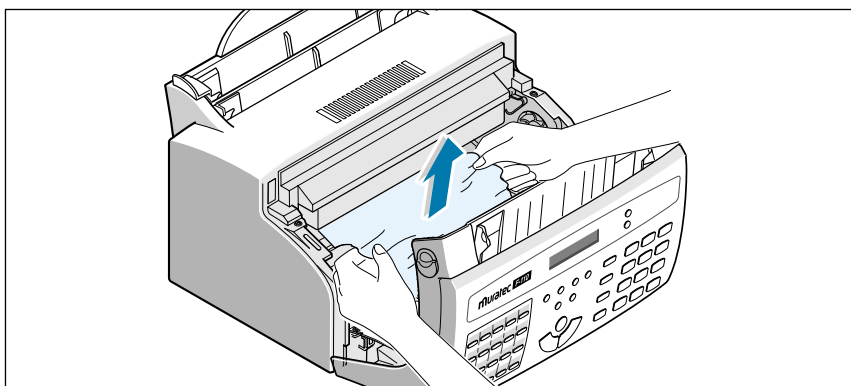

4. Check that there is no other paper inside the machine.
5. Replace the toner cartridge and close the cover.

## Tips for Avoiding Paper Jams

By carefully selecting print materials and by loading paper properly, you should be able to avoid most paper jams. If jams do occur, follow the steps outlined in "Clearing Paper Jams" starting on [page 6.1](#). If jams occur frequently, make sure that you are following these preventative tips:

- Follow the procedures in "Loading Paper" on [page 1.15](#) to load paper properly. Make sure that the adjustable guides are positioned correctly.
- Do not overload the paper. Up to 150 sheets can be loaded in the automatic paper input tray at a time and the manual input tray holds only one sheet at a time.
- If you are needed to add more sheets of paper while printing, remove the remaining paper from the tray at first. Then, reinsert them with the new paper. Note that adding new paper into the remains in the tray may cause paper jams or multiple feeding.
- Envelopes with self-stick adhesives may cause wrinkling, creasing, or jams, and could even damage your machine.
- Fan stacks of labels or transparencies before loading them into the automatic paper input tray. If jams occur when using the paper input tray, try feeding one sheet at a time in the manual input tray.
- Do not load wrinkled, creased, damp, or highly curled paper.
- Do not mix paper sizes in the paper input tray.
- Use only recommended print media.
- Make sure that the recommended print side is facing up when loading it in the paper input tray.
- Keep print media stored in a suitable environment.

## LCD Error Messages

Display	Meaning	Solution
DOCUMENT JAM	The loaded document has jammed in the feeder.	Clear the document jam.
DOOR OPEN	The front cover is not securely latched.	Press down on the cover until it clicks in place.
FUSER ERROR	There is a problem in the fuser unit.	Unplug the power cord and plug it back in. If the problem still persists, please call for service.
JAM/NO CARTRIDGE	Recording paper has jammed inside the unit, or the toner cartridge is not installed.	Clear the jam, or install the cartridge.
LINE ERROR	Your unit cannot connect with the remote machine, or has lost contact because of a problem on the phone line.	Try again. If failure persists, wait an hour or so for the line to clear, then try again. Or, turn the ECM mode on. See 'Setting User-Selectable System Options' on <a href="#">page 3.2</a> .
LOAD DOCUMENT	You have attempted to set up a sending operation without a document.	Load a document and try again.
LSU ERROR	A problem has occurred in the LSU (Laser Scanning Unit).	Unplug the power cord and plug it back in. If the problem still persists, please call for service.
MEMORY FULL	The memory is full.	Either delete unnecessary documents, retransmit after more memory becomes available or split the transmission into more than one operation.
NO ANSWER	The remote machine has not answered after all the redial attempts.	Try again. Make sure the remote machine is operational.
NO. NOT ASSIGNED	The one-touch or speed dial location you tried to use has no number assigned to it.	Dial the number manually with the keypad, or assign a number.

Display	Meaning	Solution
NO PAPER	The recording paper has run out.	Load the recording paper.
OVER HEAT	The printer head has overheated.	Please wait until it cools down. If you cannot solve the problem, please call for service.
PAPER JAM 0	Recording paper has jammed in the paper feeding area.	Press <b>STOP</b> and clear the jam. See <a href="#">page 6.1</a> .
PAPER JAM 2	Jammed paper still remains inside the unit.	Clear the jam. See <a href="#">page 6.1</a> .
POLLING ERROR	The remote fax machine you want to poll is not ready to respond to your poll. Or When setting up to poll another fax machine, you have used an incorrect poll code.	The remote operator should know in advance that you are polling and should have their fax unit loaded with the original document.  Enter the correct poll code.
POWER FAILURE	A power failure has occurred.	If documents have been stored in the memory, a 'Power Failure Report' will be automatically printed when the power is restored.
RECEIVE ERROR	A fax has not been received successfully.	A communication error has occurred. Ask the sender to try again.
RETRY REDIAL ?	The machine is waiting for a specified time interval to redial a previously busy station.	You can press <b>START/ENTER</b> to immediately redial, or <b>STOP</b> to cancel the redial operation.
SEND ERROR	Your fax has not gone through successfully.	A communication error has occurred. Try again.
TONER EMPTY	The toner cartridge has run out. The machine stops.	Replace with a new toner cartridge.
TONER LOW	The toner is almost empty.	Take out the toner cartridge and gently shake it. By doing this, you can temporarily re-establish printing operations.
WARMING UP	The printer is warming up and is off-line.	Wait until the machine is on-line.

---

## Fax Problems

Symptom	Cause and Solution
The machine is not working, there is no display and the buttons are not responding.	<ul style="list-style-type: none"><li>• Unplug the power cord and plug it in again.</li><li>• Check that your socket is active.</li></ul>
No dial tone.	<ul style="list-style-type: none"><li>• Check that the phone line is connected properly.</li><li>• Check that the phone socket in the wall by plugging in another phone.</li></ul>
The numbers stored in the memory do not dial correctly.	<ul style="list-style-type: none"><li>• Make sure that the numbers are stored in the memory correctly.</li><li>• Print a Phonebook list. See <a href="#">page 3.39</a>.</li></ul>
The document will not feed into the machine.	<ul style="list-style-type: none"><li>• Make sure that the document is not wrinkled and you are putting it in correctly. Check that the document is the right size, not too thick or thin.</li><li>• Make sure that the cover is firmly closed.</li></ul>
You cannot receive faxes automatically.	<ul style="list-style-type: none"><li>• The FAX mode should be selected.</li><li>• Is there paper in the machine?</li><li>• Check if the display shows 'MEMORY FULL.'</li></ul>
Your machine cannot receive faxes manually.	<ul style="list-style-type: none"><li>• Did you hang up the handset of the machine before you pressed <b>START/ENTER</b>?</li></ul>
Your machine will not transmit.	<ul style="list-style-type: none"><li>• Make sure that the document is loaded face down.</li><li>• 'TX' should show up on the display.</li><li>• Check the other machine you are sending to, see if it can receive your fax.</li></ul>




Symptom	Cause and Solution
You cannot poll another machine.	<ul style="list-style-type: none"> <li>• The fax machine you are polling may use a poll code.</li> </ul>
The incoming fax has blank spaces or you received a poor-quality copy.	<ul style="list-style-type: none"> <li>• The machine sending you the fax may be faulty.</li> <li>• The fax machine sending you a fax may have a dirty scan glass.</li> <li>• A noisy phone line can cause line errors.</li> <li>• Check your machine by making a copy.</li> <li>• The toner cartridge may be empty.</li> </ul>
Are some of the words on the incoming fax stretched?	<ul style="list-style-type: none"> <li>• The machine sending you the fax had a temporary document jam.</li> </ul>
There are lines on the copies or documents you send.	<ul style="list-style-type: none"> <li>• Check your scan glass for marks, and clean it. See <a href="#">page 5.5</a>.</li> </ul>
The machine dials a number, but fails to make a connection with another fax machine.	<ul style="list-style-type: none"> <li>• The other fax machine may be turned off, out of paper, or cannot answer incoming calls. Speak with the other machine operator and ask them to sort out the problem.</li> </ul>
You cannot store a document in the memory.	<ul style="list-style-type: none"> <li>• There may not be enough memory to store the document. If the display shows a 'MEMORY FULL' message, delete any documents you no longer need from the memory, then restore the document.</li> </ul>
Blank areas appear at the bottom of each page or on other pages, with only a small strip of text printed at the top.	<ul style="list-style-type: none"> <li>• You may have chosen the wrong paper settings in the user option setting. See <a href="#">page 3.3</a> to choose a proper paper size.</li> </ul>


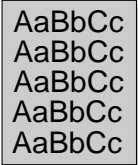

## General Printing Problems




Problem	Possible Cause and Remedy
Your machine does not print.	<ul style="list-style-type: none"><li>• A paper jam has occurred. Remove the jammed paper. See <a href="#">page 6.1</a>.</li><li>• The toner cartridge is not installed properly. Remove and reinsert the toner cartridge.</li><li>• The printer cable is not connected properly. Check the printer cable connection.</li><li>• The printer cable is defective. Swap the cable with one known to work.</li><li>• The port setting is incorrect. Check the Windows printer settings to make sure that the print job is being sent to the correct port (for example, LPT1).</li><li>• The printer properties may be configured incorrectly. Check the application to make sure that all print settings are correct.</li><li>• The printer driver may be incorrectly installed. Uninstall the MFP driver and reinstall the MFP driver. Then try printing a test page.</li></ul>
The paper is not feeding into the machine.	<ul style="list-style-type: none"><li>• Paper has not been inserted correctly. Remove and reinsert the paper correctly. See 'Using Automatic Paper Input Tray' on <a href="#">page 4.3</a> or 'Using Manual Paper Input Tray' on <a href="#">page 4.5</a>.</li><li>• There is too much paper in the paper input tray. Remove some of the paper from the input tray.</li></ul>
The paper keeps jamming.	<ul style="list-style-type: none"><li>• There is too much paper in the paper input tray. Remove some of the paper from the tray. (If printing onto envelopes or labels, insert them one at a time in the manual paper input tray.)</li><li>• The paper setting method may be incorrect. If printing onto envelopes, insert the envelopes so that there is a gap of approximately 1 mm (1/32") between the left and right edge of the envelopes at the paper guide.</li></ul>






Problem	Possible Cause and Remedy
Half of the page is blank.	<ul style="list-style-type: none"> <li>• The page layout is too complex. Simplify the page layout and remove as many unnecessary graphics from the document as possible.</li> <li>• The page orientation setting may be incorrect. Change the page orientation in the Printer Properties dialogue box.</li> <li>• The paper size and the software paper size settings do not match. Insert the correct paper into the machine or change the software paper size settings.</li> <li>• Scaling may be set to less than 100%. Change the Scaling setting in the Printer Properties dialogue box.</li> <li>• The printer cable specifications may be incorrect. Use or replace the cable with an IEEE-1284 rated cable.</li> </ul>
Your machine prints the wrong data, or it prints incorrect characters.	<ul style="list-style-type: none"> <li>• The printer cable might not be connected properly. Check the printer cable connection.</li> <li>• There may be a problem with the printer driver software. Exit Windows and reboot the computer. Turn the printer off and then back on again.</li> <li>• The printer cable specifications may be incorrect. Use or replace the cable with an IEEE-1284 rated cable.</li> </ul>
Printing is too slow.	<ul style="list-style-type: none"> <li>• If using Windows 95/98/Me, the Spooling Setting may be set incorrectly. From the <b>Start</b> menu, select <b>Settings</b> and <b>Printers</b>. Click your printer icon with the right mouse button, select <b>Properties</b>, click the <b>Details</b> tab, and then click the <b>Spool Settings</b> button. Select the desired spool setting from the available choices.</li> <li>• If you are using Windows NT/2000/XP, the Scheduling setting may be set incorrectly. From the <b>Start</b> menu, select <b>Settings</b> and <b>Printers</b>. Click your printer icon with the right mouse button, select <b>Properties</b>, click the <b>Scheduling</b> tab. Then, select the desired scheduling setting from the available choices.</li> </ul>
The following message appears on the computer screen: Scanner is busy receiving or printing data. When the current job is completed, tray again.	There may be a copying or printing job in progress. When the current job is completed, try the job again.



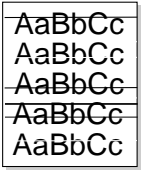
## Print Quality Problems

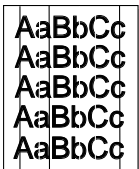
Problem	Possible Cause and Remedy
<p>Light or faded print</p> 	<p>If a vertical white streak or faded area appears on the page:</p> <ul style="list-style-type: none"> <li>• The toner supply is low. You may be able to temporarily extend the toner cartridge life. See "Replacing the Toner Cartridge" on <a href="#">page 5.7</a>. If this does not improve the print quality, install a new toner cartridge.</li> <li>• The paper may not meet paper specifications (for example, the paper is too moist or too rough). See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• If the whole page is light, Toner Save Mode may be on. Turn the Toner Save Mode option off on front panel or within the printer properties as your setting. See <a href="#">page 3.3</a> and <a href="#">4.11</a> respectively.</li> <li>• A combination of faded and smeared defects may indicate that the toner cartridge needs cleaning. See "Cleaning the OPC Drum" on <a href="#">page 5.2</a>.</li> <li>• The surface of scanner parts inside the machine may be dirty. See "Cleaning the Document Scanner" on <a href="#">page 5.5</a>.</li> </ul>
<p>Toner specks</p> 	<ul style="list-style-type: none"> <li>• The paper may not meet paper specifications. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• The transfer roller area may be dirty. See "Cleaning the Inside" on <a href="#">page 5.4</a>.</li> <li>• The paper path may need cleaning. See "Cleaning the Inside" on <a href="#">page 5.4</a>.</li> <li>• The surface of the scanner parts may need cleaning. See "Cleaning the Document Scanner" on <a href="#">page 5.5</a>.</li> </ul>
<p>Vertical lines</p> 	<p>If black vertical streaks appear on the page:</p> <ul style="list-style-type: none"> <li>• The photosensitive drum inside the toner cartridge has probably been scratched. Install a new toner cartridge.</li> </ul>

Problem	Possible Cause and Remedy
<p>Dropouts</p> 	<p>If faded areas, generally rounded, occur randomly on the page:</p> <ul style="list-style-type: none"> <li>• A single sheet of paper may be defective. Try reprinting the job.</li> <li>• The moisture content of the paper is uneven or the paper has moist spots on its surface. Try a different kind or brand of paper. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• The paper lot is bad. The manufacturing processes can cause some areas to reject toner. Try a different kind or brand of paper.</li> <li>• The toner cartridge may be defective. See "Vertical repetitive defects" on <a href="#">page 6.13</a>.</li> <li>• If these steps do not correct the problems, contact a service representative.</li> </ul>
<p>Gray background</p> 	<p>If the amount of background toner shading becomes unacceptable, the procedures below may help to clear the condition:</p> <ul style="list-style-type: none"> <li>• Change the paper to a lighter weight. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Check the printer's environment; very dry (low humidity) or high humidity (higher than 80 % RH) conditions can increase the amount of background shading.</li> <li>• Install a new toner cartridge.</li> <li>• Adjust the shading setting. See "Adjusting Shading" on <a href="#">page 5.2</a>.</li> </ul>
<p>Toner smear</p> 	<ul style="list-style-type: none"> <li>• Clean the inside of the printer. See "Cleaning the Inside" on <a href="#">page 5.4</a>.</li> <li>• Check the paper type and quality. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Try installing a new toner cartridge.</li> </ul>

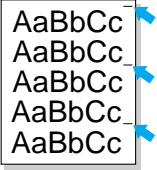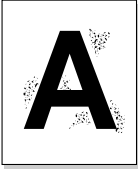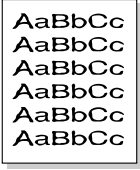Problem	Possible Cause and Remedy
<p>Vertical repetitive defects</p> 	<p>If marks repeatedly appear on the printed side of the page at even intervals:</p> <ul style="list-style-type: none"> <li>• The toner cartridge may be damaged. Print a cleaning sheet several times by cleaning the OPC drum (see <a href="#">page 5.2</a>). After the printout, if the same problems persist, install a new toner cartridge.</li> <li>• Parts in the machine may have toner on them. If the defects occur on the back of the page, the problem will likely correct itself after a few more pages.</li> <li>• The fusing assembly may be damaged. Contact a service representative.</li> </ul>
<p>Background scatter</p> 	<p>Background scatter results from bits of toner distributed on the printed page.</p> <ul style="list-style-type: none"> <li>• The paper may be too damp. Try printing with a different batch of paper. Do not open packages of paper until necessary so that the paper does not absorb too much moisture from the air.</li> <li>• If background scatter occurs on an envelope, change your printing layout to avoid printing over areas that have overlapping seams on the reverse side. Printing on seams can cause this problem.</li> <li>• If background scatter covers the entire surface of a printed page, adjust the print resolution through your software application or the printer properties.</li> </ul>
<p>Misformed characters</p> 	<ul style="list-style-type: none"> <li>• If characters are improperly formed, producing hollow images, the paper stock may be too slick. Try a different paper. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• If characters are improperly formed, producing a wavy effect, the scanner unit may need service. Verify that it also occurs on a demo page.</li> </ul> <p>Press * on the front panel when the machine is ready.</p> <p>If you need service, contact a service representative.</p>

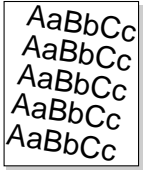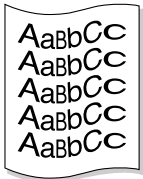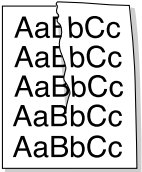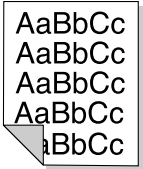Problem	Possible Cause and Remedy
<p>Page skew</p> 	<ul style="list-style-type: none"> <li>• Check the paper type and quality. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Make sure that the paper or other media is loaded correctly and the guides are not too tight or too loose against the paper stack.</li> </ul>
<p>Curl or wave</p> 	<ul style="list-style-type: none"> <li>• Check the paper type and quality. Both high temperature and humidity will cause paper to curl. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Turn over the stack of paper in the input tray. Also try rotating the paper 180° in the input tray.</li> </ul>
<p>Wrinkles or creases</p> 	<ul style="list-style-type: none"> <li>• Make sure that paper is loaded properly.</li> <li>• Check the paper type and quality. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Turn over the stack of paper in the input tray. Also try rotating the paper 180° in the tray.</li> </ul>
<p>Back of printouts dirty</p> 	<ul style="list-style-type: none"> <li>• The transfer roller area may be dirty. See "Cleaning the Inside" on <a href="#">page 5.4</a>.</li> <li>• Check to see if the toner is leaking. Clean inside the machine. See <a href="#">page 5.4</a>.</li> </ul>
<p>Black pages</p> 	<ul style="list-style-type: none"> <li>• The toner cartridge may not be installed properly. Remove the cartridge and reinsert it.</li> <li>• The toner cartridge may be defective and need replacing. Install a new toner cartridge.</li> <li>• The printer may require repairs. Contact a service representative.</li> </ul>

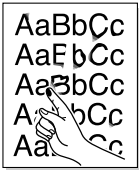Problem	Possible Cause and Remedy
<p>Loose toner</p> 	<ul style="list-style-type: none"> <li>• Clean the inside of the printer.</li> <li>• Check the paper type and quality. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> <li>• Try installing a new toner cartridge.</li> <li>• If the problem persists, the printer may require repairs. Contact a service representative.</li> </ul>
<p>Character Voids</p> 	<p>Character voids are white areas within the parts of characters that should be solid black:</p> <ul style="list-style-type: none"> <li>• If you are using transparencies when you experience this problem, try another type of transparency. (Because of the composition of transparency media, some character voids are normal.)</li> <li>• You may be printing on the wrong surface on the paper. Remove the paper and turn it around.</li> <li>• The paper may not meet paper specifications. See "Paper Type and Size" for faxing on <a href="#">page 1.17</a> and "Selecting Print Media" for PC printing on <a href="#">page 4.1</a>.</li> </ul>
<p>Horizontal stripes</p> 	<p>If horizontally aligned black streaks or smears appear:</p> <ul style="list-style-type: none"> <li>• The toner cartridge may not be installed properly. Remove the cartridge and reinsert it.</li> <li>• The toner cartridge may be defective. Install a new toner cartridge.</li> <li>• If the problem persists, the printer may require repairs. Contact a service representative.</li> </ul>

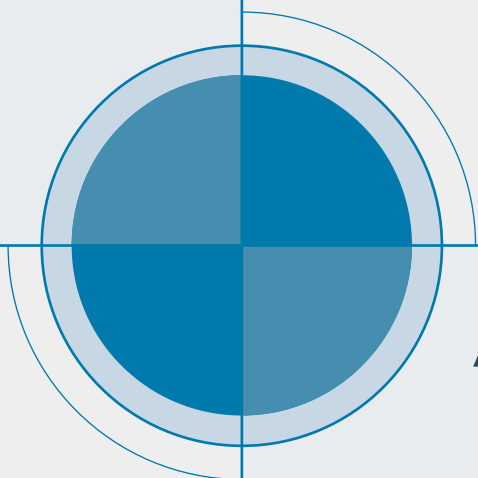

# ***Appendix***

## ◆ **Connecting Other Devices to the Phone Line**

## ◆ **Specifications**

General

Printer

Copy

Scanner

Fax

## ◆ **Safety Information**

## ◆ **Index**

---

## Connecting Other Devices to the Phone Line

You can connect other devices to the same phone line as the F-110.

### Deciding What to Connect

You have connected F-110 to a wall jack. Generally, there are three other devices that can be connected to the same phone line:

- a telephone
- an answering machine
- an external modem or a computer with an internal modem

Which of these you connect to this phone line depends on your configuration. Please see the following configurations.

#### **Situation 1**

You connected the F-110 to a wall jack with a phone line for fax calls only (a dedicated fax line).

You do not need to connect any other devices. However:

- You can connect an external modem or a computer with an internal modem to this phone line if you want to use the fax line to access the Internet or e-mail.
- You can connect an extra telephone to this wall jack if you would like to make outgoing voice calls.

To connect any of these devices to the same phone line, go to “Connecting Other Devices, Overview” on [page A.3](#). If you have another wall jack for this phone line, you can connect the extra phone, external modem or computer with internal modem to the other wall jack.

**Note:** Because this is a dedicated fax line, you should never have an answering machine or computer connected. If you are using computer voicemail, you must connect the computer with an internal modem or the external modem to your dedicated voice line. You will connect to the Internet or e-mail using the dedicated voice line.

### ***Situation 2***

You connected the F-110 to a wall jack with a phone line for fax and voice calls (a shared line).

Connect any other devices you have to this phone line. To connect the other devices you have to the same wall jack as the product, go to Appendix "Connecting Other Devices, Overview" on [page A.3](#).

If you have another wall jack for this phone line, you can connect some of the devices to that wall jack. However, if you have an answering machine or computer with voicemail, make sure to connect it to the same wall jack as the F-110.

### ***Special Situations***


You have two phone lines coming into one wall jack.

When you connected the F-110, you should have plugged it into a phone unit splitter connected to the wall jack. Proceed as if that side of the phone unit splitter is a phone line for fax calls only (a dedicated line). See "Situation 1" on [page A.1](#).

You have one phone line with two phone numbers and distinctive ring service.

Use the same guidelines in "Situation 2" above for connecting other devices. You can change distinctive ring settings later.

## Connecting Other Devices, Overview

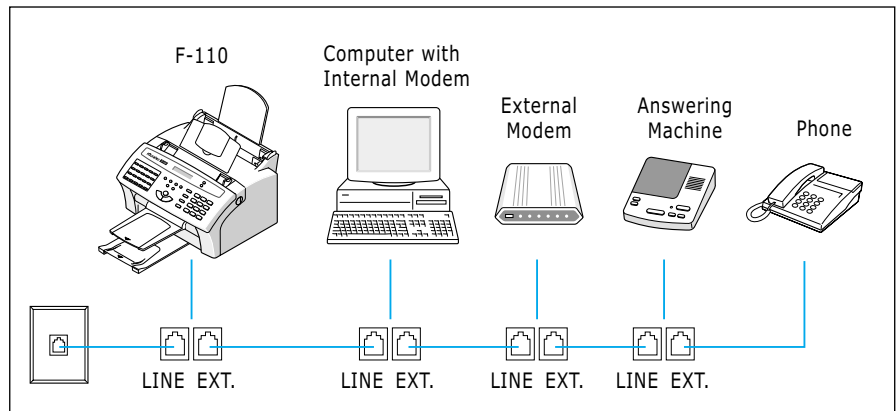

Connect other device in the order indicated.

**Note:**

- The F-110 must be connected to a wall jack. If it isn't, it cannot answer incoming fax calls.
- As the drawing indicates, always plug the **LINE** jack into one device and the **EXT.** jack into another device.
- Some computers have a second **LINE** jack which is used to connect the computer to a dedicated voice line. If you have a second **LINE** jack, check your computer's documentation to ensure you are connecting to the correct **LINE** jack.

---

## Specifications

### General

Item	Specification and Description
Size (W x D x H) mm	313 x 356 x 195 mm
Weight (with accessories)	7.7 Kg
Interface	Parallel: IEEE 1284

### Printer

Item	Specification and Description
Technology	Laser Beam
Paper Path-Recording	Rear to Front
Paper Path-Document	Rear to Front
Speed	8 ppm mono, 5% Coverage in draft mode
Resolution	600 x 600 dpi
Effective Printing Width	Letter: 8.2 in.; A4:202 mm
Manual Feed	Rear to Front
O/S	Windows 95/98/Me/NT/2000/XP
Emulation	GDI

### Copy

Item	Specification and Description
Resolution	300 x 300 dpi
BW Contrast Control	Normal, Darken, Lighten, Photo
Multiple Copy	99 pages
Reduce & Enlarge	50 ~ 200 %

## Scanner

Item	Specification and Description
Scan Method	Contact Image Sensor (CIS)
Scan Width	Max. 216 mm, Effective: 210 mm
Scan Resolution-Optical	300 x 300 dpi
Scan(Copy) Speed	6 sec/page
Quick Scan Speed	3 sec/page
Feeding Method	Sheet-fed
ADF Capacity	Max 20 sheets
BW Contrast Control	Normal, Darken, Lighten, Photo

## Fax

Item	Specification and Description
Modem Speed	33.6 kbps
Compatibility	ITU-T Group 3
Resolution (Selectable by 1-key & LCD)	Standard: 203 x 98 dpi (Default) Fine: 203 x 196 dpi Superfine: 300 x 300 dpi
Compression	MH/MR/MMR
ECM Support	Yes
Halftone	Photo: 64 grayscales
TAD Interface	Yes
Memory	2 MB
Memory Backup	30 Min.
Receive Mode	TEL, FAX, AUTO, ANS/FAX

# ***Safety Information***

---

## **Important Precautions and Safety Information**

When using this fax machine, follow these basic safety precautions to reduce risk of fire, electric shock, and injury:

1. Read and understand all instructions.
2. Use common sense whenever operating electrical appliances.
3. Follow all warnings and instructions marked on the product and in the literature accompanying the product.
4. If an operating instruction appears to conflict with safety information, heed the safety information. You may have misunderstood the operating instruction. If you cannot resolve the issue, contact your sales or service representative for assistance.
5. Unplug the fax machine from the AC wall socket and telephone jack before cleaning. Do not use liquid or aerosol cleaners. Use only a damp cloth for cleaning.
6. Do not place the fax machine on an unstable cart, stand, or table. It may fall, causing serious damage and/or injury.
7. Your fax machine should never be placed on, near, or over a radiator, heater, air conditioner or ventilation duct.
8. Do not allow anything to rest on the power or telephone cord.
9. Do not overload wall outlets and extension cords. This can diminish performance, and may result in fire or electric shock.
10. Do not allow pets to chew on the AC power, telephone, or PC interface cords.
11. Never push objects of any kind into the fax machine through the case or cabinet openings. They may touch dangerous voltage points, creating a risk of fire or shock. Never spill liquid of any kind onto or into the fax machine, this can cause serious damage to the machine.

12. To reduce the risk of electric shock, do not disassemble the fax machine. Take it to a qualified Muratec service technician when repair work is required. Opening or removing covers may expose you to danger. Incorrect reassembly could cause electric shock when the unit is subsequently used.
13. Unplug the machine from the telephone jack, PC, and AC wall outlet, and refer servicing to qualified service personnel under the following conditions:
  - When any part of the power cord, plug, or connecting cable is damaged or frayed.
  - If liquid has been spilled into the product.
  - If the product has been exposed to rain or water.
  - If the product does not operate properly after instructions have been followed.
  - If the product has been dropped, or the cabinet appears damaged.
  - If the product exhibits a sudden and distinct change in performance.
14. Adjust only those controls covered by the operating instructions. Improper adjustment of other controls may result in damage, and may require extensive work by a qualified Muratec service technician to restore the product to normal operation.
15. Avoid using this fax machine during a lightning storm. There may be a remote risk of electric shock from lightning. If possible, unplug the AC power and telephone for the duration of the lightning storm.
16. SAVE THESE INSTRUCTIONS.

---

## In Case of Interference

In normal operation, your MURATEC fax machine produces and uses radio-frequency energy. In some cases, this can cause interference to other electronic equipment. Part 15 of the FCC rules establishes guidelines limiting the amount of radio-frequency energy which may be produced by electronic equipment. Tests have proven that your Muratec FAX machine meets or exceeds these guidelines, and is classified a "Class B Digital Device" for operation in a residential environment. When installed and operated according to instructions, your MURATEC fax machine should not cause interference to the types of equipment expected to be found in a normal residential environment.

Unauthorized changes or modifications could void the user's authority to operate the equipment.

In the event your MURATEC fax machine appears to cause interference to other electronic equipment, it can often be easily remedied. First determine if the source of interference really is your FAX machine. To do this, turn its power off and on while observing the equipment experiencing the interference. If the interference disappears when you turn the FAX machine off, the following steps can be very effective in correcting interference problems:

- Connect the FAX machine to an AC outlet which is on a different circuit breaker from the equipment experiencing interference.
- Increase the distance between the FAX machine and the equipment experiencing interference.
- Cable TV amplifiers and splitters are extremely prone to interference. Be certain that they are as far as possible from the FAX machine and its AC power and telephone cords.
- Replace "twin lead" antenna wire with shielded coaxial cable, and use proper connectors and adaptors.
- Turn or relocate the receiving antenna. In most cases this is easily done by simply moving a radio. A TV antenna may need to be re-oriented or installed in another area of the building.
- Consult your dealer, a reputable radio/TV technician, or an Amateur Radio Operator for help.

\* To locate an Amateur Radio Operator in your area, contact The American Radio Relay League, 610 Main St., Newington, CT 06111.

---

## Fax Branding

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission the following information:

- (1) the date and time of transmission
- (2) identification of either business, business entity or individual sending the message; and
- (3) telephone number of either the sending machine, business, business entity or individual.

The Telephone Company may make changes in its communications facilities, equipment operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

---

## Telephone Company Information

### FCC IDENTIFICATION NUMBER

The Ringer Equivalence Number and FCC Registration Number for this equipment may be found on the label located on the bottom or rear of the machine. In some instances you may need to provide these numbers to the telephone company.

### RINGER EQUIVALENCE NUMBER

The Ringer Equivalence Number (REN) is a measure of the electrical load placed on the telephone line, and is useful for determining whether you have "overloaded" the line. Installing several types of equipment on the same telephone line may result in problems making and receiving telephone calls, especially ringing when your line is called. The sum of all Ringer Equivalence Numbers of the equipment on your telephone line should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on your line. If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network.

### **WARNING:**

FCC Regulations state that changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment. In the event that terminal equipment causes harm to the telephone network, the telephone company should notify the customer that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service, providing that they:

- a) Promptly notify the customer.
- b) Give the customer an opportunity to correct the equipment problem.
- c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

### **You should also know that:**

- Your Muratec FAX machine is not designed to be connected to a digital PBX system.
- If you intend to use a computer modem or fax modem on the same phone line as your FAX machine, you may experience transmission and reception problems with all the equipment. It is recommended that no other equipment, except for a regular telephone, share the line with your FAX machine.
- If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for both the power and the telephone lines. Surge protectors can be purchased from your dealer or telephone and electronic specialty stores.
- When programming emergency numbers and/or making test calls to emergency numbers, use a non-emergency number to advise the emergency service dispatcher of your intentions. The dispatcher will give you further instructions on how to actually test the emergency number.
- This equipment may not be used on coin service or party lines.
- This telephone provides magnetic coupling to hearing aids.
- You may safely connect this equipment to the telephone network by means of a standard modular jack, USOC RJ-11C.

# Index

## A

- adding documents 3.35
- address label, using 3.24
- adjusting shading 5.2
- alert tone, setting 3.2
- automatic dial
  - one-touch dial 3.22
  - speed dial 3.24
  - using phonebook 3.26
- automatic input tray
  - loading paper 1.15, 4.3
  - paper source setting 4.10

## B

- broadcasting transmission 3.29

## C

- cancel
  - print job 4.12
  - scheduled operation 3.35
- cleaning
  - document scanner 5.5
  - machine 5.4
  - OPC drum 5.2
- connecting
  - other devices A.1
  - parallel cable 1.14
  - phone line 1.12
  - power cord 1.15
- contents 1.3
- copying
  - using advanced features 3.19
  - overview 3.18
  - single copying 3.18

## D

- date and time, setting 1.20
- delayed transmission 3.30
- document contrast, setting 3.9
- document feeder, loading 3.10
- document resolution, setting 3.9
- document scanner, cleaning 5.5
- driver,
  - access 4.9
  - install 2.2
  - remove 2.11

## E

- entering, name 3.20
- error messages 6.5

## F

- fax problem, solving 6.7
- fitting document to selected paper 4.16
- forwarding received faxes 3.37
- front panel, features 1.6

## G

- group dialing 3.41

## H

- handset, inserting 1.11

## I

- install
  - printer software 2.2
  - toner cartridge 1.18
- introduction
  - F-110 1.1
  - SmarThru 2.1

## L

- load, document 3.10
- load, paper
  - in the automatic input tray 1.15, 4.3
  - in the manual input tray 4.5
- location, choosing 1.9

## M

- manual input tray
  - loading paper 4.5
  - paper source setting 4.10
- memory
  - clearing 5.1
  - searching 3.28
- monitoring status 3.36
- multiple pages on one sheet, print 4.14

## N

- network, setting 4.24
- notifying toner low 5.3
- number and name, setting 1.21

## O

- one-touch dialing 3.22
- one-touch label plate 3.24
- OPC drum, cleaning 5.2
- orientation 4.10
- overlay, using 4.20

## P

- paper
  - in automatic input tray 1.15, 4.3
  - in the manual input tray 4.5
  - selecting 1.17, 4.1
  - setting 3.3, 4.10
- paper jam, clear 6.1
  - document 6.1
  - inside the machine 6.3
  - output area 6.2
  - paper input tray 6.2
  - tips avoiding paper jams 6.4
- paper orientation, setting 4.10
- paper size, setting 4.10
- paper source, setting 4.10
- paper type, setting 4.10
- parallel, connection 1.14
- parts, identifying 1.4
- pause, inserting 3.22
- phone line, connection 1.12
- polling
  - reception 3.34
  - transmission 3.33
- poster, printing 4.17
- power, plugging 1.15
- power save mode 3.4
- print media *see paper*
- print quality problem, solving 6.11
- print quality, setting 4.11
- print resolution 4.11
- printer driver *see driver*
- printer software, install 2.2
- printing problem, solving 6.9
- printing
  - cancel 4.12
  - cleaning page 5.2
  - document 4.9
  - general problems, solving 6.9
  - help 4.13
  - in network environment 4.24
  - several pages per sheet 4.14
  - quality problems, solving 6.11
  - reports 3.39
- priority transmission 3.32

## **P (continued)**

problem, solving  
    error messages 6.5  
    fax 6.7  
    general printing 6.9  
    paper jam 6.1  
    print quality 6.11

## **Q**

quality, problems 6.11

## **R**

receiving fax  
    by an extension telephone 3.17  
    in ANS/FAX mode 3.16  
    in AUTO mode 3.16  
    in DRPD mode 3.14  
    in FAX mode 3.15  
    in TEL mode 3.17  
reception mode 3.14  
redialling  
    automatic 3.11  
    last number 3.12  
replacing, toner cartridge 5.7  
reports, printing 3.39

## **S**

scaling document 4.15  
searching, memory 3.28  
send  
    fax 3.11  
    flash 3.36

setting  
    alert tones 3.2  
    date and time 1.20  
    fax number and name 1.21  
    fax system 3.2  
    resolution and contrast 3.9  
    volume 3.1  
specifications A.4  
speed dialing 3.24  
storing  
    group dial 3.41  
    one-touch 3.22  
    speed dial 3.24  
supports, attaching 1.10  
system options 3.2  
system requirements, for software 2.2

## **T**

tape, removing 1.9  
toner cartridge  
    installing 1.18  
    replacing 5.7  
toner save mode 3.3, 4.11  
troubleshooting *see problem, solving*

## **U**

uninstall,  
    MFP driver 2.11  
    SmarThru software 2.13  
    using CD-ROM 2.15  
user-selectable options 3.3

## **V**

voice request 3.13  
volume, setting 3.1

## **W**

watermarks, printing 4.18



Muratec America, Inc.  
6400 International Pkwy. Suite 1500  
Plano, Texas 75093

[www.muratec.com](http://www.muratec.com)

**Item Number: OMF110**

