



PORTÉGÉ
G900

TOSHIBA

高機能携帯

User guide

© 2007 Toshiba Information Systems UK Limited. Toshiba and the Toshiba logo are trademarks of Toshiba Corporation in Japan and other countries.

Other trademarks and trade names may be used here to refer to the product. Toshiba disclaims proprietary interest in the marks and names of others.

G900-GB V1

Table of contents

Network services 5

Toshiba Corporation 6

EU Warranty 9

Licenses 10

Declaration of conformity 12

Health and safety 13

General 13

Operating environment 14

Electronic devices 15

Battery safety 15

AC adapter and cable safety 16

Emergency calls 17

Wireless LAN security 17

Bluetooth security 17

FCC notice 18

Information to user 18

FCC RF exposure information 19

European RF Exposure Information 20

Care and maintenance 22

Care and maintenance 22

Restarting your Toshiba phone 23

Resetting your Toshiba phone 23

Reinitialising your Toshiba phone 24

Getting started 25

Unpacking 25

Phone layout and functions
26

Today screen 29

Start menu 30

Display indicators 31

Installing the SIM card, battery and
miniSD card 34

Removing and reinserting the stylus 37

Using the stylus 37

Charging the battery 38

Switching the power on and off 39

Synchronising 40

Using the USB Host cable 41



Table of contents

Call functions 42

- Making a call 42
- Receiving a call 44
- In-call options 45
- Special dialling requirements 46
- Video telephony 47

Messaging 48

- Messaging options 48
- Text (SMS) messaging 49
- E-mail 51
- MMS messaging 56
- Windows Live Messenger 59

Text input 61

- Input methods 61
- Block Recognizer 61
- Keyboard 62
- Letter Recognizer 62
- Transcriber 63
- XT9 68
- Drawing and writing on the screen 68

Searching 69

Settings 71

- Volume control 71
- Reassigning button functions 71
- Setting the input method 72
- Security settings 72
- Customising your Start menu 75
- Owner information 75
- Phone settings 75
- Sounds and notifications 79
- Customising your Today screen 80
- Video call settings 81
- Viewing the About details 82
- Backlight settings 82
- Viewing certificate details 83
- Clock & alarm settings 83
- Customer feedback settings 84
- Setting storage card encryption 85
- Error Reporting 85
- Setting up external GPS 86
- Master Clear 86

Table of contents

Memory management settings 87
Power management settings 87
Regional settings 88
Removing Programs 88
Screen settings 88
Windows Update 89

Connectivity 90

Connecting to the Internet 90
Bluetooth 93
Beams 96
Checking for a Wireless LAN signal 97
Wireless Manager 98
USB to PC connection 98
USB mass storage 98

Applications & multimedia 99

Office Mobile 99
Calendar 101
Contacts 103
Internet Explorer 106
Messaging 108

Phone 109
Help 109
Games 109
ActiveSync 109
Calculator 109
Camera 110
File Explorer 112
Fingerprint Launcher 113
GoldKey 114
Internet Sharing 115
Java 115
Messenger 116
Notes 116
Opera Browser 117
Picsel Viewer 118
Pictures & Videos 118
Search 120
SIM Manager 120
SIM Toolkit 121
Tasks 121
Teleport 122
TIPTalk 124



Table of contents

Windows Live 127

Windows Media Player 128

Zoom 132

Specifications 134

Troubleshooting 137

Purchase record 138

Menu tree 139

Index 141



Network services

To use your Toshiba phone, you must have service from a wireless service provider. Many of the features in your Toshiba phone depend on features in the wireless network to function. These network services may not be available on all networks, or you may have to make specific arrangements with your service provider before you can utilise network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

This phone is a 3GPP GSM Release 99 terminal supporting GPRS service, and is designed to also support Release 97 GPRS networks. However, there may be some compatibility issues when using this phone in some Release 97 GPRS networks. For more information, contact your service provider.

The availability of particular products may vary by region. Please check with the dealer nearest to you.



Toshiba Corporation

IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR MOBILE PHONE AS ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED PHONE CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, PLEASE DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you (as the user) and TOSHIBA CORPORATION ("Toshiba") with regard to the copyrighted software installed in a Toshiba 3G mobile phone supplied to you (the "Phone").

Use or employment of any software installed in the Phone and related documentations (the "Software") will constitute your acceptance of these terms, unless separate terms are provided by the Software supplier on the Phone, in which case certain additional or different terms may apply. If you do not agree with the terms of this EULA, do not use or employ the Software.

1. **License Grant.** Toshiba grants to you a personal, non-transferable and non-exclusive right to use the Software as set out in this EULA. Modifying, adapting, translating, renting, copying, making available, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons, and removing any proprietary notices, labels or marks from the Software is strictly prohibited, except as expressly permitted in this EULA. Furthermore, you hereby agree not to create derivative works based on the Software.
2. **Copyright.** The Software is licensed, not sold. You acknowledge that no title to the intellectual property in the Software is or will be transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of Toshiba, Toshiba's affiliates, and/or their suppliers, and you will not acquire any rights to the Software, except as expressly set out in this EULA. You may keep a backup copy of the Software only so far as necessary for its lawful use. All copies of the Software must contain the same proprietary notices as contained in the Software and are subject to the terms of this EULA. All rights not

Toshiba Corporation

expressly granted under this EULA are reserved to Toshiba, Toshiba's affiliates and/or their suppliers.

- Reverse Engineering.** You agree that you will not attempt, and if you are a business organisation, you will use your best efforts to prevent your employees, workers and contractors from attempting, to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be excluded by mandatory applicable law and only if those actions are taken in accordance with such applicable law. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this license and the reversion of the rights granted hereunder to Toshiba.
- LIMITED WARRANTY.** Only during the warranty period for the Phone, Toshiba, Toshiba's affiliate, its suppliers or its authorized service company will repair or replace, at Toshiba's sole discretion, defective Software unless such defect results from acts or incidences beyond the reasonable control of Toshiba. EXCEPT AS PROVIDED IN THIS EULA: (A) TOSHIBA, TOSHIBA'S AFFILIATES, AND THEIR SUPPLIERS DISCLAIM ALL WARRANTIES, CONDITIONS OR OTHER TERMS (WHETHER EXPRESS OR IMPLIED), INCLUDING BUT NOT LIMITED TO WARRANTIES, CONDITIONS AND TERMS OF SATISFACTORY QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND (B) THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. YOU ACCEPT THAT SOFTWARE MAY NOT MEET YOUR REQUIREMENTS AND NO WARRANTY CAN BE GIVEN THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.



Toshiba Corporation

5. **LIMITATION OF LIABILITY.** TO THE FULLEST EXTENT LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES FOR (A) LOST BUSINESS OR REVENUE, BUSINESS INTERRUPTION, LOSS OF BUSINESS DATA; OR (B) CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND (WHETHER UNDER CONTRACT, TORT OR OTHERWISE) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY. THE ABOVE DISCLAIMER AND LIMITATION DOES NOT EXCLUDE OR LIMIT (A) LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY NEGLIGENCE; OR (B) ANY MANDATORY LEGAL RIGHT OR LIABILITY TO THE EXTENT THAT IT CANNOT

BE LAWFULLY EXCLUDED OR LIMITED UNDER APPLICABLE LAW. PLEASE MAKE AND RETAIN A COPY OF ALL DATA YOU HAVE INSERTED INTO YOUR PRODUCT, FOR EXAMPLE NAMES, ADDRESSES, PHONE NUMBERS, PICTURES, RINGTONES ETC, BEFORE SUBMITTING YOUR PRODUCT FOR A WARRANTY SERVICE, AS SUCH DATA MAY BE DELETED OR ERASED AS PART OF THE REPAIR OR SERVICE PROCESS.

6. **Laws.** This EULA will be governed by the laws of England and Wales. All disputes arising out of this EULA shall be subject to the exclusive jurisdiction of the English Courts.
7. **Export Laws.** Any use, duplication or employment of the Software involves products and/or technical data that may be controlled under the export laws of applicable countries or region, and may be subject to the approval of the applicable governmental authorities prior to export. Any export, directly or indirectly, in contravention of the export laws of applicable countries or region is prohibited.

Toshiba Corporation

8. **Third Party Beneficiary.** You agree that certain suppliers of the Software to Toshiba have a right as a third party beneficiary to enforce the terms of this EULA against you as a user.
9. **Transfers.** The Software may be transferred only as installed on the Phone to a lawful third party user, where that party accepts the terms of this EULA, which will continue to apply.
10. IF YOU ARE DEALING AS A CONSUMER IN THE UK AND THE SOFTWARE QUALIFIES AS 'GOODS', YOUR STATUTORY RIGHTS UNDER APPLICABLE LAW ARE NOT AFFECTED.

EU Warranty

Your Toshiba phone contains no user serviceable parts. For further information on service, please contact your retailer or service provider.



Licenses

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/ or their counterparts in other nations:

4,901,307 5,504,773 5,109,390 5,535,239

5,267,262 5,600,754 5,416,797 5,778,338

5,490,165 5,101,501 5,511,073 5,267,261

5,568,483 5,414,796 5,659,569 5,056,109

5,506,865 5,228,054 5,544,196 5,337,338

5,657,420 5,710,784

XT9 is trademark of Tegic Communications, Inc. Tegic Communications, an AOL Company.



Java™ and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.



Bluetooth™ is a trademark of Bluetooth SIG, Inc. USA.



This miniSD™ logo is a Trademark.



Licenses

Wi-Fi CERTIFIED is a Certification Mark of the Wi-Fi Alliance



PicseI, PicseI Powered, PicseI Viewer, PicseI File Viewer, PicseI Document Viewer, PicseI PDF Viewer and the PicseI cube logo are trademarks or registered trademarks of PicseI Technologies and/or its affiliates.



ArcSoft and the ArcSoft logo are registered trademarks of ArcSoft, Inc. in the United States, P. R. China, EU, and Japan.



Opera is a trademark or registered trademark of Opera Software ASA.
Read more about Opera at <http://www.opera.com/>.



Declaration of conformity

We, **Toshiba Information Systems UK (Ltd), Mobile Communications Division**, of **Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, KT15 2UL** declare under our sole responsibility that this product (Portégé G900, Type (Model) Name RG4 - E02) is in conformity with the following standards and/or other normative documents:

3GPP TS 51.010-1, 3GPP TS 34.121, EN 301 489-1, EN 301 489-7, EN 301-489-24, EN 300 328, EN 301 489-17, EN 60950 and EN 50360

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

Cetecom GmbH, Im Teelbuch 122, 45219 Essen, Germany

CE 0682 

11 April 2007



Takashi Okamoto
Deputy Managing Director of TIU
General Manager Mobile Communications Division

Health and safety

General

- Always use your Toshiba phone in the intended manner. Incorrect usage may affect performance. Only qualified service personnel should install or repair the phone and its accessories.
- To avoid permanent damage to your Toshiba phone, use only Toshiba approved batteries and accessories.
- The bundled battery and AC adapter are only for use with your Toshiba phone. Do not use this battery or AC adapter with any other device as this may cause permanent damage to the device, battery and AC adapter.
- Before connecting your Toshiba phone to another device, read the supporting documentation to confirm that the other device is compatible.
- When making emergency calls from your Toshiba phone, ensure that the phone is switched on and in service.
- When your Toshiba phone is used for extended periods of time, especially in high temperature conditions, the phone surface could become hot. Please use caution when touching the phone under such conditions.
- When using ear buds or other headphones, be careful not to listen at excessive volumes. Listening to very loud sound levels may lead to hearing loss. Also, listening through the ear buds or headphones for prolonged periods of time, even at normal sound levels, may lead to hearing loss. You should consult your doctor for more information on proper use of ear buds or headphones.
- It is recommended that pregnant and young women take precautions while in a call and keep the phone at a distance from their lower abdomen. For this situation, use of a hands free kit is recommended.



Health and safety

Operating environment

- Do not handle your Toshiba phone while driving or when operating machinery. If you must handle the phone while driving, park the vehicle before conversing. If using an integrated hands free device, make sure the phone is securely placed in its holder.
- Switch your Toshiba phone off if you are entering a hospital or health care facilities. Medical equipment may be affected by phone usage. Always follow building regulations governing phone usage.
- Switch your Toshiba phone off when travelling on an aircraft. The phone signal may interfere with the systems in the aircraft. You are legally bound to comply with this recommendation.
- Switch your Toshiba phone off in any facility where posted notices prohibit phone usage.
- Do not use your Toshiba phone when refuelling. You should keep the phone away from fuel and chemicals.
- Switch your Toshiba phone off when blasting is in progress and observe all provided guidelines and regulations.
- Switch your Toshiba phone off in areas with potentially explosive atmospheres. For example, fuel storage areas and spray paint facilities.
- Switch your Toshiba phone off when outdoors during an electrical storm.
- Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty. For more information, consult your vehicle manufacturer or representative.



Health and safety

Electronic devices

- If you wear a pacemaker, or are in the company of someone who does, you should be aware that there is a small risk of mobile phone usage interfering with the operation of the pacemaker. You should contact your doctor, or the manufacturer of the pacemaker, for more information.
- Mobile phone usage may interfere with some hearing aids. If this happens you should contact your service provider or doctor.
- Mobile phone usage may interfere with the functionality of inadequately shielded medical devices. Consult a physician or the manufacturer of the device to ensure safe procedures are used.
- Mobile phone usage may interfere with the functionality of any inadequately shielded electronic system in a motor vehicle. Examples include airbags and fuel injection. You should contact the manufacturer of the vehicle to ensure that the electronic system is properly shielded.

Battery safety

Your Toshiba phone is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, it is recommended that you buy a new battery.

- A new battery, or one that has not been used for a long time, could have reduced capacity during initial use.
- The battery can only be charged in temperatures between +5 °C (+41 °F) and +35°C (+95 °F).
- Only use batteries approved by Toshiba and only recharge the battery with the recommended charger supplied by Toshiba.
- When the charger is not in use, disconnect it from the power source.
- Do not leave the battery connected to the charger and power source for longer than necessary as overcharging will shorten the lifespan of the battery.



Health and safety

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and - terminals of the battery.
- Do not leave the battery in areas of extreme cold or heat as this will affect the performance of the battery. Areas of extreme cold include a refrigerator, and areas of extreme heat include a car exposed to direct sunlight.
- Do not dispose of the battery in a fire.
- Do not dispose of the battery in an ordinary bin. The battery contains toxic chemicals and must be disposed appropriately. Contact your local authorities for more information.

AC adapter and cable safety

- Do not use a damaged or worn AC adapter or cable. The use of a damaged or worn AC adapter or cable could result in electric shock, burns or fire. Contact an authorised Toshiba service provider immediately to obtain suitable replacements.
- Do not bend or twist the AC cable.
- Do not pull on the AC cable in order to remove the plug from a socket.
- Do grasp the plug directly when unplugging the AC cable to avoid causing any damage to the cable.
- Do not place heavy objects on the AC adapter or cable.



Health and safety

Emergency calls

Calls cannot be made to emergency services while data communication is being performed within a GSM area. If the system mode is set to UMTS Only or GSM Only, calls cannot be made to emergency services if the selected network is unavailable. Also, calls may not be able to be made to emergency services depending on the network services of some service providers.



IMPORTANT: You can still make calls to emergency services when the SIM card is not inserted, the SIM card is locked, the phone lock is set, **Phone is Off**, **Fixed Dialing** is set, or **Call Barring** is set.

There is no guarantee that a connection can be established in all countries and areas because operation of your phone differs depending on the wireless network, wireless signal and your setting status. Do not rely solely on your mobile phone when you need to make emergency calls.

Wireless LAN security

It is possible for an outside party to easily gain unlawful access to your Toshiba phone via Wireless LAN if the security function is not used.

Without this security, your Toshiba phone carries the risk of unlawful access, wiretapping, and loss or destruction of data.

You should set up your Toshiba phone to use the authentication and encryption features (WEP, WPA) in order to prevent such access.

When using a public Wireless LAN access point, your Toshiba phone should be protected from unlawful access by the Windows firewall of Windows Security Centre and the anti-virus software within the firewall feature.

Bluetooth security

Although your Toshiba phone has security features compliant with the Bluetooth standard specification, this security might not work properly when using your Toshiba phone in a non-secure environment. Take care when using the Bluetooth feature.



Health and safety

FCC notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to user

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving aerial.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from the outlet the receiver is currently connected.
4. Consult the dealer or an experienced radio/TV technician for help.



WARNING: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Health and safety

FCC RF exposure information

Your Toshiba phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The SAR value for this model handset when tested for use at the ear is 0.497W/kg and when worn on the body, as described in this user guide, is 1.178W/kg.

Body-worn operation

This phone was tested for typical body-worn operations with the back of the phone kept at a distance of 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between your body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID SP2-RG4-E02.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.



Health and safety

European RF Exposure Information

Your Toshiba phone is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the SAR value for this device when tested at the ear was 0.443W/kg*.

As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user's guide**. In this case, the tested SAR value is 1.154W/kg.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They state that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the website of the World Health Organization (<http://www.who.int/emf>).

* The tests are carried out in accordance with international guidelines for testing.

** Please see the <FCC RF Exposure Information> section about body worn operations.



Health and safety

The following Information is only for EU-Member States:



The use of the above symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product





Care and maintenance

Care and maintenance

You can greatly enhance the life span of your Toshiba phone, and the parts and accessories, by following the suggestions below.



TIP: Maintaining your Toshiba phone, and the parts and accessories, in a good condition will help you fulfil the warranty obligations.

- Keep your Toshiba phone, and all the parts and accessories, out of the reach of small children and pets.
 - Keep your Toshiba phone dry, as moisture of any kind can contain minerals that will corrode the electronic circuits. The manufacturer's warranty may become invalid if the phone or battery were to get wet due to misuse.
 - Do not use or store your Toshiba phone in dusty or dirty locations as the moving parts of the phone can be damaged.
 - Do not use or store your Toshiba phone in hot areas. High temperatures will shorten the life span of the phone, damage the battery, and warp/melt internal circuits.
 - Do not store your Toshiba phone in cold areas. A big difference between room temperature and the temperature in the phone can cause condensation to form inside the phone, damaging the electronic circuits.
- Do not keep your Toshiba phone in, or near, heat sources such as a radiator or microwave oven - this can cause the battery inside the phone to overheat and explode.
 - Do not open your Toshiba phone unless absolutely necessary.
 - Do not mishandle or abuse your Toshiba phone. Dropping the phone, or knocking or shaking it, can damage the internal circuits.
 - Do not use harsh chemicals, strong detergents, or cleaning solvents to clean your Toshiba phone. Use a soft, clean, dry, lint-free cloth to clean the phone.
 - Do not use water to clean the Touch screen.
 - Keep the Touch screen and tip of the Stylus clean to avoid permanent damage.
 - For touch screen input, use only the included stylus or your finger. Use of other objects can damage the input panel and will void the warranty.
 - It is recommended that you use the bundled stylus when pressing the **Reset button**.



Care and maintenance

- If the tip of the stylus is damaged, do not use it. If you operate the Touch screen with a damaged stylus, the Touch screen may be damaged. When the stylus is damaged, please purchase a new one.
- Do not tap hard on the Touch screen, as this may cause permanent damage to the screen.
- Do not apply paint or other such substances to your Toshiba phone.
- If your Toshiba phone, or any of the accessories, are not working as they should, please consult your dealer, who can provide you with the expert assistance you require.
- Do not use excessive volume levels when using headphones.
- If your Toshiba phone has a flash unit, do not operate the flash too close to a person's eyes - this may cause damage to their eyes.
- Interference may affect the performance of your Toshiba phone. This is normal and the phone should operate as usual once you move away from the source of the interference.
- Do not attempt to disassemble your Toshiba phone. Only Toshiba authorised personnel should service the phone.

Restarting your Toshiba phone

If you have any problems, such as the phone freezing, press and hold the **Power key**.



IMPORTANT: If you restart your Toshiba phone while a program is running, data that you have not saved will be lost.

Resetting your Toshiba phone

If, after you have restarted your Toshiba phone, there is still a problem, or if you are having difficulty restarting the phone, press the **Reset button**.

If the problem still remains:

1. Remove the battery (refer to **Getting started** section for instructions).
2. Re-insert the battery and turn your Toshiba phone on (refer to **Getting started** section for instructions).



IMPORTANT: If you reset your Toshiba phone, there is a possibility that saved and unsaved data will be lost.

Care and maintenance

Reinitialising your Toshiba phone

You should only use this procedure as a last resort. If you are experiencing a problem with an application, it is most likely a result of a conflict between installed programs. We recommend uninstalling the most recently added program first. Also verify that the program is designed to be run on your Toshiba phone by comparing the requirements to the information provided with your phone - tap **Start > Settings > System > About** to view this information.

To reinitialise your Toshiba phone, refer to the **Master Clear** subsection in **Settings**.

We recommend that you back up all of your data before reinitialising your Toshiba phone.



IMPORTANT: It is recommended that you frequently back up all of your data on your Toshiba phone.



Getting started

 
Unpacking

Please ensure that the contents of your sales pack include:

- Your Toshiba phone with stylus
- AC adapter
- AC cable
- Battery pack
- USB cable
- USB Host cable
- Earphones
- Quick start guide
- CD (Getting Started)
- CD (User Guide and PC Applications)


Getting started

Phone layout and functions

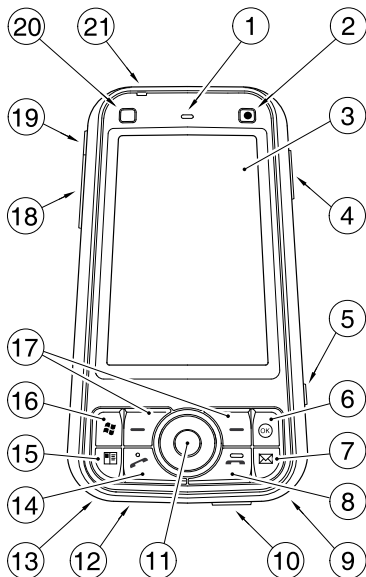

1. **Earpiece**
2. **Front camera**
3. **Touch screen**
4. **Side key** - adjusts the volume.
5. **Program button 3** - initially set to **Camera**.
6. **OK key** - confirms data entries, and exits the current program. Press and hold this key to change ringer settings (**On/Vibrate/Off**).
7. **Program button 2** - initially set to **Messaging**.
8. **End key** - ends calls/operations and returns to **Today** screen.
9. **Stylus**
10. **Cable and phone charging connector**
11. **Navigation key / Action key** - moves the cursor up, down, left or right, confirms operations and accesses shortcuts. The **Action key** is used to open the selected operation.
12. **Microphone**
13. **Handstrap hole**
14. **Send key** - launches the phone pad mode. Makes and answers calls.
15. **Program button 1** - initially set to **Contacts**.
16. **Start key** - activates the **Start** menu.
17. **Left softkey and Right softkey** - perform operations indicated on the touch screen.
18. **miniSD card slot**
19. **Headset connector**
20. **Program button 4** - initially set to Internet access.
21. **Power LED** - bi-colour LED Power indicator, battery charging status.

 Getting started

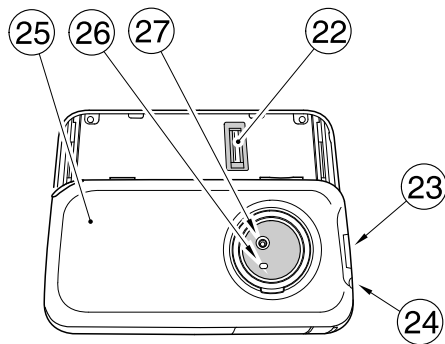

22. **Fingerprint sensor**

23. **Cover lock button** - locks and unlocks battery cover.

24. **Power key** - press and hold to turn power on/off. Press to enter sleep mode, and press and hold to wake up from sleep mode.

 
25. **Battery cover**

26. **Camera light**


27. **Rear camera**



Getting started

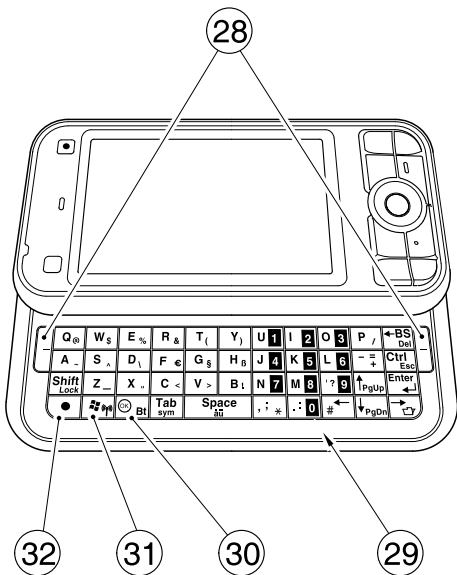

 - 28. **Left softkey** and **Right softkey** - perform operations indicated on the touch screen.
- 29. **Keyboard** - for entering phone numbers and characters.
- 30. **OK key** (first level) / **Bluetooth** (second level)
- 31. **Start key** (first level) / **Wireless LAN** (second level)
- 32. **Function key** - used to access the second level key functions by pressing this key at the same time as the key with the required second level function.
- 33. **Reset button**

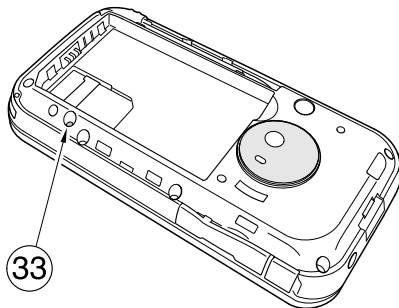


Getting started

Today screen

You can access the Home screen from any menu by pressing the **End key**. Important information such as date, time, status indicators, appointments and profile are displayed on the **Today** screen. You can open a program directly by selecting the relevant icon and pressing the **Action key**.

 1. Title bar
2. Displays time and date.
3. Displays the name of your wireless service provider, and Wi-Fi and Bluetooth connectivity status.
4. Displays owner information.
5. Displays unread messages.
6. Display tasks.
7. Displays appointments.
8. Displays lock status.
9. Command bar. These buttons are dynamic, and depend on previous activity on the phone.

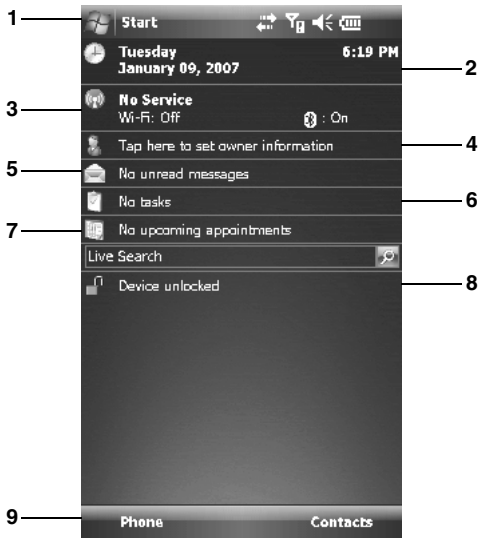

Getting started

Start menu

 
To access the **Start** menu, tap **Start** from the **Today** screen.

You can then tap the required program.

1. **Today**
2. Pinned applications.
3. Recently used programs (maximum of 10 items).
4. **Programs**
5. **Settings**
6. **Help**

NOTE: The pinned applications and **Help** in the **Start** menu can be customised to your own preference.

For more information, please refer to **Customising your Start menu** in the **Settings** section.

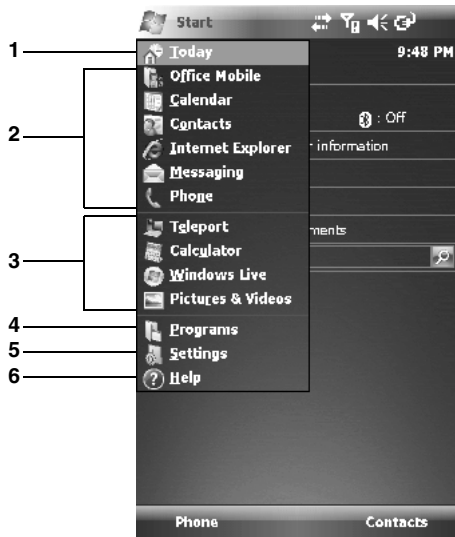







 












Getting started

Display indicators

Slot	Type	Icon	Description
1	Notification icons		Missed call
			New Voice Mail(s) ¹
			New Voice Mail(s) ¹
			Voice Mail on line1
			Voice Mail on line2
			Voice Mail on both lines
			New e-mail(s) or text message(s)
			New instant message(s)
			Incoming beam
			New OTA (OTA: Over The Air)
			Bluetooth
			SIM error
			Synchronisation error
			Wi-Fi data call
			Speakerphone on
			Alarm pending

 Getting started

Slot	Type	Icon	Description
			<p>Multiple notifications. This icon is displayed when there are multiple occurrences that would normally each display an icon, for example, when there is a missed call and the alarm is pending).</p> <p>This icon is displayed automatically after the last notification icon has been displayed briefly. You can tap this icon to view all of the individual notifications.</p>
2	Roaming icons		Roaming
			GPRS in range
			3G in range
			EDGE in range
			CDMA in range (not supported)
3	Data icons		Data call disconnected
			Data call connected
			GPRS in progress
			3G in progress
			EDGE in progress
			Wi-Fi on
			ActiveSync over Wi-Fi in progress
			ActiveSync in progress
4	Signal strength icons		Signal strength
			Voice/Video call in progress
			Data call in progress





Getting started

Slot	Type	Icon	Description
			Radio off
			No radio service. The phone has not yet connected to a network.
			Radio connected
			Radio signal lost. The phone is searching for a signal.
			Dialling
			Call on hold
			Call forwarded
			No SIM card installed
5	Volume icons ²		Vibrate
			Ringer off
			Ringer on
6	Mini time	-	Displays the clock in the title bar during all programs.
	Battery strength icons		Battery level. This icon is displayed on the Today screen when the 'Mini time' display is off.
			Battery alert
			Battery charging
			Low battery

¹ Missed call notification icon is dependent on the wireless service provider. The first New Voice Mail notification icon is displayed when the network supports the SMS notification of Voice Mail, and this has been selected by the user. The second New

Voice Mail notification icon will be displayed when SMS notification of Voice Mail is not active.

 
² The **Volume** control window is displayed when you tap these icons.

Getting started


Installing the SIM card, battery and miniSD card

i IMPORTANT: The SIM card is easily damaged by scratching and bending, so take care when handling it.

- Press the Cover Lock button (1) down, lift the battery cover (2) upwards and remove the battery from the battery compartment.

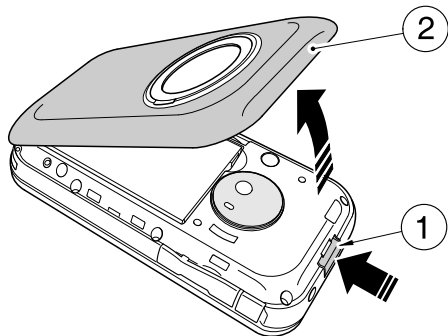


 - With the gold connectors facing downwards, align the bevelled corner of the SIM card with the bevelled corner in the SIM card holder. Push down lightly and slide the SIM card (3) into place.

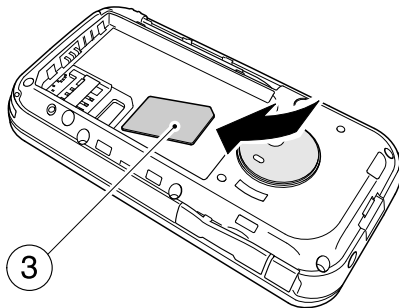


Getting started

 - Insert the battery (4) into the battery compartment with the gold connectors facing towards the cable and phone charging connector. The battery is shaped so that it can only be inserted this way. Gently push down on the battery to snap it into place.

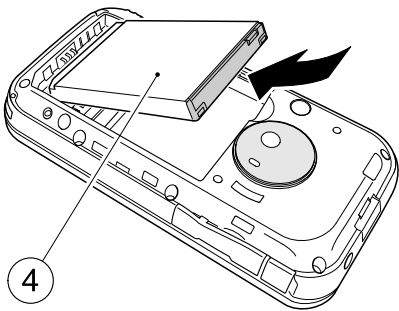


 - Gently click battery cover (2) into position.

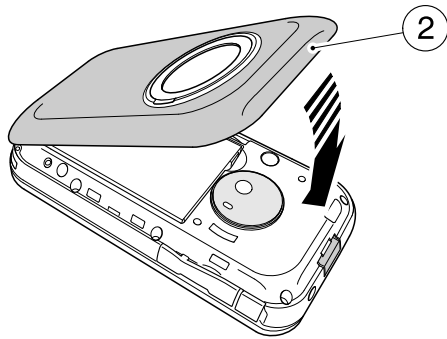


Getting started

 - Open the miniSD card slot cover. Slide the miniSD card into the slot (5).

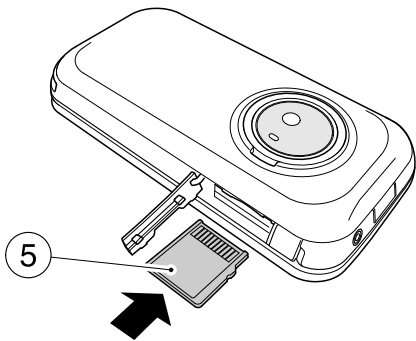

 
- To remove the miniSD card, press it inwards (5). The miniSD card will pop out (6). Close the slot cover.

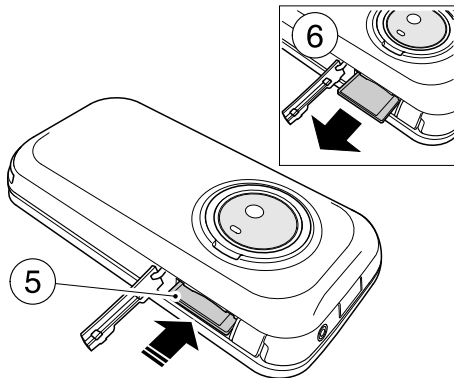

Getting started

Removing and reinserting the stylus

 - Remove the stylus from stylus slot (7).
- When you want to reinsert the stylus, slide it gently into the stylus slot (7).

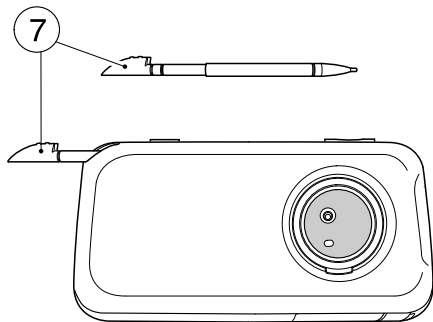

Using the stylus

The stylus is used for menu selection and data input on the Touch screen of your Toshiba phone.

- Tap: Touch the screen once with the stylus to open items and select options.
- Drag: Hold the stylus on the screen and drag it to select text and images. Drag in a list to select multiple items.
- Tap and hold: Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that is displayed, tap the required action.

WARNINGS:



- For touch screen input, use only the included stylus or your finger. Use of other objects can damage the input panel and will void the warranty.
- If the tip of the stylus is damaged, do not use it. If you operate the Touch screen with a damaged stylus, the Touch screen may be damaged. When the stylus is damaged, please purchase a new one.
- Do not tap hard on the Touch screen, as this may cause permanent damage to the screen.



Getting started

Charging the battery

You need to fully charge the battery before you can switch your Toshiba phone on for the first time.

The battery will only achieve optimum performance after two or three complete charges.

You can charge your battery in the following two ways:

1. Plug the AC adapter into an AC outlet and connect it to the charger connector on your Toshiba phone. When the battery is fully charged, unplug the AC adapter from the AC outlet and disconnect it from the phone charger connector by gripping it tightly and pulling gently.

or

2. Connect your Toshiba phone to a PC with the USB cable.



TIP: For information on checking your battery status, refer to the **Power management settings** subsection in **Settings**.

Low battery indicator

When the battery charge level is running low, a warning tone sounds and the Battery Low message is displayed repeatedly. If the battery charge level runs too low for normal operation, your Toshiba phone will automatically switch off.

Battery information

Battery performance depends on many factors, such as your Service Provider's network configuration, signal strength, the temperature of the environment in which you operate your Toshiba phone, the features and/or settings you select and use, items attached to your phone's connecting ports, and your voice, data, and other program usage patterns.



NOTE: It is recommended that you save the data in your phone memory to a PC or storage card. The manufacturer is not responsible for data lost or altered due to battery discharge.



TIP: For information on optimising the power performance of your Toshiba phone, refer to the **Power management settings** and **Backlight settings** subsections in **Settings**.





Getting started

Managing a low battery

When the low battery warning is displayed, do the following:

1. Save your current data.
2. Charge the battery as soon as possible.
3. Turn your Toshiba phone off.



WARNING: There is a danger of explosion if the battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of battery in fire or water. Replace only with specified batteries according to the local regulations.

Switching the power on and off

To switch your Toshiba phone on:

1. Press and hold down the **Power key**. The standby screen is displayed.
2. If a PIN or security code is requested, enter the code.



NOTE: The PIN code activates the services in your Toshiba phone and should be provided in the documentation supplied by your service provider.

To switch your Toshiba phone off:

1. Press and hold down the **Power key**.
2. Tap **Power Off** on the **Power Off Confirmation** dialog.

Getting started

Synchronising

ActiveSync allows you to create a synchronisation relationship between your Toshiba phone and PC, and between your Toshiba phone and your Exchange server. This means that the shared data is always consistent. If you make a change, it is automatically made to the corresponding information on the other computer. This is an effective way of keeping your data up-to-date.

You can connect your Toshiba phone to your PC using the USB cable or Bluetooth connection. You can also use ActiveSync to connect your Toshiba phone to other resources through your PC. However, you cannot synchronise remotely to a PC using a modem or network connection. The synchronisation relationship is created to manage the data that is copied between your Toshiba phone and PC.

You can connect to your Exchange server using a cellular connection, or you can connect your Toshiba phone to your PC as a way of connecting back to the Internet.

Installing and setting up ActiveSync

You can either install ActiveSync from your Windows Mobile Getting Started CD or you can download a copy of ActiveSync from <http://www.microsoft.com/windowsmobile/addons/default.aspx>

Once the software has been installed and your Toshiba phone is connected to your PC via the USB cable, the ActiveSync Setup Wizard is started. Simply follow the on-screen instructions.



NOTE: If you have a PC which is already fully synchronised with your Exchange server, you should synchronise your Toshiba phone to your PC rather than synchronising your Toshiba phone with the Exchange server. Data will be downloaded via your PC, saving you the charges for traffic volume. In addition, synchronising via your mobile phone network will take longer than it would with your local PC.

If you are not synchronising directly with a Microsoft Exchange server, do not select the option to synchronise directly with a server. The alternative is to synchronise your Toshiba phone with your PC. You cannot do both at the same time.




Getting started

Changing ActiveSync settings

Once you have set up synchronisation using the ActiveSync Setup Wizard on the PC, you can change your synchronisation settings at a later stage:

- If you want to change ActiveSync settings for synchronising with a PC, use ActiveSync on the PC. For more information, see 'Changing the amount of information synchronized' in ActiveSync Help on the PC.
- If you want to change ActiveSync settings for synchronising with an Exchange server, use ActiveSync on your Toshiba phone, as described in 'Change settings for an information type' in your phone Help.


 **NOTE:** you will need to disconnect your Toshiba phone from your PC before changing the synchronisation settings.

Starting/stopping synchronisation

1. From the **Today** screen, tap **Start > Programs > ActiveSync**.
2. To start synchronisation, select **Sync**.
3. To stop synchronisation, select **Stop**.

Synchronising media

Your Toshiba phone can synchronise media from your PC, such as music and video files. This is described in detail in **Applications & Multimedia**.

 **NOTE:** You can only start/stop synchronisation if your Toshiba phone already has a synchronisation relationship with a PC or Exchange server.

Using the USB Host cable

Your Toshiba phone has a USB Host function. The bundled USB Host cable connects to the cable and phone charging connector on your Toshiba phone. When it is connected, USB memory is available. When connected to your Toshiba phone, the USB Host cable can provide a maximum current of 100mA. If you use the USB Host cable to connect your Toshiba phone to a device that requires more than 100mA, the USB Host cable will not function. When the battery of your Toshiba phone is at less than 20% charged, the USB Host cable cannot be used without first recharging the phone's battery.



Call functions

Making a call

You can make calls from the **Today** screen, **Phone** screen, **Contacts**, **Call History**, or via speed dial.

Before making a call, ensure that your Toshiba phone is switched on, that there is a valid SIM card installed, and that the signal is sufficiently strong.

To make a call, enter the phone number from the **Today** screen using the numeric keypad, or press the **Send key** and scroll down the list to the required number.

Press the **Send key** to dial.

Making an emergency call

You can make calls to emergency service numbers under almost any circumstances, even if you have locked your Toshiba phone or if you have not enabled your SIM.

Making a call by entering a contact name

1. From the **Today** screen, enter the initial letters of the contact name.
2. A list of contacts matching your keystrokes is displayed. Select the relevant contact, and then

press the **Send key** once or the **Action key** twice.

Making a call from an open contact

1. Select the contact and relevant phone number.
2. Press the **Send key** or **Action key**.

Making a call from Contacts

1. From the **Today** screen, tap **Contacts**.
2. Select the contact, and press the **Send key**.



TIP: If you have a long list of contacts, you can use a shortcut to find the contact you want by entering the first few letters of the contact's name. The phone searches through the contact list and displays the name.

To call the contact, press the **Send key**.

Making a call from the Call History

The Call History displays calls you have made, received, and missed recently.

1. From the **Phone** screen, tap **Call History**.
2. Select the relevant name or phone number.
3. Press the **Send key** or tap **Call**.





Call functions

Making a call using a recently dialed phone number

1. From the **Today** screen, press the **Send key**.
2. Select the relevant name or phone number, using the up and down arrows if required.
3. Press the **Send key** or tap **Talk**.

Dialling the last number called

From the **Today** screen, press the **Send key** twice.

Creating a speed dial

You can create a speed dial for a phone number that is stored in your Contacts.

To create a speed dial entry:

1. From the **Today** screen, tap **Contacts**.
2. Tap the contact.
3. Tap the phone number.
4. Tap **Menu > Add to Speed Dial...**
5. In the **Location:** field, select the speed dial number.
6. Tap **ok**. The speed dial entry is created.



NOTE: The digit **0** is reserved to bring up the + symbol in international dial strings when you press and hold **0**. The digit **1** is reserved for calling your Voice Mail as a speed dial option.



NOTE: You can only create speed dials for phone numbers when using a Pocket PC.

Voice Mail speed dial

The Voice Mail speed dial is normally preconfigured. If it is not preconfigured, you can save your Voice Mail number by tapping **Phone > Speed Dial > Voicemail**, and create a speed dial entry as detailed above.

Contact your Service Provider to find out your Voice Mail number.

Using a speed dial

From the **Today** screen, press and hold the speed dial number that you want to call. If the speed dial contains two digits, press the first digit, then press and hold the second digit. Your Toshiba phone dials the phone number.

Call functions

Editing a speed dial

1. From the **Today** screen, tap **Phone > Speed Dial**.
2. Scroll to the required speed dial, then tap **Menu > Edit...**
3. Make the required changes and tap **ok**.

Deleting a speed dial

1. From the **Today** screen, tap **Phone > Speed Dial**.
2. Scroll to the required speed dial, then tap **Menu > Delete**.
3. Tap **Yes** when the confirmation query is displayed.

Receiving a call

Answering or ignoring a call

- To answer an incoming call, press the **Send key** or tap **Answer**.
- To ignore an incoming the call, press the **End key** or tap **Ignore**.



NOTE: If you choose to ignore a call, the caller will be connected to your Voice Mail, provided that you are subscribed to this service.





Call functions

In-call options

Answering or postponing a second call

To answer or postpone a second call, you need to first enable the call waiting option by doing the following:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Call Waiting** in the list of services, and then tap the **Get Settings...** button.
5. When the settings have been received from the network, tap the **Notify me** radio button.
6. Tap **ok**.

Once the call waiting feature has been enabled on your Toshiba phone and the settings have automatically been sent and accepted by your Service Provider, you will receive an audible and visual notification on your Toshiba phone if another call comes in during your current call.

- To put the first call on hold and answer the second call, press the **Send key**. To switch between calls, tap **Swap**.
- To avoid answering the second call, tap **Ignore**.

The second call will either be disconnected or diverted to Voice Mail, depending on whether you are subscribed to the Voice Mail service.

Making a second call while already in a call

1. While in a call, tap **Hold** to place the call on hold.
2. Dial the second number and press the **Send key**. Your first call will remain on hold.
3. To swap between the two calls, tap **Swap**.

Joining two or more calls together in a conference call

1. With two calls active on your Toshiba phone, one active and the other on hold, tap **Menu > Conference**. The two calls will be joined together and each party will be able to hear the other.

Adding an additional party to the call


1. To add another party to the conference call, dial another number, again tapping **Menu > Conference**.

Call functions

Having a private conversation with a party


To do this you will need to split the conference call up.

1. With the conference call running, tap **Menu** > **Private**.
2. Select the party with which you wish to have the private conversation and tap **Private**.

 **NOTE:** The conference call feature depends upon your Service Provider supporting it. Please check with your Service Provider to ensure you can use this feature.

Placing a call on speakerphone

1. While in a call, tap **Speaker On**. The speakerphone is activated.
2. To switch the speakerphone off, tap **Speaker Off**.

 **NOTE:** The speakerphone will not be automatically enabled in your next call, even if you left the function switched on in the previous call.

Placing a call on hands-free


When hands-free equipment is attached to your Toshiba phone, the **Menu** > **Turn Hands-free On** option will be enabled.

Special dialling requirements

Inserting an international country code

To make an international call, you must include a country code at the beginning of the dialling sequence.

To enter the country code, press and hold the digit **0** until a + sign is displayed, and then enter the rest of the phone number.

 **NOTE:** Similarly, you can insert a + sign when saving a contact's phone number or dial it directly from the keypad.

Call functions

Video telephony

Video calls allow you to enjoy live 'face-to-face' conversations with friends, family and colleagues.

Making a video call

Before making a video call, you must confirm that the person you are video calling also has a video-enabled phone. To make a video call:

1. From the **Today** screen, tap **Phone**.
2. Enter the phone number.
3. Tap **Video**. The video call is made.

Answering or ignoring a video call

- To answer an incoming call with video enabled, tap **Answer**.
- To answer an incoming call with video blocked, press the **Send key**. An image will be sent according to the current video call settings (refer to **Settings** section for further information).
- To ignore an incoming video call, press the **End key** or tap **Ignore**.



NOTE: Video call and Wireless LAN (Wi-Fi) do not work simultaneously:

- You cannot receive a video call when Wi-Fi is on. The incoming video call will be treated as a missed call.
- You cannot turn on Wi-Fi during a video call.



Messaging

This section describes how you can create, send, receive, organise, delete and store the following message types on your Toshiba phone:

- Text (SMS, Short Message Service) message
- Outlook E-mail
- Multimedia message (MMS)

You can also use the instant messaging application, Windows Live Messenger, from your Toshiba phone. This application enables online over-the-air chat, as well as providing access to your MSN Hotmail e-mail account.

Messaging options

You can customise the settings of your messaging accounts, message options, addressing options and message storage by tapping **Start** >

Messaging > **Menu** > **Options**.

- **Accounts** tab - Tap this tab to change the settings for each messaging account. For example, tap **Text Messages** to change the **Request delivery notifications** and **Use Unicode when necessary** settings as required. Tap **New Account...** to set up a new messaging account. Tick the **Display account picker when opening Messaging** checkbox if you would like to select the messaging account each time you open **Messaging**.
- **Message** tab - Tap this tab to change options for sending and deleting messages.
- **Address** tab - Tap this tab to select whether to check **Contacts** as well as any online address books for e-mail addresses. You can also add online address books and select which ones to use for e-mail address checking.



Messaging

- **Storage** tab - Tap this tab to check the memory space of your phone, storage card and attachments. You can also select whether to store attachments on a storage card, and specify how deleted items are emptied.

Creating and adding a signature to a message

For each account in **Messaging**, you can specify a signature to be automatically inserted into messages that you send.

To create a signature to be added to messages:

1. On the **Accounts** tab, tap **Signatures...**
2. From the **Select an account:** list, select the account that you would like to use a signature with.
3. Tick the **Use signature with this account** checkbox.
4. To add a signature to every message that you send, tick the **Use when replying and forwarding** checkbox. If this box is left unticked, the signature will only be added to new messages.
5. Enter a signature into the indicated box.

6. Tap **ok**.

Text (SMS) messaging

Creating a text (SMS) message

Text messaging, or the Short Message Service (SMS), allows you to exchange text messages with other phones. For details on text messages, contact your Service Provider. Your Toshiba phone supports the sending of more than the standard 160-character limit. If you enter more than 160 characters, the message is split into linking SMS messages. You can send up to 20 linked SMS messages at one time.

To create and send a text message:

1. From the **Today** screen, tap **Start > Messaging > Text Messages > Menu > New**.
2. Select an existing contact by tapping **Menu > Add Recipient...**



TIP: To enter phone numbers quickly from your contact list, simply press the **Action key** while the cursor is in the **To:** field.



Messaging

Alternatively, enter the mobile phone number of the recipient/s in the **To:** field. Use a semicolon to separate multiple recipients.

3. After you have selected your recipient/s, tap the message area and enter your message.
4. Tap **Send**. The text message is sent.



TIP: To cancel a message before sending it, tap **Menu > Cancel Message** while in the text message creation screen.

Delivery notification

To request a delivery notification:

1. Tap **Menu > Message Options...** while in the text message creation screen.
2. Tick the **Request message delivery notification** checkbox.
3. Tap **ok**. Your request is sent to your Service Provider.

Inserting predefined text into a message

To save time when entering text, you can insert predefined text into a message:

1. Tap **Menu > My Text** while in the text message

creation screen.

2. Tap the text that you want to insert.

Replying to a message

1. From an open message, tap **Reply**.
If you are replying to a number of recipients, tap **Menu > Reply > Reply All**.
2. Enter your message in the message area.
3. Tap **Send**. The text message is sent.

Forwarding a message

1. From an open message, tap **Menu > Reply > Forward**.
2. Add recipient/s. For details, refer to **Creating a text (SMS) message**.
3. If required, edit the message in the message area.
4. Tap **Send**. The text message is sent.

Deleting a message

1. From the **Today** screen, tap **Start > Messaging > Text Messages**.
2. Select the message that you want to delete and tap **Delete**.



Messaging

E-mail


Before you can send or receive e-mails, you need to set up an e-mail account. Your Toshiba phone supports the following types of e-mail accounts (all of which are covered here):

- Internet e-mail (POP3/IMAP)
- Exchange server (Outlook)

Setting up an e-mail account automatically

1. From the **Today** screen, tap **Start > Messaging > New E-mail Account**.
2. Enter the e-mail address for this account into the **E-mail address:** field.
3. Tick the **Try to get e-mail settings automatically from the Internet** checkbox.
4. Tap **Next**.
5. If the account is set up successfully, you will be prompted to send and receive e-mail.
If the account is not set up successfully, you will need to tap **Next** and set up the account manually, as described in the following section.

Setting up an e-mail account manually

1. Select your e-mail provider from the list, then tap **Next**.
2. Enter the name that you want displayed when you send e-mail in the **Your name:** field.
3. Enter a unique name for this account in the **Account display name:** field. (You must use a different name for each account that you set up.) Tap **Next**.
4. Enter the name of the incoming server in the **Incoming mail server:** field.
5. Select the server type that hosts your e-mail mailbox from the **Account type:** list (**POP3** or **IMAP4**). Tap **Next**.
6. Enter a user name in the **User name:** field. This is usually the first part of your email address, which appears before the '@' sign.
7. Enter a password in the **Password:** field.
 **TIP:** Choose a strong password - strengthen the security of your password by selecting a combination of alphabet and numeric characters.

Messaging

8. Tick the **Save password** checkbox if you wish to save your password to your Toshiba phone. This may or may not be required. Contact your Internet Service Provider (ISP) for more information.



WARNING: If you save your password and then lose your Toshiba phone, you run the risk of someone else being able to access your e-mail account.

9. Tap **Next**.
 10. Enter the name of the outgoing server in the **Outgoing (SMTP) mail server:** field.
 11. Tick the **Outgoing server requires authentication** checkbox if the outgoing server requires authentication.
- i** **IMPORTANT:** If authentication is required, your user name and password (as specified above) will be needed. Contact your ISP for more information.
12. Tick the **Use the same user name and password for sending e-mail** checkbox if required.
 13. Tap the **Advanced Server Settings** link to set additional settings if required.

Tick the Require SSL checkboxes if you wish to

enable SSL connection.



IMPORTANT: SSL connection enables you to send and/or receive personal information more securely. If you select one or both of these options and your ISP does not support SSL connection, you will not be able to send and/or receive e-mail.

The **Network connection:** field enables you to select the network to which your e-mail server connects.

14. Tap **Done** when you have finished settings the **Advanced Server Settings**.



IMPORTANT: Before you complete the set up your Internet e-mail account, ensure that you have the necessary information, as listed above.

15. Tap **Next**.
16. Select the frequency with which to send and receive your e-mail from **Automatic Send/Receive:** list.
17. Tap **Review all download settings**.

The **Download messages:** field enables you to set the time range for downloading messages from the server.





Messaging

Tap **Advanced Settings** to edit additional settings for sending and deleting e-mails if required.

Tap **Done** when you finished setting the **Advanced Settings**.

18. Tap **Next**.
19. Select the format for sending (**HTML** or **Plain Text**) from the **Message format:** list.
20. Select the download size limitation from the **Message download limit:** list.
21. Tap **Finish**.

Setting up an Outlook E-mail account

An Outlook E-mail account is created and managed by Microsoft's Exchange server. You must have this account set up before continuing with the steps described in this section.

To send or receive e-mail messages from your Exchange server, tap **Start > Programs > ActiveSync**.

Once ActiveSync completes successfully, tap **Start > Messaging > Outlook E-mail > Menu > Go to > Folders...** The e-mail folders are similar to the Outlook client on a PC.

Viewing your Inbox

From the **Today** screen, tap **Start > Messaging**, and select an account. The **Inbox** displays your received messages.

Creating an e-mail

1. From the **Today** screen, tap **Start > Messaging**.
2. Tap an e-mail account.
3. Tap **Menu > New**.
4. In the **To:**, **Cc:**, and/or **Bcc:** field, enter the e-mail address of the recipient. Insert a semicolon between multiple addresses.
5. Enter a subject in the **Subject:** field.
6. Enter a message.
7. Tap **Send**. E-mails are stored in your **Outbox** and are sent to recipients the next time you synchronise or connect to your e-mail server.



TIP: You can quickly enter e-mail addresses from your contact list:

1. While in the **To:** field, press the **Action key** and select a recipient from the list
2. Select the recipient's e-mail address. The semicolon separator is automatically inserted if you enter multiple recipients.

Messaging



TIP: To set the priority of the e-mail, tap **Menu** > **Message Options**.



TIP: To cancel a message, tap **Menu** > **Cancel Message**.

Inserting predefined text into an e-mail

Please refer to the Text (SMS) messaging section for details on how to use this feature. It can be used when creating a new message or replying to an e-mail.

Replying to an e-mail

1. From an open message, tap **Reply** or, if replying to multiple recipients, tap **Menu** > **Reply** > **Reply All**.
2. Enter a message in the message area.

3. Tap **Send**.



TIP: If you are replying to an e-mail in an Outlook E-mail account, you will send less data if you do not edit the original message. This may reduce data transfer costs based on your rate plan.

Sending and receiving e-mails

1. From the **Today** screen, tap **Start** > **Messaging**.
2. Tap the e-mail account that you want to use to send and receive messages.
3. Tap **Menu** > **Send/Receive**. Your Toshiba phone connects to your e-mail server and sends and receives your messages.

Downloading a complete e-mail

1. From the **Today** screen, tap **Start** > **Messaging**.
2. Tap the e-mail account that you want to use.
3. Tap the message to download.



NOTE: To stop this process, tap **Menu** > **Stop Send/Receive**.



Messaging

4. Tap **Menu > Download Message**. The complete message is retrieved the next time you synchronise or connect to your e-mail server to send/receive e-mail.

Downloading an e-mail attachment

In an open message with an attachment to download, tap the attachment. The attachment is downloaded the next time you synchronise or connect to your e-mail server to send/receive e-mail.



TIP: Alternatively, you can scroll down to the bottom of the e-mail and tap **Get the rest of this message**.

Viewing an e-mail attachment

In an open message containing a downloaded attachment, tap the attachment.



NOTE: You can only view attachments for file types that are supported by your Toshiba phone.

Adding a picture to an e-mail

1. In the message area of an e-mail, tap **Menu > Insert > Picture**.
2. Tap the picture that you want to add.

Switching between e-mail folders and accounts

1. Tap **Start > Messaging > Outlook E-mail > Menu > Go to > Folders...**
2. Tap the folder that you want to view.

Messaging

MMS messaging

The Multimedia Messaging Service (MMS) allows you to exchange multimedia messages containing data such as text, pictures, sounds, animation and video clips. You can send MMS messages to other mobile phones or to e-mail addresses. For details of MMS, and to enable your account for this service, contact your Service Provider.

An MMS can be made of many pages, also known as 'slides'. Each slide can hold an image, a sound and text, but you do not need to set all of these for each message. The maximum amount of content that can be sent in a message is set by your Service Provider.

Creating an MMS

1. From the **Today** screen, tap **Start > Messaging > MMS > Menu > New**.
2. Tap to choose an MMS template or tap **Custom** to create your own MMS.
3. Select an existing contact by tapping **Menu > Add Recipient...**



TIP: To enter phone numbers quickly from your contact list, simply press the **Action key** while the cursor is in the **To:** field.

Alternatively, enter the mobile phone number of the recipient/s in the **To:** field. Use a semicolon to separate multiple recipients.

Adding a picture or video

To add a picture to the message:

1. Tap the **Insert picture/video** area. The preview of all pictures in the **My Pictures** folder is displayed. From here, you can also select other folders to look for more pictures and videos.
2. Tap on a picture or video that you would like to add.
To launch the camera application, tap the camera icon.
3. When you have selected a picture or video, the message creation screen is displayed.



NOTE: If you add a video to the message, you cannot add any further audio to the message.

Adding text

Tap the **Insert text here** area and enter your message. To use predefined text, tap **Menu > Insert Media > My Text**.



Messaging

Using/creating templates

Tap **Menu** > **Template** > **New From Template...** and choose a template to use.

Selecting a background colour

To select a background colour for the message:

1. Tap **Menu** > **Options** > **Background**. A list of colours is displayed.
2. Tap the colour to apply.

Additional items

You can also select the layout, size, colour and background of the text in the message. To set these options, tap **Menu** > **Options**, and select the option/s that you want to change.

Also, just as for e-mail, you can add recipient/s in copy (Cc) or blind copy (Bcc) to your message. You can set the priority of the message, a delivery time delay for the sending of the message, an expiry time for the message, and request delivery and read reports.

To set these options, tap **Menu** > **Options** > **Send Options...** and set these options as required.

Receiving MMS messages

Your Toshiba phone will alert you when a new MMS message arrives. Depending on your settings, the MMS contents may download a few moments later when the message will be ready to view in your MMS Inbox.

The MMS Inbox functions in an identical way to your text message and e-mail inboxes.

MMS Inbox menu items

- **New** - to create a new MMS message. Opens the message creation screen.
- **Reply** - to reply, reply to all or all and forwards current message.
- **Mark as Read/Mark as Unread** - to mark the current message as read/unread.
- **Move...** - to move the current message into another folder.
- **Go To** - to switch to another folder (including **Deleted Items**, **Drafts**, **Inbox**, **Outbox**, and **Sent Items**), or to **Text Messages**, **Outlook E-mail** and **MMS**.
- **Tools** - allow you to do the following:
 - sort messages.
 - manage the folders for MMS.



Messaging

- empty the **Deleted Items** folder
- clear all MMS messages.
- create a new account for e-mail.
- change the messaging options.
- **Download Message** - if you have chosen only to receive notification of MMS messages, and not to download the whole MMS message, you can mark a message for download. The MMS message will be downloaded when you next send or receive a message.
- **Send/Receive** - forces a send/receive of MMS messages that are pending.

Setting up the MMS account

If your Toshiba phone has not been preconfigured, you will need to manually enter the details of the MMS account. This is a two-stage process: in the first stage you must set up the data connection, and in the second stage you must define the address of the MMS server on the Internet.

Setting up a data connection

You will need to enter the name of the MMS APN and any associated username, password, IP address and DNS settings in the connection

settings.

Defining the server

1. From the **Today** screen, tap **Start** > **Messaging**.
2. Highlight **MMS**, and tap **Menu** > **Options**.
3. Tap **MMS** on the **Accounts** tab.
4. Tap the **Servers** tab.
5. Tap **New**.
6. Enter the following details:
 - **Server name**: - Enter a name for the server details.
 - **Gateway**: - Enter the WAP gateway to be used for this connection, as supplied by your Service Provider.
 - **Port number**: - Enter the port number.
 - **Server address**: - Enter the address of the server, as supplied by your Service Provider.
 - **Connect via**: - Point the MMS server towards the correct connection point. If you set up the MMS account using the **Secure WAP Network** setting, you must select the **Secure WAP Network** setting here.
 - **Sending size limitation**: - Please contact your Service Provider to obtain this value.



Messaging

7. Tap **Ok**.
8. Tap **Set as Default** to set this new account as your default MMS account.
9. Tap **ok**. Your Toshiba phone is now configured for MMS.

Windows Live Messenger

Windows Live Messenger is the next model of MSN Messenger, and provides new messaging service. Windows Live Messenger on your Toshiba phone provides instant access to your contact list, emoticons, and friends. This service is currently free of charge.

Windows Live Messenger offers you new features:

- Easier-to-manage contact list and conversation inbox.
- View and participate in up to 5 active conversations at one time.
- No more idle conversation experience: Messenger for mobile can now maintain current conversation history and re-establish an idle conversation in the background.
- Emoticons are now displayed as graphics within display names and conversations.
- Easily change your display name and status, and

even set status before you sign in.

- Sort and find contacts more quickly and easily (search, filter by group, and hide offline contacts).
- Call or send e-mail to contacts directly from their contact cards.
- Converse with temporary contacts (new people who don't yet appear on your list of Messenger contacts), and receive the option to add them to your contact list.

To use Windows Live Messenger, tap **Start > Programs > Messenger**.



NOTE: You need to have either a Microsoft.NET Passport (www.passport.com) or a Hotmail account (www.hotmail.com) to use Windows Live Messenger. In addition, your Toshiba phone must be connected to the Internet.

To obtain a Passport, go to:
<http://www.passport.com>.

To create a Hotmail account, go to:
<http://www.hotmail.com>.

Messaging

Windows Live Messenger overview

With Windows Live Messenger you can send instant messages to your contacts' mobile device or PC.

To use Windows Live Messenger, you need Microsoft Passport Network credentials. After obtaining the credentials, complete the following tasks:

1. Set up a connection to the Internet with your Toshiba phone.
2. Get a Windows Live ID.
3. Sign in to Windows Live Messenger.

To access Windows Live Messenger:

1. From the **Today** screen, tap **Start > Programs > Messenger**.
2. Tap the left or right arrow to select status, and tap **Sign in**.
3. Follow the instructions on the screen to sign in. Microsoft Passport Network credentials or a Hotmail account is required to sign in.



NOTE: Signing in to an account may take several minutes, depending on your connection speed and how busy your mobile network is.



Text input

Input methods

Your Toshiba phone has three text input methods:

- Typing - Using Input Panel or the keyboard.
- Writing - Using the stylus, writing directly on the screen.
- Drawing - Using the stylus, drawing directly on the screen.

Input Panel provides various input methods, including **Block Recognizer**, **Keyboard**, **Letter Recognizer** and **Transcriber**.

By default, the Input Panel icon appears on the command bar to indicate which input method is currently selected. Open the Input Panel and tap the arrow beside it to select other input methods.

Block Recognizer

With **Block Recognizer**, you use a single stroke to write individual letters, numbers and punctuation, which are then converted into typed text.

To use **Block Recognizer**, tap the selector arrow, and tap **Block Recognizer**.

The handwriting area is divided into two designated parts: abc, and 123 (both dimmed).

Write characters, numbers, symbols and punctuation in the separate areas:

- Write in the abc area to enter lower case letters.
- Write in the 123 area to enter numbers.
- Tap the button in the right corner labelled '@\$*' to open the table of symbols and punctuation.



NOTE: **Block Recognizer** is available when text entry is possible.



TIP: For help with using **Block Recognizer**, tap ? in the right corner to see a demo.



Text input

Keyboard

With the smart keyboard, you use the stylus to tap on the smart keyboard to enter characters.



TIP: Tap **áú** to enter miscellaneous vowels or symbols.

To use **Keyboard**, tap the selector arrow, and tap **Keyboard**.

To set the **Keyboard** options:

1. Tap the selector arrow and tap **Options...**
2. Select **Keyboard** in the **Input method:** list.
3. Select the required options by:
 - tapping the **Large keys** or **Small keys** radio button to enlarge or reduce the smart keyboard button size.
 - ticking the **Use gestures for the following keys:** checkbox to enable gesture commands.

Letter Recognizer

With **Letter Recognizer**, you can write individual letters, numbers and punctuation, which are then converted into typed text.

To use **Letter Recognizer**, tap the selector arrow, and tap **Letter Recognizer**.

The handwriting area is divided into three designated parts: ABC, abc, and 123 (all dimmed). Write characters, numbers, symbols, and punctuation in the separate areas:

- Write in the ABC area to enter upper case letters.
- Write in the abc area to enter lower case letters.
- Write in the 123 area to enter numbers.
- Tap the button in the right corner labelled '@\$*' to open the table of symbols and punctuation.



NOTE: **Letter Recognizer** is available when text entry is possible.



TIP: For help with using **Letter Recognizer**, tap **?** in the right corner to see a demo.



Text input

Transcriber

Transcriber is a handwriting recognition program that allows you to write in cursive, print, or a combination of both. **Transcriber** works transparently in the background of programs, recognising words with its integrated dictionary. When transcriber is turned on, it interprets stylus movement anywhere on the screen as handwriting input. For more information about using **Transcriber**, see **Help** on your Toshiba phone:

Starting Transcriber

Because **Transcriber** works transparently in the background of programs that accept user input, you must have one of these programs open to use **Transcriber**.

To start **Transcriber**:

1. Start a program such as **Word Mobile**.
2. Tap the Input Panel icon, and then tap the selector arrow.
3. Tap **Transcriber**. The **Transcriber** introductory screen appears.

Using Transcriber


Transcriber comes with an on-screen keyboard that provides an easy way to add punctuation or a special symbol to existing text.

From a program, tap the keyboard button on the **Transcriber** toolbar. The keyboard remains visible until you tap the button again.



TIP: To reposition the keyboard, tap and hold the top bar, and then drag it to the desired location.



TIP: When no text is selected, you can open the keyboard by doing the  gesture.

To edit text:

 
 






1. In a program, draw a line across the text you want to edit.
2. After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.
3. Do one of the following:
 - Rewrite the text.
 - Use gestures to capitalise letters, insert a space, etc.




 
Text input

To use gestures in **Transcriber**:

Use quick strokes of the stylus to edit your text. Do the Enter, Space, and Tab gestures while writing text to insert returns, spaces, or tabs.

Name	Action	Description
Enter		Inserts a paragraph return at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
Space		Inserts a space at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
Backspace		Moves the cursor one space back and erases any text. Do the gesture by drawing a line from right to left.
Words		Opens the menu of alternate words if a word is selected or the on-screen Transcriber keyboard if no text is selected. Do the gesture by drawing a line straight down and back up.
Caps		Changes the capitalisation of a selected letter, word, or block of text. Do the gesture by drawing a line straight up.
Undo		To undo the last action. Do the gesture by drawing a line straight up and back down.
Cut		Cuts the selected text. Do the gesture by drawing a line from right to left and back.
Copy		Copies the selected text. Do the gesture by drawing a line from left to right and back.

Text input

Name	Action	Description
Paste		Pastes cut or copied text. Do the gesture by drawing a line from the lower left of the screen diagonally up toward the right and back down to the right.
Tab		Inserts a tab. The horizontal portion of the gesture must be at least two times longer than the vertical portion.



TIP: You can also use the Enter, Space, and Backspace buttons on the **Transcriber** toolbar.

Writing with Transcriber

Transcriber allows you to write in cursive, print, or a combination of both.

1. From a program, position the cursor where you want text to appear.
2. Use the stylus to write anywhere on the screen.

The handwriting will be converted to text shortly after you lift the stylus from the screen.



Text input

Optimising handwriting recognition for Transcriber

If **Transcriber** does not recognize your handwriting as accurately or quickly as you would like, there are some things you can do to optimise handwriting recognition.

- Select the **Writing Direction**: picture that best matches the slant of your handwriting.
- Use **Letter Shapes** to eliminate letter shapes that you do not use or to learn methods of writing characters that will make them easier for **Transcriber** to recognise.
- Try writing in another format. If you have been printing, try writing cursive, or if you have been writing in both cursive and print, try printing alone.
- Adjust the speed at which **Transcriber** returns text after you write.
- Add a user dictionary that contains special terms you may be using, such as medical or legal terms.
- Verify that you are using your **Letter Shapes** user profile.



NOTE: The next time you write the shorthand text, the appropriate program will open.






 
 
 
 
 
Showing and hiding the Transcriber toolbar

The **Transcriber** toolbar, which appears at the bottom of the screen when **Transcriber** is open, provides easy access to several tools, Enter, Space, and Backspace buttons, and left and right arrow buttons.

To show or hide the **Transcriber** toolbar, from a program, tap the **Transcriber** icon at the bottom of the screen.



Text input

Toolbar icon	Description
	Displays the Transcriber: Options screen. From here, you can set options such as Writing Direction: , pen settings, and Shorthand .
	Displays the Letter Shapes screen. This screen allows you to set your personal writing styles to maximise recognition.
	Displays the on-screen miniature keyboard. This allows you to quickly enter numbers, punctuation, and other symbols.
	Changes the character recognition mode. <ul style="list-style-type: none">• a mode - this is the default for optimum handwriting recognition.• 123 mode - numbers and some letters are allowed and the calculator is activated.• A mode - all letters are automatically in upper case. If you are in A or 123 mode, recognition returns automatically to the default (a) mode once you lift the stylus.
	Inserts a space at the cursor.
	Inserts a paragraph return at the cursor.
	Moves the cursor one space to the left.
	Moves the cursor one space to the right.
	Moves the cursor one space back and erases any text.
	Opens the Transcriber Help .



Text input

XT9

You have access to **XT9** in all input methods. It offers faster, easier text input with next word prediction list and spelling correction function.

To show the **XT9** input keyboard, tap the selector arrow, and tap **XT9**. The position of the keys on the keyboard will be in accordance with the language that you are using on your Toshiba phone.

To change the input language, do one of the following:

- Tap the currently selected language on the **XT9** keyboard and tap the required language in the list.
- Tap the left **XT9** icon and then tap **2. Language** to display the list of language. Tap the required language in the list.

To disable the next word prediction function, tap the left **XT9** icon and then tap **3. Prediction Off**.

To hide the **XT9** keyboard, tap the **XT9** icon.



NOTE: **XT9** is available when text entry is possible.



NOTE: The left **XT9** icon is displayed when the cursor is in a text entry field.

Drawing and writing on the screen

With your Toshiba phone, you can draw directly on the screen, write on the screen, and save notes in your own handwriting. To do this, you must first set the input mode in **Notes** to **Writing**. If you prefer to use handwriting or frequently add drawings to your notes, you may find it helpful to set **Writing** as the default input mode. If you prefer typed text, set **Typing** as the default input mode.

To set the input mode for **Notes**:


1. Tap **Start > Programs > Notes**.
2. From the list of notes, tap **Menu > Options...**
3. From the **Default mode:** list, select one of the following:
 - **Writing** - if you want to draw or enter handwritten text in a note.
 - **Typing** - if you want to create a typed note.
4. Tap **ok**.



Text input


To hand write a note:

5. Tap **Start** > **Programs** > **Notes**.
6. From the list of notes, tap **New**.
7. Tap **Menu** > **Draw**.
8. Write your text on the screen.
9. When you have finished, tap **ok** to return to the list of notes.

 **NOTE:** If a letter crosses three ruled lines, it is treated as a drawing rather than text.

To draw on the screen, use the stylus.

10. Tap **Start** > **Programs** > **Notes**.
11. From the list of notes, tap **New**.
12. Tap **Menu** > **Draw**, and cross at least three ruled lines.
13. A box labelled **Drawing** appears around your drawing.
14. When you have finished, tap **ok** to return to the list of notes.

 **NOTE:** To select a drawing (for example, to copy or delete it), tap and hold the drawing briefly. When you lift the stylus, the drawing is selected.

Searching


You can search for files and other items stored on your Toshiba phone in the **My Documents** folder or on a storage card.

You can search by file name or by key words located in the item. For example, you can search e-mail messages, notes, appointments, contacts, and tasks as well as in **Help**.

To search for a file or an item:


15. Tap **Start** > **Programs** > **Search**.
16. In the **Search for:** field, enter the file name, word, or other information you require.
17. If you have searched for an item before, tap the arrow to the right of the **Search for:** field to find it in the searching history.
18. In the **Type:** field, select a data type to help narrow your search.
19. Tap **Search**.

In the **Results** list, you can tap the item you require to open it.

 **NOTE:** The **My Documents** folder and its subfolders are included in the search.



Text input

 **NOTE:** Results found on a storage card are indicated by an icon.





Settings

Volume control

If you want to turn the ringer off, or change the ringer settings quickly, press and hold the **OK key**. You can change the ringer setting cyclically (through **On/Vibrate/Off**) instead of tapping the ringer icon on the title bar.

You can also change the ringer setting and volume using the stylus or by pressing the **Side key** up or down.

Volume control has the following settings:


- Sound volume of your phone - 6 levels.
- Call volume - 6 levels.
- Both sound volume and call volume can be set to **On, Vibrate** or **Off**.

Reassigning button functions

There are already programs assigned to the hardware buttons. However, you may want to change some assignments to programs that you use more frequently.

To reassign a button:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Buttons**. You see a list of buttons with their current assignments.


 **NOTE:** An icon represents the original function of a button. It helps you to identify a button and restore its default at any time.


3. Tap a button to reassign.
4. From the **Assign a program:** list, select a program for this button.
5. Tap **ok**.

Settings

Setting the input method

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Input**.
3. On the **Input Method** tab, select a required input method from the **Input method:** list.
4. On the **Word Completion** tab, tap a desired setting for word completion.
5. On the **Options** tab, tap the desired options for writing and recording. These options apply to any program on your Toshiba phone when you can record or write.

 **NOTE:** You can also change input options by tapping the selector arrow and selecting **Options...**

 **NOTE:** You can enable or disable the XT9 feature by ticking or unticking the **Suggest words when entering text** checkbox on the **Word Completion** tab.

The **XT9 Prediction On/Prediction Off** setting takes priority over this input setting.

Security settings

It is advisable to apply certain security features in the event that your Toshiba phone is lost or stolen.

In addition, some security features can be applied to prevent unauthorised use.

You can apply the following security:

- Phone lock - using a PIN, this feature prevents unauthorised use of your SIM card in any phone.
- Device lock - using a password, this feature prevents unauthorised use of your Toshiba phone.
- SIM Lock - using a password, this feature prevents unauthorised use of your Toshiba phone with other SIM cards.

Enabling phone lock

Be sure to make a note of your personal identification number (PIN). When the SIM is disabled, you must provide this PIN to enable the SIM. The PIN is provided with your SIM card.

To enable the phone lock:

1. From the **Today** screen, tap **Phone > Menu > Options...**



Settings

On the **Phone** tab, tick the **Require PIN when phone is used** checkbox. To change the PIN at any time, tap **Change PIN**.



WARNING: If you fail to enter the correct PIN for your SIM card following three consecutive unsuccessful attempts, you will need to contact your Service Provider to obtain the PIN Unlocking Key (PUK). Do not attempt to guess the PUK as it will render your SIM card permanently inoperative following ten consecutive unsuccessful attempts



TIP: Emergency calls can be placed at any time, without requiring a PIN.

Enabling device lock

You can help keep your data more secure by requesting a password every time your Toshiba phone is used after either being left idle for a specified time or being switched off.

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Lock**.
3. Tick the **Prompt if device unused for** checkbox, and in the box to the right, select how long your device can be left idle before a

password is required.

4. From the **Password type:** list, select the type of password that you would like to use.
5. Enter the password and, if necessary, confirm the password. If your device is configured to connect to a network, use a strong password to help network security.
6. Tap **ok**.

The next time the device is switched on or used again after being left idle for a longer time than specified in your settings, you will be prompted to enter your password or to swipe your finger to unlock your Toshiba phone.



NOTE: Each time a wrong password is entered, the time the device takes to respond will become longer until the device appears to be not responding.

If you forget your password, you must follow the instructions in this manual to clear the memory before you can access your Toshiba phone.



Settings

To change your device lock password:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Lock**. You will be prompted to enter your current password or to swipe your finger.
3. In the **Password:** field, enter your new password.
4. Tap **ok**.

Enabling Fingerprint

The **Fingerprint** feature helps provide additional security on your Toshiba phone, by protecting it from unauthorised use.

To enable the **Fingerprint** feature:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Fingerprint**.
3. In the list, tap the finger that you want to enrol from the list.
4. Press the **Action key**.
5. Swipe the finger three times to enrol it to the fingerprint sensor.
6. Tap **ok**.

Disabling Fingerprint

To disable the **Fingerprint** feature:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Fingerprint**.
3. In the list, highlight the finger that is used for security.
4. Tap **Menu > Delete**.
5. Tap **ok**.

Enabling SIM Lock

To enable the **SIM Lock**:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **SIM Lock**.
3. Tick the **Lock phone to use current SIM card only** checkbox.
4. Enter and confirm a password of eight digits.
5. Tap **ok**.



NOTE: Please make a note of your password.



NOTE: If you activate the **SIM Lock**, you will only be able to use the SIM card used when you activated **SIM Lock** in your Toshiba phone.



Settings



NOTE: To disable this feature, enter your eight digit password, untick the **Lock phone to use current SIM card only** checkbox and tap **ok**.

Customising your Start menu

You can choose which items appear in the **Start** menu. To customise your **Start** menu:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Menus**.



NOTE: Only seven programs are can be selected for the **Start** menu. If you select any items from the **Programs** category, these items will be removed from **Programs**.

Owner information

Entering owner information could allow someone to return your Toshiba phone to you if it becomes lost.

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Owner Information**.
3. Enter your details on the **Identification** tab. You can also make any important notes on the **Notes** tab. On the **Options** tab, you can select whether to display **Identification information** and **Notes** when your Toshiba phone is

switched on.



TIP: If you have selected to show owner information on the **Today** screen, just tap the section there to edit owner information.

4. Tap **ok**.

Phone settings

Setting ring tones

To set a ring tone:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.



TIP: In the **Sounds** section, you can change the way that you are notified of incoming calls.

3. On the **Phone** tab, select the required type of ringing tone (**Ring**, **Vibrate**, or a combination) from the **Ring type:** list.

Select the required tune from the **Ring tone:** list. You can tap the control buttons to listen to a sample of the tune.



Settings



TIP: You can also use custom *.wav, *.mid, *.mp3, or *.wma files as ring tones.

Please search the **Help** topics on your Toshiba phone for **Change the ring tone** & ActiveSync for detailed instructions.



TIP: Using the **Keypad:** setting, you can select the length of tones to be played when you tap and hold the buttons on the phone keypad. You can also set the tones to be **Off**.

Setting call barring

Call barring allows you to screen incoming and outgoing calls.

To set call barring:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Call Barring** in the list of services, and then tap the **Get Settings...** button to retrieve settings from network.
5. When the current settings are displayed, select the settings required for blocking incoming and outgoing calls.

6. Tap **ok**.

Changing the call barring password

To change the call barring password:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Call Bar Pwd** tab.
4. Tap the **Change password...** button.
5. Enter your old password, new password, confirm you new password.
6. Tap **Done**. The request is sent to the network.

Setting call forwarding

To set call forwarding:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Call Forwarding** in the list of services, and then tap the **Get Settings...** button to retrieve settings from network.
5. When the current settings are displayed, select the settings required for forwarding incoming calls.
6. Tap **ok**.





Settings

Setting call waiting

When you are in another call, the call waiting feature will notify you of an incoming call.

To set call waiting:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Call Waiting** in the list of services, and then tap the **Get Settings...** button to retrieve settings from network.
5. When the current settings are displayed, select whether or not you would like to be notified of waiting calls.
6. Tap **ok**.

Configuring Caller ID

Caller ID allows selected parties to view your name and phone number information on their phone when you call them.

To configure Caller ID:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Caller ID** in the list of services, and then tap

the **Get Settings...** button to retrieve settings from network.

5. When the current settings are displayed, select who you would like to be provided with your caller ID information.
6. Tap **ok**.

Voice Mail and text messages settings

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Services** tab.
4. Tap **Voice Mail and Text Messages** in the list of services, and then tap the **Get Settings...** button to retrieve settings from network.
5. When the current settings are displayed, add or edit the phone numbers for the **Text messages service center:** and **Voice Mail:** if required.
6. Tap **ok**.

Setting fixed dialling

To set fixed dialling:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.

Settings

3. Tap the **Services** tab.
4. Tap **Fixed Dialing** in the list of services, and then tap the **Get Settings...** button to retrieve settings from network.
5. When the current settings are displayed, add or edit the phone numbers or area code in the Fixed Dialling list to restrict dialling of your Toshiba phone if required.



NOTE: You will need to enter PIN2 to change this list.

6. Tap **ok**.

Setting PIN2

You can change PIN2 if this functionality is enabled on your SIM card.

To change PIN2:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Change PIN2** tab.
4. Enter and confirm your new PIN2, then tap **Ok**.

Network settings

You can view available networks, or assign another network to connect if the current one becomes unavailable. In addition, you can choose to manually/automatically select the network. For more information on network settings, please refer to the related Help topics.

To select a network:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Network** tab. The following fields are displayed:

Current network: - By default, your Toshiba phone displays the current network name here. You can choose a preferred one by tapping the **Find Network** button.

Network selection - By default, the **Network selection** field is set to **Automatic**. If you select **Manual**, you will need to wait for the phone to search for all available networks. You can then select one to register to.

Set Networks button - Tap this button to display the list of **Preferred networks**. You can press the **Move Up** and **Move Down** buttons to arrange the order of the networks.





Settings

4. Tap **ok**.

Mode settings

To select a network mode:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Mode** tab and select the mode from the following list:
 - **Automatic** - selects network mode automatically.
 - **HSDPA** - selects 3G network mode.
 - **GSM** - selects 2G/2.5G network mode.
4. Tap **ok**.

Configuring channels

To configure the channel settings:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Phone**.
3. Tap the **Channel** tab, then tap the **Channels** button.
4. Select the required channels from the list.

Sounds and notifications

You can set a different sound for different events. The sound can be set to something different for each type of event.



TIP: You can copy sounds to your phone from your PC using ActiveSync. Sound files can be in either *.wav, *.mid, *.mp3, *.wma or *.amr file format.

Specifying the sound and notification for an event

To specify the sound and notification for an event:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Sounds & Notifications**.
3. On the **Sounds** tab, tick the **Events** or **Programs** checkboxes, or select a **Soft/Loud** sound for **Screen taps** or pressing **Hardware buttons**.
4. On the **Notifications** tab, select the specific sound required for the event. From the following checkboxes, select the way in which you want the event to be notified. (Some checkboxes may be dimmed depending on the event.)

Settings

5. Tap **ok**.



TIP: Disabling sounds and flash light helps to conserve battery power.

Customising your Today screen

You can customise your **Today** screen using:

- A picture file (*.bmp, *.jpg, *.png or *.gif).
- A pre-packaged file that includes a picture, a colour scheme and a new layout (*.hme or *.cab).



TIP: You can copy an image to your Toshiba phone from your PC using ActiveSync.

To customise your **Today** screen:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Today**.
3. On the **Appearance** tab, tap the required theme for the **Today** screen.
4. Tap **ok**.

Setting a picture as the Today screen background

To set a picture as the **Today** screen background:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Today**.
3. On the **Appearance** tab, tick the **Use this picture as the background** checkbox.
4. Tap the **Browse** button view the picture files.
5. Tap the file name of the selected picture.
6. Tap **ok**.

Setting appointment display

To set the appointment display for the **Today** screen:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Today**.
3. Tap the **Items** tab.
4. Tap **Calendar**, then tap the **Options...** button.
5. Select the required appointment display settings from the following:
 - **Next appointment** - displays only the next appointment on schedule.
 - **Upcoming appointments** - displays all appointments that have not yet occurred.



Settings

- **Display all day events** - displays all events for today (both those that have happened already and those that are still to occur).

6. Tap **ok**.

Setting task display

To set the task display for the **Today** screen

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Today**.
3. Tap the **Items** tab.
4. Tap **Tasks**, then tap the **Options...** button.
5. Select the required tasks display settings from the following:
 - **Display number of** - displays the selected tasks.
 - **Category:** - select the category of task to be displayed.
6. Tap **ok**.

Video call settings

To edit the video call settings:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Video Call**.
3. On the **Hold** tab, you can select the picture to be displayed when a video call is on hold. You can select the **Default image** or a **Custom image** stored on the phone.
4. On the **Block Video** tab, you can select the picture to be displayed when you have chosen to block video sending during a video call. You can select the **Default image** or a **Custom image** stored on the phone.
5. On the **Services** tab, you can access settings for video call services. To do this, tap the required item in the list, then tap the **Get Settings...** button.
6. Tap **ok** when you have finished editing the settings.



Settings

Viewing the About details

Viewing the Operating System (OS) version

To view the OS version:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **About**.
4. On the **Version** tab, you can see OS version and hardware information for your Toshiba phone.
5. Tap **ok** when you have finished.

Changing Device ID

To change the Device ID:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **About**.
4. Tap the **Device ID** tab. A description is given of the **Device ID** is and what it is used for.
5. Enter an ID in the **Device name**: field. You can also add a description if required.



NOTE: Your **Device ID** should start with a letter and contain only a combination of the letters A to Z, numbers 0 to 9, and underscore and hyphen characters.



NOTE: The **Device ID** is used to identify your Toshiba phone in the following situations:

- Synchronising with PC.
- Connecting to a network.
- Restoring information from a back up.
- Bluetooth partnership.
- Data exchange via beaming.

6. Tap **ok**.

Backlight settings

You can set the backlight to dim after a specific amount of time has elapsed.

To change the backlight settings:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Backlight**.
4. On the **Battery Power** tab, you can select when to turn off and on the backlight when using battery power, and specify the time delay.





Settings

5. On the **External Power** tab, you can select when to turn off and on the backlight when using external power, and specify the time delay.
6. On the **Brightness** tab, you can adjust the brightness of the screen.
7. Tap **ok** when you have finished.

Viewing certificate details

To view certificate details:


1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Certificates**. On each tab, the certificate names, along with their issuing authority and expiry date, are displayed.


Clock & alarm settings

Setting the date and time

To set the date and time:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Clock & Alarms**.
4. On the **Time** tab, in the **Home** section, you can set the time zone, current time and date for when you are at home.
5. In the **Visiting** section, you can set the time zone, current time and date when you visiting another country or time zone.
6. Tap **ok** when you have finished.

 **NOTE:** Synchronisation will update the time on your phone on that on the PC.

 **NOTE:** These settings are only lost if you manually reset your Toshiba phone. Your settings are preserved if you power off the phone, or if the battery is fully discharged.

Settings

Setting an alarm

To set an alarm:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Clock & Alarms**.
4. Tap the **Alarms** tab.
5. Tap **Description**, and use the keyboard or another input method to give you alarm a description if required.
6. Tap the letters below the **Description** field to select the days on which when the alarm is required.
7. Tap the time display on the right to set a time for this alarm.
8. Tap the bell icon to select the types of alarm to use. These can be **Play sound**, **Flash light**, **Vibrate**, or a combination of these. If you tick the **Play sound** checkbox, tap the sound selection list beside it to select an alarm sound.
9. Tap **ok** twice.

Customer feedback settings

You can make Windows Mobile software better by participating in the Customer Experience Improvement Program. If you participate, anonymous information about how you use Windows Mobile software will be sent to Microsoft. This helps identify trend and usage patterns in order to improve the software.

To edit customer feedback settings:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Customer Feedback**.
4. Tap the **Send Feedback** or **Don't Send Feedback** radio button.
5. Tap **ok**.



NOTE: This feature does not collect your name, address, or any other personally identifiable information. You will not incur any data charges to send the information.



Settings

Setting storage card encryption

This feature allows you to secure sensitive information on your Toshiba phone's removable storage card. The data will only be accessible when the card is installed on your particular Toshiba phone. If the card is lost or stolen, the information remains secure. The contents of the storage card cannot be accessed by anyone else because they are encrypted.

To encrypt the contents of your storage card:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Encryption**.
4. Tick the **Encrypt files placed on storage cards** checkbox.
5. Tap **ok**.



WARNING: Anyone in possession of the encryption key can decrypt and access information stored on the card.

Error Reporting

Turning Error Reporting on/off

Error Reporting sends data from your Toshiba phone to technical support groups, who use the data to diagnose a program error for a device running Windows Mobile software.

A text file is created whenever an error is detected, and can be delivered to support personnel if you choose to send it. If a program error occurs, **Error Reporting** starts automatically. The information Microsoft receives is used by programming groups at Microsoft. The data is used for quality control and will not be used for tracking individual users, installations, or for any marketing purpose.

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Error Reporting**.
4. Tap the **Enable error reporting** or **Disable error reporting** radio button.
5. Tap **ok**.



Settings

Setting up external GPS

To set up external GPS:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **External GPS**.
4. On the **Programs** tab, you can select the port that your Toshiba phone will use to obtain GPS data.
5. On the **Hardware** tab, you can select the hardware port to which your GPS device is connected. You can also set the Baud rate.
6. On the **Access** tab, you can activate **Manage GPS automatically (recommended)**. You are strongly advised to activate this feature; doing so will enable Windows Mobile to manage access to your GPS device, and allows multiple programs to obtain GPS data simultaneously.
7. Tap **ok** when you have finished.

Master Clear

To reinitialise your Toshiba phone:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Master Clear**.
4. Enter the confirmation code in the **Code:** field.
5. Tap the **Reset** button to reinitialise your phone.
6. Your phone will restart after it has been reset.



WARNING: After resetting, your Toshiba phone will be restored to its default factory settings. All the user data and programs on your Toshiba phone will be formatted.



IMPORTANT: It is recommended that you frequently back up all of your data on your Toshiba phone.





Settings

Memory management settings

To ensure a good performance of your Toshiba phone, it is necessary to maintain sufficient memory.

Checking memory details of your Toshiba phone

To check the memory available on your Toshiba phone:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Memory**.
4. On the **Main** tab, you can see the details of **Storage** and **Program** memory.
5. On the **Storage Card** tab, you can see the memory available on the storage card.

Ending a program

You can close programs manually to release more memory.

To end a program:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Memory**.
4. Tap the **Running Programs** tab.

5. In the **Running Programs List**, tap the program that you want to close, and tap the **Stop** button. You can also tap the **Stop All** to stop all running programs.



NOTE: If you want to restore a program, highlight the required program and tap the **Activate** button.

Power management settings

Use power management to check the battery status and configure settings that prolong battery life.

To edit the power management settings:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Power**.
4. On the **Battery** tab, the current remaining battery power is displayed.
5. On the **Advanced** tab, you can set the following:
 - in the **On battery power:** section, tick the **Turn off device if not used for** checkbox and select the time period for the phone to turn off if left idle when using battery power.

Settings

- in the **On external power:** section, tick the **Turn off device if not used for** checkbox, and select the time period for the phone to turn off if left idle when using external power.
- 6. On the **Wi-Fi** tab, you can set the Wi-Fi power control:
 - **Default** - Wi-Fi will follow the backlight setting, i.e. on only when the backlight is on.
 - **Always On** - Wi-Fi is always on.
- 7. Tap **ok** when you have finished.

Regional settings

Regional settings specify the style in which numbers, currency, dates, and times are displayed.

To edit regional settings:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Regional Settings**.
4. On the **Region** tab, select your region from the list.
5. To set up the details, tap the other tabs (**Number**, **Currency**, **Time**, and **Date**), and select the required settings.
6. Tap **ok** when you have finished.

Removing Programs

This feature removes additionally installed software programs.



NOTE: Programs that come with your Toshiba phone cannot be removed.

To remove a program:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Remove Programs**.
4. Select the program to remove from the **Programs in storage memory:** list.
5. Tap the **Remove** button.

Screen settings

Adjusting screen settings

To adjust screen settings:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Screen**.
4. On the **General** tab, you can align the screen.





Settings

5. On the **ClearType** tab, you can select **Enable ClearType** to smooth the edge of screen fonts for many programs.
6. On the **Text Size** tab, you can adjust the text size. You can see an example of the selected size in the **Example:** field.
7. Tap **ok** when you have finished.
4. In the **Delay before first repeat:** section, move the pointer to adjust the time taken before scrolling begins.
5. In the **Repeat rate:** section, move the pointer to adjust the time taken to scroll from one item to the next.
6. Tap **ok** when you have finished.

Orienting the screen

To orient the screen:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Screen**.
4. Tap the **Orientation** radio button to set the screen orientation.
5. Tap **ok**.

Adjusting scroll speed

The scroll speed is the speed at which you can scroll through items in a list.

To adjust the scroll speed:

1. From the **Today** screen, tap **Start > Settings**.
2. On the **Personal** tab, tap **Buttons**.
3. Tap the **Up/Down Control** tab.

Windows Update

You can use **Window Update** to update the Microsoft programs on your Toshiba phone.

To use **Windows Update**:


1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Windows Update**.
4. Tap **Menu > Change Schedule**, and select the way for your Toshiba phone to check for important updates or optional updates.
5. Tap **ok**.

Connectivity


Connecting to the Internet

Your Toshiba phone is equipped with powerful networking functions that enable you to connect to the Internet through a General Packet Radio Service (GPRS) or Universal Mobile Telecommunications System (UMTS) network. You can set up connections to the Internet or to a corporate network to browse the Internet, and exchange e-mail or instant messages.

Your device has two groups of connection settings: **My ISP** (Internet Service Provider) and **My Work Network**. The **My ISP** settings are used to connect to the Internet, while **My Work Network** settings can be used to connect to any private, corporate network.

 **NOTE:** Before you begin, you will need to obtain the following information:

- From your cellular phone service provider - data connectivity plan information, access point name, and PAP/CHAP security settings.
- From your Internet service provider (ISP) or wireless service provider - access point name, user name and password, and other security information.

 **NOTE:** If you connect to the Internet using your Service Provider's data network, the service may be provided through a GPRS connection (fast, but generally billed by volume of data transferred), or through a Circuit Switched connection (slow, but generally billed by amount of time connected). You should check with your Service Provider which connection you will use on their network.

Creating a GPRS connection

GPRS is a packet-based wireless communication service which allows users to send and receive data, with their mobile phones, in functions such as e-mail and web-browsing. Normally, your Service Provider will charge for this service based on the data traffic volume. However, every network connection is different, and you should gather all the relevant information from your Service Provider.

To create a GPRS connection:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Connections**.



Connectivity

4. Tap **Add a new modem connection** for the appropriate group.
5. Enter a name for the connection.
6. Select **Cellular Line (GPRS)** from the **Select a modem:** list, then tap **Next**.
7. Enter an access point name, then tap **Next**.
8. Enter the following information:
 - **User name:** - enter your user name for the GPRS network, if required.
 - **Password:** - enter your password, if required.
 - **Domain:** - enter the domain name, if required.
9. If you need to specify extra details, tap the **Advanced...** button and enter the following information:

On the **TCP/IP** tab, tap the **Use server-assigned IP address** radio button if you want to automatically configure the IP address.

Otherwise, tap the **Use specific IP address** radio button and manually enter the IP address. Tick the **Use software compression** checkbox if required.

Tick the **Use IP header compression** checkbox if required.

On the **Servers** tab, tap the **Use server-assigned addresses** radio button if you want to automatically configure the server address.

Otherwise, tap the **Use specific server address** radio button to manually enter the server address information in the **DNS:**, **Alt DNS:**, **WINS:**, and **Alt WINS:** fields.

Tap **ok**.

10. Tap **Finish**.

Your Toshiba phone will use this connection when you connect to the Internet.

Creating a dial-up connection



NOTE: Every network connection is different. You should gather all relevant information for this service from your Service Provider.

To create a dial-up connection:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Connections**.
4. Tap **Add a new modem connection** for the appropriate group.
5. Enter a name for the connection.
6. Select **Cellular Line** from the **Select a modem:** list, then tap **Next**.
7. Enter the phone number used to dial the network, then tap **Next**.



Connectivity

8. Enter the required information. Refer to Creating a GPRS connection for details.
9. Tap **Finish**.

Creating a proxy connection

Depending on your Service Provider's configuration, you may need to add a proxy connection to allow your Toshiba phone to access the Internet or WAP services. Every network connection is different and your Service Provider will be able to advise if you need to create a proxy connection. You should gather all the relevant information from your Service Provider before creating a proxy connection.

To create a proxy connection:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Connections**.
4. Tap **Set up my proxy server** in the **My Work Network** section.
5. Tick the **This network connects to the Internet** checkbox.
6. Enter the proxy server.
7. Tap **ok**.

Creating a VPN connection



IMPORTANT: Please ensure that you have set up a successful GPRS connection before attempting to create a VPN connection - the VPN connection uses the GPRS connection to connect to your work network.

You should gather relevant information before creating a VPN connection.

To create a VPN connection:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Connections**.
4. Tap **Add a new VPN server connection** in the **My Work Network** section.
5. Enter the following information:
 - **Name:** - enter a name for the connection.
 - **Host name/ IP:** - enter the VPN server name.
 - **VPN type:** - select the VPN type.
6. Tap **Next**.



NOTE: If you selected **IPSec/L2TP** in the **VPN type:** section, you will need to select the authentication method.





Connectivity


7. Enter the required information. Refer to **Creating a GPRS connection** for details.
8. Tap **Finish**.


Using a specific connection to connect to the chosen networks

You must define a specific connection to the chosen networks, to connect your Toshiba phone to the correct access point for a particular data transfer type.

To use a specific connection to connect to chosen networks:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Connections**.
4. Tap **Set up my proxy server** in the **My Work Network** section.
5. Tap the **Advanced...** button.
6. Tap the proxy type to change, and enter the relevant information.
7. Tap **ok**.

 **NOTE:** Use the same method to select the connection to use for the WAP network.

 **NOTE:** The **My Work Network** connection is used if you are planning to use a VPN connection.

Bluetooth

Bluetooth has three modes: **Off**, **On** and **Visible**. When Bluetooth is set to **On**, your Toshiba phone will be connected to the devices it is already paired with, but will not be visible to new devices. In **Visible** mode your Toshiba phone will perform in the **On** state, but it will also be visible to new devices within range, and you will also be able to receive data from other devices.

Switching Bluetooth on and off

By default Bluetooth is switched off. If you switch it on, and then switch your Toshiba phone off, Bluetooth will also be switched off. When you switch on your phone again, Bluetooth will switch on automatically.

To switch Bluetooth on/off:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Bluetooth**.

Connectivity

4. Tap the **Mode** tab.
5. Tick the **Turn on Bluetooth** checkbox to switch on Bluetooth. Untick the checkbox to switch off Bluetooth.
6. Tap **ok**.

Creating a Bluetooth partnership

Before creating a Bluetooth partnership:

- Ensure that your Toshiba phone and the device you are connecting to are within close range.
- Your Toshiba phone has Bluetooth switched on and the device you are connecting to is in **Visible** mode.

To create a bluetooth partnership:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Bluetooth**.
4. On the **Devices** tab, tap **Add new device...**

Your Toshiba phone searches for other Bluetooth-enabled devices and displays them in the list.

5. Tap the required device, then tap **Next**.
6. If required (although recommended for enhanced security), enter an alphanumeric passcode, between 1 and 16 characters in

length in the **Passcode:** field, then tap **Next**.

7. Enter the same passcode on the partnering device and respond to any prompts.

Ending a Bluetooth partnership

To end a Bluetooth partnership:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Bluetooth**.
4. On the **Devices** tab, tap and hold the device with the Bluetooth partnership you want to end.
5. When the options are displayed tap **Delete** and then **Yes**.

Making your Toshiba phone visible to other Bluetooth devices

Your Toshiba phone must be set to **Visible** to:

- Receive data.
- Allow other Bluetooth devices to detect your Toshiba phone.
- Offer services to other devices, such as Internet Sharing.





Connectivity

To make your Toshiba phone visible to other devices:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Bluetooth**.
4. Tap the **Mode** tab.
5. Tick the **Make this device visible to other devices** checkbox if you want your Toshiba phone to be visible to other devices within range.
6. Tap **ok**.

Other Bluetooth-enabled devices can now detect your Toshiba phone.

Accepting a Bluetooth partnership

To accept a Bluetooth partnership:

1. Ensure that Bluetooth is turned on and that your Toshiba phone is visible to other Bluetooth-enabled devices.
2. When prompted to accept a Bluetooth partnership with another device, tap **Yes**.
3. Enter the same passcode as on the partnering device and respond to any prompts.

The Bluetooth partnership is created. You can now exchange data with the other device.

Setting up an outgoing Bluetooth COM port

Some programs can only establish a connection through a serial (COM) port, even if the device itself is Bluetooth-enabled. To make it possible for such programs to use a Bluetooth connection, you must set up a virtual COM port. Once created, this virtual port can be used like any other COM port. You can use a virtual COM port for programs that, for example, connect to a GPS receiver, or to connect to a Bluetooth-enabled printer.

The **New Outgoing Port** item only available if one or more Bluetooth-connected devices support serial (COM) connections.

To set up an outgoing Bluetooth COM port:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Bluetooth**.
4. Tap the **COM Ports** tab.
5. Tap **New Outgoing Port**.
6. Tap the device you want to add the port for, then tap **Next**.
7. Select a numbered COM port from the list.

Connectivity

- To use this COM port to communicate only with devices with which your Toshiba phone has a Bluetooth partnership, tick the **Secure Connection** checkbox.
- Tap **Finish**, then tap **ok**.

Beams

The term 'beam' is used to describe the short range transfer of data between two devices via a Bluetooth connection.

Beaming an item

To beam **Calendar**, **Contacts**, **Tasks**, and **Pictures & Videos** files and data to other devices:

- Tap the item you want to beam, such as an appointment in **Calendar** or a task in **Tasks**.
- Tap **Menu**, and then tap the menu item for beaming the item, for example **Beam Appointment...**
- Tap the device to which you want to send the item.

Configuring your Toshiba phone to receive beamed data

To configure your phone to receive beamed data:

- From the **Today** screen, tap **Start > Settings**.
- Tap the **Connections** tab.
- Tap **Beam**.
- Make sure that the **Receive all incoming beams** checkbox is ticked. Remove the tick if you do not want to receive incoming beams.
- Tap **ok**.

Receiving beamed data

To receive beamed data:

- Ensure that your Toshiba phone is set to **Visible** mode in the Bluetooth settings, and is in range of the device beaming the data.
- You are notified when data is being received on your Toshiba phone. To stop receiving the data, tap **Cancel**.
- Once the data has transferred, tap **Yes** to save it or **No** to discard it.





Connectivity

Checking for a Wireless LAN signal

Before you start a Wi-Fi connection, you must verify that your Toshiba phone has access to a Wireless LAN channel signal. You can check the current wireless connection status from the following three screens on your phone.

- **Today** screen - If your Toshiba phone detects a Wireless LAN network connection, the Wireless LAN connection icon is displayed at the top of the **Today** screen.
- **Wireless Manager** screen - The current connection status and signal quality for each specific wireless channel is displayed on the **Wireless Manager** screen with the current configuration.
- **Wi-Fi** screen - Displays the wireless networks currently available and allows you to add new ones if available.



NOTE: Wireless LAN (Wi-Fi) is the default wireless channel setting for your Toshiba phone. However, GPRS starts by default if your phone does not detect a Wi-Fi signal.

Connecting to a Wi-Fi network

To connect to a Wi-Fi network:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Wireless Manager**. You can see the current Wi-Fi status displayed in this screen.
4. Highlight Wi-Fi, then tap **Menu > Wi-Fi Settings** to configure wireless networks.
5. When the networks are detected, select a network from the list displayed.

To configure the network adaptor:

1. On the Wi-Fi settings screen, tap the adaptor you want to configure.
2. On the **IP Address** tab, tick the **Use server-assigned IP address** or **Use specific IP address** radio button.
3. On the **Name Servers** tab, specify **DNS:**, **Alt DNS:**, **WINS:** and **Alt WINS:**.
4. Tap **ok**.



NOTE: Once some networks have been detected, a pop-up list will be displayed requesting you to select which one to connect to.

Connectivity

Wireless Manager

Wireless Manager allows you to easily switch the **Phone**, **Bluetooth** and **Wi-Fi** functionality on and off.

To start **Wireless Manager**:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **Wireless Manager**.

The icons of active items are coloured white. Inactive items are displayed with a cross.

Turning the phone on and off

Switch the telephony radio transmission of your Toshiba phone off by tapping the **Phone** icon. When a cross is displayed next to the receiver icon, your phone is in 'flight mode'. You will not be able to make or receive phone calls or use your data network. However, you can still use Bluetooth if it is switched on.

To switch the telephony back on, tap the **Phone** icon again.

USB to PC connection

Setting up the USB to PC connection

To set up the USB to PC connection:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **USB to PC**.
4. Tick the **Enable advanced network functionality** checkbox.
5. Tap **ok**.

USB mass storage

This setting changes the type of USB connection so that your PC can easily access a miniSD storage card in your Toshiba phone.

To enable the USB mass storage function:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **Connections** tab.
3. Tap **USB mass storage**.
4. Tick the **Enable USB mass storage function** checkbox.
5. Tap **ok**.



Applications & multimedia

Your Toshiba phone is installed with the following applications:

- **Office Mobile**
- **Calendar**
- **Contacts**
- **Internet Explorer**
- **Messaging**
- **Phone**
- **Help**
- **Games**
- **ActiveSync**
- **Calculator**
- **Camera**
- **File Explorer**
- **Fingerprint Launcher**
- **GoldKey**
- **Internet Sharing**
- **Java**
- **Windows Live Messenger**
- **Notes**
- **Opera Browser**
- **PicSel Viewer**
- **Pictures & Videos**
- **Search**

- **SIM Manager**
- **SIM Toolkit** (dependent on your Service Provider)
- **Tasks**
- **Teleport**
- **TIPtalk**
- **Windows Live**
- **Windows Media Player**
- **Zoom**

Office Mobile

To access **Office Mobile** on your Toshiba phone:

1. From the **Today** screen, tap **Start > Office Mobile**.
2. Tap an application from:
Excel Mobile
PowerPoint Mobile
Word Mobile



Applications & multimedia

Excel Mobile

Excel workbooks created on your PC can be opened and edited on your Toshiba phone.

However, **Excel Mobile** does not fully support some features, such as formulas and cell comments.



WARNING: Some data and formatting may be lost when you save the workbook on your Toshiba phone. Note the following regarding these **Excel Mobile** formatting considerations: alignment, borders, cell patterns, font and font size, number formats, formulas and functions, protection settings, zoom settings, worksheet names, AutoFilter settings, chart formatting and worksheet features.

PowerPoint Mobile

With **PowerPoint Mobile**, you can open and view slide show presentations created on your PC.

Whether the presentation is opened from an e-mail message, downloaded from a file share or the Internet, copied to your Toshiba phone via a storage card, or obtained by synchronising with your PC, slide shows created in *.ppt and *.pps format with PowerPoint '97 and later can be viewed on your Toshiba phone.

Many presentation elements built into the slide shows, such as slide transitions and animations, will play back on your Toshiba phone. If the presentation is set up as a timed slide show, one slide will advance to the next automatically. Links to URLs are also supported.



WARNING: PowerPoint features not supported on the device include:

- Notes - Notes written for slides will not be visible.
- Rearranging or editing slides - **PowerPoint Mobile** is a viewer only.
- File formats - Files created in *.ppt format earlier than PowerPoint '97, and HTML files in *.htm and *.mht formats, are not supported.



Applications & multimedia

Word Mobile

Word documents created on your PC can be opened and edited on your Toshiba phone. However, **Word Mobile** does not fully support some features, such as revision marks and password protection.



WARNING: Some data and formatting may be lost when you save the document on your Toshiba phone. You can open*.psw files in **Word Mobile**; however, if you edit a file, you will need to save it in *.doc, *.rtf, *.txt, or *.dot format.

Calendar

The **Calendar** application works like an electronic diary, allowing you to organise your events. Your entries can then be displayed as reminders on your Toshiba phone. Also, if you also use Outlook on your PC, you can synchronise the information between your PC and your phone.

Scheduling an appointment

To schedule a new appointment:

1. From the **Today** screen, tap **Start > Calendar > Menu > New Appointment**.
2. Enter details of the appointment.
3. Tap **ok**.



NOTE: All day events do not occupy blocks of time in the **Calendar** - instead they are displayed as bars at the top of the **Calendar**.

Making a recurring appointment

To make an existing appointment recurring:

1. From the **Today** screen, tap **Start > Calendar**.
2. Tap the appointment to change to be recurring.
3. Tap **Menu > Edit**.
4. Tap the **Occurs:** field and select one of the recurrence options.
5. Tap **ok**.

Updating an appointment

To update an appointment:

1. From the **Today** screen, tap **Start > Calendar**.
2. Tap the appointment to update.



Applications & multimedia

3. Tap **Menu** > **Edit**.
4. If the appointment is recurring, tap **One** to edit only the current occurrence, or tap **All** to edit the series.
5. Make the required changes, then tap **ok**.

Deleting an appointment

To delete an appointment:

1. From the **Today** screen, tap **Start** > **Calendar**.
2. Tap the appointment to delete.
3. Tap **Menu** > **Delete**.
4. If the appointment is recurring, tap **One** to delete only the current occurrence, or tap **All** to delete the series.



TIP: To cancel the deletion, tap **Cancel** (recurring appointments) or **No**.



NOTE: When you delete a **Calendar** appointment on your Toshiba phone, it is also deleted on your PC the next time you synchronise. If the appointment has not been synchronised with a PC, it will only be deleted from your phone.

Changing the work week display

To change the work week display:

1. From the **Today** screen, tap **Start** > **Calendar** > **Menu** > **Tools** > **Options...**
2. Do one of the following:
To specify the first day of the week, in the **1st day of week:** field, select **Sunday** or **Monday**.
To specify the number of days you want displayed in a week, in the **Week view:** field, select **5-day week**, **6-day week** or **7-day week**.
3. Tap **ok**.

Changing the reminder time

By default, the reminder time is set to 15 minutes prior to an appointment.

To change the reminder time:

1. From the **Today** screen, tap **Start** > **Calendar** > **Menu** > **Tools** > **Options...**
2. Tap the **Appointments** tab.
3. Make sure that the **Set reminders for new items** checkbox is ticked and change the reminder time.
4. Tap **ok**.



Applications & multimedia

Viewing today's agenda

To view today's agenda:

- From the **Today** screen, tap **Start** > **Calendar** > **Menu** > **Go to Today**, or
- From **Day**, **Week**, **Month** or **Year** view, tap **Menu** > **View** > **Agenda**.



TIP: To view past or future dates, press the **Left Navigation key** or **Right Navigation key**, or tap **Menu** > **Go to Date**.

Viewing agenda for a specific date

To view the agenda for a specific date:

1. From the **Today** screen, tap **Start** > **Calendar** > **Menu** > **Go to Date**.
2. Tap the required date on the pop-up calendar.

Viewing schedule for the month

To view the schedule for a month:

From the **Today** screen, tap **Start** > **Calendar** > **Menu** > **View** > **Month**.

Contacts

You can customise each contact by adding a picture or a ring tone to uniquely identify the person who is calling you.

Creating a new contact

To create a new contact:

1. From the **Today** screen, tap **Start** > **Contacts** > **New**.
2. Tap the contact type to create (**Outlook Contact** or **SIM Contact**).
3. Enter the details of the new contact.
4. Tap **ok**.



WARNING: The SIM contacts do not support e-mail addresses or additional numbers.



NOTE: Contacts can be created and stored on a SIM card. If you move the SIM card to another phone, your SIM contacts are moved as well.



Applications & multimedia



TIP: If someone who isn't in your list of contacts calls you or sends you a message, you can create a contact for that person from the **Call History** by tapping **Menu > Save to Contacts**.



TIP: To save an existing contact to your SIM, tap the contact, then tap **Menu > Save to SIM**.

Assigning phone numbers to a contact

You can assign a work phone number (w), mobile phone number (m) and a home phone number (h) to a contact stored on the phone. The mobile phone number is dialled by default, unless you tap the contact and then tap to call the required phone number.

Finding a contact

To find a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the **Enter a name...** field.
3. Enter the first letter of the name of the contact to find. Matching contacts will be listed below.



NOTE: You can search for contacts by Name or Company.

To change the item to search by:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap **Menu > View By**.
3. Tap **Name** or **Company**.

Viewing and editing a contact

To view and edit a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. To edit the contact, tap **Menu > Edit**.
4. Tap **ok** when you have finished.

To set the viewing filter:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap **Menu > Filter**.
3. Tap the required filter item.



NOTE: To display all contacts again, tap **Menu > Filter > All Contacts**.

Applications & multimedia

Deleting a contact

To delete a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the contact to delete.
3. Tap **Menu > Delete Contact**.

Adding a picture to a contact

To add a picture to a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. Tap **Menu > Edit**.
4. On the **Details** tab, tap **Select a picture...**
5. Either select the picture to add, or tap **Camera** and take a picture.
6. Tap **ok**.

Removing a picture from a contact

To remove a picture from a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. Tap **Menu > Edit**.
4. Tap **Menu > Remove Picture**.
5. Tap **Yes** on the confirmation screen.
6. Tap **ok**.

Assigning a ring tone to a contact

To easily identify who is calling you by the ring tone, you can assign a custom ring tone to each contact.

To assign a ring tone to a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. Tap **Menu > Edit**.
4. On the **Details** tab, tap the **Ring tone:** field and tap the required ring tone.
5. Tap **ok**.

Sending contact information

Using a text message, you can quickly send information about a contact in your contact list.

To send contact information:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. Tap **Menu > Send Contact > Text Messages**.
4. Select the contact information that you want to send, then tap **Done**.
5. In the new text message, enter the phone number of the person to whom you are sending the contact information, then tap **Send**.



Applications & multimedia



NOTE: You can also send the contact information using **Beam**.

Assigning a category to a contact

You can use categories to help organise your contacts.

To assign a category to a contact:

1. From the **Today** screen, tap **Start > Contacts**.
2. Tap the required contact.
3. Tap **Menu > Edit**.
4. On the **Details** tab, tap the **Categories:** field.
5. Tap the selected categories.
6. Tap **ok** twice.



NOTE: Categories are shared between your appointments, contacts, and tasks. A category will remain in the list of shared categories as long as it is assigned to at least one appointment, contact, or task.

Internet Explorer

Opening Internet Explorer

To open **Internet Explorer**:

From the **Today** screen, select **Start > Internet Explorer**.

Go to a link

To go to a web page link:

1. From the **Today** screen, select **Start > Internet Explorer**.
2. Tap **Favorites** or **History** to view the available links.
3. Tap the required web page link.

Go to a web page

To go to a web page:

1. From the **Today** screen, select **Start > Internet Explorer**.
2. Enter the address.
3. Tap the search icon.



Applications & multimedia

Accessing a web page from the History

To access a web page from the **History**:

1. From the **Today** screen, select **Start > Internet Explorer**.
2. Tap **History** to view the available links.
3. Tap the required web page link.

Viewing a favourite web page

To view a favourite web page:

1. From the **Today** screen, select **Start > Internet Explorer**.
2. Tap **Favorites** to view the available links.
3. Tap the required web page link.

Changing the Home page

To change the Home page:

1. While on a web page, tap **Menu > Tools > Options...**
2. On the **General** tab, tap the required **Home page**:
 - **Use Current** - sets the currently displayed page as your Home page.
 - **Use Default** - sets the default Home page.

3. Tap **ok**.

Changing the text size on a web page

To change the size of text on a web page:

1. While on a web page, select **Menu > View > Text Size**.
2. Select the required text size.

Showing or hiding web page pictures

To show or hide the pictures on a webpage:

While on a web page, tap **Menu > View > Show Pictures**.

Clearing the History, and deleting cookies or temporary files

Following frequent use of the Internet, your Toshiba phone may accumulate data that uses up the storage capacity. It is advisable to delete certain files to free up the storage on your phone.

To clear the **History**, or delete temporary files:

1. While on a web page, tap **Menu > Tools > Options...**
2. Tap the **Memory** tab.



Applications & multimedia

3. Tap the **Clear History** button to clear the **History**. Tap the **Delete Files** button to delete temporary files.
4. Tap **ok**.

To delete cookies:

1. While on a web page, tap **Menu > Tools > Options...**
2. Tap the **Security** tab.
3. Tap the **Clear Cookies** button to delete cookies.
4. Tap **ok**.

Changing cookies and security settings

Internet Explorer Mobile supports the protocols used by Secure Sockets Layer (SSL). A connection that uses SSL helps you to send personal information more safely.

Cookies are small files containing information about your identity and preferences so that a page can tailor information to your needs. The page sends the file, and it is stored on your Toshiba phone.

To change cookies and security settings:

1. While on a web page, tap **Menu > Tools > Options...**

2. Tap the **Security** tab.
3. Tap the checkboxes for the required options.
4. Tap **ok**.

Sending a web page link

1. Go to the web page you want to send.
2. Select **Menu > Tools > Send Link...**
3. Tap the **Messaging** account that you would like to use to send the link. A new message is created with the web page link inserted in the message body.
4. Tap **Send** when you have finished the message.



WARNING: Only *.wav files are supported for online playback.

Messaging

For more information, please refer to the **Messaging** section.



Applications & multimedia

Phone

Phone is the shortcut to the **Phone** screen. For more information on the **Phone** screen, please refer to the **Call functions** section.

Help

To access the **Help** on your Toshiba phone: From the **Today** screen, tap **Start > Help**. The **Help** screen consists of a content area and a navigation toolbar. You can use the following functions of **Help**.

Button	Function
Contents	Displays the Help Table of Contents , which includes both task-based links to Help , and a list of links to Help for other installed Windows Mobile-based applications.
Search	Displays the Search for: dialog box to search for Help content.
Back arrow	Displays the previously viewed Help topic.
Forward arrow	Displays the next topic in a sequence of previously viewed Help topics.

Games

To access the games on your Toshiba phone:

1. From the **Today** screen, tap **Start > Programs > Games**.
2. Select the game to play.

ActiveSync

For more information, please refer to the **Synchronising** subsection in **Getting Started**.

Calculator

To access the **Calculator**:

From the **Today** screen, tap **Start > Programs > Calculator**.

Use the **Calculator** buttons or Input Panel to enter numbers and perform calculations.

Button	Function
Back arrow	Clears the last digit in a multi-digit entry.
C	Clears the current calculation or displayed number.
MC	Clears the memory.



Applications & multimedia

MR	Displays the number stored in the memory.
M+	Adds the displayed number to the number already stored in the memory.
1/x	Calculates the reciprocal of a number.
%	Perform operations with percentages.
$\sqrt{\quad}$	Calculate the square root of a number.
+/-	Toggles a numbers between positive and negative.

Camera

Your Toshiba phone is equipped with a digital camera which can be used to capture photos and video clips.

Starting the camera

You can launch the camera application in the following ways:

- Press and hold the **Camera key** on the side of your Toshiba phone.
- From the **Today** screen, tap **Start > Programs > Camera**.
- From the **Today** screen, tap **Start > Programs > Pictures & Videos > Camera**.

Taking a photo

To take a photo:

Aim the camera at the subject and do one of the following:

- Press the **Left softkey**.
- Press the **Action key**.
- Press the **Camera key**.

Capturing a video

Your Toshiba phone can also capture videos that you can play back with Windows Media Player Mobile.

To capture a video:

1. Start the **Camera**. Refer to Starting the camera for details.
2. Tap the **Right softkey > Capture Mode > Video**.
3. Press the **Left softkey** to start recording.
4. Press the **Left softkey** to stop recording.



IMPORTANT: Before capturing a video, ensure that you have adequate free memory to store your video.

Applications & multimedia

Camera settings

You can set the **Camera** settings from the menu on the **Right softkey** or by tapping the icons on the **Camera** screen.

- **Capture Mode** - to set the camera mode. Select from:
 - **Photo** - select from **Single** (📷), **Timer** (🕒) and **Burst** (📷).
 - **Video** (📹) - record videos.



NOTE: The **Burst** setting allows you to take multiple rapid-fire shots with one touch of the **Left softkey**, **Action key** or **Camera key**.

This is a useful feature when shooting subjects in motion.

- **Pic. & Videos** - launches the **Pictures & Videos** feature, where you can review the images you have captured.
- **Zoom** (🔍) - to select different zoom levels. The zoom level depends on the size of the picture being taken.
- **Landscape** (📷) - to capture photos or videos in a wide-angle view (with the longest side from left to right).
- **Portrait** (📷) - to capture photos or videos with the longest side from top to bottom.

- **Front Camera** (📷) - to take photos or videos with the camera lens facing you.
- **Rear Camera** (📷) - to take photos or videos with the back camera lens.
- **Environment** - to set the colour correction of the camera to show the best effect at the current light. You can also set up the correction manually by tapping **Environment** > **Advanced** and adjusting each field.
- **Effect** - to select a photo effect from **None**, **Greyscale**, **Sepia**, **Cool** or **Warm**.
- **Settings** - to set the following items:
 - **General** tab - **Save to**, **Flicker adjustment**, **Phone light off** (📵) and **Review after capture**.
 - **Single** tab - **Format**, **Picture quality** and **Resolution** (📷) for **Single Photo** mode.
 - **Timer** tab - **Format**, **Picture quality**, **Resolution** and **Self-timer** for **Timer Photo** mode.
 - **Burst** tab - **Format**, **Picture quality**, **Resolution** and **Burst number** for **Burst Photo** mode.
 - **Video** tab - **Format**, **Picture quality**, **Resolution**, **Capture time limit** and **Capture audio** for **Video** mode.
- **About** - provides information about the **Camera**



Applications & multimedia

application.

- **Exit** - exits the **Camera** application.

Storing pictures and videos

All pictures and video files taken with your Toshiba phone are saved on the phone memory by default. However, you can set your phone to save pictures and video files to your miniSD card.

To store pictures and videos on your miniSD card:

1. Ensure that a miniSD card has been inserted into your Toshiba phone (refer to the **Getting started** section for installation instructions).
2. From within the **Camera** application, tap the **Right softkey > Settings**.
3. On the **General** tab, select either **Phone** or **Storage Card** in the **Save to** field.

Precautions when using the camera

- Fingerprints or grease sticking to the lens may result in problems such as picture blurring. You should wipe the lens clean with a lens tissue.
- Try to maintain a steady hand when capturing pictures. Any movement of your Toshiba phone may lead to picture blurring.
- Avoid aiming the camera at bright light sources

as this will affect the quality of the picture.

- Please consider the privacy of others when capturing pictures with your Toshiba phone.

File Explorer

Use the **File Explorer** tool to view and manage files saved in your Toshiba phone, or on the storage card.

To access the **File Explorer**:

1. From the **Today** screen, tap **Start > Programs > File Explorer**.
2. Access the required folders or files.

File Explorer menu

To access the **File Explorer** menu:

From the **Today** screen, tap **Start > Programs > File Explorer > Menu**.

The following menu items are displayed:

- **My Documents** - displays the files saved in the **My Documents** folder.
- **Open Path** - to add and open a new path to browse for files.
- **Send...** - to send a selected file via e-mail or



Applications & multimedia

MMS.

- **Beam File...** - to send a selected file to a contact via Bluetooth.
- **Refresh** - to refresh the **File Explorer** screen.
- **Show All Files** - to show all of the files stored in the displayed folder.
- **New Folder** - to create a new folder.
- **Rename** - to rename a selected file or folder.
- **Delete** - to delete a selected file.
- **Edit** - allows you to manage the file list by using **Undo**, **Cut**, **Copy**, **Paste**, **Paste Shortcut** and **Select All**.

Sort files

To sort files:

1. From the **File Explorer** screen, tap the text at the top right corner of the screen. This will change to **Sort By**.
2. Select a sorting method from the list - **Name**, **Date**, **Size** or **Type**.

Fingerprint Launcher

The **Fingerprint Launcher** application helps ensure the security of the data on your Toshiba phone, and enables you to launch designated programs by swiping your fingers.

To access the **Fingerprint Launcher** application, from the **Today** screen, tap **Start > Programs > Fingerprint Launcher**. The **Fingerprint Launcher** screen is displayed.



NOTE: To access **Fingerprint Launcher**, you can also press and hold the down the **Side key**.

When there is no data stored in the list, you can store your fingerprint from the **Fingerprint Launcher** screen.

To store your fingerprint:

1. Tap **Options**.
2. Tap the finger to swipe.
3. Swipe the finger three times to enrol.
4. Tap **ok**.

After successfully storing your fingerprint, you can assign a program.



Applications & multimedia

To assign a program:

1. From the **Today** screen, tap **Start > Programs > Finger Launcher > Options**.
2. Tap the finger you want to assign a program to.
3. Select a program and tap **Done**.



TIP: To launch a program using **Fingerprint Launcher**, from the **Today** screen, tap **Start > Programs > Finger Launcher** and swipe a finger with an assigned program.

GoldKey

Your Toshiba phone allows you to lock or unlock your PC remotely via Bluetooth technology. Using the **GoldKey** application, this security operation is achieved by simply tapping a button on the screen of your Toshiba phone, or automatically with the **Auto Lock** option.

There are three types of lock methods:

- **Screen Lock**
- **Screen Saver**
- **Log Off**

Starting GoldKey

You need to run the **GoldKey Registration** program on your PC to establish a link between the PC and your Toshiba phone.

When running this service program, you will need to enter:

- **PC name.**
- **Windows password.**
- **Lock type.**
- **Bluetooth address of your Toshiba phone.**

This can be entered easily using the **Device Search** button.

This information will then be sent to your Toshiba phone. The link between the PC and your Toshiba phone is finalised when the registration information has been received on your Toshiba phone.



NOTE: **GoldKey** has two restrictions:

- It can only run with the Toshiba BT stack.
- It can only be operated by a single user.

Applications & multimedia

Internet Sharing

Internet Sharing is a customised tool for connecting to a PC or network.

To use **Internet Sharing**:

1. From the **Today** screen, select **Start > Programs > Internet Sharing**.
2. Select the **PC Connection:** or the **Network Connection:**.
3. Tap **Connect**.

Java

Your Toshiba phone supports Java applications (known as MIDlets) that are written specifically for mobile devices. Java applications include games and utilities.

Starting the Java application

To start the **Java** application:

From the **Today** screen, tap **Start > Programs > Java**.

After a brief pause, the main **Java** screen is displayed. The **Menu** provides the following options:

- **Actions**

- **Install**
- **Activate**
- **Pending Install**
- **New Folder**
- **Options**
- **Uninstall All**
- **Certificates**
- **About**
- **Exit**

Installing a Java application

To install a Java application:

From the **Today** screen, tap **Start > Programs > Java > Menu > Install**.

You then need to select where to access the MIDlets from:

- To install from a website, tap **Browser**. This will launch the default browser. Navigate to the website where the Java MIDlet is available from. Select the file. It is then loaded into the **Java** application.
- To install from a specific URL, tap **URL**. If the URL has already been entered, tap it, then tap **Go**. If the URL has not been entered, tap **Add**, and enter a name for the URL, and the web



Applications & multimedia

address.

- To install a MIDlet from your Toshiba phone, tap **Local Files**. All unloaded MIDlets stored in the **My Device** folder and on the storage card are displayed. Select one to install.

Selecting the Jad or Jar

The details of the MIDlet you are proposing to install are displayed. Tap **Continue** to proceed with the installation.

Once the file has downloaded, you will be asked where you wish to store the download. For ease of use, you should choose to save the file in **My Device**, which is the root folder for your Toshiba phone.

Running a Java MIDlet

Once you have successfully installed the MIDlet using one of the methods described, the installed files are displayed on the **Java** main screen.

To run a Java MIDlet:

Scroll to the desired MIDlet and press the **Action key** to run the MIDlet.

Exiting the Java application

To exit the **Java** application:

From the main **Java** screen, tap **Menu > Exit**.

Messenger

To access **Windows Live Messenger**:

From the **Today** screen, tap **Start > Programs > Messenger**.

For further information, please refer to the **Messaging** section.

Notes

Notes is a tool that you can use to capture your thoughts, questions, reminders, to-do lists and meeting notes by writing, typing or recording your voice in a note.

Setting the options for Notes

To set the options for **Notes**:

1. From the **Today** screen, tap **Start > Programs > Notes > Menu > Options...**
2. Tap the item that you want to change:
 - **Default mode**: - select **Writing** or **Typing**.



Applications & multimedia

- **Default template:** - select **Blank Note**, **Meeting Note**, **Memo**, **Phone Memo** or **To Do**.
- **Save to:** - select **Main memory** or **Storage card**.
- **Record button action:** - select **Switch to Notes** or **Stay in current program**.

3. Tap **ok** when you have finished.

Creating a note

To create a note:

1. From the **Today** screen, tap **Start > Programs > Notes > New**.
2. If you want to change the text input method, tap the Input Panel icon on the command bar, and select the required method.
3. Enter the note using your selected input method.
4. Tap **ok** when you have finished.



NOTE: When you want to record a voice note, use the recording toolbar.

If this bar is not displayed, tap **Menu > View Recording Toolbar**.

Viewing a note

To view a note:

1. From the **Today** screen, tap **Start > Programs > Notes**.
2. Tap the title of the note that you want to view or play.

Opera Browser

Opera Browser connects your Toshiba phone to the Internet.

Opening Opera Browser

To open **Opera Browser**:

1. From the **Today** screen, tap **Start > Programs > Opera Browser**.
2. Scroll to view all available links.
3. Tap the required link.

Opera Browser menu

To access the **Opera Browser** menu:

From the **Today** screen, tap **Start > Programs > Opera Browser > Menu**.

Opera Browser has the following menu items:

- **Windows** - to manage the window.



Applications & multimedia

- **Display** - to change the windows viewer.
- **Tools** - to manage bookmarks and display useful information.
- **Exit** - to exit **Opera Browser**.

Picisel Viewer

Picisel Viewer is the tool used to view documents.

Opening Picisel Viewer

To open **Picisel Viewer**:

1. From the **Today** screen, tap **Start > Programs > Picisel Viewer**.
2. Tap the file that you want to view.

Picisel Viewer menu

To access the **Picisel Viewer** menu:

1. From the **Today** screen, tap **Start > Programs > Picisel Viewer**.
2. If you are in the **Open** screen, tap the **Cancel** button.
3. Tap **Menu**.

Picisel Viewer has the following menu items:

- **Open File** - to open the selected file.
- **Recent** - to display the list of recently selected

files.

- **Page** - to rotate the window, from portrait to landscape view and vice versa.
- **Settings** - allows you to clear the history, select the file types to associate with **Picisel Viewer**, and display information about **Picisel Viewer**.
- **Close** - exits **Picisel Viewer**.

Pictures & Videos

Your Toshiba phone is equipped with a digital camera which can be used to capture photos and video clips.

For more information about capturing photos and video clips, refer to the **Camera** section.

Viewing pictures and videos

You can view pictures and videos stored on your Toshiba phone or miniSD card using the **Pictures & Videos** application.

You can also set a picture to be your **Today** screen background, or you can send an image to a contact.

To view pictures and videos:

1. From the **Today** screen, tap **Start > Programs > Pictures & Videos**.



Applications & multimedia

2. Tap a picture or video to view it.

When viewing a picture, tap **Menu** to access the following items:

- **Zoom** - to zoom in or out on the selected picture.
- **Play Slide Show** - to display all pictures in the current folder as a slide show.
- **Set as Today Background...** - to set the selected picture as the **Today** screen background.
- **Beam picture...** - to transfer the picture to other devices via Bluetooth.
- **Save** - enables you to set the picture as an icon representing a specified contact, shown within the details of the contact, and to rename the picture.
- **Edit** - enables you to edit the picture.
- **Properties** - enables you to rename and view details of the selected picture.
- **Options...** -
 - **General** tab - to set the photo size and rotation direction.
 - **Slide Show** tab - to edit the slide show settings.
- **Send to your space** - to send the selected picture to your live space.

Picture functions

From within the **Pictures & Videos** application, highlight the required picture and tap **Menu** to view the available options:

- **Send...** - to send pictures to contacts via e-mail or MMS.
- **Beam...** - to transfer pictures to other devices via Bluetooth.
- **Save to Contact...** - to set a picture as an icon representing a specified contact, shown within the details of the contact.
- **Delete** - to delete the selected picture.
- **Edit** - enables you to move and copy the selected picture file between folders.
- **Properties** - enables you to rename and view details of the selected picture.
- **Play Slide Show** - to display all pictures in the current folder as a slide show.
- **Set as Today Background...** - to set the selected picture as the **Today** screen background.
- **Options...** -
 - **General** tab - to set the photo size and rotation direction.
 - **Slide Show** tab - to edit the slide show settings.



Applications & multimedia

- **Send to your space** - to send the selected picture to your live space.

Finding and listing pictures

To find and list pictures:

From within the **Pictures & Videos** application, tap **My Pictures** and select a folder from the list.

Sorting pictures and videos

To sort pictures and videos:

1. From within the **Pictures & Videos** application, tap the downward arrow at the top right of the screen. The text will change to **Sort By**.
2. Select the item to sort by from **Name, Date** and **Size**.

Sending a picture or video

1. From within the **Pictures & Videos** application, select **Menu > Send...**
2. Select the sending method.
3. Enter the destination number and tap **Send**. Tap **Menu** for a list of additional options.

Search

For information on this feature, please refer to the **Searching** subsection in **Text input**.

SIM Manager

SIM Manager enables you to copy contact information from your Toshiba phone to your SIM card, or from your SIM card to your Toshiba phone.

To use **SIM Manager**:

1. From the **Today** screen, tap **Start > Programs > SIM Manager**.
2. Tap the SIM or Phone picture to display the contacts on the SIM card or phone respectively.
3. Tap **Menu** to access the following options:
 - **Delete** - to delete the selected contacts.
 - **Copy to Phone / Copy to SIM** - to copy the selected SIM contacts to the phone, or the selected phone contacts to the SIM card.
 - **Select All** - to select all of the listed contacts.
 - **Unselect All** - to unselect all of the listed contacts.





Applications & multimedia

SIM Toolkit

When you install a SIM card that has applications loaded on it, you can run the applications using the **SIM Toolkit** application.

To run an application from the SIM card:

1. From the **Today** screen, tap **Start > Programs > SIMTKUI**.
2. The list of applications is displayed. Select the application that you want to run, then tap **Select**.

 **NOTE:** The SIMKUI icon () is not displayed when the installed SIM card does not have any applications loaded.

The title of this icon (default is SIMTKUI) depends on title of the SIM.

Tasks


You can set a one-off task or a recurring task. You can also set reminders for your tasks.


Creating a task

1. From the **Today** screen, tap **Start > Programs > Tasks**.
2. Tap the **Tap here to add a new task** field and

enter the task.

3. Tap the main part of the screen. A new task item is displayed.

 **NOTE:** You can synchronise information on your Toshiba phone with your PC. This will keep your task list up to date in both locations.

 **NOTE:** If you create a new task with a reminder on your PC and then synchronise tasks with your Toshiba phone, the reminder is activated at the time it was set on your PC.

Editing task settings

When a new task is created, the following items are set as default:

- **Priority:** - Normal.
- **Status:** - Not Completed.
- **Starts:** - None.
- **Due:** - None.
- **Occurs:** - Once.
- **Reminder:** - None.
- **Categories:** - No categories...
- **Sensitivity:** - Normal.

To edit task settings:

1. From the **Today** screen, tap **Start > Programs > Tasks**.



Applications & multimedia

2. Tap the task to edit, then tap **Edit**.
3. Tap the items that you want to edit, and update them.
4. Tap **ok** when you have finished.

Deleting a task

To delete a task:

1. From the **Today** screen, tap **Start > Programs > Tasks**.
2. Highlight the task, then tap **Menu > Delete Task** or
3. Tap the task, then tap **Menu > Delete**.

Marking a task as complete

To mark a task as complete:

1. From the **Today** screen, tap **Start > Programs > Tasks**.
2. Highlight the required task, then tap **Complete**.

Reactivating a completed task

To reactivate a completed task:

1. From the **Today** screen, tap **Start > Programs > Tasks**.
2. Highlight the required task, then tap **Activate**.

Locating a task

To locate a task:

1. From the **Today** screen, tap **Start > Programs > Tasks**.
2. In the list of tasks, do one of the following:
 - To sort the list, tap **Menu > Sort By**, and select a sort option.
 - To filter the list by category, tap **Menu > Filter**, and select the category to display.



NOTE: To filter your task further, select **Active Tasks** or **Completed Tasks**.

Teleport

The **Teleport** application enables you to use two functions: **Remote Keypad** and **Remote Screen**.

Remote Keypad

With **Remote Keypad** you can scroll, and type input into, a PC application displayed on your PC, using your Toshiba phone.



Applications & multimedia

Remote Screen

With **Remote Screen**, you can replicate the main display of your Toshiba phone on a PC screen, and operate your Toshiba phone from the PC. Using the PC keyboard and **Remote Screen** GUI on the PC, actions on the PC are relayed to your Toshiba phone.

Preparing to use Teleport

To prepare to use **Teleport**:

1. Install the **Teleport** application to a PC.
2. Ensure the **Teleport** application is activated.
3. Establish a connection between your Toshiba phone and the PC before using the **Teleport** application. The **Teleport** application supports the following communication options: **USB**, **Wi-Fi** and **Bluetooth**.
4. Select either the **Remote Keypad** or **Remote Screen** buttons on the PC.



NOTE: When using **Teleport** with Wi-Fi, you will need stop Wi-Fi disconnecting. To do this:

1. From the **Today** screen, tap **Start** > **Settings**.
2. Tap the **System** tab.
3. Tap **Power**.
4. Tap the **Wi-Fi** tab and set Wi-Fi to **Always On**.

Starting Teleport

To start **Teleport**, perform the following steps on your Toshiba phone:

1. From the **Today** screen, tap **Start** > **Programs** > **Teleport**.
2. Select either the **Remote Keypad** or **Remote Screen** option.
3. Select the required option from the **Connection method** list, then tap **Next**.



NOTE: You will only need to set the PIN code the first time that you connect your PC to your Toshiba phone.



Applications & multimedia

Teleport menu

The **Teleport** menu contains the following items:

- **Network Port** - to set the network port for USB and Wi-Fi.
- **COM Port** - to set the outgoing port for Bluetooth.
- **PIN Code** - to set PIN Code for **Teleport**.
- **Help** - to view instructions for using **Teleport** on your Toshiba phone.
- **About** - to view the version of **Teleport**.
- **Exit** - to exit the **Teleport** application.

Remote Keypad operations

Up Navigation key - moves the PC cursor up.

Down Navigation key - moves the PC cursor down.

Left Navigation key - moves the PC cursor to the left.

Right Navigation key - moves the PC cursor to the right.

Action key - works as the PC **Enter key**.

PgUp key - performs a **Page Up** on the PC.

PgDn key - performs a **Page Down** on the PC.

Other keys - inputs characters to the PC according

to the guidance displayed.

TIptalk

The **TIptalk** application enables you to:

- Call an IP phone.
- Use answering machine functions.
- Check the online status of your contacts (**Online**, **Offline**, **Away**, or **Busy**).
- Notify your contacts of your current online status (**Online**, **Offline**, **Away**, or **Busy**).
- Send and receive instant messages during a call.



WARNING: **TIptalk** does not support Bluetooth headset microphones.



WARNING: If **TIptalk** is activated while **Windows Media Player** is playing music on the speakerphone, the audio path will be switched. When this happens, both the music and the **TIptalk** call will be routed to the normal phone earpiece, and the music will no longer be played on the speakerphone.

Applications & multimedia



NOTE: When using **TIptalk** with Wi-Fi, you will need stop Wi-Fi disconnecting. To do this:

1. From the **Today** screen, tap **Start > Settings**.
2. Tap the **System** tab.
3. Tap **Power**.
4. Tap the **Wi-Fi** tab and set Wi-Fi to **Always On**.

Launching TIptalk

To launch **TIptalk**:

From the **Today** screen, tap **Start > Programs > TIptalk**. A configuration dialog is displayed when you launch **TIptalk** for the first time. Please refer to the Configuring TIptalk section for details.

Calling an IP phone

To call an IP phone:

1. From within the **TIptalk** application, tap the **Contacts** tab.
2. Select a contact from your list of contacts.
3. Tap **Call**.



NOTE: To end the call, tap **Hang Up**.

Answering a call automatically

To set the application to answer calls automatically, you need to tick **Automatic answer** checkbox on the **Configuration** screen. Incoming calls will then be automatically answered, and redirected to the answer message service ten seconds after the call is received.

Holding a call

To hold an ongoing call:

From within the **TIptalk** application, tap **Menu > Voice Service > Hold**.

To unhold the call, tap **Menu > Voice Service > Hold** again.



Applications & multimedia

Calling using outgoing call history

You can store twenty contacts in the outgoing call history at any one time.

To make a call using the outgoing call history:

1. From within the **TIPTalk** application, tap the **Outgoing Calls** tab.
2. Select an outgoing call history contact.
3. Tap **Call**.

Calling using incoming call history

You can store twenty contacts in the incoming call history at any one time.

To make a call using the incoming call history:

1. From within the **TIPTalk** application, tap the **Incoming Calls** tab.
2. Select an incoming call history contact.
3. Tap **Call**.

Muting the microphone

To mute the microphone during a call:

From within the **TIPTalk** application, tap **Menu > Voice Service > Mute**.

To unmute the microphone, tap **Menu > Voice Service > Mute** again.

Switching to speakerphone mode

To switch to speakerphone mode during a call:

From within the **TIPTalk** application, tap **Menu > Voice Service > Speakerphone**.

To deactivate speakerphone mode, tap **Menu > Voice Service > Speakerphone** again.

Adding a contact

To add a contact:

1. From within the **TIPTalk** application, tap **Menu > Edit Contacts > Add Contact**.
2. Enter the contact name.
3. Tap **OK**.

Deleting a contact

To delete a contact:

1. From within the **TIPTalk** application, tap the **Contacts** tab.
2. Select the contact to remove.
3. Tap **Menu > Edit Contacts > Delete Contact**.
4. Tap **OK** to confirm the deletion.



Applications & multimedia

Playing back a voicemail

1. From within the **TIPTalk** application, tap the **Incoming Calls** tab.
2. Select an incoming call history entry marked with a voicemail icon.
3. Tap **Menu > Voice Service > Play Back**.

Instant messaging (IM)

You can send and receive instant messages using the **TIPTalk** application.

To start instant messaging:

1. Call another **TIPTalk** user. Wait for the call to connect.
2. Tap **Menu > Send Instant Message**.
3. Enter your message in the second text box.
4. Tap **Send** to send your message. All the messages in the thread are displayed in the first message box.

Changing your current status

From within the **TIPTalk** application, tap the **My Status** list and select your current status (**Online**, **Offline**, **Away**, or **Busy**).

Configuring TIPTalk

To configure **TIPTalk**:

1. From within the **TIPTalk** application, tap **Menu > Configuration**.
2. Enter your **User name**, **Password**, **Server IP**, and **Server port**. In addition, if two or more network adapters are displayed, select the one to use.



NOTE: If you tick the **Automatic answer** checkbox, **TIPTalk** will automatically answer incoming calls. The caller can then leave a voice message.

Windows Live

With **Windows Live**, to use the searching service from Microsoft.

To use **Windows Live**:

1. From the **Today** screen, tap **Start > Programs > Windows Live**.
2. Enter a search term the search box, then tap the search icon, or tap **Sign in to Windows Live** to sign in.



Applications & multimedia

Windows Media Player

Overview of Windows Media Player Mobile

You can use Windows Media 10 Mobile to play digital audio and video files that are stored on your Toshiba phone or on the Web.

Windows Media Player can play the following types of file by default:

- Windows Media Audio (*.wma)
- Windows Media Video (*.wmv)
- Motion Picture Experts Group-2 Audio Layer-3 (*.mp3).

This includes the following file type:

- *.asf

Your Toshiba phone can also play back H.263 (*.3gp) and *.mp4 files.

In addition to Windows Mobile-based Pocket PCs, **Windows Media Player** is available on other operating systems, including Windows Mobile-based Smartphones and computers running the Windows or Macintosh operating systems.

Overview of controls

By default, the following keys are assigned to **Windows Media Player** functions:

- **Action key** - plays or pauses a file.
- **Left Navigation key** - skips to a previous file.
- **Right Navigation key** - skips to the next file.
- **Up Navigation key** - increases the volume.
- **Down Navigation key** - decreases the volume.
- **Right Navigation key** (hold) - fast forward a file.
- **Left Navigation key** (hold) - rewind a file.

Overview of screens and menus

Windows Media Player has three primary screens:

- **Playback** screen - displays the playback controls (such as play, pause, next, previous, and volume), the star rating of the current file, the album art window, and the video window. You can change the appearance of this screen by selecting a different skin.
- **Now Playing** screen - displays the **Now Playing** playlist, which indicates the file currently playing, as well as any files in the queue.



Applications & multimedia

- **Library** screen - enables quick access of audio files, video files, and playlists. It contains categories such as **My Music**, **My Videos**, **My TV**, and **My Playlists**. It also includes a link that lets you switch to the **Now Playing** screen.

The **Menu** will contain different items depending on the screen you are currently using.

Now Playing screen menu items

- **Library...** - to the library screen.
- **Move Up** - to move the selected item up in the playlist order.
- **Move Down** - to move the selected item down in the playlist order.
- **Remove from Playlist** - to remove the selected item from the playlist.
- **Shuffle/Repeat > Shuffle** - to play the items in the **Now Playing** playlist in a random order.
- **Shuffle/Repeat > Repeat** - to play the items in the **Now Playing** playlist repeatedly.
- **Save Playlist...** - to save the playlist.
- **Clear Now Playing** - to remove all items from the **Now Playing** playlist.
- **Error Details** - to display error information about the selected item. An exclamation mark is

displayed before the item name if error details are available.

- **Properties** - to display information about the selected file.

Library screen menu items

- **Queue Up** - to add the selected item to the end of the current playlist.
- **Delete from Library** - to delete the selected item from the library.
- **Now Playing** - to display the **Now Playing** playlist.
- **Library > library name** - to switch between libraries.
- **Update Library...** - to add new items to the library by searching your Toshiba phone or storage card.
- **Open File...** - allows easy access to files that are not in the library.
- **Open URL...** - allows you to play a file on a network, such as the Internet.
- **Properties** - to display information about the selected file.



Applications & multimedia

Overview of licenses and protected files

Protected files are digital media files that are secured with a license to prevent unauthorised distribution or playback.

The license specifies how you can use the file. For example, a license can specify whether you can use the desktop player to synchronise a file to your Toshiba phone, or it can specify how many times you can play a file on your Toshiba phone. The terms of the license are specified by the person or company that provided the file.

Licenses are created and managed by a technology called Digital Rights Management (DRM). Because Windows Media Player 10.3 Mobile for Pocket PC supports Windows Media DRM 10, you can download and play protected files that you have obtained from compatible online stores, such as MSN Music. If permitted by the license and your Toshiba phone, you can play subscription or rental content from some online stores.

For information about compatible online stores and devices, access the PlaysForSure website at: www.playsforsure.com.

When copying a protected file from your computer to

your Toshiba phone:

- Always use the desktop version of Windows Media Player 10 to synchronise the file to your phone.
- Always synchronise the file to a storage card on your phone. Do not synchronise to a storage card that is inserted into a storage card reader.



NOTE: View the file properties to determine whether a file is protected.

Playing items on your Toshiba phone

Use the library to find and play songs, videos, and playlists that are stored on your Toshiba phone or storage card.

To play items:

1. From the **Today** screen, tap **Start > Programs > Windows Media > Menu > Library...**
If necessary, from the **Library** screen, tap **Menu > Library**, and select the library that you want to use.
2. Tap a category (for example, **My Music** or **My Playlists**), and select the item that you want to play.
3. Tap **Play**.



Applications & multimedia



NOTE: To play a file stored on your Toshiba phone but not in a library, tap **Menu > Open File...** from the **Library** screen. Select the item that you want to play, then tap **Play**.

Playing items on a network

Use the **Open URL...** menu item to play a song or video that is stored on the Internet or on a network server.

1. If you are not in the **Library** screen, tap **Menu > Library...**
2. Tap **Menu > Open URL...**
3. In the **URL** box, enter a network address.
or
tap a URL that you have previously used in the **History:** list.



NOTE: To play an item on a network, your Toshiba phone must be connected to a network. For more information about connecting your phone to a network, refer to the **Connectivity** section.

Copying files to your Toshiba phone

You can either copy files to your Toshiba phone manually, or you can automatically synchronise files between your PC and your Toshiba phone.

Use the Sync feature in the desktop version of Windows Media Player 10.3 to synchronise digital media files from your computer to your phone. Using Sync ensures that protected files and album art are copied to your phone correctly.



NOTE: To perform this function, you must have **ActiveSync** set up.

Changing the appearance of the player

You can change the appearance of the playback screen by choosing a new skin. To do this:

1. From the **Today** screen, tap **Start > Programs > Windows Media > Menu > Options...**
2. Tap the **Skins** tab.
3. Press the **Right Navigation key** or **Left Navigation key** to view the skins. Select the skin required.
4. Tap **ok**.



Applications & multimedia



NOTE: To download new skins, access the WMplugins website at: www.wmplugins.com.

After downloading a skin to your computer, use **ActiveSync** to copy the *.skn and *.bmp files to your Toshiba phone. To ensure that the skin is displayed on the **Skins** tab, do not store skin files in the Windows folder on your Toshiba phone.

Troubleshooting

If you encounter any difficulty while using Windows Media Player Mobile, a number of resources are available on the web to help you resolve the issue.

For more information, see the Troubleshooting Windows Media Player Mobile page on the Microsoft website at:

<http://go.microsoft.com/fwlink/?LinkId=29195>.

Zoom

The **Zoom** application enables you to magnify or decrease the current window size. You can magnify the window to eight times the standard size.

The **Zoom** application is launched at a default level of x2 (200%). It can be set to the following levels:

- x2 (200%)
- x4 (400%)
- x8 (800%)

To launch the **Zoom** application, press and hold the **Up Side key**.

Use the following keys with the **Zoom** application:

- Press the **End key** to close the **Zoom** application and return to the previous screen.
- Tap **Zoom In** to zoom in.
- Tap **Zoom Out** to zoom out.
- Press the **Up Navigation key** to scroll up the zoomed screen.
- Press the **Down Navigation key** to scroll down the zoomed screen.
- Press the **Right Navigation key** to scroll right in the zoomed screen.
- Press the **Left Navigation key** to scroll left in the zoomed screen.



Applications & multimedia

You can also tap and hold the stylus on the **Zoom** application screen to open a pop up menu with the following items:

- X2
- X4
- X8

By selecting one of these menu items, you can zoom to 200%, 400% or 800% respectively.

You can use the horizontal and vertical scroll bars for scrolling, and drag the screen using the stylus to move the focus accordingly.

In case of interruption due to external applications such as an incoming phone call or scheduled alarm etc, the **Zoom** application will close automatically.

When the **Zoom** application is open, you will not be able to operate the currently opened application. i.e., zooming is view only functionality.



Specifications

System Information

Processor

Marvell® PXA270 Processor at 520 MHz

Memory

RAM : 128 MB

ROM : 128 MB

Operating System

Windows Mobile® 6 Professional

UMTS/HSDPA GSM/GPRS/EDGE

Frequency Range

Within 3G (UMTS) 2100

1920 - 2170 MHz

Within GSM 900

880 - 960 MHz

Within DCS 1800

1710 - 1880 MHz

Within PCS 1900

1850 - 1990 MHz

Continuous Talk Time

Within 3G (UMTS) area

Approx. 160 mins

Video Call

Approx. 75 mins

Within GSM area

Approx. 265 mins

Continuous Standby Time

Within 3G (UMTS) area

Approx. 330 hrs

Within GSM area

Approx. 320 hrs

Charging Time

Approx. 170 mins

Dimensions (H x W x D)

Approx. 119mm x 61mm x 21.5mm



Specifications

Maximum Output

Within 3G (UMTS) 2100	Class 3	0.25 W
Within GSM 900	Class 4	2 W
Within DCS 1800	Class 1	1 W
Within PCS 1900	Class 1	1 W

Weight

Approx. 196g

AC Adapter

Input Voltage	100 to 240 VAC	50/60 Hz
Charging Temperature Range	5 to 35 °C	

Display

LCD	3.0" TFT LCD with Touch screen
Resolution	480 x 800 (64k colours)

Audio/Video Codec

Audio	AMRNB, AAC, AAC+, eAAC+, MP3, WMA
Video	H.263, MPEG-4, WMV, ASF



Specifications

Connection

Bluetooth

Bluetooth™ ver 2.0 + EDR (Power Class 2)

GAP (Generic Access Profile)

SPP (Serial Port Profile)

HSP (Headset Profile)

HFP (Hands Free Profile)

PAN (Personal Area Networking)

AVRCP (Audio/Video Remote Control Profile)

A2DP (Advanced Audio Distribution Profile)

Wireless LAN

IEEE 802.11b/g

WPA, WPA2, WPA-PSK, WPA2-PSK, WEP, TKIP, AES

Interface

Cable and Phone Charging

mini USB (Host/Client, Full Speed) / Charger

Headset Connector

2.5 mm Stereo headset

Expansion Slot

miniSD



Troubleshooting



Problem	Possible causes and solutions
Cannot turn the power on	<ul style="list-style-type: none">• Ensure that the battery is inserted correctly (page 35).• Ensure that the battery is charged (page 38).
Cannot charge the battery	<ul style="list-style-type: none">• Ensure that the battery is inserted correctly.• Ensure that the AC adapter and battery pack connectors are clean.
Cannot make or receive voice or video calls	<ul style="list-style-type: none">• Check the signal strength indicator. If the display indicates a poor signal, adjust your physical location to be clear of obstructions that may block the signal.• A video call can only be made or received in an area with 3G coverage. Ensure that the icon indicating that you are in an area with 3G coverage is displayed.• If you enter the PIN code incorrectly three times in a row, the PIN lock will be set, preventing calls being made because access to the SIM card is blocked (page 73). Enter the PUK code to cancel the PIN lock.• If the indicator appears on the display, enter your security code to cancel the phone lock.
Cannot use the Internet	<ul style="list-style-type: none">• Check your subscription status. Contact your service provider.• The network settings may be incorrect. Check the network settings. For details of network settings, contact your service provider.
Cannot use SMS or MMS	<ul style="list-style-type: none">• Check your subscription status. Contact your service provider.• Ensure that the service centre number is correct. For details of the service centre number, contact your service provider.

Purchase record

For your future reference, we recommend that you fill in your purchase details in the form below.

Serial Number*:

Dealer Name:

Purchase Date:

* The serial number is printed on the bottom of the battery compartment.



Menu tree

Start

Programs

- Games
- Office Mobile
 - Excel Mobile
 - PowerPoint Mobile
 - Word Mobile
- ActiveSync
- Calculator
- Calendar
- Camera
- Contacts
- File Explorer
- FingerLauncher
- GoldKey
- Help
- Internet Explorer
- Internet Sharing
- Java
- Messaging
 - Text Messages
 - MMS
 - Windows Live

- New E-mail Account
- Messenger
- Notes
- Opera Browser
- Phone
- Picxel Viewer
- Pictures & Videos
- Search
- SIM Manager (SIMTKUI)
- Tasks
- Teleport
- TIPTalk
- Windows Live
- Windows Media

Settings

Personal

- Buttons
- Fingerprint
- Input
- Lock
- Menus
- Owner Information

- Phone
- SIM Lock
- Sounds & Notifications
- Today
- Video Call

System

- About
- Backlight
- Certificates
- Clock & Alarms
- Customer Feedback
- Encryption
- Error Reporting
- External GPS
- Master Clear
- Memory
- Power
- Regional Settings
- Remove Programs
- Screen
- Windows Update

Connections

- Beam
- Bluetooth



Menu tree

- Connections
- USB mass storage
- USB to PC
- Wi-Fi
- Wireless Manager



Index

Numerics

3G coverage 137

A

AC adapter 16, 25

AC cable 16, 25

ActiveSync 40, 41, 53

Alarm 83

Attachment 55

B

Battery 35, 38, 39

Battery life 87

Battery pack 25, 137

Battery safety 15

Beam 96

Bluetooth 10, 93

Bluetooth connection 40, 95

Browser 115

C

Calculator 109

Calendar 101

Call barring 76

Call History 42

Caller ID 77

Camera 110

Clock 83

Conference 45

Contacts 42, 43, 103

Copying files 131

Creating a Bluetooth partnership 94

Creating a GPRS connection 90

Creating an e-mail message 53

D

Date 83

Deleting a message 50

Display indicators 31



Index

E

Earphones 25
Earpiece 26
E-mail 48, 51
Emergency calls 17
Excel Mobile 100
Exchange server 40, 41, 51, 53

F

FCC notice 18
File Explorer 112
Fingerprint 74
Fingerprint Launcher 113
Flight mode 98
Forwarding a message 50

G

Games 109, 115
GoldKey 114

H

Help 109
Hotmail 48

I

Internet e-mail 51
Internet Explorer 106
Internet Sharing 115

J

Java 115

K

Keyboard 28, 62

L

Letter Recognizer 62

M

Making a call 42
MMS 48
MMS messages 56
Modem 40
Multimedia messages 48

N

Notes 116

Index

O

- Office Mobile 99
- Opera Browser 117
- Operating environment 14
- Owner information 75

P

- Phone charging connector 26
- PicSel Viewer 118
- Pictures & Videos 118
- PowerPoint Mobile 100

R

- Receiving a call 44
- Reinitialising 24
- Remote Keypad 122
- Remote Screen 123
- Removing Programs 88
- Replying to a message 50, 54

S

- Searching 69
- SIM card 34

SIM Manager 120

SIM Toolkit 121

SMS 48

Softkeys 26

Speakerphone 46

Speed dial 43

Start menu 30, 75

Stylus 37

Synchronising 40

T

Tasks 121

Teleport 122

Text messages 48, 49

Time 83

TIPtalk 124

Today screen 29

Touch screen 26

Transcriber 63

U

USB cable 25

USB Host cable 25, 41



Index

V

- Video call 47
- Volume control 71
- VPN connection 92

W

- Windows Live 127
- Windows Live Messenger 59
- Windows Media Player 128
- Word Mobile 101

X

- XT9 68

Z

- Zoom 132

