Gateway 400 Notebook

Customizing

Troubleshooting





Contents

1	Checking Out Your Gateway 400	. 1
	Front	
	Left side	
	Right side	
	Back	
	Bottom	
	Keyboard area	
	Identifying your model	
	Gateway model number	
	Gateway serial number	10
	Internal wireless label	11
	Microsoft Certificate of Authenticity	11
	Finding your specifications	12
	Accessories	14
_		
2	Getting Started	15
	Connecting the AC adapter	16
	Protecting from power source problems	
	Starting your notebook	
	Waking up your notebook	
	Turning off your notebook	20
	Restarting (rebooting) your notebook	21
	Status indicators	22
	Using the keyboard	24
	Key types	
	System key combinations	
	Multi-function buttons	
	Using the EZ Pad touchpad	
	Using the touchpad	
	Connecting the modem	
	Connecting to a wired Ethernet network	
	Broadband Internet connections	
	Installing a printer, scanner, or other peripheral device	34
2	Catting Holp	~~
3	Getting Help	
	HelpSpot	
	Searching for a topic	
	HelpSpot videos	
	Do More With Gateway	40

	Online help
4	Windows Basics45
•	About the Windows environment
	Using the desktop
	Using the Start menu
	Adding icons to the desktop
	Identifying window items
	Working with files and folders
	Viewing drives
	Creating folders
	Copying and moving files and folders
	Deleting files and folders
	Browsing for files and folders
	Searching for files
	Using the Windows Search utility
	Working with documents
	Creating a new document61
	Saving a document
	Opening a document
	Printing a document
	Shortcuts
5	Using the Internet
•	
	Learning about the Internet
	Setting up an Internet account
	Accessing your Internet account
	Using the World Wide Web
	Connecting to a Web site
	Downloading files
	Using e-mail
	Sending e-mail
	Checking your e-mail75
6	Using Multimedia77
	Adjusting the volume
	Adjusting the volume in Windows XP
	Adjusting the volume in Windows 2000
	Recording and playing audio
	Playing audio and video files with the Windows Media Player

	Using the optional diskette drive	. 87
	Using the CD or DVD drive	. 89
	Identifying drive types	. 89
	Inserting a CD or DVD	. 90
	Listening to CDs	
	Listening to CDs in Windows XP	
	Listening to CDs in Windows 2000	
	Using MusicMatch	
	Playing CDs	
	Creating MP3 music files	
	Editing track information	
	Building a music library	
	Changing the music library display settings	
	Listening to Internet radio	
	Using advanced features	
	Playing a DVD	
	Using a recordable drive	
	Creating data CDs	
	Creating music CDs	
	Copying CDs	
	Using the optional memory card reader	
	Memory card types	
	Inserting a memory card	
	Connecting a digital camera	117
-	Ornding and Deschring France	
7	Sending and Receiving Faxes	
	Installing and configuring Fax	
	Installing Fax in Windows XP	
	Configuring Fax in Windows XP	
	Configuring Fax in Windows 2000	
	Sending a simple fax	
	Setting up your cover page template	
	Faxing from programs	
	Faxing a scanned document	
	Receiving and viewing a fax	
	Canceling a fax	129
	Automatically retry sending a fax in Windows XP	
	Automatically cancelling a fax in Windows XP	131
8	Managing Power	122
0		
	Monitoring the battery charge	
	Recharging the battery	
	Recalibrating the battery	136

	Changing batteries	
	Replacing the battery	
	Extending battery life	.139
	Conserving battery power	
	Using alternate power sources	
	Changing power modes	
	Changing power settings	
	Changing the power scheme	
	Changing alarm options	
	Changing advanced settings	
	Activating and using Hibernate mode	
	Changing SpeedStep settings	.147
_		
9	Travel Tips	.149
	Modem	.150
	Radio frequency wireless connections	.150
	Files	.151
	Security	.151
	Power	.152
	Additional tips	.153
10	Customizing Your Computer	.155
	Adjusting the screen and desktop settings	.156
	Adjusting the color depth	.156
	Adjusting the screen resolution	.158
	Changing the colors on your Windows desktop	.159
	Changing the desktop background	.162
	Selecting a screen saver	.165
	Changing the touchpad settings	.167
	Adding and modifying user accounts	.169
11	Networking Your Computer	.171
	Benefits of networking	.172
	Sharing a single Internet connection	.172
	Sharing drives	.172
	Sharing peripheral devices	.173
	Streaming audio and video files	
	Playing multi-player games	.173
	Selecting a network connection	
	Wired Ethernet network	.174
	Wireless Ethernet network	.174
	Using a wired Ethernet network	.175

	Ethernet, Fast Ethernet, or Gigabit Ethernet	
	Example wired Ethernet network	176
	Equipment you need for a wired Ethernet network	
	Using a wireless Ethernet network	
	Example access point wireless Ethernet network	
	Equipment you need for an access point wireless Ethernet network	
	Example peer-to-peer wireless Ethernet network	
	Equipment you need for a peer-to-peer wireless Ethernet network	
	For more information	
	Using your notebook on a network	
	Installing and configuring your notebook for Ethernet networking	183
	Turning your wireless Ethernet on or off	183
12	Moving from Your Old Computer	185
	Using the Windows XP Files and Settings Transfer Wizard	
	Transferring files	
	Finding your files	
	Transferring Internet settings	
	Setting up your ISP	
	Transferring your e-mail and address book	
	Transferring your Internet shortcuts	
	Installing your old printer or scanner	
	Installing a USB printer or scanner	
	Installing a parallel port printer	
	Installing your old programs	192
13	Maintaining Your Computer	193
	Caring for your computer	194
	Creating an emergency startup diskette	
	Protecting your computer from viruses	
	Managing hard drive space	
	Checking hard drive space	
	Using Disk Cleanup	
	Checking the hard drive for errors	
	Defragmenting the hard drive	
	Backing up files	
	Using the Scheduled Task Wizard	
	Cleaning your computer	
	Cleaning the exterior	
	Cleaning the keyboard	
	Cleaning the computer screen	
	Cleaning the mouse	210

Using the Restoration CDs 214 Reinstalling device drivers 215 Updating device drivers 217 Reinstalling programs 218 Reinstalling Windows 220 15 Upgrading Your Notebook 223 Adding and removing a PC Card 224 Preventing static electricity discharge 226 Adding or replacing memory 227 Replacing the hard drive kit 231 16 Troubleshooting 238 First steps 239 Software support tools 239 Troubleshooting 239 CD or DVD drives 240
Reinstalling programs .218 Reinstalling Windows .220 15 Upgrading Your Notebook .223 Adding and removing a PC Card .224 Preventing static electricity discharge .226 Adding or replacing memory .227 Replacing the hard drive kit .231 16 Troubleshooting .238 First steps .239 Software support tools .239 Troubleshooting .239 Software support tools .239 Troubleshooting .240
Adding and removing a PC Card .224 Preventing static electricity discharge .226 Adding or replacing memory .227 Replacing the hard drive kit .231 16 Troubleshooting .237 Safety guidelines .238 First steps .239 Software support tools .239 Troubleshooting .240
Preventing static electricity discharge .226 Adding or replacing memory .227 Replacing the hard drive kit .231 16 Troubleshooting .237 Safety guidelines .238 First steps .239 Software support tools .239 Troubleshooting .240
Preventing static electricity discharge .226 Adding or replacing memory .227 Replacing the hard drive kit .231 16 Troubleshooting .237 Safety guidelines .238 First steps .239 Software support tools .239 Troubleshooting .240
Replacing the hard drive kit .231 16 Troubleshooting .237 Safety guidelines .238 First steps .239 Software support tools .239 Troubleshooting .240
16 Troubleshooting .237 Safety guidelines .238 First steps .239 Software support tools .239 Troubleshooting .240
Safety guidelines.238First steps.239Software support tools.239Troubleshooting.240
Safety guidelines.238First steps.239Software support tools.239Troubleshooting.240
First steps .239 Software support tools .239 Troubleshooting .240
Software support tools
CD or DVD drives 240
Cleaning CDs or DVDs
Device installation
Diskette drive
File management
Hard drive
Internet
Keyboard
Memory
Memory card reader
Modem
Networks
Passwords
PC Cards
Power
Printer
Sound
Video
Telephone support
Before calling Gateway Technical Support
Tutoring and training

Ine	dex						277
Α	Safety, Re	egulato	ry, and	Legal	Informatio	n	265
	Self-help)					

Checking Out Your Gateway 400

This chapter introduces you to the basic features of your notebook. Read this chapter to learn:

- How to identify the features of your Gateway notebook
- How to locate your notebook's model and serial number
- How to locate the Microsoft Certificate of Authenticity
- How to locate the specifications for your notebook
- What accessories are available for your notebook

Tips & Tricks



To access the contents of this guide, click **Start**, **All Programs**, then click **Gateway Utilities**. You can also download an electronic copy from <u>support.gateway.com/support/manlib/</u>.



Front

Speaker	Battery Power charge indicator indicator	LCD panel release latch	Speaker

Component	lcon	Description
Speakers		Provide audio output when headphones or amplified speakers are not plugged in.
Battery charge indicator	L +)	 The LED shows the battery activity and status. LED green - battery is fully charged. LED orange - battery is charging. LED blinking red - battery charge is very low. LED solid red - battery is malfunctioning. This LED only lights up when the notebook is plugged in.
Power indicator	\bigcirc	 The LED shows the notebook power status. LED on - notebook is on. LED blinking - notebook is in Standby mode. LED off - notebook is off.
LCD panel release latch		Open the LCD panel by pressing the release latch.

Left side

Microphone jack USB ports F Headphone jack	PC Card PC Card eject slot button	Diskette drive or memory card reader

Component	Icon	Description	
Microphone jack	LD)	Plug a microphone into this jack.	
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.	
USB ports	€	Plug USB (Universal Serial Bus) devices (such as a USB lomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these ports.	
PC Card eject button		Press the eject button to remove the PC Card from the PC Card slot. For more information, see "Adding and removing a PC Card" on page 224.	
PC Card slot		Insert one Type II or one Type III PC Card into this slot. For more information, see "Adding and removing a PC Card" on page 224.	


Component	lcon	Description
Diskette drive or memory card reader		Insert a standard 3.5-inch diskette into the optional diskette drive. For more information, see "Using the optional diskette drive" on page 87.
		Insert a memory card from a digital camera, MP3 player, PDA, or cell phone into the optional memory card reader. For more information, see "Using the optional memory card reader" on page 115.
		Important: Your notebook comes with either a built-in diskette drive or a built-in memory card reader. If your notebook has a built-in memory card reader and you need to use a diskette drive, Gateway recommends purchasing a USB diskette drive. To order a USB diskette drive, visit the Accessory Store at accessories.gateway.com.

Right side




Component	lcon	Description
CD, DVD, or DVD/CD-RW drive		Insert CDs or DVDs into this drive. For more information, see "Using the CD or DVD drive" on page 89.
		This drive may be a CD, DVD or combination DVD/CD-RW drive. To determine the type of drive in the notebook, examine the drive tray's plastic cover and compare the logo to those listed in "Identifying drive types" on page 89.
Kensington [™] lock slot	K	Secure your computer to an object by connecting a Kensington cable lock to this slot.

Back

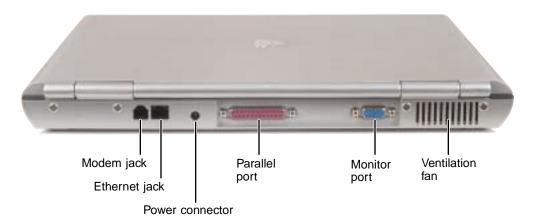

Component	lcon	Description
Modem jack	ഥ	Plug a modem cable into this jack. For more information, see "Connecting the modem" on page 32.
Ethernet jack	쁍	Plug a 10/100 Ethernet network cable into this jack. For more information, see "Connecting to a wired Ethernet network" on page 33 and "Networking Your Computer" on page 171.
Power connector		Plug the AC adapter cable into this connector.
Parallel port	l	Plug a parallel device (such as a printer) into this port.
Monitor port		Plug an analog VGA monitor into this port.
Ventilation fan		Helps cool internal components. Do not block or insert objects into these slots.

Bottom

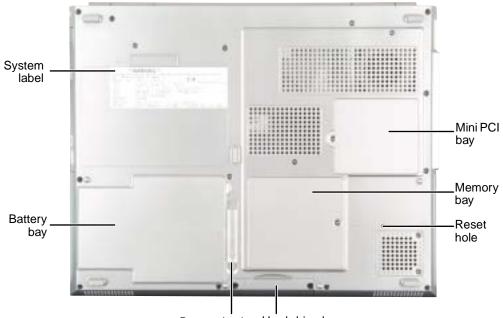


Battery latch Hard drive bay

Component	lcon	Description
Mini PCI bay		The optional wireless Ethernet mini PCI card is located in this bay.
Memory bay		Install as many as two memory modules into this bay. For more information, see "Adding or replacing memory" on page 227.
Reset hole	${\bf O}$	Insert a straightened paper clip into this hole to manually restart the notebook.
Hard drive bay		The hard drive is located in this bay. For more information, see "Replacing the hard drive kit" on page 231.
Battery latch	[+]	Slide to release the battery.
Battery bay	<u> </u>	Insert the battery into this bay. For more information, see "Changing batteries" on page 137.
System label		Includes the product model number. For more information, see "Identifying your model" on page 10.

Keyboard area

For information on using your keyboard, see "Using the keyboard" on page 24.

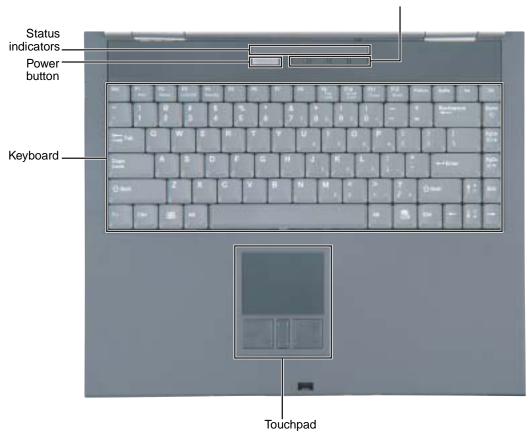

Multi-function buttons

Component	Icon	Description
Multi-function buttons		Press these buttons to open programs assigned to them. These buttons are set to open your default e-mail program, your default Web browser, online help, and the <i>My Computer</i> window. For more information, see "Multi-function buttons" on page 28.

Component	Icon	Description
Touchpad		Provides all the functionality of a mouse. For more information, see "Using the EZ Pad touchpad" on page 29.
Keyboard		Provides all the features of a full-sized 86-key keyboard. For more information, see "Using the keyboard" on page 24.
Power button	Ģ	Press to turn the power on or off. You can also configure the power button for Standby/Resume mode. For more information on configuring the power button mode, see "Changing power settings" on page 141.
Status indicators		Inform you when a drive is in use or when a button has been pressed that affects how the keyboard is used. For more information, see "Status indicators" on page 22.

Identifying your model



The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

Gateway model number

The label on the bottom of your notebook contains information that identifies your notebook model and its features. Gateway Technical Support will need this information if you call for assistance.

Gateway model ——	Gateway	FOR USE WITH ADP-60DH REV POUR UTILSER AVEC MODEL INPUT:19V3.16A		
number	Cet appareil numerique de la clas Canada. This device complies with Part 15 (1) this device may not cause harr including interference that may c Apparatus Claims of U.S. Patent I	ets all requirements of the Canadian in se B respecte toutes les exigences du of the FCC Rules. Operation is subject mful interference. and (2) this device m ause undesired operation. Nos. 4,631,603; 4,577,216; 4,819,098 at	Reglement sur le Materiel brou t to the following two conditior ust accept any interference rec	uilieur du ns: ceived,
	P/N.:		With FCC Standards Complex vit	Hornal Assing, Companies Cape, An analysis Helding(Line) (MI) In the Capeting of the Capeting Capeting Capet
			Assembled in Taiwan	тніо см

Gateway serial number

You can locate the Gateway serial number:

- Printed on a white sticker on the bottom or back of your notebook.
- Printed on the customer invoice that came with your notebook. The invoice also contains your customer ID number.
- Displayed in HelpSpot in Windows XP. Click Start, Help and Support, then click View product serial number.

Internal wireless label

A label similar to one of the following indicates if your computer contains a wireless communications device. The label is located on the bottom of your notebook.



Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the bottom of your notebook includes the product key code for your operating system.



Finding your specifications

For more information about your computer, such as memory size, memory type, and hard drive size, go to the **See your PC's configuration** link in *HelpSpot* in Windows XP or visit Gateway's *eSupport* page at <u>support.gateway.com</u>. The *eSupport* page also has links to additional Gateway documentation and detailed specifications.

In Windows XP, view your computer's serial number by clicking Start, Help and Support, then clicking View system serial number. Check your specifications by clicking Start, Help and Support, then clicking See your PC's configuration.



You can also find out more about your computer at the Gateway *eSupport* site. Visit <u>support.gateway.com</u>. For more information, see "Using eSupport" on page 43.



Accessories

Gateway offers accessories that can help you make the most of using your notebook. To order accessories, visit the Accessory Store at <u>accessories.gateway.com</u>.

Batteries and automobile/airplane power adapters

If you run your notebook on battery power for extended periods, you may want to buy an additional battery so you can swap batteries when necessary. See "Changing batteries" on page 137 for more information about using an additional battery in your notebook.

With an automobile/airplane power adapter, you can save battery power by plugging your notebook into an automobile cigarette lighter or an airplane in-flight power receptacle.

Carrying cases

Gateway has large-capacity carrying cases if you need additional space for accessories or supplies.

Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory. See "Adding or replacing memory" on page 227 for more information.

Printers

You can attach almost any type of printer to your notebook. The most common types are inkjet and laser printers, which print in color or black and white. See "Installing a printer, scanner, or other peripheral device" on page 34 for more information about attaching a printer to your notebook.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.

Getting Started

2

This chapter provides basic information about your Gateway notebook. Read this chapter to find out how to:

- Connect the AC adapter
- Start and turn off your notebook
- Identify the status indicators
- Use the keyboard
- Use the EZ Pad touchpad
- Connect the modem
- Connect to an Ethernet network
- Install peripheral devices



Connecting the AC adapter

You can run your notebook using an AC adapter or the notebook battery. The battery was shipped to you partially charged. You should use the AC adapter right away to fully charge the battery. Allow 24 hours for the battery to fully charge.

Important



If the battery is not fully charged before you use your notebook on battery power for the first time, the battery life may be much shorter than you expect. If the battery life seems short even after being charged for 24 hours, the battery may need to be recalibrated. For information, see "Recalibrating the battery" on page 136.

To connect the AC adapter:

1 Connect the power cord to the AC adapter.




Warning



Make sure that you use the AC adapter that came with your notebook.

Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your notebook may be damaged.

2 Connect the AC adapter to your notebook's power connector.

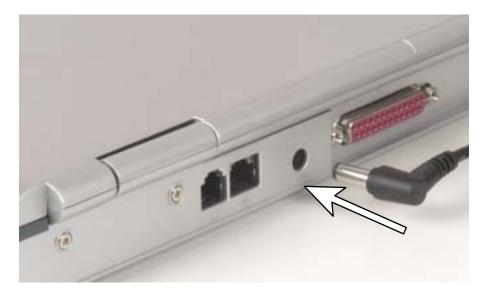

3 Plug the power cord into a wall outlet.

The battery charge indicator turns on (see "Front" on page 2 for the location of the battery charge indicator). If the battery charge indicator does not turn on, unplug the adapter from your notebook, then plug it back in.

- **4** When you finish using your notebook for the first time, turn your notebook off and leave your notebook connected to AC power for at least 24 hours. The battery charge meter may not show a charge for several hours. For more information about the battery charge meter on your model, see "Monitoring the battery charge" on page 134.
- **5** If the battery charge meter does not show a full charge after 24 hours, contact Gateway Technical Support at <u>support.gateway.com</u>, then click **Contact Us**.

Warning

Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.

Protecting from power source problems

During a power surge, the voltage level of electricity coming into your notebook can increase to far above normal levels and cause data loss or system damage. Protect your notebook and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your notebook.

Warning




High voltages can enter your notebook through both the power cord and the modem connection. Protect your notebook by using a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Starting your notebook

To start your notebook:

- **1** Open your notebook by pressing the latch on the front of your notebook and lifting the LCD panel.
- **2** Press the power button located above the keyboard.

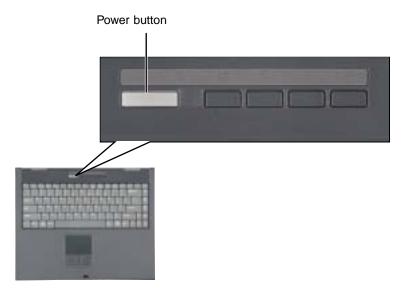

The power button is preset to On/Off mode. However, you can also set it to function in Standby/Resume mode. For instructions on changing the power button mode, see "Changing power settings" on page 141.

3 If you are starting your notebook for the first time, follow the on-screen instructions to set up your notebook.

Waking up your notebook

When you have not used your notebook for several minutes, or if you have closed the LCD panel without turning your notebook off, it may enter a power-saving mode called *Standby*. While in Standby, the power indicator flashes.

If your notebook is in Standby mode, "wake" it up by pressing the power button. For more information on changing power-saving settings, see "Changing power settings" on page 141.

Turning off your notebook

To turn off your notebook in Windows XP:

- 1 Click Start, then click Turn Off Computer. The *Turn Off Computer* dialog box opens.
- **2** Click Turn Off. Windows shuts down and turns off your notebook.

Important



If for some reason you cannot use the Turn Off Computer option in Windows to turn off your notebook, press and hold the power button for about five seconds, then release it.



To turn off your notebook in Windows 2000:

- 1 Click Start, then click Shut Down. The *Shut Down Windows* dialog box opens.
- **2** Click the arrow button to open the **What do you want your computer to do** list, then click **Shut down**.
- **3** Click **OK**. Windows shuts down and turns off your notebook.

Important



If for some reason you cannot use the Shut Down option in Windows to turn off your notebook, press and hold the power button for about five seconds, then release it.

Restarting (rebooting) your notebook

If your notebook does not respond to keyboard or touchpad input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your notebook to normal operation, you may have to restart (reboot) your computer.



To close unresponsive programs and restart your computer:

- **1** Press **CTRL+ALT+DEL**. A window opens that lets you close a program that is not responding.
- 2 Click the program that is not responding.
- **3** Click End Task.
- **4** If your notebook does not respond, turn it off, wait ten seconds and turn it on again.

Important



If your notebook does not turn off immediately, complete the following steps until the notebook turns off:


- 1 Press and hold the power button for about five seconds, then release it.
- 2 Insert a straightened paper clip into the reset hole on the bottom of your notebook.
- 3 Remove AC power and the battery for more than 10 seconds.

As a part of the regular startup process, a program to check the disk status runs automatically. When the checks are finished, Windows starts.



Status indicators

Status indicators inform you when a drive is being used or when a button has been pressed that affects how the keyboard is used.

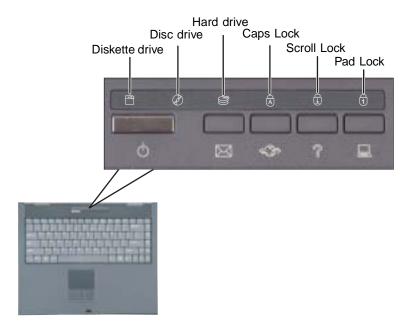

Indicator	lcon	Description
Diskette drive		The 1.44 MB diskette drive or the memory card reader is in use.
Disc drive	Ø	The CD, DVD, or recordable drive is in use.
Hard drive		The hard drive is in use.
Caps Lock		Caps Lock is turned on.

Indicator	Icon	Description
Scroll Lock	Ţ	Scroll Lock is turned on. For more information, see "System key combinations" on page 26.
Pad Lock	1	Numeric keypad is turned on. For more information, see "System key combinations" on page 26.

Using the keyboard

Your notebook features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Pad Lock keys for the numeric keypad.

You can attach an external keyboard to the notebook using a USB port. You do not need to shut down the notebook to connect a USB keyboard.



Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled $F1$ to $F12$ to perform actions in programs. For example, pressing $F1$ may open help.
		Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the ${f FN}$ key to perform specific actions.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Volume keys		Press these colored keys in combination with the ${f FN}$ key to increase or decrease the volume or to turn off all sound.
F N key		Press the F N key in combination with a colored system key (such as STATUS , STANDBY , or PAUSE) to perform a specific action.
Windows key	E	Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Explorer utility).
Numeric keypad		Use these keys to type numbers when the numeric keypad is turned on. Press FN+PAD LOCK to turn on the numeric keypad.
Application key	X	Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.
LCD brightness keys		Press these colored keys in combination with the ${f FN}$ key to control the screen brightness.

System key combinations


When you press the **F**N key and a system key at the same time, your notebook performs the action identified by the colored text or icon on the key.

Press and hold F N, then press this system key	То
F2 Status	Display the power status box in the upper-left corner of your display. The box shows the battery charge level, the BIOS version, and whether the AC adapter is being used. Press the key combination again to close this box.
F3 LCD/CRT	Toggle the notebook display between the LCD, an external monitor, or both displays at the same time. A monitor must be plugged into the monitor port on your notebook.
F4 Standby	Enter Standby mode. Press the power button to leave Standby mode. For more information, see "Changing power modes" on page 140.
F9 Pad Lock	Turn on Pad Lock so you can use the numeric keypad. Press this key combination again to turn off Pad Lock. The Pad Lock status indicator appears when this function is turned on.
F10 Scroll Lock	Pause the text scrolling in a DOS screen. Press this key combination again to continue scrolling. The Scroll Lock status indicator appears when this function is turned on. (This function is only available in some programs.)
F11 Pause	Pause execution of a DOS program. (This function is only available in some programs.)
F12 Break	Stop the currently running DOS program. (This function is only available in some programs.)
	Increase the brightness of the display.

Press and hold F N, then press this system key	То
↓ Ş	Decrease the brightness of the display.
Home	Mute the sound. Press the key combination again to restore the sound. For more information, see "Adjusting the volume" on page 78.
PgUp ∎())) ▲	Increase volume. For more information, see "Adjusting the volume" on page 78.
PgDn ∎() ▼	Decrease volume. For more information, see "Adjusting the volume" on page 78.

Multi-function buttons


Press the multi-function buttons to open the programs associated with them.

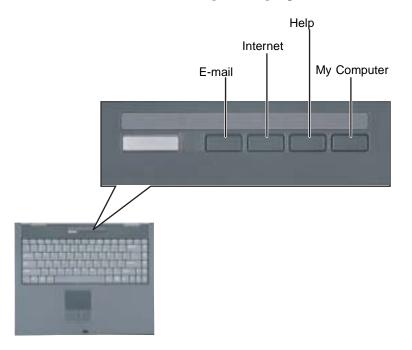

Button	lcon	Press to
E-mail	\bowtie	Open your default e-mail program.
Internet	5 3 3	Open your default Web browser.
Help	ŝ	Open online help.
My Computer		Open the My Computer window.

Using the EZ Pad touchpad

The EZ Pad[™] consists of a touchpad, two buttons, and a rocker switch.

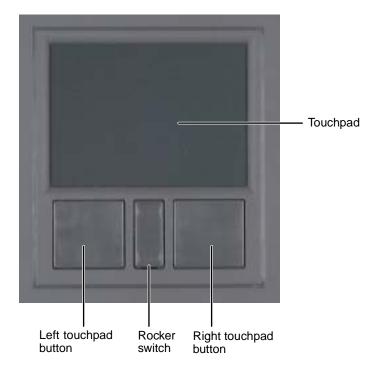


When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction.




You can use the EZ-Pad *left* and *right buttons* below the touchpad to select objects.

You can assign a function to the *rocker switch* between the touchpad buttons. This function can be to scroll up or down, maximize or minimize the active window, or open and close the Start menu. For more information about programming the rocker switch, see "Changing the touchpad settings" on page 167.

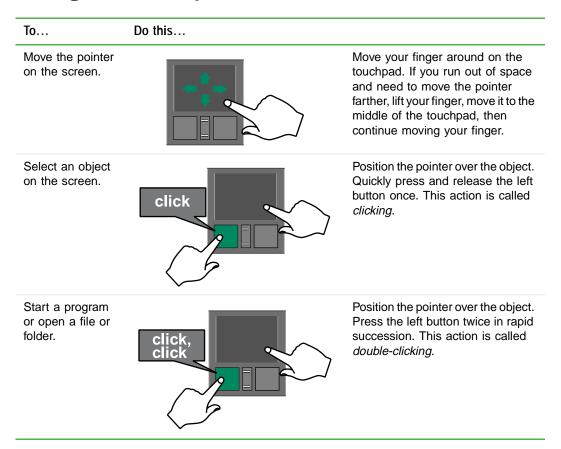

Using the touchpad

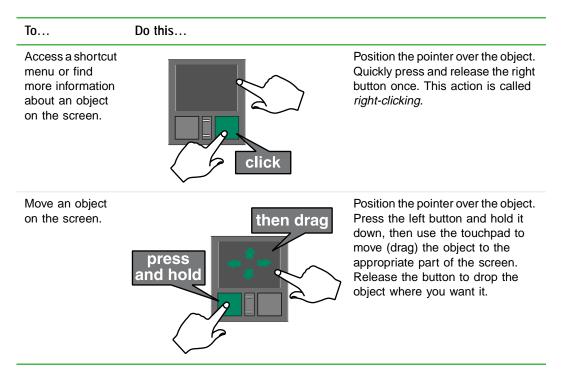

For instructions on how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other touchpad settings, see "Changing the touchpad settings" on page 167.

Connecting the modem


Your notebook has a built-in 56K modem that you can use to connect to a standard telephone line.



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

To connect the modem:

1 Insert one end of the modem cable into the modem jack and on the back of your notebook.

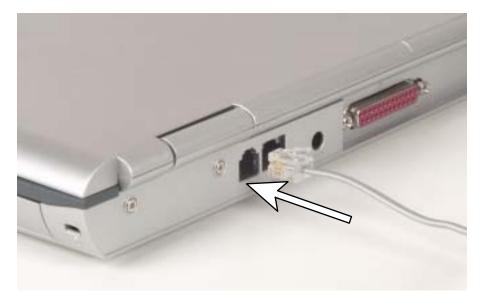

- **2** Insert the other end of the modem cable into a telephone wall jack. The modem will not work with digital or PBX telephone lines.
- **3** Start your notebook, then start your communications program.

Connecting to a wired Ethernet network

Your notebook has a network jack that you can use to connect to a 10/100 wired Ethernet network.


Important



Your notebook may be equipped with built-in wireless Ethernet or you may have a wireless Ethernet PC Card. For information about connecting to a wired or wireless Ethernet network, see "Networking Your Computer" on page 171. For information about installing a wireless Ethernet PC Card, see "Adding and removing a PC Card" on page 224.

To connect to a wired Ethernet network:

1 Insert one end of the network cable into the network jack $\frac{1}{22}$ on the back of your notebook.

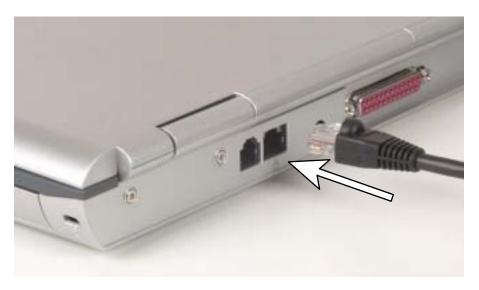

2 Insert the other end of the network cable into a network jack. Ask your network administrator to help you select the correct network jack.



Broadband Internet connections

You can use your notebook's Ethernet jack for more than just networking. Many broadband Internet connections, such as cable modems and DSL modems, connect to your notebook's Ethernet jack. For more information, see "Using the Internet" on page 67 and "Networking Your Computer" on page 171.

Installing a printer, scanner, or other peripheral device

Important



Before you install a printer, scanner, or other peripheral device, see the device documentation and installation instructions.

Your computer has one or more of the following ports: Universal Serial Bus (USB) and parallel. You use these ports to connect peripheral devices such as printers, scanners, and digital cameras to your computer. For more information about port locations, see "Checking Out Your Gateway 400" on page 1.

USB ports support *plug-and-play* and *hot-swapping*, which means that your computer will usually recognize such a device whenever you plug it into the appropriate port. When you use a USB device for the first time, your computer will prompt you to install any software the device needs. After doing this, you can disconnect and reconnect the device at any time.

Parallel port devices are not plug-and-play. See the device documentation for detailed information and installation instructions.





3

This chapter tells you about additional information resources available to help you use your computer. Read this chapter to learn how to access:

Getting Help

- HelpSpot[™]
- Do More With Gateway
- Online help
- Gateway Web site



HelpSpot

Your computer may include *HelpSpot*TM, an easily accessible collection of help information, troubleshooters, instructional videos, and automated support. Use HelpSpot to answer questions about Windows and to help you quickly discover and use the many features of your Gateway computer. HelpSpot also has an area called *Who to contact for help* that helps you find the right resource at Gateway to answer your questions or help solve your problems.



To start HelpSpot:


■ Click Start, then click Help and Support. HelpSpot opens.



If this is the first time you have started HelpSpot, you may experience a brief wait while HelpSpot builds the help database, then HelpSpot displays an introductory video.




You can find help information by clicking a link, performing a search, or browsing the index. To learn about using your Gateway computer, your touchpad, and other tasks, click the **Using your Gateway computer** link on the HelpSpot main page.

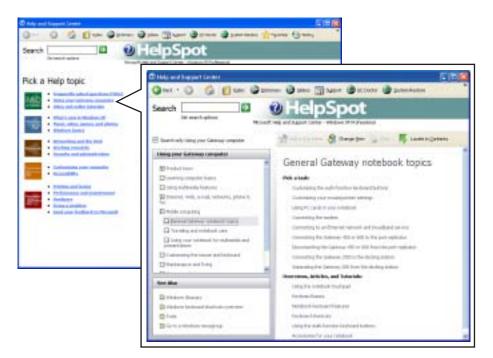

Searching for a topic

To search for a topic in HelpSpot, type a word or phrase (keyword) in the **Search** box located at the top of any HelpSpot screen, then click the arrow

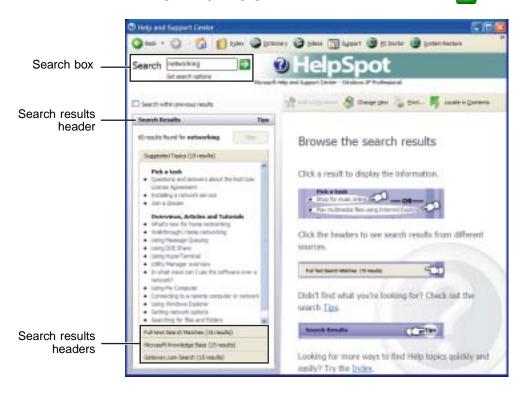

For each search, you receive the following search result types:

- Suggested Topics These topics are located in HelpSpot and are relevant to your search topic.
- Full-text Search Matches These topics are located in HelpSpot and contain the words you entered in the **Search** box.
- Microsoft Knowledge Base These topics are located on the Microsoft Web site and contain the words you entered in the Search box. You must be connected to the Internet to search for and access these topics.
- Gateway.com Search These topics are located on the Gateway Web site and contain the words you entered in the Search box. You must be connected to the Internet to search for and access these topics.

To view a list of your search results, click the results header for the type of results you want to view.

To view a topic, click the topic name in the Search Results list.

HelpSpot videos

HelpSpot contains several short videos to help introduce you to new concepts or show you how to perform various tasks.



To play a HelpSpot video:

■ To watch a video in HelpSpot, click Video and online tutorials on the HelpSpot home page, then click a video title. The video plays.



Do More With Gateway

Your computer may include *Do More With Gateway*, a tool that provides additional information about using your Gateway computer for digital music, digital photography, digital video, gaming, and other programs. To access Do More With Gateway in Windows XP, click **Start**, then click **Do More With Gateway**. Click the topics listed on the left-side of the page to learn more about the software already installed on your computer as well as partnerships and special offers available through Gateway.



Online help

Many programs provide information online so you can research a topic or learn how to perform a task while you are using the program. You can access most online help information by selecting a topic from a **Help** menu or by clicking a **Help** button.

🔁 G	atewa	y Hom	epage - Mi	icrosof	t Internet Explorer
File	Edit	View	Favorites	Tools	Help

You can search for information by viewing the help contents, checking the index, searching for a topic or keyword, or browsing through the online help.



Gateway Web site

Gateway's online support is available 24 hours per day, 7 days per week and provides the most current drivers, product specifications, tutorials, and personalized information about your system. Visit the Gateway eSupport Web site at <u>support.gateway.com</u>. For more information about connecting to the Internet, see "Using the Internet" on page 67.



Using eSupport

The eSupport site is divided into four major areas:

- Support Home
- Downloads
- Contact Us
- Account Info

Each of these areas is represented by a tab across the top of the Web page.

Support Home tab

To get specific information about your computer, type your serial number into the *My System Information* box, then click **GO**, or click **Look up my serial number for me.** For more information, see "Finding your specifications" on page 12.

The *Support Information* link lets you access product documentation, specifications, and manuals. By entering your serial number, you get specific documents related to your system. You can also browse through the reference area to locate an article specific to the question you have.

The *Tutorials* link lets you access an extensive library of how-to articles and videos on topics such as making audio CDs and installing a hard drive.

Downloads tab

The *Downloads* tab provides the latest software updates for BIOS and driver upgrades. By entering your serial number you get drivers specific to your system. Click **All Downloads** to walk through a step-by-step wizard to locate your drivers.

Contact Us tab

The *Contact Us* tab contains links to technical support with a live technician, including chat and e-mail. Click **Call Us** to get a list of Gateway telephone numbers for both sales and support. For more information, see "Telephone numbers" on page 261.

Account Info tab

The *Account Info* tab contains support for non-technical issues, like the status of your order or changing your account address.

Chapter 3: Getting Help



4

Windows Basics

Read this chapter to learn how to:


- Use the Windows desktop
- Manage files and folders
- Work with documents
- Use shortcuts



About the Windows environment

After your computer starts, the first screen you see is the Windows *desktop*. The desktop is like the top of a real desk. Think of the desktop as your personalized work space where you open programs and perform other tasks.

Your desktop may be different from this example, depending on how your computer is set up.

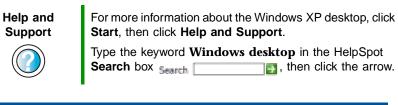



Using the desktop

The desktop contains the taskbar, the Start button, and the Recycle Bin icon.

Desktop elements	Description
1 start	A STREET
	The <i>taskbar</i> is the bar at the bottom of the computer display containing the Start button on the left and a clock on the right. Other buttons on the taskbar represent programs that are running. Click a program's <i>button</i> on the taskbar to open the program's window.
W start	The <i>Start button</i> provides access to programs, files, help for Windows and other programs, and computer tools and utilities. Click the Start button, then open a file or program by clicking an item on the menu that opens.
CORE Recycle Bin	The <i>Recycle Bin</i> is where files, folders, and programs that you discarded are stored. You must empty the Recycle Bin to permanently delete them from your computer. For instructions on how to use the Recycle Bin, see "Deleting files and folders" on page 55.

Using the Start menu

You can start programs, open files, customize your system, get help, search for files and folders, and more using the Start menu.



To use the Start menu:

- 1 Click the **Start** button on the lower left of the Windows desktop. The Start menu opens showing you the first level of menu items.
- 2 Click All Programs or Programs to see all programs and files in the Start menu. When you move the mouse pointer over any menu item that has an arrow next to it, another menu, called a *submenu*, opens and reveals related files, programs, or commands.

3 Click a file or program to open it.



Adding icons to the desktop

You may want to add an icon (shortcut) to the desktop for a program that you use frequently.



To add icons to the desktop:


- 1 Click Start, then click All Programs.
- **2** Right-click (press the right touchpad button) the program that you want to add to the desktop.

3 Click **Send To**, then click **Desktop (create shortcut)**. A shortcut icon for that program appears on the desktop.



Identifying window items

When you double-click the icon for a drive, folder, file, or program, a *window* opens on the desktop. This example shows the Local Disk (C:) window, which opens after you double-click the Local Disk (C:) icon in the *My Computer* window.

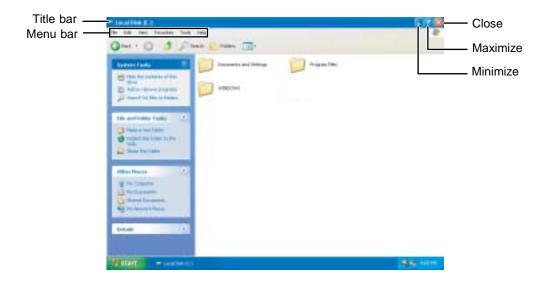

Every program window looks a little different because each has its own menus, icons, and controls. Most windows include these items:

Window item		Description	
😂 Local Disk (C:)		The <i>title bar</i> is the horizontal bar at the top of a window that shows the window title.	
		Clicking the <i>minimize button</i> reduces the active window to a button on the taskbar. Clicking the program button in the taskbar opens the window again.	
		Clicking the <i>maximize button</i> expands the active window to fit the entire computer display. Clicking the maximize button again restores the window to its former size.	
		Clicking the <i>close button</i> closes the active window or program.	
File Edit View Favorites Tools Help		Clicking an item on the <i>menu bar</i> starts an action such as Print or Save.	
Help and Support	on about windows in Windows XP, click elp and Support . window in the HelpSpot Search box [], then click the arrow.		

Working with files and folders

You can organize your files and programs to suit your preferences much like you would store information in a file cabinet. You can store these files in folders and copy, move, and delete the information just as you would reorganize and throw away information in a file cabinet.


Viewing drives

Drives are like file cabinets because they hold files and folders. A computer almost always has more than one drive. Each drive has a letter, usually Local Disk (C:) for the hard drive and 3½ Floppy (A:) for the optional diskette drive. You may also have more drives such as a CD, DVD, or recordable drive, or a memory card reader.

To view the drives on your computer:

In Windows XP, click Start, then click My Computer on the Start menu.
 OR -

In Windows 2000, double-click the My Computer icon on the desktop.

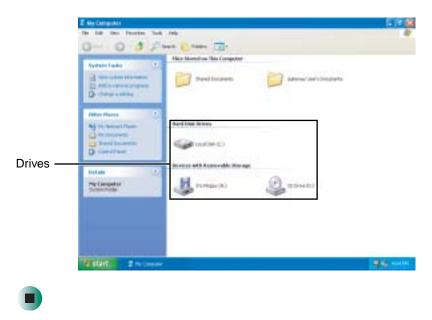

To see the files and folders on a drive:


Double-click the drive icon. If you do not see the contents of a drive after you double-click its icon, click Show the contents of this drive.

Help and Support	For more information about files and folders in Windows XP, click Start , then click Help and Support .
	Type the keyword files and folders in the HelpSpot Search box Search , then click the arrow.

Creating folders

Folders are much like the folders in a file cabinet. They can contain files and other folders.

Files are much like paper documents—letters, spreadsheets, and pictures—that you keep on your computer. In fact, all information on a computer is stored in files.

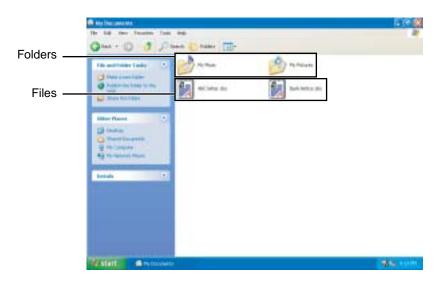

To create a folder:

1 In Windows XP, click Start, then click My Computer on the Start menu.

- OR -

In Windows 2000, double-click the My Computer icon on the desktop.

- **2** Double-click the drive where you want to put the new folder. Typically, Local Disk (C:) is your hard drive and 3½ Floppy (A:) is your optional diskette drive. If you do not see the contents of the drive, click **Show the contents of this drive**.
- **3** If you want to create a new folder inside an existing folder, double-click the existing folder. If you do not see the contents of the folder, click Show the contents of this drive or Show the contents of this folder.
- **4** Click **File**, **New**, then click **Folder**. The new folder is created.
- **5** Type a name for the folder, then press **ENTER**. The new folder name appears by the folder icon.

Help and
SupportFor more information about creating files and folders in
Windows XP, click Start, then click Help and Support.Type the keyword creating files and folders in the
HelpSpot Search box
the arrow.

For information about renaming folders, see "Shortcuts" on page 65.

Copying and moving files and folders

The skills you need to copy and move files are called *copying*, *cutting*, and *pasting*.

When you *copy and paste* a file or folder, you place a *copy* of the file or folder on the Windows *clipboard*, which temporarily stores it. Then, when you decide what folder you want the copy to go in (the *destination* folder), you *paste* it there.

When you *cut and paste* a file or folder, you remove the file or folder from its original location and place the file or folder on the Windows clipboard. When you decide where you want the file or folder to go, you paste it there.

Important



The clipboard stores whatever you cut or copy until you cut or copy again. Then the clipboard contains the new information only. Therefore, you can paste copies of a file or folder into more than one place, but as soon as you copy or cut a different file or folder, the original file or folder is deleted from the clipboard.

To copy a file or folder to another folder:

- **1** Locate the file or folder you want to copy. For more information, see "Viewing drives" on page 51 and "Searching for files" on page 58.
- **2** Right-click (press the right touchpad button) the file or folder that you want to copy. A pop-up menu opens on the desktop.
- **3** Click **Copy** on the pop-up menu.
- **4** Open the destination folder.
- **5** With the pointer inside the destination folder, right-click.
- **6** Click **Paste**. A copy of the file or folder appears in the new location.



To move a file or folder to another folder:

- 1 Locate the file or folder you want to move. For more information, see "Viewing drives" on page 51 and "Searching for files" on page 58.
- **2** Right-click (press the right touchpad button) the file or folder that you want to move. A pop-up menu opens on the desktop.
- **3** Click **Cut** on the pop-up menu.
- **4** Open the destination folder.
- **5** With the pointer inside the destination folder, right-click.
- **6** Click **Paste**. The file or folder you moved appears in its new location and is removed from its old location.



Help and Support For more information about copying files and folders or moving files and folders in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **copying files and folders** or **moving files and folders** in the HelpSpot **Search** box Search ______, then click the arrow.

Deleting files and folders

When you throw away paper files and folders, you take them from the file cabinet and put them in a trash can. Eventually the trash can is emptied.

In Windows, you throw away files and folders by first moving them to the Windows trash can, called the *Recycle Bin*, where they remain until you decide to empty the bin.

You can recover any file in the Recycle Bin as long as the bin has not been emptied.



To delete files or folders:

1 In My Computer or Windows Explorer, click the files or folders that you want to delete. For instructions on how to select multiple files and folders, see "Shortcuts" on page 65.

If you cannot find the file you want to delete, see "Searching for files" on page 58.

2 Click File, then click Delete. Windows moves the files and folders to the Recycle Bin.



Help and Support



For more information about deleting files and folders in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **deleting files and folders** in the HelpSpot **Search** box Search . , then click the arrow.

To recover files or folders from the Recycle Bin:

- **1** Double-click the **Recycle Bin** icon. The *Recycle Bin* window opens and lists the files and folders you have thrown away since you last emptied it.
- **2** Click the files or folders that you want to restore. For instructions on how to select multiple files and folders, see "Shortcuts" on page 65.
- **3** Click **File**, then click **Restore**. Windows returns the deleted files or folders to their original locations.



To empty the Recycle Bin:



Emptying the Recycle Bin permanently erases any files or folders in the bin. These files cannot be restored.

- **1** Double-click the **Recycle Bin** icon on the desktop. The *Recycle Bin* window opens.
- **2** Click File, then click Empty Recycle Bin. Windows asks you if you are sure that you want to empty the bin.
- **3** Click Yes. Windows permanently deletes all files in the Recycle Bin.



For more information about emptying the Recycle Bin in Windows XP, click **Start**, then click **Help and Support**.



Type the keyword **emptying Recycle Bin** in the HelpSpot **Search** box search [1], then click the arrow.

Browsing for files and folders

A file or folder that you need is rarely right on top of your Windows desktop. It is usually on a drive inside a folder that may be inside yet another folder, and so on.

Windows drives, folders, and files are organized in the same way as a real file cabinet in that they may have many levels (usually many more levels than a file cabinet, in fact). So you usually will have to search through levels of folders to find the file or folder that you need. This is called *browsing*.


To browse for a file:

1 In Windows XP, click **Start**, then click **My Computer**. The *My Computer* window opens.

- OR -

In Windows 2000, double-click the **My Computer** icon on the desktop. The *My Computer* window opens.

2 Double-click the drive or folder that you think contains the file or folder that you want to find. If you do not see the contents of a folder, click Show the contents of this drive or Show the contents of this folder.

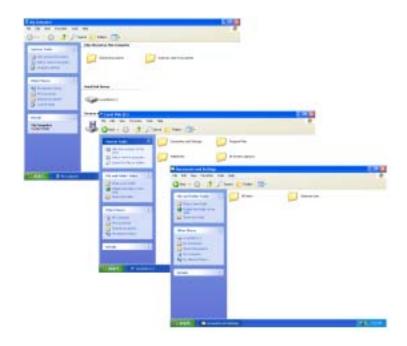

3 Continue double-clicking folders and their subfolders until you find the file or folder you want.







For more information about browsing for files and folders in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **files and folders** in the HelpSpot **Search** box Search **[1]**, then click the arrow.

Searching for files

If you are looking for a particular file or folder or a set of files or folders that have characteristics in common, but you do not remember where they are stored on your hard drive, you can use the Search utility to search by:

- Name or part of a name
- Creation date
- Modification date
- File type
- Text contained in the file
- Time period in which it was created or modified

You can also combine search criteria to refine searches.

Files and folders found using this utility can be opened, copied, cut, renamed, or deleted directly from the list in the results window.


Using the Windows Search utility

To find files and folders using the Search utility:

1 In Windows XP, click **Start**, then click **Search**. The *Search Results* window opens. Click **All files and folders**.

- OR -

In Windows 2000, click **Start**, **Search**, then click **For Files or Folders**. The *Search Results* window opens.

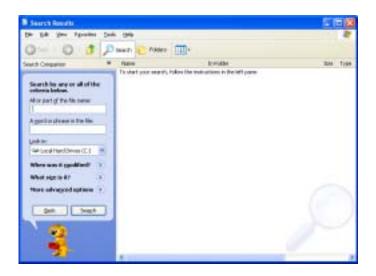


- **2** If you want to search by file or folder name, type in all or part of the file or folder name in the name box in the left pane of the window.
 - If you type all of the name, Search will list all files and folders of that name.
 - If you type part of the name, Search will list all of the file and folder names containing the letters you typed.

3 Click **Search** or **Search Now**. When the search is completed, Windows lists the files and folders whose names contain the text that you searched for.

Sterch Resets			12	
He all the Parallel Tax	n ingi		14	1
0 0 3 5	Search Constant Title			
meditripeen *	New	to Faller	500	line.
	Stream	Cashod Rand		
	🔛 iy Kalulzi	C/WINDOWS		The Public
When we want the line front	avystani.	C/MBDOWS		The Pole
There were 25 Non Found	Beydam .	doing to the second se</td <td>1.846</td> <td>cella.</td>	1.846	cella.
Und you find what you wanted?	Sneedaa.it	C/woterweisester	60.00	Applete
C to hatel we fing	III IYOM	C/MINDOWINHMANE	4.00	Device
	3 PROVIDENCE.	C/ADDON/M/Jyltan	40.02	Applica
the refine the search and	and any last	C1A000N93ayttan	4 83	2010
Charge Network	off system	COMPONENTIA MARK	1.0418	144
Myserds	Cafeeteri	CliPtogram Filedclasters Files		Tile hok
Carige of address failless and	ill rotanicar	C/WINDOWS/averand/sconing	36810	SHITH
rystem like are included	a pythemigrad to	ChAlleOrellavitent/samig		Phylick
You may also stand its	10 515704	C1406D040avatand/2014g	2,004 (0)	The .
test results by	I wan nd	C1/KINDOwStandard/Sedam	\$3.68	HOP IN
Celegery .	Handle Manualt Medica Set	COMPONISHED SHARAS	540	Securit
Here results differently (2)	Soft, Harank Medica Set.	CIARDON/DWG/S/Revises	1.40	HAND
the rest and the set	Sisten	C14INDOVSPORATHMER		The Pol
Jan enew seeth	Suben .08%	CURINDIN/SPOKA/HURLE		The Post
The second se	Contem Tools	C/Decements and Setting/William		Pla Pok
(mah	Sustem Tooks	Clibecommity and Safetypilliani		The Pol-
1	25cotum Tooky	Cliffectments and Setting/VGA		Plefox
in the second	diretan.	COMMON/SPORA PRIME -	1.18	127.84
100	D System Drivenation	Othercoments and Setting William	146	Sec.
	System Reduce	O'decements and Settingfull II	248	States.
1 A A	System Tools	C/ARDOVELander/Closely.		(The Put
	6	and the second se		

4 Open a file, folder, or program by double-clicking the name in the list.

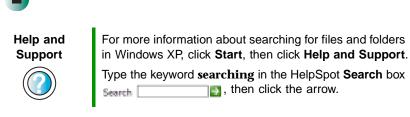

Using advanced search options

Search can find files meeting more criteria than file name. You can narrow your search by selecting the search options that you want. You can search by the:

- Date the file was created or modified.
- Size of the file.
- Type of file, such as a program or a text document.

Working with documents

Computer documents include word processing files, spreadsheet files, or other similar files. The basic methods of creating, saving, opening, and printing a document apply to most of these types of files.

The following examples show how to create, save, open, and print a document using Microsoft[®] WordPad. Similar procedures apply to other programs such as WordPerfect, Microsoft Word, and Microsoft Excel.


For more information about using a program, click Help on its menu bar.

Creating a new document



To create a new document:

1 Click **Start**, **All Programs**, **Accessories**, then click **WordPad**. Microsoft WordPad starts and a blank document opens.

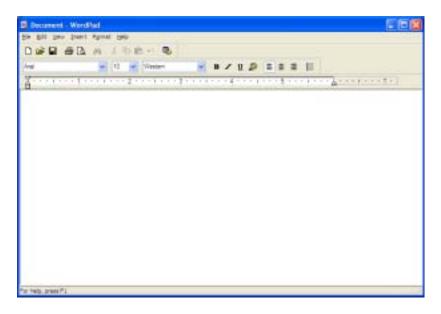

2 Begin composing your document. Use the menus and toolbar buttons at the top of the window to format the document.




Saving a document


After you create a document, you need to save it if you want to use it later.

To save a document:

1 Click File, then click Save. The Save As dialog box opens.

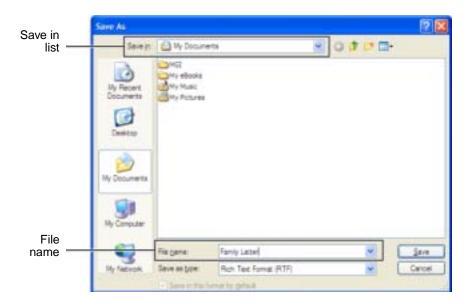

- **2** Click the arrow button to open the **Save** in list, then click the folder where you want to save the file. If you do not see the folder you want, browse through the folders listed below the *Save* in list.
- **3** Type a new file name in the File name box.
- 4 Click Save.

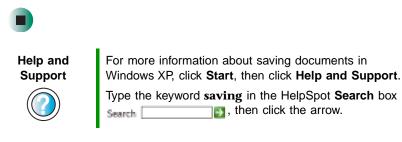


Opening a document

To view, revise, or print an existing document, first you need to open it. Open the document in the program that it was created in.




To open a document:

- **1** Start the program.
- **2** Click File, then click Open.
- **3** Click the arrow button to open the **Look** in list, then click the folder you want to open. If you do not see the folder you want, browse through the folders listed below the *Look* in list.

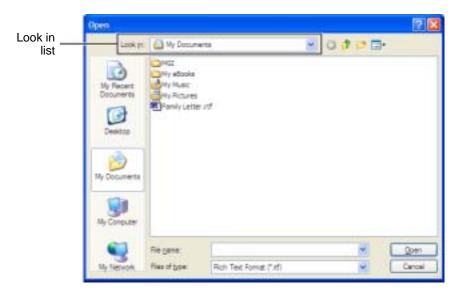

4 Double-click the document file name. The document opens.

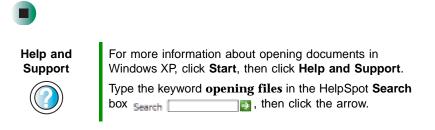

Printing a document

To print a document, you must have a printer connected to your computer or have access to a network printer. For more information about installing or using your printer, see the printer documentation.

To print a document:

- **1** Make sure that the printer is turned on and loaded with paper.
- **2** Start the program and open the document.
- **3** Click File, then click Print. The *Print* dialog box opens.
- **4** Set the print options, then click **OK**. The document prints.



For more information about printing documents in Windows XP, click **Start**, then click **Help and Support**.



Type the keyword **printing** in the HelpSpot **Search** box Search ______, then click the arrow.

Shortcuts

The following table shows a few shortcuts that you can use in Windows and almost all programs that run in Windows. For more information about shortcuts, see your Windows or program documentation.

То	Do this
Copy a file, folder, text, or graphic	Click the item, then press CTRL + C.
Cut a file, folder, text, or graphic	Click the item, then press $CTRL + X$.
Paste a file, folder, text, or graphic	Click inside the folder or window where you want to paste the object, then press $CTRL + V$.
Select multiple items in a list or window	Click the first item, press and hold down the $\ensuremath{\textbf{CTRL}}$ key, then click each of the remaining items.
Select multiple adjacent items in a list or window	Click the first item in the list, press and hold down the SHIFT key, then click the last item in the list.
Permanently delete a file or folder	Click the file or folder, then press SHIFT + DELETE . The file or folder is permanently deleted. The file or folder is not stored in the Recycle Bin.
Rename a file or folder	Click the file or folder, press $F2$, type the new name, then press ENTER .
Close the active window or program	Press ALT + F4.
Switch to a different file, folder, or running program	Press ALT + TAB.

Help and Support



For more information about Windows keyboard shortcuts
in Windows XP, click Start, then click Help and Suppor

Type the keyword	Win	ndows	keyboard	shortcuts i	n the
HelpSpot Search	box	Search		📑 , then	click
the arrow.		-			

Chapter 4: Windows Basics

Using the Internet

5

This chapter provides information about the Internet and the World Wide Web. Read this chapter to learn how to:


- Set up and access an Internet account using America Online[®]
- Connect to a Web site using a browser
- Download files from the Internet
- Send and receive e-mail using America Online



Learning about the Internet

The *Internet* is a worldwide network of computers linked together to provide information to people everywhere. The two most popular services on the Internet are e-mail and the World Wide Web. You can access this network by connecting your computer to a telephone, DSL (Digital Subscriber Line), or cable line and signing up with an Internet service provider (ISP).

Cable and DSL modems, a connection known as broadband, use your TV cable or special telephone lines to connect to your ISP and access the Internet. Cable and DSL modems connect to your computer through an Ethernet jack and provide a faster connection speed than a standard telephone modem.

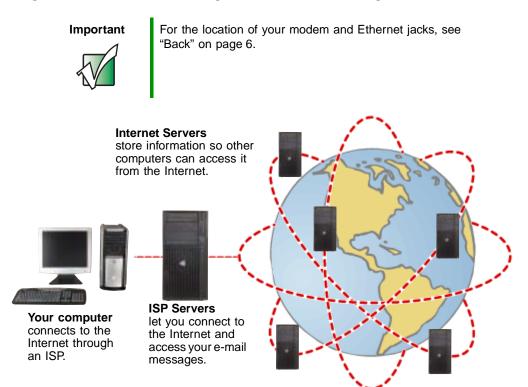

If you want to access the Internet you need:

- A modem a device that connects your computer to other computers or servers using a telephone, DSL, or cable line.
- An **Internet service provider** a company that provides access to the Internet through an ISP server. When you connect to an ISP, the ISP server lets you access the Internet and your e-mail messages.
- A **Web browser** a program that displays information from the World Wide Web.
- An e-mail program a program that lets you create, send, and receive e-mail messages over the Internet.

Setting up an Internet account

Before you can view the information on the World Wide Web, you need to set up an Internet account with an Internet service provider (ISP). If you have chosen America Online as an ISP, follow these instructions to set up and connect to your account. To set up a different ISP service or to transfer an existing account to this computer, contact the ISP directly.

If you set up an account with America Online, an Internet e-mail address is created for you. After completing the setup, you are ready to access the Internet.

To set up an Internet account with America Online:

- **1** Click Start, All Programs, then click America Online.
- **2** Follow the on-screen instructions. After setting up your account, you can connect to the Internet and access your e-mail services.



Accessing your Internet account

To connect to your America Online Internet account:

- 1 Click Start, All Programs, then click America Online.
- **2** Complete the member name and password information, then click **Connect**. Your computer dials the Internet account telephone number. After connecting, the *Welcome* window opens.


If you are using a service other than America Online, check with your ISP for the correct procedure for connecting.

To disconnect from your America Online Internet account:

■ Click X in the top-right corner of the America Online window. Your computer disconnects from the Internet.



Make sure that your computer disconnects correctly from your Internet account. If you do not have an "unlimited hours" ISP account, you may have to pay for the time that you are connected, even if you are not at your computer.

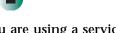

If you are using a service other than America Online, check with your ISP for the correct procedure for disconnecting.



For general information about using Internet accounts in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **ISP** in the HelpSpot **Search** box Search _______, then click the arrow.

Using the World Wide Web


The World Wide Web is a multimedia window to the Internet that gives you access to millions of information sources.

Information on the Web comes to you on *Web pages*, which are electronic documents that you view using a Web page display program called a *browser*. You can use any of the commercially available Web browsers, like Microsoft Internet Explorer (which comes installed on your new computer), Netscape Navigator, or the browser built into America Online.

Web pages can contain text, animations, music, and other multimedia features. A group of related Web pages is called a *Web site*. You can access Web sites to shop, track investments, read the news, download programs, and much more.

You can explore a Web site or visit other Web sites by clicking areas on a Web page called *links* or *hyperlinks*. A link may be colored or underlined text, a picture, or an animated image. You can identify a link by moving the mouse pointer over it. If the pointer changes to a hand, the item is a link.

To learn more about using the Web browser features, click **Help** in the menu bar.

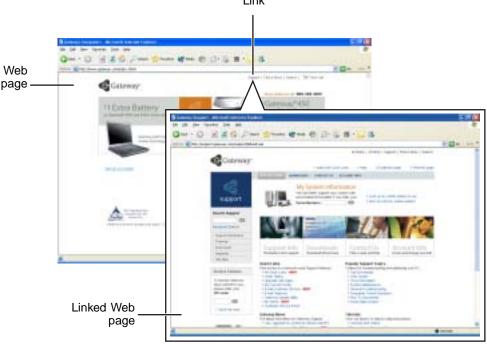

Link

Connecting to a Web site

After you set up an account with an Internet service provider (ISP) such as America Online, you can access the many information sources on the World Wide Web.

To connect to a Web site:

- **1** Connect to your Internet account. After your computer connects, a default opening page or welcome screen opens.
- **2** To go to a different Web site, type the *address* (called a *URL* for "Universal Resource Locator") in the browser address bar (for example **www.gateway.com**), then click **GO** on the browser address bar.



- OR -

On the current Web page, click a link to a Web site.

The Web browser locates the server computer on the Internet, *downloads* (transfers) data to your computer, and displays the page on the site that you requested.



For more information about connecting to a Web site in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **connecting to Web site** in the HelpSpot **Search** box Search , then click the arrow.

Sometimes Web pages display slowly. The speed that a Web page displays on your screen depends on the complexity of the Web page and other Internet conditions. Additionally, the speed of your connection will determine how fast Web pages display.

Downloading files

Downloading is the process of transferring files from a computer on the Internet to your computer.

To protect your computer against viruses, make sure that you scan the files you download. For more information, see "Protecting your computer from viruses" on page 198.



To download files or programs from a Web site:

- **1** Connect to your Internet account.
- **2** In the address bar, type the address of the Web site that contains the file or program you want to download, then click **GO** on the browser address bar.

- OR -

Click a link on a Web page to navigate to the Web site containing the file that you want to download.

- **3** Create or locate the folder where you want to store the file on your computer. For more information, see "Working with files and folders" on page 51.
- **4** Click the link on the Web page for the file that you want to download.
- **5** Follow the on-screen instructions for saving the file in the folder that you want. A copy of the file is downloaded to your computer. The time that it takes to transfer the file to your computer depends on file size and Internet conditions.
- **6** Open the folder that you created.
- **7** Install or view the downloaded file by double-clicking it. If applicable, follow the instructions provided on the Web site to run or install the program.

Help and Support


For more information about downloading files in Windows XP, click **Start**, then click **Help and Support**. Type the keyword **downloading files** in the HelpSpot **Search** box search **Search**, then click the arrow.

Using e-mail

E-mail (electronic mail) lets you send messages to anyone who has an Internet connection and e-mail address. E-mail is usually a free service of your Internet account.

The Internet never closes, so you can send e-mail messages at any time. Your e-mail messages arrive at most e-mail addresses in minutes.

An *e-mail address* consists of a user name, the @ symbol, and the Internet *domain name* of the Internet service provider (ISP) or company that "hosts" that user. Your e-mail address is assigned when you sign up for an account with an ISP. For example, a person with an account with America Online might have an e-mail address that is similar to this one:

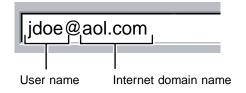

Sending e-mail

- To send e-mail using America Online:
 - **1** Connect to your America Online account.
 - 2 Click Write.
 - **3** Type the e-mail address of the recipient you want to send e-mail to in the **Send To** box.
 - **4** Type the subject of your e-mail in the **Subject** box.
 - **5** Type the e-mail message.
 - **6** When finished, click **Send Now**. Your e-mail is sent over the Internet to the e-mail address you specified.



Checking your e-mail

To check your e-mail using America Online:

- **1** Connect to your America Online account.
- 2 Click Read.
- **3** Double-click the message you want to read.



For more information about managing and organizing your e-mail messages, see the online help in your e-mail program.



For general information about using e-mail in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **e-mail** in the HelpSpot **Search** box Search [1], then click the arrow.

Chapter 5: Using the Internet

Using Multimedia

This chapter provides information on using the multimedia capabilities of your notebook. Read this chapter to learn how to:

- Adjust the volume
- Record and play audio files
- Use Windows Media Player
- Use the optional diskette drive
- Use a CD or DVD drive
- Play CDs
- Use MusicMatch
- Play DVDs
- Create CDs
- Use the optional memory card reader
- Attach a digital camera to your notebook



6

Adjusting the volume

Adjusting the volume in Windows XP

You can use the volume controls to adjust the overall volume and the volume of specific sound devices in your computer.

To adjust the overall volume level using hardware controls:

■ If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see "System key combinations" on page 26.


To adjust the overall volume level from Windows:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Sounds, Speech, and Audio Devices.
- **2** Click/Double-click the Adjust the system volume or Sounds and Audio Devices. The Sounds and Audio Devices Properties dialog box opens.

3 Click the **Volume** tab.

	d Audio Devices Properties ?
Yokee	Storth Auto Vice Hardware
Ø,	Heads() Integrated Justice
Seile.	obre
2	
	1 March 1997
	Place volume gives in the task bar
	Adjurced.
Speed or	adirg
1	Use the settings below to shange individual speaker volume and other settings.
	Souther Volume. Advanced.

4 Drag the **Device Volume** slider to change the volume or click to select the **Mute** check box, then click **OK**.

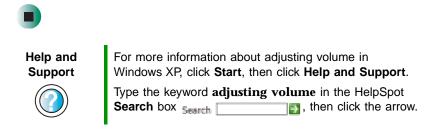

To adjust specific volume levels:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Sounds, Speech, and Audio Devices.
- **2** Click/Double-click the Adjust the system volume or Sounds and Audio Devices. The Sounds and Audio Devices Properties dialog box opens.

3 Click the **Volume** tab.

Polyme	Founds Audo Visce Hardware
0	Intel(Integrated Judia
Cerk(#)	des .
0	
1.5	Los Hgt
	Place volume joon in the task bar
	Adjanced
Name of	infingi
	11
Ī	Use the settings before its sharings included

4 Click Advanced in the Device volume area.

III Matter Volume					
Optime this					1.000
Master Volume	Stew.	SVCIunt	CD Avdo	Dreft.	PC Spoelver
8 0 4	1 alera 4 - () - 4		Daren () ()	5 0 4	1
Volum	Vilen	Vites	Volume	Vidana	Votes
	CH4	Dy.a		Ellen .	El Bre
otue bela gent (0601					

If the device you want to adjust does not appear in the window, click **Options**, **Properties**, the check box next to the audio device you want to adjust, then click **OK**.

- **5** Drag the volume level and balance sliders for the device you want to adjust. For more information about the volume controls, click **Help** in the window.
- **6** Click **X** in the top-right corner of the window to close it.

Adjusting the volume in Windows 2000

You can use the volume controls to adjust the overall volume and the volume of specific sound devices in your computer.

To adjust overall volume level using hardware controls:

■ If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see "System key combinations" on page 26.



To adjust overall volume level from Windows:

■ Click the speaker icon 🖞 on the taskbar, then drag the slider to change the volume or click to select the Mute check box.



To adjust specific volume levels:

1 Double-click the speaker icon \mathfrak{A} on the taskbar. The *Volume Control* window opens.

E Volume Cont Options Help	rol			
Volume Control Balance:	Mic/Line Balance:	CD/Aux Balance ♪ - ↓ - ↓	Wave Balance:	Synthesizer Balance:
Volume:	Volume:	Volume:	Volume:	Volumes
∏ <u>M</u> ute al	∏ <u>M</u> ute	☐ Mute	∏ <u>M</u> ute	∏ <u>M</u> ute
Soundscape Mixer	(534)			

If the device you want to adjust does not appear in the *Volume Control* window, click **Options**, **Properties**, the audio device you want to adjust, then click **OK**.

- **2** Drag the volume level and balance sliders for the device you want to adjust. For more information about the volume controls, click **Help** in the *Volume Control* window.
- **3** Click **X** in the top-right corner of the window to close it.


Recording and playing audio

Use the following instructions to make an audio recording by speaking into a microphone.



To make an audio recording:

- **1** Plug a microphone into the Microphone jack on your computer. For the location of the Microphone jack, see "Left side" on page 3.
- **2** Click Start, All Programs, Accessories, Entertainment, then click Sound Recorder. The Sound Recorder opens.

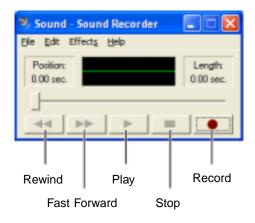

- **3** Click \bullet (record), then speak into the microphone.
- **4** When you finish recording, click \blacksquare (stop).
- **5** Click File, then click Save As. The *Save As* dialog box opens.
- **6** Name the recording, specify the location where you want to save the recording, then click **Save**. The recording is saved.



To play an audio recording in Sound Recorder:

- **1** Open the Sound Recorder.
- 2 Click File, then click Open. The Open dialog box opens.
- **3** Click the file you want to play, then click **Open**.
- 4 Play the file by clicking ▶ (play), then stop playing the file by clicking (stop).

Help and Support



For more information about making or playing an audio recording in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **recording audio** or **playing audio** in the HelpSpot **Search** box Search **_____**, then click the arrow.

Playing audio and video files with the Windows Media Player

The Windows Media Player can play several types of audio and video files, including WAV, MIDI, MP3, AU, AVI, and MPEG formats. For more information about the using the Windows Media Player, click **Help**.




To play a file using the Windows Media Player:

1 In Windows XP, click **Start**, **All Programs**, then click **Windows Media Player**. The Windows Media Player opens.

- OR -

In Windows 2000, click Start, Programs, Accessories, Entertainment, then click Windows Media Player. The Windows Media Player opens.

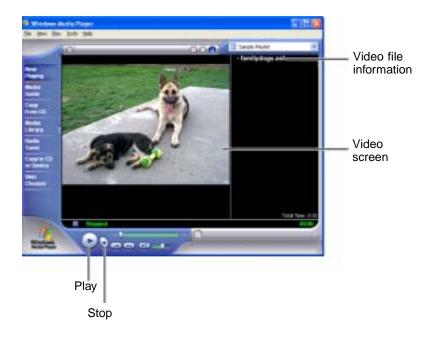

2 Click File, then click **Open**. The **Open** dialog box opens.

Important



If the menu bar does not appear, click the show menu bar button.

- **3** Click the file you want to play, then click **Open**.
- 4 Play the file by clicking ► (play), then stop playing the file by clicking (stop).



For more information about playing audio and video using the Windows Media Player in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **Media Player** in the HelpSpot **Search** box Search , then click the arrow.

Using the optional diskette drive

The diskette drive uses 3.5-inch diskettes (sometimes called *floppy disks*). Diskettes are useful for storing files or transferring files to another computer.




Do not expose diskettes to water or magnetic fields. Exposure could damage the data on the diskette.

Important



Your notebook comes with either a built-in diskette drive or a built-in memory card reader. If your notebook has a built-in memory card reader and you need to use a diskette drive, Gateway recommends purchasing a USB diskette drive. To order a USB diskette drive, visit the Accessory Store at <u>accessories.gateway.com</u>.

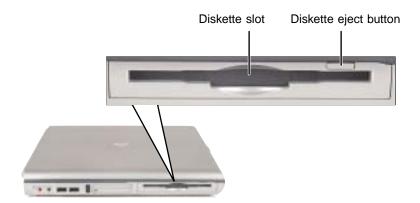



To use a diskette:

- **1** Insert the diskette into the diskette drive with the label facing up.
- **2** To access a file on the diskette in Windows XP, click **Start**, then click **My Computer**. Double-click the drive letter (for example, the A: drive), then double-click the file name.

- OR -

To access a file on the diskette in Windows 2000, double-click the **My Computer** icon, the drive letter (for example, the A: drive), then double-click the file name.

3 To remove the diskette, make sure that the diskette status indicator is off (see "Status indicators" on page 22), then press the diskette eject button.



Using the CD or DVD drive


You can use your computer to enjoy a wide variety of multimedia features.

Identifying drive types

Your Gateway computer contains one of the following drive types. Look on the front of the drive for one of the following logos:

CD drive		Use a CD drive for installing programs, playing audio CDs, and accessing data. You cannot use this drive to create CDs or DVDs or play DVDs.
DVD drive	ROM	Use a DVD drive for installing programs, playing audio CDs, playing DVDs, and accessing data. You cannot use this drive to create CDs or DVDs.
Combination DVD/CD-RW drive	Recordable Rewritable	Use a combination DVD/CD-RW drive for installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to CD-R or CD-RW discs. You cannot use this drive to create DVDs. For more information, see "Using a recordable drive" on page 104.

Inserting a CD or DVD

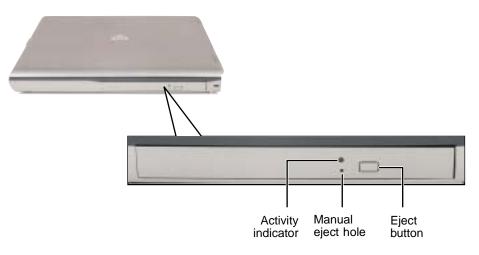

Important



Some music CDs have copy protection software. You may not be able to play these CDs on your computer.

To insert a CD or DVD:

- **1** Press the eject button on the CD or DVD drive. After the tray opens slightly, pull the disc tray completely open.
- **2** Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.

Important



When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

3 Push the tray in until it is closed.



Listening to CDs

You can use the CD or DVD drive on your computer to listen to music CDs.



Some music CDs have copy protection software. You may not be able to play these CDs on your computer.

Listening to CDs in Windows XP

Use the Windows Media Player to listen to CDs in Windows XP. For more information about the using the Windows Media Player, click Help. You can also use MusicMatch to listen to CDs. For more information, see "Using MusicMatch" on page 94.




To play a CD:

- 1 Insert a CD into the CD or DVD drive.
- **2** If a dialog box opens with a list of CD players, click **Windows Media Player**. The Windows Media Player opens.

- OR -

If a dialog box does not open with a list of CD players, click **Start**, **All Programs**, then click **Windows Media Player**. The Windows Media Player opens.

3 When the media player opens, $click \triangleright (play)$.

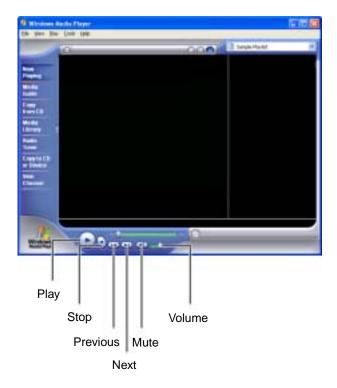

If you do not hear sound or you want to change the volume, see "Adjusting the volume in Windows XP" on page 78.



For more information about playing CDs in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **playing CDs** in the HelpSpot **Search** box search **(1)**, then click the arrow.

Listening to CDs in Windows 2000

Use the Windows CD Player to play an audio CD. You can also use MusicMatch to listen to CDs. For more information, see "Using MusicMatch" on page 94.



To play a CD:

Insert a CD into the CD or DVD drive. The CD Player opens and the CD plays.

- OR -

If the CD does not start playing automatically, click **Start**, **Programs**, **Accessories**, **Entertainment**, then click **CD Player**. When the CD Player opens, click ▶ (play).



If you do not hear sound or you want to change the volume, see "Adjusting the volume in Windows 2000" on page 81.



Using MusicMatch

Using MusicMatch[™], you can:

- Play music CDs
- Create MP3 music files from your music CDs
- Edit music track information
- Use your music files to build a music library
- Listen to Internet Radio

For more information on using MusicMatch, see its online help.

Playing CDs

You can use the MusicMatch program to play music CDs.

Important



Some music CDs have copy protection software. You may not be able to play these CDs on your computer.

To play a music CD in Windows XP:

- **1** To have MusicMatch automatically list the album, artist, and track names of your CD, connect to the Internet before inserting your CD.
- **2** Insert the music CD into the CD or DVD drive on your computer. The *Audio CD* dialog box opens.

Audio CD (D:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Play Audio CD using Windows: Media Player
Play Audio CD using MUSICMATCH Jukebox
Open folder to view file: using Windows Explorer
S Take no action
Always do the selected action
OK. Cancel

3 Click **Play Audio CD using MUSICMATCH Jukebox**, then click **OK**. MusicMatch opens, the CD begins playing, and the names of the music tracks appear in the playlist area.







To play a music CD in Windows 2000:

- **1** To have MusicMatch automatically list the album, artist, and track names of your CD, connect to the Internet before inserting your CD.
- **2** Double-click the **musicmatch JUKEBOX** icon on your desktop. MusicMatch opens.
- **3** Insert the music CD into the CD or DVD drive on your computer, then click the **CD** tab in the *MusicMatch* window. The names of the music tracks appear in the playlist area.







Creating MP3 music files

Using MusicMatch, you can copy the tracks from a music CD to your computer's hard drive as MP3 files. *MP3* (MPEG Layer 3) is a standard for digitally compressing high-fidelity music into compact files without noticeably sacrificing quality. MP3 files end in the file extension **.MP3**.

Important



Some music CDs have copy protection software. You cannot copy tracks from these CDs.

To create MP3 files:

1 To have MusicMatch automatically list the album, artist, and track names of your CD, then use that information for naming and storing your MP3 files, connect to the Internet before inserting your CD.

2 Insert a music CD into your CD or DVD drive.

3 If an *Audio CD* dialog box opens, click **Play Audio CD** using **MUSICMATCH Jukebox**, then click **OK**. The *MusicMatch* window opens.

- OR -

If a dialog box does not open, click **Start**, **All Programs**, **MusicMatch**, then click **MusicMatch** Jukebox. The *MusicMatch* window opens.



- **4** If the CD is playing, click **Stop**.
- **5** Click **Record**. The *Recorder* window opens.



- **6** Click to clear the check box for any track you do not want to record.
- 7 Click Record.
- 8 When a message appears that tells you the CD drive needs to be configured, click **OK**. A progress bar appears next to each track as it is recorded.

Editing track information

After you add a CD track as an MP3 file to your music library, you can edit the track's information.

To edit track information:

- 1 In MusicMatch, click My Library. The library window opens.
- **2** In the library window, right-click the file, then click **Edit Track Tag(s)**. The *Edit Track Tag(s)* dialog box opens.

Task Elecanet;1	Germal Latos fame 8	and Hare
Jonann Connes - What Dis You What at Microsoft	Teach (198) What Do You West of We	Tack (junter
	Aug. James De	1.5
	April Manufia	Hente Deput Bushey Call
	gen hone	• *
	Pelawon Jimi	
Contraction Contraction	Frig As Re Deep in Dataset Data from Takaset Agence M	
Issifes Flerand Linkse Tapi	Pub E Galacteria and Seta Multi-Olgana Boastery Carlo OK Ca	en of La Mandra Engine Nan of La Mandra Engine coal Asse

- **3** Enter information such as track title, lead artist, album, and genre.
- **4** Click **OK**. The new track information appears in the MusicMatch playlist, music library, and recorder window.



Building a music library

Use MusicMatch to build a music library. You can organize your music tracks by categories, find a track quickly by using the sort features, and add information to a music file.

You can add music tracks to your music library by:

- Creating MP3 files When you create MP3 files from the tracks on your music CD, MusicMatch automatically adds these files to your music library.
- Dragging and Dropping Drag and drop files from Windows Explorer or your desktop to the music library.
- Downloading files from the Internet When you are connected to the Internet, MP3 files that you download are automatically added to your music library.



During the download process, MP3 files may become corrupt. If you are having trouble listening to, or working with, a downloaded file, try downloading the file again.

Changing the music library display settings



To change the music library display settings:

- **1** In MusicMatch, click **Options**, then click **Settings**. The *Settings* window opens.
- **2** Click the Music Library tab.

10000	Pioer 8	ado	Recorde
Music Library	CD Lookup/Corm	ectivity.	Drackey
Alas: Bray dags	to saferys		
Ventry:	Avia .		
Colum 2		~	
Column 2	Gene	30	
Column 4	Tine	2	
Columb.		~	
Colume:		19	
Column 7:		×.	
Prompt for es	Of the D3/25		
Convert tags	shen edding backs with old for	nat tapa	

- **3** Click an arrow button to open a column list, then click the category that you want to display in the column.
- **4** When you have finished selecting categories, click **OK**.



Listening to Internet radio



To listen to an Internet radio station:

1 Connect to the Internet, then open MusicMatch.



2 Click Online Music. The *Radio* window opens.



3 To select one of the MusicMatch Internet radio stations, click **Featured Radio Stations** or **Radio Stations**, the radio station, then click the arrow in the *play this station* box. MusicMatch connects to the station and plays the audio. If you do not see **Featured Radio Stations** or **Radio Stations**, drag the scroll bar on the left.

- OR -

To play another Internet radio station, click **Broadcast Radio**, the appropriate category in the **Broadcast Stations** list, the radio station, then click the arrow in the *play this station* box. MusicMatch connects to the station and plays the audio. If you do not see **Broadcast Radio**, drag the scroll bar on the left.



Using advanced features

You can also use MusicMatch to create your own music CDs and to download MP3 files to your portable MP3 player. For more information, see the MusicMatch online help.

Tips & Tricks



See *Do More With Gateway* for more information about using your computer to play digital music and download music from the Internet. In Windows XP, click **Start**, then click **Do More With Gateway**. If you are in the *Business Solutions* view, click **Consumer Solutions**. Click **Digital Music**.

Playing a DVD

A Digital Versatile Disc (DVD) is similar to a standard CD but has greater data capacity. Because of this increased capacity, full-length movies, several albums of music, or several gigabytes of data can fit on a single disc. If your computer has a DVD drive, you can play DVDs with the InterVideo DVD Player program or Windows Media Player. For more information about playing DVDs, click Help in the DVD player program.

To play a DVD:

- **1** Make sure that the speakers are turned on or headphones are plugged in and that the volume is turned up.
- **2** Turn off your screen saver and standby timers.

3 To play a DVD using InterVideo DVD, click **Start**, **All Programs**, **DVD**, then click **DVD Player**. The InterVideo DVD Player video screen and control panel open.

-OR-

To play a DVD using Windows Media Player in Windows XP, click Start, All Programs, then click Windows Media Player. The Windows Media Player opens.

- OR -

To play a DVD using Windows Media Player in Windows 2000, click Start, Programs, Accessories, Entertainment, then click Windows Media Player. The Windows Media Player opens.

Important



If the InterVideo DVD player is not on your Start menu, or if Windows Media Player cannot play a DVD, you will need to install the InterVideo DVD program. To install the InterVideo program, insert the InterVideo DVD Software disc into your DVD drive and follow the on-screen instructions.

- **4** Insert a DVD into the DVD drive, then click ► (play). The DVD plays.
- **5** To specifically control the DVD or adjust the volume, use the controls in the DVD player. For more information on using the DVD player, see its online help.



Help and Support For more information about playing DVDs in Windows XP, click **Start**, then click **Help and Support**. Type the keyword **playing DVDs** in the HelpSpot **Search**

box Search 3 , then click the arrow.

Using a recordable drive

You can use your DVD/CD-RW drive to create data CDs, music CDs, or copies of CDs. For more information about your drive's capabilities, see "Identifying drive types" on page 89.

Creating data CDs

Use Roxio Easy CD Creator to create **data** CDs. Data CDs are ideal for backing up important files such as tax records, letters, MP3s, digital movies, or photos. For information on creating **music** CDs, see "Creating music CDs" on page 108.

Important

Important



other tasks while creating CDs.

We recommend that you do not use your computer for

If you record copyrighted material on a CD, you need permission from the copyright owner. Otherwise, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, contact your legal advisor.

To create a data CD:

1 Insert a blank, writable CD into your recordable CD drive.

2 If a *CD Drive* dialog box opens, click **Create** a **CD** using Roxio Easy CD Creator, then click **OK**. The *Select a Project* window opens.

- OR -

If a dialog box does not open, click **Start**, **All Programs**, **Roxio Easy CD Creator**, then click **Project Selector**. The *Select a Project* window opens.

■ Easy CD Creator 5 → Select a Project	-:
directCDT-1 Forward a streetCD read, so you can streng files to a CD	
essate CD Lating Windows Explores	Lithiange
Accurate a spheric and presentations are CD comparities format.	eret- etectus
Porxito	Creetin Resp
make a data CD dataCD project	

3 Move your pointer over make a data CD, then click dataCD project. The *Easy CD Creator* window opens.

My Picture	- (D) (D)	100		Bay(DOm	873)
1) tude 1 Total 1 Total 1 Total 1 Total 1 Total 1 Total	See See 50.0 PES Inoge 50.0 PEE Inoge 10.02 PEE Inoge 10.02 PEE Inoge 10.02 PEE Inoge 10.02 PEE Inoge	Topics Modelling Topics Modelling 05/03/2000 /bits / Am 55/03/2000 /bits / Am	540 + 400 540 + 400 645 + 400 845 + 400 845 + 400 641 + 400 641 + 400		
data D	4 3		(
0201042_1767	1990 1912 Avenue 1913 Avenue	Table Transfer 1940 2950 <	1月1日4日 ロール3月1 4日1月1日 1月1日 1月1日 1月1日 1月1日 1月1日 1月1日		
	der sen 10316 mil els 101			NR	ND()

Select Source Files

4 Click the arrow button to open the **Select Source Files** list, then click the drive or folder where the files you want to add to the writable CD are located. If you do not see the folder you want, browse through the folders in the *Source* pane.

5 Click the file you want to record (hold down the **CTRL** or **SHIFT** key when you click to select multiple files) in the *Source* pane, then click **Add**.

Select source lies.		-		
My Picture	- (do) (do)	and and		Hay(DCmater3)
tane -	2.0 700	Date Malfed	ten // Disenses	
#3 tube	50-63 JPCS Inequi	10/23/2000-8181 Am	541 x 480	
Bild of Section	1948 PELinge 1948 PELinge	80423/3000-8-64 AM	640 x 400 640 x 400	
Billion 2	IN CELEBRAT	INTERSOOD BUILD AN	840.5480	
#1910-1 Date	in the presidence	ED (23) 2000 HIEL AN	640 i 400	
a later	At the PES image	#5423/3000 #183 XM	646 - 802	
data DE	447 Bullet	100 000		
Ditant 1/07	1 10	store manhore	record .	
	t Staff Austra, 20 1 Staff Austra, 20 2 Starsong, 2 pp 2 Starsong, 2 pp	WH PMC Image M_2223004 0.4.0.1 SHE SPC Image M_2233004 0.4.0.1 HM SPC Image M_2233004 0.0.0 HM SPC Image M_2233004 0.0.0 HM SPC Image M_2233004 0.0.0 SPG SPG SPG M_2233004 0.0.0 SPG SPG SPG M_2233004 0.0.0	salar Laar Laar Laar Laar	
Pages Tar 19212 (Linear		8 1 - Cl		Net 190

6 After you have added all of your files, click **record**. The *Record CD Setup* dialog box opens.



7 Click Start Recording.

Help and Support



For more information about creating CDs in Windows XP, click Start, then click Help and Support.

Type the keyword creating CDs in the HelpSpot Search box search [151, then click the arrow.

Creating music CDs

Use Roxio Easy CD Creator to create **music** CDs from other music CDs or MP3 files. For information on creating data CDs, see "Creating data CDs" on page 104.



Insert a blank, writable CD into your recordable CD drive.

Tips & Tricks




Most home and car stereos can read CD-R discs, but cannot read CD-RW discs. To make sure that the CD that you create will play on home and car CD players, use a CD-R disc.

2 If a *CD Drive* dialog box opens, click **Create a CD using Roxio Easy CD Creator**, then click **OK**. The *Select a Project* window opens.

- OR -

If a dialog box does not open, click **Start**, **All Programs**, **Roxio Easy CD Creator**, then click **Project Selector**. The *Select a Project* window opens.

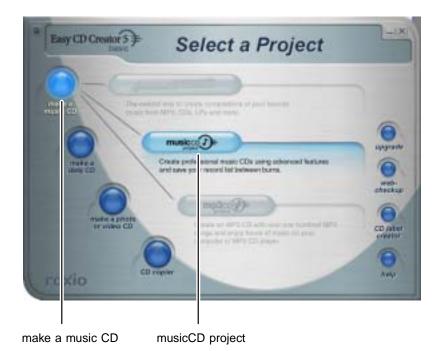

3 Move your pointer over **make a music CD**, then click **musicCD project**. The *Easy CD Creator* window opens.

Select Source File	s
--------------------	---

My Russer	· (00 (D)	100	100				EasyCDOnstor	6
Test -	24.24		-	-	+	Dista		
A Desservices Low	1,204 HB mpillion Apping wat the	Daniale Ge	love.	3004	1	1.00.08		
A Grandselle - The Chantolic	all solution mplifie	Gardalli	The Septema	2000		8-05-08		
A Tanabay - Seatthan	1,760 mE - cp1 Re 4,140 mE - mp1 Re	Mandalay .	Talene Talene	3004		8405-35		
And photos in publication		- And and the state	Intelligence-	1000	+	a cros		
101000000	NOC 1	100	in the second se	1	-			-
nusicco J								
progetted. The		21	2	1	101.00	6		
and the second second	House and In	and a second	-	-	-	2		
Name (2) 316 5 5 5 1 mm Fo			-	-(-	0		_
tentilitie	Dame free	rine .			-	8	Transitions	
Transf. Time	Dame free	and a second		-	-	8	Transitions	
Trank Time	Dame free	rine .		-	-	0	Transitions	
Transit Time	Dame free	rine .			-	6	Transitions	
ten (2) 3 for 10 2 1 mm Fo	Dame free	rine .		-	-		Tanihar	
ten (2) 3 for 10 2 1 mm Fo	Dame free	rine .			-		Tanihar	
ten (2) 3 for 10 2 1 mm Fo	Dame free	rine .		4	-		Transitions	
tere (2) 3 Mar Fo	Dame free	rine .			-		Tankay	
tere (2) 3 Mar Fo	Dame free	rine .		-	-		Tanikas	
Tent Ten 1 Bit Front In	Taking Page	entre	True for A Ball All		-			
Tent Ten 1 Bit Front In	Dame free	entre	True for A Ball All	-	-		Testine	
Tent Time 1 Bit Flore Til Time Tile 1 Bit Flore Tile 1 Dit Flore Tile	Taking Page	entre	True for A Ball All	-	-			

- **4** Click the arrow button to open the **Select Source Files** list, then click the drive or folder where the music files that you want to add to the writable CD are located. If you do not see the folder you want, browse through the folders in the *Source* pane.
- **5** Click the file you want to record (hold down the **CTRL** or **SHIFT** key when you click to select multiple files) in the *Source* pane, then click **Add**.

Tips & Tricks



You can add any combination of music tracks or MP3 files to a music CD project. You can add up to 99 tracks and files, or up to 650 MB (74-minute CD) or 700 MB (80-minute CD) of tracks and files to a music CD project.

Statest Assesse Name								
My Hunt	• (D) (D)		322	-				EasyCDCmotor 5
New r		740	dated	days Tim	-1041	- t-	Dation	
Doose less (se	1,204 viti		Decision (4)		2004	. 4.	8-68-08	
A Sand Say (News Topparty A Gravitativ - The Contribute	1010		Dartiello Gartiello	The Septema	3000	1	1.00.38	
Tavide - Institu	1.100.00		Amatalan	Balance .			8-00-00	
A fear claims - dougt farm	4.74010		Manbalan	linker	3004		1004	
Contract feet for partnership from	1,101.10	mail No.	- indight liter	Intellectors-	1000		a cros	
1000		141 11			1	-		
music 10 / 10			10 BES	Commence of the local division of the local	· ·			
And a state of the			March 1997	the second se	111			
and a second			process of	0	11	Ť		
Non-CD 2Ns Soci Tan Fai A Bar	and and	ter. Fr	process of	-	1	Ť	6	
Tiestie	Lano for		rdua					Tuesday
Track Free 1 Bit - Real Disc	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Tist/m	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Tre 1 Bit Real Day	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Fee	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Fee	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Fee	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Tre 1 Bit Real Day	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Tre 1 Bit Real Day	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test Tre 1 Bit Real Day	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Test free 1 88-Real Day	Rame For	Frank for Harmed	ches andrese ful fine issue	Toose Franch Read Alfon			· · ·	
Trank Free 1 BH - Free Trank 2 Trank Trank Phone Tranks His	Lane Gar Mithil Lege 00002 Cition	Proof. Inc. Names	chen anderen fut free Band desgriftenhanker/dit/Co	Toose Franch Read Alfon			· · ·	
Prest Free 1 BH Read Day 3 Developer Pleas Production Proper Say 155 Not Edmonstrate	Lane Gar Mithil Lege 00002 Cition	Proof. Inc. Names	chen anderen fut free Band desgriftenhanker/dit/Co	Toose Franch Read Alfon			· · ·	
Paper for 157 hrs. (Constanting	Laner For 20201 Lege 00202 Cities	Pages for framed presents and Ter	chen anderen fut free Band desgriftenhanker/dit/Co	Toose Franch Read Alfon			· · ·	
Test Fm 1 Bit Real Der 3 Der Ober Place Tester He Prest Test 157 hot Edmutation	Laner For 20201 Lege 00202 Cities	Pages for framed presents and Ter	chen anderen fut free Band desgriftenhanker/dit/Co	Toose Franch Read Alfon			· · ·	

6 After you have added all of your tracks and files, click **record**. The *Record CD Setup* dialog box opens.



7 Click Start Recording. When the recording is complete, you may see a *Record Complete* dialog box. Select the appropriate option.



For more information about creating CDs in Windows XP, click **Start**, then click **Help and Support**.



Help and

Support

Type the keyword **creating CDs** in the HelpSpot **Search** box Search

Copying CDs

CD Copier can make backup copies of almost any type of CD.

Important



We recommend that you do not use your computer for other tasks while creating a CD.

Important



If you record copyrighted material on a CD, you need permission from the copyright owner. Otherwise, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, contact your legal advisor.


To copy a CD:

- **1** Insert the CD you want to copy into your recordable CD drive.
- **2** If a dialog box opens, click **Take no action**.


3 If a *CD Drive* dialog box opens, click **Create a CD using Roxio Easy CD Creator**, then click **OK**. The *Select a Project* window opens.

- OR -

If a dialog box does not open, click **Start**, **All Programs**, **Roxio Easy CD Creator**, then click **Project Selector**. The *Select a Project* window opens.

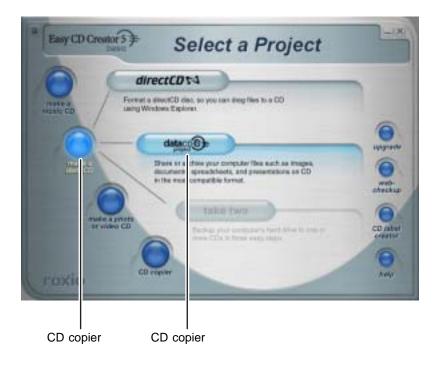

4 Move your pointer over **CD copier**, then click **CD copier**. The *CD Copier* window opens.

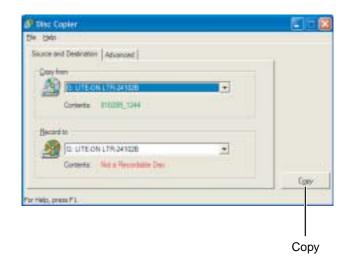

- **5** On the **Source and Destination** tab, click the arrow button to open the **Copy from** list, then click the recordable drive.
- **6** Click the arrow button to open the **Record to** list, then click the recordable drive.
- **7** Click **Copy**. CD Copier copies the information on the source CD to your hard drive, prompts you to insert the blank CD, then copies the information from the hard drive to the blank CD.




Using the optional memory card reader



Important

Your notebook comes with either a built-in diskette drive or a built-in memory card reader. If your notebook has a built-in memory card reader and you need to use a diskette drive, Gateway recommends purchasing a USB diskette drive. To order a USB diskette drive, visit the Accessory Store at <u>accessories.gateway.com</u>.

You can use memory cards to transfer pictures from a digital camera to your computer. You can also use the memory card reader to transfer data between your computer and a device that uses memory cards, such as a PDA, MP3 player, or cellular phone.

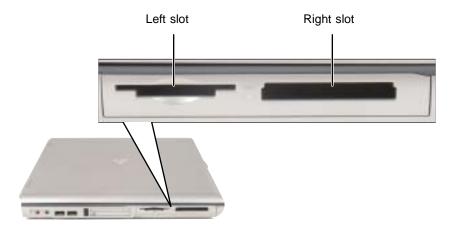

Memory card types

Card Type	Slot
CompactFlash [®]	right
IBM Microdrive TM	right
Memory Stick [®]	left
MultiMediaCard TM	left
Secure Digital TM	left
SmartMedia [™]	left

The memory card reader supports the following card types.

Each slot is assigned a different drive letter (for example, the E: and F: drives) so data can be transferred from one card type to another.

Inserting a memory card

To use a memory card:

1 Insert the memory card into the memory card slot with the label facing up and the arrow on the label pointing towards the notebook.



2 To access a file on the memory card in Windows XP, click **Start**, then click **My Computer**. Double-click the drive letter (for example, the E: drive), then double-click the file name.

- OR -

To access a file on the memory card in Windows 2000, double-click the **My Computer** icon, the drive letter (for example, the E: drive), then double-click the file name.

3 To remove the memory card, make sure that diskette drive status indicator (see "Status indicators" on page 22) is off, then pull the memory card out of the computer.



Important



Do not use the remove hardware sicon in the taskbar to remove the memory card.

Connecting a digital camera

If your digital camera does not use a memory card, or if your notebook does not have a memory card reader, you need to attach your camera to your notebook to transfer your pictures.

To connect a digital camera:

1 Connect one end of the USB cable to your digital camera, and connect the other end of the cable to the USB port on the side of your notebook.



2 Use the program that came with your digital camera to transfer the pictures to your notebook.

-OR-

Your digital camera appears as a drive on your notebook in the *My Computer* window. See "Working with files and folders" on page 51 for information about moving files to your hard drive.



Sending and Receiving Faxes


7

Microsoft Fax lets you send and receive faxes using the modem. Read this chapter to learn how to:

- Install and configure Fax
- Create and send a new fax
- Set up a fax cover page template
- Fax a document you scanned or created in another program
- Receive, view, and print a fax



Installing and configuring Fax

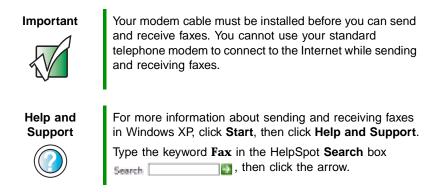

If you are using Windows XP, complete the following instructions for installing and configuring Fax. If you are using Windows 2000, go to "Configuring Fax in Windows 2000" on page 124.

Installing Fax in Windows XP

Microsoft Fax lets you send and receive faxes using your modem. When Windows XP was originally installed on your computer, Fax was not installed. You need to install Fax from your blue *Operating System* CD.



To install Fax:

- **1** Insert the blue *Operating System* CD in your CD or DVD drive.
- **2** If the *Welcome to Microsoft Windows XP* dialog box opens, click **Install optional Windows components**. The Windows Components Wizard opens.

-OR-

If the *Welcome to Microsoft Windows XP* dialog box does not open, click **Start**, then click **Control Panel**. The *Control Panel* window opens. Click/Double-click **Add and Remove Programs**. The *Add or Remove Programs* dialog box opens. Click **Add/Remove Windows Components**. The Windows Components Wizard opens.

- 3 Click Fax Services, then click Next.
- **4** Click **Finish** to exit the Windows Components Wizard.

5 Click **Exit** to close the *Welcome to Microsoft Windows XP* dialog box.

-OR-

Click Close to close the Add or Remove Programs dialog box.



Configuring Fax in Windows XP

Before you send your first fax, you need to set up your user information. Your fax cover sheets and fax headers contain this information, some of which is required by law. The Fax Configuration Wizard opens the first time you try to send a fax.

Important



The first time you run the Fax Configuration Wizard, you may need to provide information in the *Location Information* and the *Phone and Modem Options* dialog boxes.

To configure Microsoft Fax:

- 1 Click Start, All Programs, Accessories, Communications, Fax, then click Fax Console. The Fax Configuration Wizard opens.
- **2** On the *Welcome to Fax Configuration Wizard* screen, click **Next**. The *Sender Information* screen opens.

Enter sende	r information that will app	war on fair cover pages.	4
Vour tyl name:	John Doe	Eex ramber	995-995-9998
E evil address	JDar@aol.com		
18hc	Manager	Cogswy	My Company
Office location.		Qepatrient.	
Home phone	325-335-5454	Wait phone	335-335-3545
ģdānis:	1234 Hy Steel Ny Taves, MS 99999		(
Billing code:			

- **3** Type the information about yourself that you want to appear on your fax cover page, then click **Next**. The *Select Device for Sending or Receiving Faxes* screen opens.
- 4 Click the arrow to open the **Please select the fax device** list, then click the modem you are using to send and receive faxes.
- **5** If you want the modem to automatically answer the telephone in order to receive faxes, click the **Enable Receive** check box.
- 6 Click Next. The Transmitting Subscriber Identification (TSID) screen opens.
- 7 Type the transmitting fax identifier information. This identifier information is required by law. You can type up to 20 characters in the text box. We suggest using eight characters for your identifier name, followed by 12 characters for your telephone number.

Important



Some fax machines cannot use special characters such as hyphens. We suggest using spaces instead of hyphens in telephone and fax numbers.

Erder fre Ta	ubscriber Identification (TSID) enumiting Subscriber Identification (TSID) to be used to identify your a to recipient
	therconitised when you cend a fack and usually concerts of a and a business mene.
ISD:	ABCDEFG 585 585 585

- 8 Click Next.
- **9** If you set up your computer to receive faxes, type the receiving fax identifier information, then click **Next**. This identifier information is required by law and can be the same identifier that you typed in Step 7. The *Routing Options* screen opens.
- **10** If you set up your computer to receive faxes, select a folder you want to store received faxes in and a printer you want to print received faxes on, then click **Next**. The *Configuration Summary* screen opens.
- **11** Click Finish.



Configuring Fax in Windows 2000

Before you send your first fax, you need to set up your user information. Your fax cover sheets and fax headers contain this information, some of which is required by law.

To configure Microsoft Fax:

- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Double-click the **Fax** icon. The *Fax Properties* dialog box opens.
- **3** Click the User Information tab.
- **4** Type the information about yourself that you want to appear on the fax cover page.
- **5** Click the Advanced Options tab.
- 6 Click Open Fax Service Management Console. The *Fax Service Management* window opens.
- **7** Click **Devices** in the left column.
- **8** Double-click the name of your modem. The *Modem Properties* dialog box opens.
- 9 Click Enable send.
- **10** Type the transmitting fax identifier information. This identifier information is required by law. You can type up to 20 characters in the text box. We suggest using eight characters for your identifier name, followed by 12 characters for your telephone number.

Important



Some fax machines cannot use special characters such as hyphens. We suggest using spaces instead of hyphens in telephone and fax numbers.

11 If you want to receive faxes, click **Enable receive**.

-OR-

If you do not want to receive faxes, go to Step 14.

- **12** Type the receiving fax identifier information. This identifier information is required by law and can be the same identifier that you typed in Step 10.
- **13** Click the **Received Faxes** tab and select a folder you want to store received faxes in.
- 14 Click OK.
- **15** Click the **X** in the top-right corner to close the *Fax Service Management* window.
- 16 Click OK.



Sending a simple fax

You can use the Send Fax Wizard to send a simple one-page fax to one or more recipients.



To send a simple fax:

1 In Windows XP, click Start, All Programs, Accessories, Communications, Fax, then click Send a Fax. The Send Fax Wizard opens.

- OR -

In Windows 2000, click Start, Programs, Accessories, Communications, Fax, then click Send Cover Page Fax. The Send Fax Wizard opens.

- **2** On the *Welcome to Fax Configuration Wizard* screen, click **Next**. The *Recipient Information* screen opens.
- **3** Type the name and fax number of the recipient of your fax.
- **4** If you need to use the area code for your recipient, click **Use dialing rules** to type the full ten-digit fax number.

5 If you want to send your fax to more than one recipient, click Add and type the name and fax number of the next recipient.

æ click Addre	n Boek	to callect a fair recipient.		
In In-		fhite		Addeps Book .
Location	United	(States (T)		
En number (555	1 555-1234		
Use daing	sác	My Location	*	Disingrules.
To send to ma click Add to as	Apple not	ipents, type each recipient's inform opent to the list below.	witten abev	e, and then
Pecipient re		Fax number		êdd
Mary Sue Bo Jes Bob-Jore		+1 (555) 455-5458 +1 (555) 455-5678	- 10	Eenove
				Ea

- **6** When you have added all your recipients, click **Next**. The *Preparing the Cover Page* screen opens.
- 7 Click the arrow to open the **Cover page template**, then click the cover page template you want to use.
- **8** Type the subject text in the **Subject line** area.
- **9** Type the message text in the **Note** area, then click **Next**. The *Schedule* screen opens.
- **10** Select when you want to send the fax and a priority for the fax, then click **Next**. The *Completing the Send Fax Wizard* screen opens.
- **11** Click Finish.

126

Setting up your cover page template

You can create your own cover page template that you can use in place of the cover page templates that Microsoft Fax provides for you. To create a cover page template, you use the Fax Cover Page Editor. On this template, you insert information fields that automatically import values you enter in both the Send Fax Wizard and the Fax Configuration Wizard (Windows XP) or Fax Properties User Information tab (Windows 2000) when you send your fax.

To set up your fax cover page template:

1 In Windows XP, click Start, All Programs, Accessories, Communications, Fax, then click Fax Cover Page Editor. The Cover Page-Fax Cover Page Editor opens. If the *Cover Page Editor Tips* dialog box opens, click OK.

-OR-

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens. Double-click the **Fax** icon. The *Fax Properties* dialog box opens. Click the **Cover Pages** tab. Click **New**. The Cover Page-Fax Cover Page Editor opens.

- **2** If you want to include fields that are imported from either the Send Fax Wizard or the Fax Configuration Wizard (such as To or From), add them to the page by using the **Insert** menu, then move them to the appropriate place on your template. You can also use the Insert menu to include information that is automatically calculated (such as number of pages or date and time sent).
- **3** If you want to include text that always appears on your cover page (such as a letterhead or address), draw a box using the text box tool, type your text inside of it, then move the box to the appropriate place on your template.
- **4** If you want to include a logo that appears on your cover page, copy it to the Windows clipboard, then paste it into the Cover Page Editor and move it to the appropriate place on your template.
- **5** To save your cover page template, click **File**, then click **Save As**. The *Save As* dialog box opens with your personal cover pages folder already in the **Save in** list.

- **6** Type the new cover page template name.
- 7 Click Save.



Faxing from programs

To fax a document directly from most programs:

- **1** Open your document in the program it was created in.
- 2 Click File, then click Print. The Print dialog box opens.
- **3** Click the arrow button to open the Name list, then click the Fax printer.
- 4 Click Print or OK. The Send Fax Wizard opens.
- **5** Complete the wizard by following the instructions in "Sending a simple fax" on page 125.



Faxing a scanned document



- **1** Scan the document using the program for your scanner.
- **2** With the scanned file open, click **File**, then click **Print**. The *Print* dialog box opens.
- **3** Click the arrow button to open the Name list, then click the Fax printer.
- **4** Click **Print** or **OK**. The Send Fax Wizard opens.
- **5** Complete the wizard by following the instructions in "Sending a simple fax" on page 125.



Receiving and viewing a fax



- 1 Click Start, All Programs, Accessories, Communications, Fax, then click Fax Console. The Fax Console opens. When the Fax Console is open, it detects incoming faxes and stores them in the Inbox.
- **2** To view a fax, click **Inbox**, then double-click the fax you want to view. The fax viewer opens, where you can view and print the fax.



To receive and view a fax in Windows 2000:

- 1 Click Start, Programs, Accessories, Communications, Fax, then click My Faxes. The My Faxes folder opens.
- **2** To view a fax, double-click **Received Faxes**, then double-click the fax you want to view. The fax viewer opens, where you can view and print the fax.



Canceling a fax

You can cancel a fax that you have set up to send at a time in the future.

To cancel a fax that has not been sent in Windows XP:

- 1 If Fax is not open, click Start, All Programs, Accessories, Communications, Fax, then click Fax Console. The Fax Console opens.
- **2** Click **Outbox**, then right-click the fax you want to cancel.
- **3** Click **Delete** to cancel the fax.
- 4 Click Yes.



To cancel a fax that has not been sent in Windows 2000:

- 1 If Fax is not open, click Start, Programs, Accessories, Communications, Fax, then click Fax Queue. The Fax Queue opens.
- **2** Right-click the fax you want to cancel.
- **3** Click Cancel.



Automatically retry sending a fax in Windows XP

You can set up Fax so it continues to try sending your fax if the receiving fax machine is busy.

Important



Fax is automatically set up to retry three times at ten minute intervals.

To automatically retry sending a fax in Windows XP:

- 1 Click Start, then click Control Panel. The Control Panel window opens.
- **2** If your Control Panel is in Category View, click **Printers and Other Hardware**. Click **View installed printers or fax printers**. The *Printers and Faxes* window opens.

-OR-

If your Control Panel is in Classic View, double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.

- **3** Right-click **Fax**, then click **Properties**. The *Fax Properties* dialog box opens.
- **4** Click the **Devices** tab, then click **Properties**. The *Modem* dialog box opens.
- **5** Specify the number of retries and the amount of time between retries.

6 Click OK.



Automatically cancelling a fax in Windows XP

If your computer tried to send a fax and failed to connect to a fax machine, you can automatically cancel a failed fax.

To automatically cancel a failed fax in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens.
- **2** If your Control Panel is in Category View, click **Printers and Other Hardware**. Click **View installed printers or fax printers**. The *Printers and Faxes* window opens.

-OR-

If your Control Panel is in Classic View, double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.

- **3** Right-click **Fax**, then click **Properties**. The *Fax Properties* dialog box opens.
- **4** Click the **Devices** tab, then click **Properties**. The *Modem* dialog box opens.
- **5** Click the **Cleanup** tab.
- 6 Click to select the Automatically delete failed faxes after check box and specify the number of days.
- 7 Click OK.



Chapter 7: Sending and Receiving Faxes

Managing Power

While your notebook is running on battery power, you should manage power consumption to get the most use out of the battery. Read this chapter to learn how to:

- Check and recharge the battery
- Recalibrate the battery
- Change batteries
- Extend the life of the battery by conserving battery power and using alternate power sources
- Change power-saving settings



8

Monitoring the battery charge

Closely monitor the battery charge. When the battery charge gets low, change the battery or connect to AC power immediately to prevent losing any unsaved work.

Monitor the battery charge by:

 Double-clicking the power cord icon battery icon in the taskbar. The *Power Meter* dialog box opens.

Important



If the power cord or battery icon does not appear on the taskbar, click the show hidden icons **(**, button.

- Pressing **F**N+**S**TATUS to view the power status box, which opens in the upper-left corner of the screen. The power status box shows the current power source, the battery charge level, and the power management mode.
- Looking at the battery charge indicator:
 - LED green battery is fully charged.
 - LED orange battery is charging.
 - LED blinking red battery charge is very low.
 - LED solid red battery is malfunctioning.

Important



This LED only lights up when the notebook is connected to AC power. For the location of the battery charge indicator, see "Front" on page 2. Pressing the battery meter buttons on the battery. The battery meter lights indicate the percentage of battery charge remaining.



■ Waiting for a Low Battery warning message to appear.

If your battery charge indicator displays what looks like an inaccurate charge, you may need to recalibrate the battery. For more information, see "Recalibrating the battery" on page 136.

Recharging the battery

The battery recharges while it is installed and your notebook is connected to AC power. While the battery is recharging, the battery charge indicator turns orange and the battery icon in the taskbar has a lightning bolt ||

Important



If the power cord or battery icon does not appear on the taskbar, click the show hidden icons **(c)** button.

Recalibrating the battery

If your notebook unexpectedly goes into Standby mode while you are using it but the battery charge is not low, you may need to recalibrate your battery. You should also recalibrate the battery periodically to maintain the accuracy of the battery gauge.

To recalibrate the battery:

- **1** Connect the AC adapter, then turn on your notebook.
- **2** As soon as it starts and you see a startup screen, press **F2**. The BIOS Setup utility opens.
- **3** Open the Advanced menu.
- **4** Highlight **Battery Auto Learning**, then select **Enabled** by pressing the spacebar.
- **5** Open the **Exit** menu, then highlight **Exit Saving Changes** and press **ENTER**.
- 6 Select Yes, then press ENTER.

The battery recalibration process begins and a screen opens showing you the progress. The entire process will take several hours.

Important



Do not interrupt the battery recalibration process. If recalibration is interrupted, you must start the process over again.

When the recalibration has finished, the message "Press [Esc] key to exit" appears.

7 Press **Esc**. The battery charge indicator now displays an accurate battery charge. If the battery charge indicator does not show an accurate charge, contact Gateway Technical Support.



Changing batteries

If your notebook is plugged into an AC outlet, you can change the battery while the notebook is turned on. If your notebook is not plugged into an AC outlet, you must turn the notebook off while changing the battery.



Danger of explosion if battery is incorrectly replaced.

Replace only with a Gateway 400VTX battery. Discard used batteries according to the manufacturer's instructions.

The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used battery promptly. Keep away from children.

Replacing the battery


To replace the main battery:

1 If your notebook is on and is plugged into an AC outlet, go to Step 2.

-OR-

If your notebook is on and is not plugged into an AC outlet, save your work and turn off the notebook.

- **2** Close the LCD panel.
- **3** Turn your notebook over so the bottom is facing up.

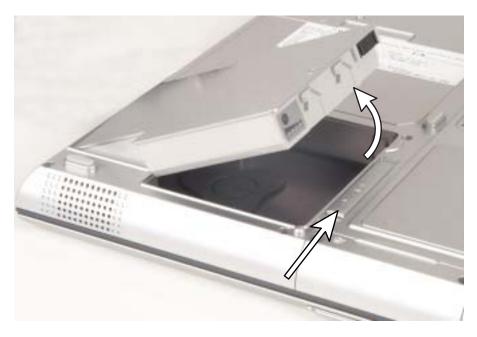

4 Slide the battery release latch and lift the battery out of the bay.

- **5** Place a recharged battery into the bay and press down until it snaps into place.
- **6** Turn your notebook over.
- **7** Open the LCD panel and press the power button.

Extending battery life

Conserving battery power

While using the battery to power your notebook, conserve power by:

- Dimming the display as low as is comfortable.
- Removing PC Cards and IBM Microdrive cards when you do not need them. Many PC Cards and Microdrive cards use a small amount of power while inserted, even if they are not being used.
- Modifying the power management settings for maximum power savings.
 For more information, see "Changing power settings" on page 141.
- Closing the LCD panel to turn off the display while you are not using your notebook. The display stays off until you open the panel again.
- Using Hibernate mode for maximum power savings while your notebook is not in use. For more information, see "Activating and using Hibernate mode" on page 145.
- Using the CD, DVD, or recordable drive only when necessary. These drives use a large amount of power.
- Recharging the battery often, taking an extra battery, and fully recharging the batteries before traveling. For more information, see "Recharging the battery" on page 135 and "Changing batteries" on page 137.

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- If traveling internationally, take electrical adapters. Save the battery for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.
- If you will have access to an EmPower[™] in-flight power receptacle or an automobile cigarette lighter, use an airplane/automobile power adapter or power inverter. Save the battery for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your notebook's battery:

- *Standby* while your notebook is in Standby, it switches to a low power state where devices, such as the display and drives, turn off.
- Hibernate (also called save to disk) writes all current memory (RAM) information to the hard drive, then turns your notebook completely off. The next time you turn on your notebook, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode. For more information on using Hibernate mode, see "Activating and using Hibernate mode" on page 145.

Using power saving modes

Always save your work before using Standby mode. In Standby mode, your notebook reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

When in Hibernate mode, your computer saves all memory information to the hard drive, then turns the power completely off.

If your computer is	and you want to	then
On	Enter Standby mode	Press FN+STANDBY . -OR- Close the LCD panel.
On	Enter Hibernate mode (must be activated)	In Windows XP, click Start , then click Turn Off Computer . Press and hold SHIFT , then click Hibernate . - OR - In Windows 2000, click Start , then click Shut Down . Click the arrow button to open the What do you want your computer to do list, then click Hibernate . Click OK .
In Standby or Hibernate mode	Exit Standby or Hibernate mode	Press the power button.

Changing power settings

You can change the function of the power button, Standby system key, and power-saving timers by changing power settings on your notebook.

You can customize power settings from the Windows Control Panel by selecting power schemes, setting power alarms, adjusting advanced power settings, and activating Hibernate mode.

Power schemes (groups of power settings) let you change power saving options such as when the display or hard drive is automatically turned off. You can select one of the defined power schemes or create a custom power scheme. In Windows XP, power schemes also set the speed of an Intel[®] SpeedStep[™]-equipped processor. For more information, see "Changing SpeedStep settings" on page 147.

Alarms can alert you when the battery charge is low.

Advanced power settings let you assign different power saving modes to the power button and Standby system key. You can also select which power saving mode is activated when you close the LCD panel.

Changing the power scheme



To change the power scheme:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Performance and Maintenance.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

2 Click/Double-click the **Power Options** or **Power Management** icon. The *Power Options Properties* dialog box opens.


	Power Meter	4dvank	oed Hibewate	
	wer scheree with 8 Note that change			
Ite selected	scheme			
Sever schemes				
Partable Legrop				
	0	jove	At. Dele	te .
		_		
Settings for Portable/			Runnage	
When computer is	C- Photed	- C		
when computer is	S PLoped	*	U tateres	Υ.
when computer is: Furn off gionitos	Atler 15 mins	*		
	30	* ×	U tateres	-
l um oll genitor	Alter 15 mins	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Wher 3 mins	

3 Click the arrow button to open the **Power Schemes** list, then click the power scheme you want.

- OR -

Set the timers, then save your custom power scheme by clicking **Save As** and typing a name for the scheme.

4 Click OK.

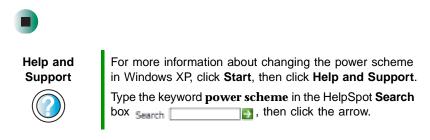

Changing alarm options



To change the alarm options:

- 1 In Windows XP, click Start, then click Control Panel. The Control Panel window opens. If your Control Panel is in Category View, click Performance and Maintenance.
 - OR -

In Windows 2000, click Start, Settings, then click Control Panel. The Control Panel window opens.

- 2 Click/Double-click the **Power Options** or **Power Management** icon. The *Power* Options Properties dialog box opens.
- **3** Click the Alarms tab.

Power Schewes Alarve	Power Meter J	Advanced Hibewate	
Law below data			103
Alarg Action.	Action Action Run Program	Text No.action None	
Critical balany share Activate gritical ba	itery alam when p	over lovel toacher:	3% 1005
Alaga Action] Notification Action Run Program	Text Stand by Note	

- **4** Adjust the alarm settings.
- 5 Click OK.



Help and Support



For more information about changing the alarm options in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **alarm options** in the HelpSpot **Search** box Search **[1]**, then click the arrow.

Changing advanced settings

To change advanced power management settings:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Performance and Maintenance.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

- **2** Click/Double-click the **Power Options** or **Power Management** icon. The *Power Options Properties* dialog box opens.
- **3** Click the **Advanced** tab.

ower Optims Properties	?
Power Schemes Alams Power Meter Advanced Hibemate	
Select the power saving settings you want to use.	
Always show icon on the taskbar	
Doupt for password when computer resumes how standby	
Power battors	
Whyn1 peecs the power bulker on my computer	
Hbenale	1
When I prevo the sleep button on my computer:	
Stand by	×
DK Carcel	1000

- **4** Click the arrow button to open a **Power buttons** list, then click the power setting mode you want to use.
- 5 Click OK.

Help and Support	For more information about changing the power management settings in Windows XP, click Start , then click Help and Support .
	Type the keyword power management in the HelpSpot Search box Search , then click the arrow.

Activating and using Hibernate mode



To activate Hibernate mode:

1 In Windows XP, click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance** and **Maintenance**.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

2 Click/Double-click the Power Options or Power Management icon. The *Power Options Properties* dialog box opens.

3 Click the **Hibernate** tab.

0]	When your computer hibemates, it stores whatever it has in memory on your hard dol, and then shuts down. When your computer conest sub of hibemates, it setures to its previous state
Hber	
Etn	able [jibernation.
Diek.s	pace for Nitemation
	lok space 15.025 MB
Create o	pace required to hibernate: 120 HB

4 Click the Enable hibernation check box, then click Apply. *Hibernate* mode is now an option you can select on the Advanced tab in the Power Options Properties dialog box and in the *Turn Off Computer* or *Shut Down Windows* dialog box.



To use Hibernate mode:

■ As an automatic power savings mode:

Open the *Power Options Properties* dialog box, then click the **Power Schemes** tab. Click the arrow button to open a **System hibernates** list, then click the time you want to use.

- OR -

Open the *Power Options Properties* dialog box, then click the **Advanced** tab. Hibernate is now an option in the **Power buttons** lists.

■ As a manually-selected power savings mode:

In Windows XP, click Start, then click Turn Off Computer. Press and hold SHIFT, then click Hibernate.

- OR -

In Windows 2000, click **Start**, then click **Shut Down**. Click the arrow button to open the **What do you want your computer to do** list, then click **Hibernate**. Click **OK**.





For more information about using Hibernate mode in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **hibernate** in the HelpSpot **Search** box Search ______, then click the arrow.

Changing SpeedStep settings

The processor installed in your notebook may use $Intel^{\circledast}$ SpeedStepTM technology to conserve battery power. A SpeedStep-equipped processor can change its operating speed according to the power source. Your notebook's default settings operate the processor at full speed while connected to AC power and at reduced speed (which uses less power) while using battery power.

If you are using Windows XP, you can modify the Intel SpeedStep settings by the power scheme you select. For more information, see "Changing power settings" on page 141. If you are using Windows 2000, you can change the SpeedStep settings using the Intel SpeedStep technology tab.

To change SpeedStep settings in Windows 2000:

- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Double-click the **Power Management** icon. The *Power Options Properties* dialog box opens.

3 Click the Intel SpeedStep technology tab.

	Advance
Hibertale IntelP() SpeedStep(7	wit secondedly
Intel SpeedStep technology options	
Vutonalizally change performance when the power source changes	int _{el}
Adv me before automatically changing performance.	
When computer is	
· · · · · · · · · · · · · · · · · · ·	
Burning on batteries	
Bakey Optimized Performance - (Recommended)	2
2 Plaget #	
Maximum Performance - (Recommended)	
Current Setting: Maximum Performance	
	Advanced .

4 Change any of the following settings:

- To run the processor at full speed regardless of the power source, click the arrow button to open the Running on batteries list, then click Maximum Performance.
- To run the processor at reduced speed (using less power) regardless of the power source, click the arrow button to open the Plugged in list, then click Battery Optimized Performance.
- To turn off the SpeedStep technology control, click the Advanced tab, click the Disable Intel SpeedStep technology control check box, then click Apply.
- To remove the SpeedStep icon from the taskbar, click the Advanced tab, click the Remove icon from taskbar check box, then click Apply.
- 5 Click OK.





9

These tips can make traveling with your notebook more convenient and trouble-free. Read this chapter to learn about:

- Using the modem
- Using your radio frequency wireless connections
- Transferring files
- Protecting your notebook from loss and theft
- Managing your notebook's power efficiently

Tips & Tricks



To access the contents of this guide while you are traveling, click **Start**, **All Programs**, then click **Gateway Utilities**. You can also download an electronic copy from <u>www.gateway.com/support/manlib/</u>.

Travel Tips



Modem

- Take a telephone cord to connect the modem to telephone jacks. If you are traveling internationally, take telephone jack adapters or an acoustic handset coupler.
- Take a telephone line protector.
- Take a telephone line tester to check for unsafe lines, especially if you are traveling internationally.
- Take remote access information with you so you can connect to your ISP while outside of your usual calling area. A list of country dialing codes may be especially useful if you are traveling internationally.

Radio frequency wireless connections

- Every country has different restrictions on the use of wireless devices. If your notebook is equipped with a wireless device, check with the local radio approval authorities prior to your trip for any restrictions on the use of a wireless device in the destination country.
- If your notebook came equipped with an internal embedded wireless device, see "Safety, Regulatory, and Legal Information" on page 265 for general wireless regulatory guidelines.
- Wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. Wireless Ethernet (IEEE 802.11a, also known as WiFi5, and IEEE 802.11b, also known as Wifi) communication devices are examples of devices which use wireless to communicate. For instructions on how to turn off your wireless device, see "Turning your wireless Ethernet on or off" on page 183.

Files

- Copy your working files from your desktop computer to your notebook before you travel.
- If you need to access your desktop computer files from your notebook while traveling, set up your desktop computer for remote access. Contact your network administrator for more information about remote access.
- Take extra diskettes or recordable CDs for transferring files between computers and backing up files.

Security

- Get a locking cable for your notebook so you can attach a cable lock and leave your notebook in your hotel room while you are away.
- Always keep your notebook with you while waiting in airports, train stations, or bus terminals. Be ready to claim your notebook as soon as it passes through the x-ray machine in security checkpoints.
- Write down your notebook model number and serial number (see "Identifying your model" on page 10) in case of theft or loss, and keep the information in a safe place. Also, tape your business card or an address label to your notebook and accessories.
- Whoever sits next to you or behind you can see your notebook display. Avoid working with confidential files until you can be sure of privacy.
- Use a startup password to restrict access to your notebook.

Important



Use a password that you can remember, but that is difficult for someone else to guess. The password feature is very secure, with no easy way to recover a forgotten password. If you forget your password, you must return your notebook to Gateway for service. Call Gateway Technical Support for instructions.



- 1 Restart your notebook. As soon as you see a startup screen, press F2. The BIOS Setup utility opens.
- **2** Open the **Security** menu, then highlight **Supervisor Password**, then press **ENTER** and follow the instructions. You must set the supervisor password in order to set the user (startup) password.
- **3** Highlight **User Password**, then press **ENTER** and follow the instructions. This is the password you need to enter at startup.
- 4 Highlight Password on boot, then press ENTER.
- 5 Highlight Enabled, then press ENTER.
- **6** Open the **Exit** menu, highlight **Exit Saving Changes**, then press **ENTER**. When you start your computer, you are prompted to enter the user password you set in Step 3.



Power

- Take your AC power adapter to recharge the battery. If you are traveling internationally, take power plug adapters.
- Take a portable surge protector to protect your notebook from power surges.
- To get the best performance from your notebook, avoid using the battery whenever possible, monitor the battery charge, and use the most efficient power management settings.
 - For information on conserving battery power, see "Conserving battery power" on page 139.
 - For information on using alternate power sources, see "Using alternate power sources" on page 139.
 - For information on monitoring the battery charge, see "Monitoring the battery charge" on page 134.

Additional tips

- If you plan to use several USB peripheral devices, take a portable USB hub to provide additional USB ports.
- Take a network cable if you need to connect to a network. Some hotels provide Internet connectivity only through their networks.
- If your notebook has been exposed to cold temperatures, allow it to warm to room temperature before turning it on.
- Take your *System Restoration CDs* in case you need to install an additional driver or software.

Chapter 9: Travel Tips

Customizing Your Computer

10

This chapter provides information about customizing your computer by changing settings in Windows. Read this chapter to learn how to:

- Change screen and display settings
- Change the background and screen saver
- Adjust the touchpad settings
- Add, change, and switch user accounts in Windows XP



Adjusting the screen and desktop settings

Adjusting the color depth and screen area are two of the most basic display settings you may need to change. You can also adjust settings such as the screen background and screen saver.

Adjusting the color depth

Color depth is the number of colors your screen displays. Various image types require various color depths for optimum appearance. For example, simple color drawings may appear adequately in 256 colors while color photographs need millions of colors to be displayed with optimum quality.

Windows lets you choose from several color depth settings. We recommend that you use the 32-bit True Color setting at all times.

If the color in your images seems "false" or "jumpy," especially after you have played a game or run a video-intensive program, check the color depth setting and return it to 32-bit True Color, if necessary.

To change the color depth:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

2 Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.

3 Click the **Settings** tab.

nulay Properties		1
Themes Decktop Screen Saver /	Appearance Settings	
Orag the monitor icons to match the p	physical anangement of your	monitori.
1 1 Par 1	Terrane and the	
1	2	
	-	
-		_
Doler 1. Data Fie Pavel (1024-768) on i	metRi Montava-GM Graphic	• Cosh •
1. Digital Flat Panel (1024a768) on I		Cont
Planta and a second descent of the second descent of the second descent descen	Color musity	Con •
T. Digital File Parent (1024a/Hill on)		Cont
T Digital Flat Parent/1024a7681 onl Screen incolution Letter	Color savelly [Highers (32:54)	Con •
T. Digital File Parent (1024a/Hill on)	Color savelity Highwat (32 SP)	Con T
T Digital File Parent (1024a768) onl Scenario secolution Large	Ector study Higher (12 SH)	-
T Digital File Parel (1024a768) onl Screen recolution Lens/ More 102M by 708 pixels P	Ector study Higher (12 SH)	e Corte y

- **4** Click the arrow button to open the **Color quality** or **Colors** list, then click the color depth you want.
- **5** To save your changes in Windows XP, click **OK**, then click **Yes**.

- OR -

To save your changes in Windows 2000, click OK, then click OK again.



For more information about adjusting display settings in Windows XP, click **Start**, then click **Help and Support**.



Type the keyword **changing display settings** in the HelpSpot **Search** box Search **1**, then click the arrow.

Adjusting the screen resolution

You can increase the screen resolution to fit more icons on your desktop, or you can decrease the resolution to make reading the display easier. The higher the resolution, the smaller individual components of the screen (such as icons and menu bars) appear.



To adjust the screen resolution:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

- 2 Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.
- **3** Click the **Settings** tab.




4 Drag the **Screen resolution** or **Screen area** slider to the size you prefer.

5 To save your changes in Windows XP, click **OK**, then click **Yes**.

- OR -

To save your changes in Windows 2000, click OK, then click OK again.

Help and Support

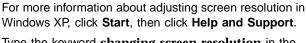

Type the keyword **changing screen resolution** in the HelpSpot **Search** box Search , then click the arrow.

Changing the colors on your Windows desktop

You can change the colors of Windows desktop items, such as the background color and dialog box title bars.



To change desktop colors in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.
- **2** Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.

3 Click the **Appearance** tab.

Inscites Win		
Active Win		
Window Text	Massage Box 🔀	
		*
erindows and butters		
Color scheree		
electron 201 style		Elect

- 4 Click the arrow button to open the **Color scheme** list, click the color scheme you want, then click **OK**. The new colors appear on your desktop.
 - OR -

If you want to create a new color scheme as part of a desktop theme:

- **a** Click Advanced. The Advanced Appearance dialog box opens.
- **b** Click the arrow button to open the **Item** list, then click the item you want to change.
- **C** Change the color or font settings for the item.
- **d** Click **OK**, then click the **Themes** tab.
- **e** Click **Save As**, type a name for the new theme, then click **OK** twice. The new colors appear on your desktop.

To change desktop colors in Windows 2000:

- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Double-click the **Display** icon. The *Display Properties* dialog box opens.
- **3** Click the **Appearance** tab.

Logitre: modes	
Active Window	_1012
Normal Dructers Set	lected
Window Text	f
-	
Mennage Box	×
Message Text	
cherne.	
Windows Standard	* Saye As. Debte
er:	Site Colori Crite
Denktop	
Deaktop ont	

4 If you want to apply one of Windows' color schemes, click the arrow button to open the **Scheme** list, click the scheme you want, then click **OK**. The new scheme appears on your desktop.

- OR -

If you want to create a new color scheme:

- **a** Click the arrow button to open the **Item** list, then click the item you want to change.
- **b** Change the color or font settings for the item.
- **C** Click **Save As**, type a name for the new scheme, then click **OK**.
- **d** Click **OK** again. The new colors appear on your desktop.

Changing the desktop background

In Windows XP, you can change the Windows desktop background picture. Windows provides several backgrounds, or you can use pictures that you have created or retrieved from other sources.

In Windows 2000, you can change the Windows desktop background to a picture or an HTML document. Windows provides several background pictures. You can also use pictures or HTML documents that you have created or retrieved from other sources.

To change the desktop background in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.
- 2 Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.
- **3** Click the **Desktop** tab.



4 Click a background picture in the **Background** list.

- OR -

Click Browse to select a background picture from another location.

- **5** If you want the picture you chose to cover the entire screen, click the arrow button to open the **Position** list, then click **Stretch** or **Tile**.
- **6** If the picture you chose does not cover the entire screen and you did not choose to stretch or tile the image in Step 5, you can change the solid color behind the picture by clicking the arrow button to open the **Color** list, then clicking a color.
- 7 Click OK.

Help and Support	For more information about changing the desktop background in Windows XP, click Start , then click Help and Support .
	Type the keyword changing desktop background in the HelpSpot Search box Search , then click the arrow.

To change the desktop background in Windows 2000:

- 1 Click Start, Settings, then click Control Panel. The *Control Panel* window opens.
- **2** Double-click the **Display** icon. The *Display Properties* dialog box opens.

3 Click the **Background** tab.

	laver Appearance Web	Eller	ts Sefings
		1	
		Constantion	
The second se	picture or HTML document	at water	and share the state of the stat
Select a background (Lance Blue Lace 16 Daing Point Division Division	sicture of HTML document	-	Banie.

4 Click a background picture in the Select a background picture or HTML document as Wallpaper list.

- OR -

Click Browse to select a background picture from another location.

- **5** If you want the picture you chose to cover the entire screen, click the arrow button to open the **Picture Display** list, then click **Tile**.
- **6** If the picture you chose does not cover the entire screen and you did not choose to tile the image in Step 5, you can change the solid color behind the picture by clicking **Pattern**, clicking a pattern in the **Pattern** list, then clicking **OK**.
- 7 Click OK.



Selecting a screen saver

You can use a screen saver to keep others from viewing your display while you are away from your computer. Windows supplies a variety of screen savers that you can choose from, and many more are available from the Internet and as commercial products.



To select a screen saver:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Appearance and Themes.


- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

- 2 Click/Double-click the **Display** icon. The *Display Properties* dialog box opens.
- **3** Click the Screen Saver tab.



- **4** Click the arrow button to open the **Screen Saver** list, then click the screen saver you want. Windows previews the screen saver.
- **5** If you want to customize the screen saver, click **Settings**, then make your changes. If the Settings button is not available, you cannot customize the screen saver you selected.
- **6** In Windows XP, if you want to display the Welcome (Login) screen whenever you exit the screen saver, click the **On resume, display Welcome screen** check box.
- **7** If you want to change the time before the screen saver is activated, click the up or down arrows next to the **Wait** box.
- 8 Click OK.

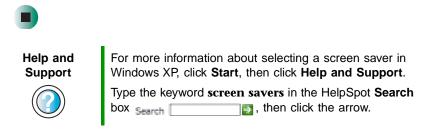

Changing the touchpad settings

You can adjust the double-click speed, pointer speed, left-hand or right-hand configuration, and other touchpad settings.

To change your touchpad settings:

1 In Windows XP, click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

2 Click/Double-click the **Mouse** icon. The *Mouse Properties* dialog box opens.

Mouse Properties		
Buttons Pointers Pointer Options Hardware & Advanced Features		
Button configuration		
Switch primary and secondary buttons		
Select this check box to make the button on the ight the one you use for primary functions such as selecting and dragging.		
Double-click speed		
Double-click the folder to test your setting. If the folder does not open or close, by using a slower setting.		
Speegt Slow Fast		
ClickLock		
Ium on ClickLock Sgtings		
Enables you to highlight or drag without holding down the mouse button. To rest, briefly press the mouse button. To release, click the mouse button again.		
OK Carcel Aroly		

3 Click the Advanced Features tab, then click Settings to change your touchpad settings.



- **4** To modify a touchpad setting, click the **+** in front of a setting, then modify the setting.
- **5** To assign a function to the rocker switch, click the **+** in front of **Buttons**, click the up or down button, then click the action you want.
- **6** Click **OK** to save changes.



For more information about changing mouse settings in Windows XP, click **Start**, then click **Help and Support**. Type the keyword **mouse settings** in the HelpSpot **Search** box **Search [1]**, then click the arrow.

Adding and modifying user accounts

In Windows XP, you can create and customize a user account for each person who uses your computer. You can also *switch* (change) user accounts without turning off your computer.

User account tips

- If you want to create an account for someone, but you do not want that user to have full access to your computer, be sure to make that account *limited*. Remember that limited accounts may not be able to install some older programs.
- If a program or peripheral device is installed in one account, it may not be available in other accounts. If this happens, install the program or device in the accounts that need it.
- Files created in one account are not accessible from other accounts unless the files are stored in the *Shared Documents* folder. The Shared Documents folder is accessible from all accounts on that computer and from other computers on the network.

To add, delete, or modify user accounts in Windows XP:

- 1 Click Start, then click Control Panel.
- **2** Click/Double-click the **User Accounts** icon. The *User Accounts* window opens.
- **3** Follow the on-screen instructions to add, delete, or modify a user account.



Help and Support



For more information about user accounts in Windows XP, click **Start**, then click **Help and Support**. Type the keyword **user accounts** in the HelpSpot **Search** box Search [1], then click the arrow.



1 Click Start, then click Log Off. The Log Off Windows dialog box opens.

Log Off Windows	
Switch User	200 Dff
	<u>C</u> ancel

- **2** Click **Switch User**. The Windows *Welcome* screen opens.
- **3** Click the user account that you want to use. When you switch between user accounts, any programs that were running for the previous user continue to run.



Networking Your Computer

11

Connecting your home, small office, or home office computers lets you share drives, printers, and a single Internet connection among the connected computers.

Read this chapter to learn about:

- Benefits of using a network in your home, small office, or home office
- Types of network connections
- Purchasing additional network equipment
- Installing and configuring your notebook for Ethernet networking
- Turning wireless Ethernet on and off



Benefits of networking

A network lets you:

- Share a single Internet connection
- Share computer drives
- Share peripheral devices
- Stream audio and video files
- Play multi-player games

Sharing a single Internet connection

Each computer that is connected to the network can share the same broadband connection or modem and telephone line and access the Internet at the same time. This saves on the cost of installing another telephone line for your second computer and paying for a second Internet service provider (ISP) account.



For more information about sharing an Internet connection in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **internet sharing** in the HelpSpot **Search** box search **b**, then click the arrow.

Sharing drives

With a network, you can copy files from computer to computer by copying and pasting or dragging and dropping. You will no longer waste your time transferring files by using diskettes. In addition, you can *map* a drive on a networked computer to another computer, and access the files as if they were located on the hard drive of the computer you are using.

Help and Support



For more information about sharing network drives in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **sharing network drives** in the HelpSpot **Search** box Search 1, then click the arrow.


Sharing peripheral devices

Each computer that is connected to the network can share the same peripheral devices, such as a printer. Select print from the computer you are currently using and your file is automatically printed on your printer no matter where it is located on your network.



Streaming audio and video files

With a network, you can store audio files (such as the popular .MP3 files) and video files on any networked computer, then play them on any of the other computers or devices connected to your network. This process is called *streaming*.

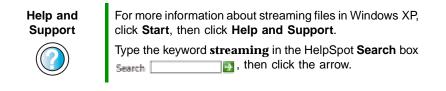

Playing multi-player games

With a home network, you can play multi-player games. Load a game like *Microsoft Midtown Madness 2* on your computers, and in minutes, you and your friends can race in competing cars through the streets of San Francisco.

Help and Support

For more information about playing multi-player games in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **games** or **network games** in the HelpSpot **Search** box search **box**, then click the arrow.

Selecting a network connection

The biggest decision you need to make when creating your network is what type of connection you will use. Gateway supports both wired and wireless Ethernet networks. Use the following criteria as a guide when selecting a network connection.

Wired Ethernet network

Create a wired Ethernet network if:

- You are building a new home or your existing home already has Ethernet cable installed in each room that has a device you want to connect
- You are creating a network in an office or business where network speed is more important than moving about with your computer
- Your computer has an Ethernet jack for connecting to the network

Wireless Ethernet network

Create a wireless Ethernet (IEEE 802.11a or IEEE 802.11b) network if:

- You are looking for an alternative to installing cable for connectivity
- The ability to move about with your computer is as important as network speed
- Your computer has wireless Ethernet for networking

Help and Support



For more information about selecting network connections in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **networks** or **network types** in the HelpSpot **Search** box Search 3 then click the arrow.

Using a wired Ethernet network

A wired Ethernet network consists of two or more computers connected together through an Ethernet cable. This connection type is commonly used in offices around the world and can be used to build computer networks in the home.

Ethernet, Fast Ethernet, or Gigabit Ethernet

Ethernet is available at three different speeds. Standard Ethernet runs at 10 Mbps, Fast Ethernet runs at 100 Mbps, and Gigabit Ethernet runs at 1000 Mbps. Most home networks are built using Standard or Fast Ethernet components. Business networks are typically built using Fast or Gigabit Ethernet components.

To create a wired Ethernet network, you or your electrician must:

■ Install special Ethernet cables in your home or office



Check local code requirements before installing Ethernet cable or other wiring in your home or office. Your municipality may require you to obtain a permit and hire a licensed installer.

- Install an Ethernet card in each of your desktop computers (if your computers do not already have built-in Ethernet jacks)
- Install an Ethernet PC Card in each of your notebooks (if your notebooks do not already have built-in Ethernet jacks)
- Install an Ethernet *router*, *switch*, or *hub*

Tips & Tricks



If you are connecting just two computers, you can eliminate the router, switch, or hub and use a special *crossover* cable.

Example wired Ethernet network

The following is an example of a wired Ethernet network. The network is made up of a router, a cable or DSL modem, your computers, and cables connecting each of these components. The router is the central control point for the network. Attached to the router are all of your computers or Ethernet-ready devices. Also connected to the router is a cable or DSL modem that provides access to the Internet.







To add the ability to access a wireless Ethernet network to your wired Ethernet network, connect an access point to the router, switch, or hub. For more information about accessing a wireless Ethernet, see "Using a wireless Ethernet network" on page 178.

Equipment you need for a wired Ethernet network

For a wired Ethernet network you need:

An Ethernet jack on each desktop computer and notebook.

- OR -

An Ethernet card installed in each desktop computer.

- OR -

An Ethernet PC Card installed in each notebook.

- An Ethernet router. Select a router that gives you the following features:
 - A jack for connecting to a cable or DSL modem.
 - The ability to assign IP addresses to your networked computers dynamically. This prevents intruders from seeing the computers over the Internet.
 - A built-in *firewall* to protect the computers on your network from intruders trying to access your data over the Internet.
 - Built-in switching (with enough ports for all computers and devices on the network) so you will not have to purchase a hub or switch.
- If you did not purchase a router that includes built-in switching or if the router does not have enough ports to attach all your computers, an Ethernet hub or switch with enough ports for all computers and devices in the network.
- Ethernet cable going from each computer to the router, hub, or switch.

Important



For best results, all Ethernet components should be either standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100), or Gigabit Ethernet (1000 Mbps or 10/100/1000). A mixture of components rated at different speeds will result in your network running at the speed of the slowest rated component.

Using a wireless Ethernet network

A wireless Ethernet network is ideal for creating a home or office network or adding mobility to an existing wired Ethernet.



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a and IEEE 802.11b communication devices are examples of devices that provide wireless communication. For instructions to turn wireless Ethernet on and off, see "Turning your wireless Ethernet on or off" on page 183.

Important



If your notebook came equipped with an internal radio frequency wireless device, see "Safety, Regulatory, and Legal Information" on page 265 for general wireless regulatory and safety guidelines. To find out if your notebook has an internal wireless device, check the label (see "Identifying your model" on page 10).

Wireless Ethernet is available at two different speeds. 802.11a wireless Ethernet runs at speeds up to 54 Mbps, or about half the speed of Fast Ethernet. 802.11b wireless Ethernet runs at speeds up to 11 Mbps, or approximately the same speed as standard wired Ethernet. This type of network allows you the freedom to move about your home or office with your notebook. For example, you can take your notebook from your home office to your patio without having an Ethernet jack available.

Important




The speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, floors, and doors.

The two most common types of wireless Ethernet networks are access point and peer-to-peer.

Example access point wireless Ethernet network

By using an *access point*, you can join a wireless Ethernet network and access a wired Ethernet network. An access point also lets you access the Internet.

The following is an example of an access point wireless Ethernet network. The network is made up of an access point, a cable or DSL modem, and your computers. The access point is the central control point for the network. Attached to the access point is the cable or DSL modem that provides access to the Internet. Each of the computers or Ethernet-ready devices communicate with the access point using radio waves. If your computer does not have built-in wireless Ethernet capabilities, you need to add a wireless PCI card (desktop), PC card (notebook), or USB adapter.

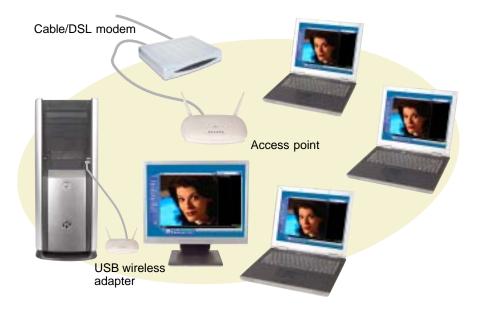

Tips & Tricks



If you want to access a wireless Ethernet network from your wired Ethernet network, connect an access point to the router, switch, or hub. For more information about accessing a wired Ethernet, see "Using a wired Ethernet network" on page 175.

Equipment you need for an access point wireless Ethernet network

For an access point wireless Ethernet network you need:

A wireless Ethernet PCI card installed in each desktop computer

- OR -

A wireless Ethernet USB adapter attached to each desktop computer

- OR -

A notebook with wireless Ethernet built-in

- OR -

A wireless Ethernet PC Card installed in each notebook that does not have wireless Ethernet built-in

■ A wireless Ethernet access point to connect your wireless Ethernet network to the Internet or a wired Ethernet network

Important



IEEE 802.11a and IEEE 802.11b use different radio frequencies. All wireless Ethernet components should use the same frequency. A combination of IEEE 802.11a and IEEE 802.11b components will not work. Some wireless devices can broadcast and receive signals on both frequencies.

Example peer-to-peer wireless Ethernet network

Use a peer-to-peer (also known as ad hoc) wireless Ethernet network if you are setting up or joining a temporary computer-to-computer network. This type of network does not include access into a wired network or the Internet. You can create this type of network to quickly move files from one computer to another.



Equipment you need for a peer-to-peer wireless Ethernet network

For a peer-to-peer wireless Ethernet network you need:

A wireless Ethernet PCI card installed in each desktop computer

- OR -

A wireless Ethernet USB adapter attached to each desktop computer

- OR -

A notebook with wireless Ethernet built-in

- OR -

A wireless Ethernet PC Card installed in each notebook that does not have wireless Ethernet built-in

For more information

For more information about purchasing equipment for your home or office Ethernet network, discuss your particular needs with your Gateway store representative. In addition, several books and Internet sites are dedicated to networking. See these sources for more information about networking your home or office with wired or wireless Ethernet.



For more information about networking in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **networking** in the HelpSpot **Search** box Search **1**, then click the arrow.

Using your notebook on a network

Installing and configuring your notebook for Ethernet networking

A guide in .PDF format has been included on your hard drive that provides instructions for installing and configuring both wired and wireless Ethernet networking on your notebook. To access this guide, click **Start**, **All Programs**, then click **Gateway Utilities**.

Turning your wireless Ethernet on or off



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a and IEEE 802.11b communication devices are examples of devices that provide wireless communication.

To turn wireless Ethernet on or off in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Network and Internet Connections. The *Network and Internet Connections* window opens.
- **2** Click/Double-click **Network Connections**. The *Network Connections* window opens.
- **3** Right-click Wireless Network Connection, then click Enable to turn on wireless Ethernet or click Disable to turn off wireless Ethernet.





- 1 Right-click the ORiNOCO Client Manager icon ion the taskbar. The ORiNOCO Wireless LAN menu opens.
- 2 Click Enable Radio to turn on wireless Ethernet or click Disable Radio to turn off wireless Ethernet.



Moving from Your Old Computer

12

If your new computer is replacing an old computer, you may have personal data files, Internet settings, a printer or other peripheral devices, and other unique computer settings that you want to move from your old computer to your new one. Read this chapter to learn about:

- Using the Windows XP Files and Settings Transfer Wizard
- Transferring Files
- Transferring Internet Settings
- Installing your old printer or scanner
- Installing your old programs




Using the Windows XP Files and Settings Transfer Wizard

If your new computer is running Windows XP, you can move your data files and personal settings, such as display, Internet, and e-mail settings, from your old computer to your new one by using the Files and Settings Transfer Wizard. The wizard also moves specific files or entire folders, such as My Documents, My Pictures, and Favorites.

To open the Files and Settings Transfer Wizard:

 Click Start, All Programs, Accessories, System Tools, then click Files and Settings Transfer Wizard.

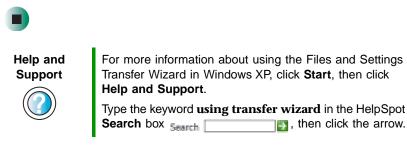

Transferring files

You can manually transfer your personal data files by copying them to removable media, such as a diskette, writable CD, or Zip disk, or by using a home network. For more information, see "Using a recordable drive" on page 104, "Connecting to a wired Ethernet network" on page 33, and "Networking Your Computer" on page 171.

Finding your files

Many programs automatically save your personal data files in the My Documents folder. Look in your old computer's My Documents folder for personal data files. Use Windows Find or Search to locate other personal data files. For more information, see "To find files using Find or Search:" on page 188, or see "Searching for files" on page 58.



To find files in the My Documents folder:

1 In Windows XP, click **Start**, then click **My Documents**. The *My Documents* window opens and displays many of your saved personal data files. Go to Step 4.

- OR -

In Windows 98, Windows Me, or Windows 2000, double-click the **My Computer** icon on the desktop. Go to the next step.

- **2** Double-click the **C**:\ drive icon.
- **3** Double-click the **My Documents** folder. The *My Documents* window opens and displays many of your saved personal data files.
- **4** Copy your personal data files to removable media or to another computer on your network.



You can often identify different data file types by looking at the file's *extension* (the part of the file name following the last period). For example, a document file might have a .DOC extension and a spreadsheet file might have an .XLS extension.

File type	File usually ends in
Documents	.DOC, .TXT, .RTF, .HTM, .HTML, .DOT
Spreadsheets	.XLS, .XLT, .TXT
Pictures	.JPG, .BMP, .GIF, .PDF, .PCT, .TIF, .PNG, .EPS
Movies	.MPEG, .MPG, .AVI, .GIF, .MOV
Sound and Music	.WAV, .CDA, .MP3, .MID, .MIDI, .WMA

To find files using Find or Search:

1 In Windows XP, click **Start**, then click **Search**. The *Search Results* window opens.

- OR -

In Windows 98, Windows Me, or Windows 2000, click Start, Find or Search, then click For Files or Folders. The *Search Results* window opens.

2 Use Windows Find or Search to locate data files by file name or file type. For help on finding files, click **Help**, then click **Help and Support Center** or **Help Topics.** For more information, see "Searching for files" on page 58.



For more information about finding files in Windows XP, click **Start**, then click **Help and Support**.



Support

Type the keyword **searching for files** in the HelpSpot **Search** box **Search i**, click the arrow, then click the **Full-text Search Matches** button.

Transferring Internet settings

You can use different methods to transfer your Internet account from your old computer to your new one.

Setting up your ISP

- If your current Internet service provider (ISP) software came preinstalled on your new computer, run that setup program. If it asks to set up a new account or an existing one, choose to set up an existing account.
- If your current ISP software is not preinstalled on your new computer, locate the original Internet setup program provided by your local ISP, or contact your ISP to see if they have an updated version of their software, and install it on your new computer.
- If you use MSN as your ISP, or if you know your ISP settings, use the Windows Internet Connection Wizard.

To use the Internet Connection Wizard:

- **1** Click Start, All Programs, Accessories, Communications, then click New Connection Wizard. The New Connection wizard opens.
- **2** Configure your Internet settings by following the on-screen instructions.



Help and Support For more information about setting up an Internet connection in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **Internet connection** in the HelpSpot **Search** box _{Search}, then click the arrow.

Transferring your e-mail and address book

See your old e-mail program's online help for information on *exporting* and *importing* e-mail messages and the address book. You can often export all of your old e-mail messages or address book to a diskette, then import them from the diskette into your new computer's e-mail program. You may also want to consider printing the old information or using your old computer to send the e-mail messages to yourself, then using your new computer to retrieve the e-mail messages.

Transferring your Internet shortcuts

You can export and import your old Netscape Navigator bookmarks or Microsoft Internet Explorer favorites. For more information, see your Internet browser program's online help.

Installing your old printer or scanner

Windows may have built-in support for older printers, scanners, or other peripheral devices. This means you do not need any additional software. Newer devices, however, usually require your original software installation CDs or diskettes.

If you have trouble after you install the software for your old devices, you can use System Restore to restore your computer's previous settings.



For information about restoring your computer's previous settings in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **System Restore** in the HelpSpot **Search** box **Search**, then click the arrow.

Installing a USB printer or scanner

USB devices may have special installation instructions. See your USB device's installation guide.

Installing a parallel port printer

You can usually install parallel port printers by following these steps.

To install your old printer:

- **1** Shut down and turn off your computer.
- **2** Connect your parallel port printer.
- **3** Turn on your printer, then turn on your computer.
- **4** If Windows detects your printer, install your printer by following the on-screen instructions. You are finished.

- OR -

If Windows does not detect the printer, go to the next step.

5 In Windows XP, click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers** and **Other Hardware**.

- OR -

In Windows 2000, click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.

- 6 Click/Double-click the Printers and Faxes or Printers icon, then click Add a printer or Add Printer. The Add Printer wizard opens.
- **7** Install your printer by following the on-screen instructions.



Help and Support For more information about installing a printer in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **installing a printer** in the HelpSpot **Search** box Search **[1]**, then click the arrow.

See your peripheral device's user guide for installation information and tips. Because most installation software is periodically updated, you should also check the manufacturer's Web site for software updates.

Installing your old programs

You probably use some programs that did not come installed on your new computer, such as personal finance software, graphics programs, or games.

Spend some time going through your old computer's Start and Programs menus, making note of any programs you want to install on your new computer. Locate your original program installation CDs and installation guides. Your original CDs and guides should contain any serial numbers or product ID keys that may be required for program installation and registration. Remember to check the publisher's Web site for important program updates.

Tips & Tricks



If your new computer comes with a newer version of a program, it is usually better to use the newer version than to reinstall the old one.

If you have trouble after installing your old programs, you can restore your computer's previous settings using System Restore.



For more information about restoring your computer's previous settings in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **System Restore** in the HelpSpot **Search** box Search

Maintaining Your Computer

This chapter provides basic information about maintaining your computer hardware and software. Read this chapter to learn how to:

- Care for your computer
- Create an emergency startup diskette
- Protect your computer from viruses
- Manage hard drive space
- Back up files
- Clean your computer



13

Caring for your computer

To extend the life of your system:

- Be careful not to bump or drop your computer, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your computer, we recommend that you put it in a carrying case.
- Keep diskettes and your computer away from magnetic fields. Magnetic fields can erase data on both diskettes and hard drives.
- Never turn off your computer when the hard drive light is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your computer to extreme temperature changes. The case and LCD panel can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your computer is safest at temperatures that are comfortable for you.
- Keep all liquids away from your computer. When spilled onto computer components, almost any liquid can result in extremely expensive repairs that are not covered under your warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms.

Maintenance task	Immediately after purchase	Monthly	When needed	See
Create an emergency diskette	Х			page 196
Check for viruses		х	Х	page 198
Manage hard drive space			Х	page 201
Clean up hard drives		х	Х	page 202
Scan hard drive for errors		х	Х	page 203
Defragment hard drive		х	Х	page 205
Back up files		х	Х	page 207

Use the following table to set up a regular maintenance schedule.

Maintenance task	Immediately after purchase	Monthly	When needed	See
Recalibrate the battery			Х	page 136
Clean computer case			Х	page 209
Clean keyboard			Х	page 209
Clean computer screen			Х	page 210
Clean mouse			Х	page 210

Creating an emergency startup diskette

An *emergency startup diskette* is a diskette that contains critical information that you need to start your computer if Windows fails to start. You should create a startup diskette as soon as you get your computer.

Important




This procedure uses the optional diskette drive. If you do not have a diskette drive in your computer, you can purchase an external USB diskette drive from the Gateway Accessories Store at <u>accessories.gateway.com</u>.

To create an emergency startup diskette in Windows XP:

- 1 Insert a blank diskette labeled **Startup** into the optional diskette drive.
- 2 Click Start, then click My Computer. The My Computer window opens.
- **3** Right-click **3**¹/₂ **Floppy (A:)**, then click **Format**. The *Format 3*¹/₂ *Floppy (A:)* dialog box opens.

Format 3½ Floppy (A:) 🛛 😰 🔀
Cagacity:
3.5", 1.44MB, 512 bytes/sector 💌
5le system
FAT
Allocation unit size
Default allocation size 🔗
Volume (abel
Format gptions
Quick Format
Enable Compression Create an MS-DOS startup disk
Start glose

- **4** Click to select the **Create an MS-DOS startup disk** check box, then click **Start**. A message warns you that any information on the diskette will be erased.
- **5** When you see the warning message, click **OK**. Windows copies files to the emergency startup diskette.
- **6** When Windows finishes copying files, remove the diskette from the diskette drive.
- **7** Slide the write-protect tab up to prevent the diskette from being erased or infected by viruses.

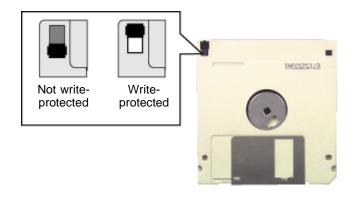

8 Store your emergency startup diskette in a safe place with your other backup software media.



Protecting your computer from viruses

A *virus* is a program that attaches itself to a file on a computer, then spreads from one computer to another. Viruses can damage data or cause your computer to malfunction. Some viruses go undetected for a period of time because they are activated on a certain date.

Protect your computer from a virus by:

- Using the Norton[®] AntiVirus program to check files and programs that are on diskettes, attached to e-mail messages, or downloaded from the Internet.
- Checking all programs for viruses before installing them.
- Disabling macros on suspicious Microsoft Word and Excel files. These programs will warn you if a document that you are opening contains a macro that might have a virus.
- Periodically updating the Norton AntiVirus program to protect against the latest viruses.

Help and Support	For more information about protecting your computer against viruses in Windows XP, click Start , then click Help and Support .
	Type the keyword viruses in the HelpSpot Search box Search , then click the arrow.

To scan for viruses:

1 Click Start, All Programs, Norton AntiVirus, then click Norton AntiVirus 2003. Norton AntiVirus opens.

	Contras Quarter	1		() ()
	Hottes Antident	System Status: Urge	ent attention	
- <i>'</i>	114a 🕯	Secondly Scanning Features		Bres Dotals
Scan for	Date Services	Redu-Protect	Dn	Takine retains
viruses	Pagona	Email Economy	On	station interview
	2	🖲 Script Blacking	OH.	Name and Atlant
		Full System Scari	Net competent	at left in writer to get more information and
		Vess Definition Service		artim
		🔥 Virus Definitions	8/10/2802	
		🧟 Subscripton Service	24303603	
		Adoroali: LiveUpdate	Df.	

2 Click Scan for Viruses.

Plantan Antifitian		E
Parten 2 ann		Ø=
Harbon And Verse	Scan for Vinuses	
Thelas	Tunt	Tool Schedde
Baan (tor Vinations) 🖣 Frigunda	Bour en creadar Scan al neclesadar Scan al forge data Scan al forge data Scan al forge data Scan total Scan total Scan total Scan total Scan total	
	Attant signa algon al a secon	Schwärfe Tank + Sprachte
Symantec.		ntiVirus - 200

3 Click the type of scan you want to make in the Scan for Viruses area, then under Actions, click **Scan**.



🕨 Т

To remove a virus:

- **1** If Norton AntiVirus finds a virus, follow all on-screen instructions to remove the virus.
- **2** Turn off your computer and leave it off for at least 30 seconds.
- **3** Turn on your computer and rescan for the virus.



To update Norton AntiVirus:

- **1** Make sure that you are connected to the Internet.
- **2** Click Start, All Programs, Norton AntiVirus, then click LiveUpdate Norton AntiVirus. The LiveUpdate wizard opens.
- **3** Follow the on-screen instructions to update your Norton AntiVirus program with the latest virus protection files.

4 When the program has finished, click **Finish**.



Managing hard drive space

Windows provides several utilities you can use to manage your hard drive.

Checking hard drive space



To check hard drive space:

1 In Windows XP, click **Start**, then click **My Computer**. The *My Computer* window opens.

- OR -

In Windows 2000, double-click the My Computer icon. The *My Computer* window opens.

2 Right-click the drive that you want to check for available file space, then click **Properties**. Drive space information appears.

cal Disk (C;) P Several (Task)	Hadvan Staing	[7]
-		
Type: L File system F	acal Disk. Alf 32	
Used space		
Capacity	JE SEE FTE SHI Loss 11.9 GF	
	Dive C [Dat. Ca	esp.
	Of. Caroli	erv.

Using Disk Cleanup

Delete unnecessary files, such as temporary Windows files, to free hard drive space.

To use the Windows Disk Cleanup program:

1 In Windows XP, click **Start**, then click **My Computer**. The *My Computer* window opens.

- OR -

In Windows 2000, double-click the My Computer icon. The *My Computer* window opens.

2 Right-click the hard drive that you want to delete files from, for example Local Disk (C:), then click **Properties**. The *Properties* dialog box opens at the General tab.

Type: Lica	
File system FAU3	1.530.167.296 bytes 1.42.0.8 18.856.508.298 bytes 17.5.0.8
Capacity	20.300.675.504 (perc) 11.9 GF
(\bigcirc
	Dive C [Did: Charse

- **3** Click **Disk Cleanup**. The *Disk Cleanup* dialog box opens.
- **4** Make sure that the check box beside each file type you want to delete is selected. For more information about file types you can delete, read the descriptions in the *Disk Cleanup* dialog box.

5 Click **OK**, then click **Yes**.



For more information about keeping the hard drive space free of unnecessary files in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **disk cleanup** in the HelpSpot **Search** box Search

Checking the hard drive for errors

The Error-checking program examines the hard drive for physical flaws and file and folder problems. This program corrects file and folder problems and marks flawed areas on the hard drive so Windows does not use them.

If you use your computer several hours every day, you probably want to run Error-checking once a week. If you use your computer less frequently, once a month may be adequate. Also use Error-checking if you encounter hard drive problems.



To check the hard drive for errors:

1 In Windows XP, click **Start**, then click **My Computer**. The *My Computer* window opens.

- OR -

In Windows 2000, double-click the My Computer icon. The *My Computer* window opens.

2 Right-click the hard drive that you want to check for errors, for example Local Disk (C:), then click **Properties**. The *Properties* dialog box opens.

3 Click the **Tools** tab.

Tranchecking	Hadnae Staing	
() This	olan vill sheck. Pæ sok	Deck Nav.
Ceriogneridate		
Carl Pier of	plan vill dekagssent file	e an the volume.
		Eshagner/Reis.

- 4 Click Check Now.
- 5 Click the options you want to use, then click Start. For help, press F1. Windows checks the drive for errors. This process may take several minutes. After Windows has finished checking the drive for errors, it provides a summary of the problems that it found.
- **6** Correct any problems that are found by following the on-screen instructions.
- 7 Click OK.



Defragmenting the hard drive

When working with files, sometimes Windows divides the file information into pieces and stores them in different places on the hard drive. This is called *fragmentation*, and it is normal. In order for your computer to use a file, Windows must search for the pieces of the file and put them back together. This process slows the hard drive performance.

The Disk Defragmenter program organizes the data on the drive so each file is stored as one unit rather than as multiple pieces scattered across different areas of the drive. Defragmenting the information stored on the drive can improve hard drive performance.

While the Disk Defragmenter program is running, do not use your keyboard or touchpad because using them may continuously stop and restart the defragmenting process. Also, if you are connected to a network, log off before starting Disk Defragmenter. Network communication may stop the defragmentation process and cause it to start over.



To defragment the hard drive:

1 In Windows XP, click **Start**, then click **My Computer**. The *My Computer* window opens.

- OR -

In Windows 2000, double-click the My Computer icon. The *My Computer* window opens.

2 Right-click the hard drive that you want to defragment, for example Local Disk (C:), then click **Properties**. The *Properties* dialog box opens.

3 Click the **Tools** tab.

ocal Disk (C:) Properties	121
General Table Hardware Sharing	
Encleang	
This option will sheck the volume is even.	
	Quick Nave.
Delagneriskin	
The second diverse if the second line second	
This option will do happend blas and	NE VOLTEL
6	shagnent files.

- **4** Click **Defragment Now**.
- **5** If Disk Defragmenter does not start automatically, click **Defragment** or **Start**.

Disk Defragmenter shows its progress on the computer display. When finished, Disk Defragmenter asks if you want to quit the program.

6 Click **Close** or **Yes**, then click the **X** in the top-right corner to close the *Disk Defragmenter* window.




For more information about defragmenting the hard drive in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **defragmenting** in the HelpSpot **Search** box Search **_____**, then click the arrow.

Backing up files

Backing up files and removing them from the hard drive frees space for new files on the hard drive. It also protects you from losing important information if the hard drive fails or you accidentally delete files.

You should back up your files regularly to a writable CD (if you have a recordable drive) or to diskettes (if you have a diskette drive). Use a backup device, such as a recordable drive or Zip drive, to do a complete hard drive backup. For more information, see "Using a recordable drive" on page 104. If you do not have a high-capacity backup device and you want to purchase one, you can contact Gateway's Add-on Sales department or visit the Accessories Store at <u>accessories.gateway.com</u>.

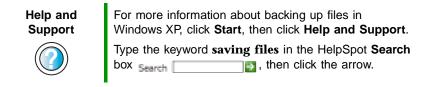

Using the Scheduled Task Wizard


The Scheduled Task Wizard lets you schedule maintenance tasks such as running Disk Defragmenter and Error-checking.

To start the Scheduled Task Wizard:

- 1 Click Start, All Programs, Accessories, System Tools, then click Scheduled Tasks. The *Scheduled Tasks* window opens.
- **2** Double-click the Add Scheduled Task icon. The Scheduled Task Wizard opens.



3 Click **Next**, then click the task or program you want to schedule and follow the on-screen instructions to customize the task.

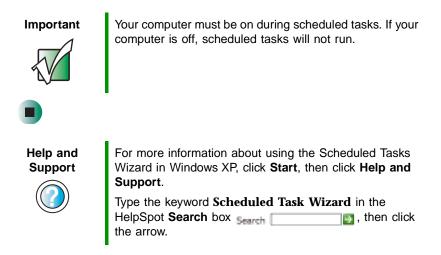

Cleaning your computer

Keeping your computer clean and the vents free from dust helps keep your system performing at its best. You may want to gather these items and put together a computer cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Isopropyl alcohol
- Cotton swabs
- A CD or DVD drive cleaning kit

Cleaning the exterior





When you shut down your computer, the power turns off, but some electrical current still flows through your computer. To avoid possible injury from electrical shock, unplug the power cord and modem cable from the wall outlets.

Always turn off your computer and other peripherals, then remove the battery before cleaning any components.

Use a damp, lint-free cloth to clean your computer and other parts of your system. Do not use abrasive or solvent cleaners because they can damage the finish on components.

Your computer is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your computer turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside your computer.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your computer and turn the unit upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it.

Cleaning the computer screen

Use a soft cloth and water to clean the computer screen. Squirt a little water on the cloth (never directly on the screen), and wipe the screen with the cloth.



The computer screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

Cleaning the mouse

If you have a mouse and the mouse pointer begins moving erratically across the computer screen or becomes difficult to control precisely, cleaning the mouse will likely improve its accuracy.

Clean your optical mouse by wiping the bottom of the mouse with a damp lint-free cloth.


Help and
SupportFor a video tutorial about cleaning the mouse in
Windows XP, click Start, then click Help and Support.Type the keyword Video tutorials in the HelpSpot Search
box Search _______, then click the arrow.Click Cleaning the mouse.

To clean your trackball mouse:

- **1** Turn the mouse upside down.
- **2** Rotate the retaining ring on the bottom of the mouse counter-clockwise, then remove the retaining ring and mouse ball.



- **3** Remove any dust, lint, or dirt from the mouse ball with a soft cloth.
- **4** Clean the mouse rollers with a cotton swab dipped in isopropyl alcohol.

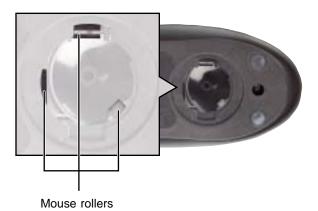

5 Replace the mouse ball and lock the retaining ring into place.

Chapter 13: Maintaining Your Computer

Restoring Software

14

Read this chapter to learn how to:

- Reinstall device drivers
- Update device drivers
- Reinstall programs
- Reinstall Windows



Using the Restoration CDs

Use the Gateway *Restoration CDs* to reinstall device drivers, your operating system, and other programs that were preinstalled at the factory.

Important



Before you try to fix a problem by reinstalling software from your Gateway *Restoration CDs*, make sure that you have tried these steps first:

 Use the diagnostics and troubleshooting tools found in HelpSpot. For more information about diagnostics and troubleshooting tools in Windows XP, click Start, then click Help and Support.

Type the keyword **troubleshooting** in the HelpSpot **Search** box search , then click the arrow.

See the Troubleshooting section of this guide.

If these steps do not resolve the problem, use the Gateway *Restoration CDs* to reinstall device drivers or programs.

If reinstalling device drivers or programs does not resolve the problem, reinstall Windows.

Reinstalling device drivers

Device drivers are programs that control devices such as the computer display, CD or DVD drives, and modems. Drivers translate information between computer devices and programs.

Drivers for your original computer hardware are installed at Gateway. If you install a new device, you need to install the drivers provided by the device manufacturer.

You should reinstall device drivers:

- If directed to do so while troubleshooting
- If you see a message indicating that there is a problem with a device driver

If you need to reinstall device drivers because you are directed to do so while troubleshooting or if a message tells you that there is a problem with a device driver, reinstall the device drivers by completing the following task.

If you just reinstalled Windows XP or Windows 2000, the device drivers were automatically reinstalled.

If you are not comfortable with the procedures covered in this section, seek help from a more experienced computer user or a computer service technician.

Þ

To reinstall device drivers:

- **1** Insert the red Gateway CD into the CD, DVD, or recordable drive. If the program starts automatically, go to Step 5.
 - OR -

If the program does not start automatically, go to Step 2.

- **2** Click **Start**, then click **Run**. The *Run* dialog box opens.
- **3** In the **Open** text box, type **d**:**\runmenu.exe** (where **d** is the drive letter of your CD, DVD, or recordable drive).
- 4 Click OK.

- **5** If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by clicking **Yes**, I accept it, then clicking **Continue**. The Gateway Driver and Application Recovery program starts and the **Drivers and Application Recovery** tab appears.
- **6** Select a single device driver to reinstall.
 - OR -

Click Automatic Installation, then select multiple device drivers to reinstall. (Grayed out drivers are not available for Automatic Installation. To select these drivers, click Manual Installation.)

- 7 Click Install.
- **8** Follow any additional on-screen instructions. Depending on the device driver you are reinstalling, you may only need to restart your computer to complete the installation. However, if a setup wizard opens when you restart your computer, follow the on-screen instructions.



For more information about reinstalling device drivers in Windows XP, click **Start**, then click **Help and Support**. Type the keyword **drivers** in the HelpSpot **Search** box Search , then click the arrow.

Updating device drivers

The *Restoration CDs* contain a device driver update utility that works over the Internet. If you do not have an Internet service provider, the update utility works by direct-dialing the device driver update service.

Important



If your system came equipped with a wireless device, only use the drivers approved for the country the device will be used in. See the red Gateway CD or the Gateway Technical Support Web site (<u>www.gateway.com/support</u>).

If your system came equipped with an internal embedded wireless device, see "Safety, Regulatory, and Legal Information" on page 265 for general wireless regulatory and safety guidelines. To find out if your system has an internal wireless device, check the label (see "Identifying your model" on page 10).


To update device drivers:

- **1** Insert the red Gateway CD into the CD, DVD, or recordable drive. If the program starts automatically, go to Step 5.
 - OR -

If the program does not start automatically, go to Step 2.

- **2** Click **Start**, then click **Run**. The *Run* dialog box opens.
- **3** In the **Open** text box, type **d**:**\runmenu.exe** (where **d** is the drive letter of the CD, DVD, or recordable drive).
- 4 Click OK.
- **5** If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by clicking **Yes**, I accept it, then clicking **Continue**. The Gateway Driver and Application Recovery program starts and the **Drivers and Application Recovery** tab appears.
- 6 Click the Web Updates tab.
- 7 Click Check Now. The *Connect* window opens.

8 Install available updated device drivers by following the on-screen instructions. Depending on the device driver you are updating, you may only need to restart your computer to complete the installation. However, if a setup wizard opens when you restart your computer, follow the on-screen instructions.

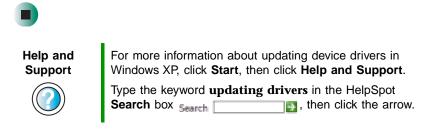

Reinstalling programs

If you have problems running a program or if you have reinstalled your operating system, you can reinstall programs from the red Gateway CD and other program CDs. If you are reinstalling programs from other program CDs, follow the installation instructions on each CD. If you want to **reinstall** a program, uninstall the old version first.

To reinstall programs from the red Gateway CD:

- **1** If you just reinstalled Windows, go to Step 4. Otherwise, go to the next step.
- **2** In Windows XP, click Start, Control Panel, then click Add or Remove Programs.

- OR -

In Windows 2000, click Start, Settings, Control Panel, then double-click the Add or Remove Programs icon.

3 In the *Currently Installed Programs* list, click the program you want to uninstall, then click **Change/Remove** and follow the on-screen instructions.

4 Insert the red Gateway CD into the CD, DVD, or recordable drive. If the program starts automatically, go to Step 8.

- OR -

If the program does not start automatically, go to Step 5.

- 5 Click Start, then click Run. The Run dialog box opens.
- **6** In the **Open** text box, type **d:\runmenu.exe** (where **d** is the drive letter of your CD, DVD, or recordable drive).
- 7 Click OK.
- **8** If this is the first time you have inserted the red Gateway CD, accept the End User License Agreement (EULA) by clicking **Yes**, I accept it, then clicking **Continue**. The Gateway Driver and Application Recovery program starts and the **Drivers and Application Recovery** tab appears.
- **9** Select a single program to reinstall.

- OR -

Click Automatic Installation, then select multiple programs to reinstall. (Grayed out programs are not available for Automatic Installation. To select these programs, click Manual Installation.)

- **10** Click Install.
- **11** Follow any additional on-screen instructions. Depending on the programs you are reinstalling, you may only need to restart your computer to complete the installation. However, if a setup wizard opens when you restart your computer, follow the on-screen instructions.



Help and Support



For more information about reinstalling programs in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **installing programs** in the HelpSpot **Search** box Search **[]**, then click the arrow.

To reinstall other programs from a CD:

1 If you just reinstalled Windows, go to Step 4. Otherwise, go to the next step.

2 In Windows XP, click Start, Control Panel, then click Add or Remove Programs.

- OR -

In Windows 2000, click Start, Settings, Control Panel, then double-click the Add or Remove Programs icon.

- **3** In the *Currently Installed Programs* list, click the program you want to uninstall, then click **Change/Remove** and follow the on-screen instructions.
- **4** Insert the program CD into the CD, DVD, or recordable drive.
- **5** Complete the program reinstallation by following the instructions included with the program CD.



Reinstalling Windows

If your computer is not working correctly, try the following options to correct the problem:

- Troubleshooting. For more information, see "Troubleshooting" on page 237.
- Reinstalling device drivers. For more information, see "Reinstalling device drivers" on page 215.

If the options above do not correct the problem, you can use the *Restoration CDs* to reinstall Windows and other software.

The *Restoration CDs* step you through reinstalling Windows XP or Windows 2000. If you are reinstalling Windows XP or Windows 2000, the *Restoration CDs* automatically reinstall the hardware device drivers and some programs as well. You can install any remaining programs by using the program CDs that came with your computer. To reinstall your programs, follow the instructions in "Reinstalling programs" on page 218.

Important



If you are prompted for your Windows product key when you reinstall Windows, you can find the key on the *Microsoft Certificate of Authenticity* label located on the bottom of your computer case. For more information, see "Microsoft Certificate of Authenticity" on page 11.

To reinstall Windows XP or Windows 2000, and the device drivers:

Caution



Back up your personal files before you use this option. All files on your computer will be deleted!

- **1** Insert the red Gateway CD into the CD, DVD, or recordable drive.
- **2** Restart your computer.
- **3** Select **2. Boot from CD-ROM**.
- **4** Select a language option.
- **5** Select **1. Delete all files (Automated Fdisk/Format)**.
- 6 Select 1. Continue deleting all files and restart.
- **7** When prompted, press any key to continue.
- 8 Select 2. Boot from CD-ROM.
- **9** Select a language option.
- **10** Select 2. Automated installation of Windows (XP or 2000).
- **11** When prompted, remove the red Gateway CD and insert the blue *Operating System* CD into the CD, DVD, or recordable drive, then press any key to continue.
- **12** When prompted, accept the *License Agreement* by pressing **Y**.
- **13** Wait while the setup program copies files to your hard drive. When your computer restarts, do NOT press any key to boot from CD.

- **14** When prompted, insert the red Gateway CD, then click **Continue**. The Gateway Application Loader automatically installs your drivers and programs. Your computer restarts several times during this process. Do **not** press any keys or buttons during this process unless prompted to do so.
- **15** When the Gateway Application Loader has finished, go to the Windows desktop by clicking **OK**.
- **16** Install additional programs by following the instructions in "Reinstalling programs" on page 218.
- **17** Install other software, such as Microsoft Works Suite and gaming software, by following the instructions in "To reinstall other programs from a CD:" on page 220.



Upgrading Your Notebook

15

This chapter provides information about adding hardware devices to your notebook. Read this chapter to learn how to:

- Add and remove PC Cards
- Add and replace memory
- **Replace the hard drive**



Adding and removing a PC Card


Your notebook has a PC Card slot (also known as a PCMCIA card slot). This slot accepts one Type II or Type III card.

You do not need to restart your notebook when changing most cards because your notebook supports *hot-swapping*. Hot-swapping means that you can insert a PC Card while your notebook is running. If your PC Card does not work after hot-swapping, see the PC Card manufacturer's documentation for further information.



To insert a PC Card:

Push the card firmly into the bottom of the PC Card slot label-side up until the outer edge of the card is flush with the side of your notebook.

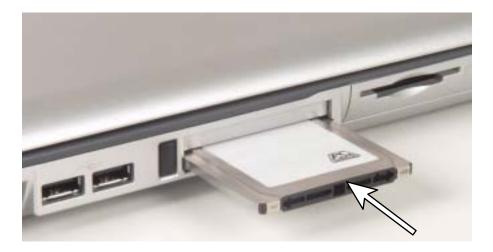

To remove a PC Card:

1 Click the remove hardware 🛸 icon in the taskbar, the PC Card name, then click **Stop**.

-OR-

Turn off your notebook.

Important



If the remove hardware icon does not appear on the taskbar, click the show hidden icons 💽 button.

- **2** Release the eject button by pressing the PC Card eject button once.
- **3** Eject the PC Card by pressing the eject button again.



Preventing static electricity discharge

The components inside your notebook are extremely sensitive to static electricity, also known as *electrostatic discharge* (ESD).



ESD can permanently damage electrostatic discharge-sensitive components in your notebook. Prevent ESD damage by following ESD guidelines every time you install memory or replace the hard drive.



To avoid exposure to dangerous electrical voltages and moving parts, turn off your notebook and unplug the power cord and modem and network cables before opening the case.

Before installing memory or replacing the hard drive, follow these guidelines:

- Turn off your notebook.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.



To prevent risk of electric shock, do not insert any object into the vent holes of the notebook.

- Touch a bare metal surface on your workbench or other grounded object.
- Unplug the power cord and the modem and network cables.
- Remove the battery. For more information, see "Changing batteries" on page 137.
- Disconnect all peripheral devices and remove any PC Cards.

Before working with computer components, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.

Adding or replacing memory

Your notebook uses memory modules called SO-DIMMs (Small Outline Dual Inline Memory Modules). The modules are available in various capacities and any module can be placed in any available slot. Use only memory modules designed for the Gateway 400VTX for upgrading your memory.



To add or replace memory modules:

- **1** Follow the instructions under "Preventing static electricity discharge" on page 226.
- **2** Turn off your notebook and disconnect the AC adapter and modem and network cables.
- **3** Turn your notebook over so the bottom is facing up.
- **4** Remove the battery.
- **5** Loosen the memory bay cover screw, then remove the memory bay cover.
- **6** If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.






7 Pull the memory module out of the slot.

8 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.

Important



Use only memory modules designed for the Gateway 400VTX.

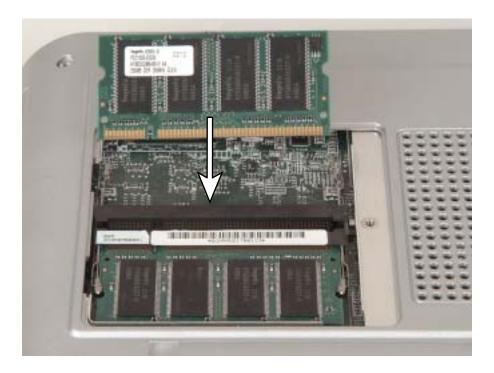


- **9** Gently push the module down until it clicks in place.
- **10** Replace the memory bay cover and tighten the cover screw.
- **11** Insert the battery, then turn your notebook over.
- **12** Connect the power adapter and modem and network cables, then turn on your notebook.



Replacing the hard drive kit

If you would like more hard drive capacity, you can replace your original drive with a higher-capacity drive.

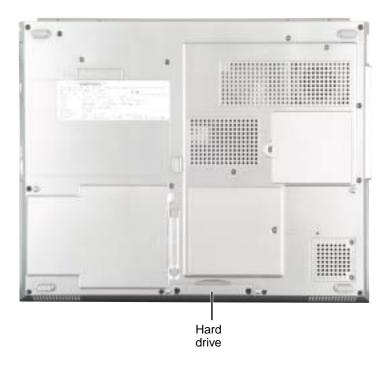




To replace the hard drive kit:

- **1** Follow the instructions under "Preventing static electricity discharge" on page 226.
- **2** Turn off your notebook and disconnect the AC adapter and modem and network cables.
- **3** Turn your notebook over so the bottom is facing up.
- **4** Remove the battery.



5 Remove the hard drive kit screws.

6 Slide the old hard drive kit out of your notebook.

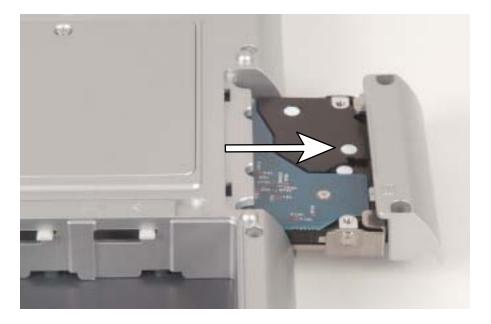

7 If your new hard drive already includes the hard drive kit bracket, go to Step 12.

-OR-

If you need to move the hard drive kit bracket from your old hard drive kit to your new hard drive, go to Step 8.

8 Remove the two screws that secure the hard drive to the hard drive kit bracket.



9 Remove the bracket from the old drive.



10 Insert the new drive into the bracket so the screw holes line up and the plastic strip on the top of the bracket is positioned as shown.



- **11** Replace the two screws that secure the bracket to the drive.
- **12** Slide the new hard drive kit into your notebook.
- **13** Replace the screws that secure the hard drive kit to your notebook.
- **14** Insert the battery and turn your notebook over.
- **15** Connect the power adapter and modem and network cables, then turn on your notebook.



Chapter 15: Upgrading Your Notebook



16

Troubleshooting

This chapter provides some solutions to common notebook problems. Read this chapter to learn how to:

- Troubleshoot typical hardware and software problems
- Get telephone support
- Use automated troubleshooting systems
- Get tutoring and training

If the suggestions in this chapter do not correct the problem, see "Getting Help" on page 35 for more information about how to get help.



Safety guidelines

While troubleshooting your notebook, follow these safety guidelines:

- Never remove the memory bay cover or hard drive while your notebook is turned on, while the battery is installed, and while the modem cable, network cable, and AC power adapter are connected.
- Make sure that you are correctly grounded before accessing internal components. For more information about preventing damage from static electricity, see "Preventing static electricity discharge" on page 226.
- After you complete any maintenance tasks where you remove the memory bay cover or hard drive kit, make sure that you replace the cover or hard drive kit, reinstall any screws, then replace the battery before you start your notebook.

Warning



Do not try to troubleshoot your problem if power cords or plugs are damaged, if your notebook was dropped, or if the case was damaged. Instead, unplug your notebook and contact a qualified computer technician.

First steps

If you have problems with your notebook, try these things first:

- Make sure that the AC power adapter is connected to your notebook and an AC outlet and that the AC outlet is supplying power.
- If you use a power strip or surge protector, make sure that it is turned on.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Technical Support in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Help and Support	For more information about troubleshooting in Windows XP, click Start , then click Help and Support .
	Type the keyword troubleshooting in the HelpSpot Search box Search , then click the arrow.

Software support tools

Your notebook *may* include the following support tool to help you diagnose and fix problems:

PC Doctor is a comprehensive hardware diagnostic and system information tool that can test your notebook and determine its configuration.
 PC Doctor provides 85 professional diagnostic tests directly from your notebook.

This support tool is available from HelpSpot or by clicking **Start**, **All Programs**, then clicking **Gateway Utilities**.

Troubleshooting

CD or DVD drives

Your notebook does not recognize a disc or the drive

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.
- Make sure that the disc label is facing up, then try again.
- If you are trying to play a DVD, make sure that you have a DVD drive. See "Identifying drive types" on page 89 for more information.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Clean the disc. For more information, see "Cleaning CDs or DVDs" on page 242.

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Make sure that the volume control on your notebook is turned up. For more information, see "System key combinations" on page 26.
- Make sure that the Windows volume control is turned up. For more information, see "Adjusting the volume in Windows XP" on page 78 and "Adjusting the volume in Windows 2000" on page 81.
- Make sure that Mute controls are turned off. For more information about the mute setting, see "System key combinations" on page 26 or "Adjusting the volume in Windows XP" on page 78 and "Adjusting the volume in Windows 2000" on page 81.
- Make sure that headphones are not plugged into the headphone jack. For the location of the headphone jack, see "Left side" on page 3.

- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the CD. For more information, see "Cleaning CDs or DVDs" on page 242.
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Reinstall the audio device drivers. For more information, see "Reinstalling device drivers" on page 215.

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Shut down and restart your notebook.
- Clean the DVD. For more information, see "Cleaning CDs or DVDs" on page 242.
- DVD discs and drives contain *regional codes* that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc's regional code and your DVD drive's regional code must match.


The regional code on your DVD drive is determined by your notebook's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 2. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.

If the DVD movie does not play, the disc's regional code and your DVD drive's regional code may not match.

■ Make sure that the InterVideo program has been installed on your notebook. See "Playing a DVD" on page 102 for more information.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.

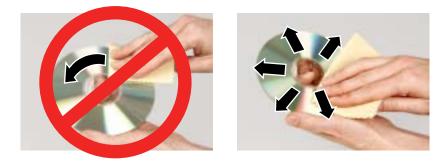

Device installation

You have computer problems after adding a new device

- Sometimes a new device, such as a PC Card, can cause a system resource (IRQ) conflict. Check IRQ usage to determine if there is an IRQ conflict.
 - To check IRQ usage in Windows XP:
 - 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Performance and Maintenance.
 - 2 Click/Double-click System, click the Hardware tab, then click Device Manager. The *Device Manager* window opens.
 - **3** Click View, then click Resources by type. Double-click Interrupt request (IRQ). All IRQs and their hardware assignments are displayed.

Help and Support

For more information about IRQs in Windows XP, click **Start**, then click **Help and Support**.



Type the keyword **IRQs** in the HelpSpot **Search** box **Search**, then click the arrow.

To check IRQ usage in Windows 2000:

- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Double-click the **System** icon, click the **Hardware** tab, then click **Device Manager**. The *Device Manager* window opens.
- **3** Click View, then click Resources by type. Double-click Interrupt request (IRQ). All IRQs and their hardware assignments are displayed.



To free IRQ resources for the new device:

- **1** In the *Device Manager* window, check the device list for a resource conflict. A resource conflict appears as a black exclamation point in a yellow circle.
- **2** Remove the device you are trying to install, then determine which one of the existing devices or ports you can disable.
- **3** Right-click the device or port you want to disable, then click **Disable**. The device or port is disabled.



Diskette drive

The diskette drive is not recognized

■ Shut down and restart your notebook.

You see an "Access Denied" or "Write protect" error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Not all diskettes are IBM-compatible. Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

You see a "Disk is full" error message

- Delete unnecessary files on the diskette.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. For more information, see "Checking the hard drive for errors" on page 203. If errors are detected and corrected, try using the diskette again.

You see a "Non-system disk", "NTLDR is missing", or "Disk error" error message

- Eject the diskette from the diskette drive, then press ENTER.
- Make sure that the diskette you are using is IBM-compatible.

The diskette drive status indicator is lit continuously

■ Remove the diskette from the drive. If the indicator stays on, try restarting your notebook.

Display

The screen is too dark

 Adjust the brightness using the system keys. For more information, see "System key combinations" on page 26.

The screen resolution is not correct

■ Change the screen resolution from the *Display Properties* dialog box. For more information, see "Adjusting the screen resolution" on page 158.

Help and Support



For more information about changing the screen resolution in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **screen resolution** in the HelpSpot **Search** box **Search i**, then click the arrow.

The text on the display is dim or difficult to read

- Adjust the brightness and contrast using the system keys. For more information, see "System key combinations" on page 26.
- Change the display settings. For more information, see "Adjusting the screen and desktop settings" on page 156.

Move your notebook away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

The display has pixels that are always dark or too bright

This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway's inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Technical Support to identify whether a repair or replacement is justified based on the number of pixels affected.

File management

A file was accidentally deleted

■ If a file was deleted at a DOS prompt or in Windows while holding down the **SHIFT** key, the file cannot be restored.



To restore deleted files:

- **1** Double-click the **Recycle Bin** icon.
- **2** Right-click the file you want to restore, then click **Restore**. The file is restored to the place where it was originally deleted from.

If the Recycle Bin was emptied before you tried to restore a file, the file cannot be restored.



Help and Support



For more information about restoring deleted files in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **System Restore** in the HelpSpot **Search** box Search **[1]**, then click the arrow.

Hard drive

You see an "Insufficient disk space" error message

- Delete unnecessary files from the hard drive using Disk Cleanup. For more information, see "Using Disk Cleanup" on page 202.
- Empty the Recycle Bin by right-clicking the Recycle Bin icon, then clicking Empty Recycle Bin.

Caution

All deleted files will be lost when you empty the Recycle Bin.



Save your files to a diskette or another drive. If the hard drive is full, copy any files not regularly used to diskettes or other backup media, then delete them from the hard drive.

Help and Support	For more information about file management in Windows XP, click Start , then click Help and Support .	
	Type the keyword file management in the HelpSpot Search box search search , then click the arrow.	

You see a "Data error" message

This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program. For more information, see "Checking the hard drive for errors" on page 203.

The hard drive cannot be accessed, or you see a "General failure reading drive C" error message

- If a diskette is in the diskette drive, eject it and restart your notebook.
- Make sure that the hard drive is installed correctly. Remove it, firmly reinsert it, then restart your notebook. For more information, see "Replacing the hard drive kit" on page 231.
- If your notebook has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

You see a "Non-system disk", "NTLDR is missing", or "disk" error message

■ Eject the diskette from the diskette drive, then press ENTER.

Internet

You cannot connect to the Internet

.

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Back" on page 6 and to make sure that the connections have been made correctly.
- Make sure that your notebook is connected to the telephone line and the telephone line has a dial tone.
- If you have the call waiting feature on your telephone line, make sure that it is disabled.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.
- Make sure that you do not have a problem with your modem. For more information, see "Modem" on page 249.

Help and	For more information about troubleshooting Internet
Support	connections in Windows XP, click Start, then click Help
	and Support. Type the keyword troubleshooting connections in the
_	HelpSpot Search box _{Search} , then click the arrow.

You see an "Unable to locate host" message and are unable to browse the Internet

This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

- Many factors can affect Internet performance:
 - The condition of the telephone lines in your residence or at your local telephone service
 - The condition of the Internet computers to which you connect and the number of users accessing those computers
 - The complexity of graphics and multimedia on Web pages
 - Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your notebook

People are sending you e-mail messages, but you have not received any mail

- Click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Keyboard

The external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.
- Remove all extension cables and switchboxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your notebook and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

A keyboard character keeps repeating or you see a "Keyboard stuck" or "Key failure" error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your notebook.

Memory

You see a "Memory error" message

- Make sure that the memory modules are inserted correctly in the memory bay slots. For more information, see "Adding or replacing memory" on page 227.
- Use PC Doctor or a third-party diagnostic program to help determine if a memory module is failing. For more information, see "Adding or replacing memory" on page 227.

You see a "Not enough memory" error message

■ Close all programs, then restart your notebook.

Help and Support	For more information about troubleshooting memory errors in Windows XP, click Start , then click Help and Support .	
	Type the keyword memory error in the HelpSpot Search box Search, then click the arrow.	

Memory card reader

Drive letters for the memory card slots do not appear in the My Computer window

■ Reboot your notebook.

Modem


Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See "Back" on page 6 and to make sure that the connections have been made correctly.
- Make sure that your notebook is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.

If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.

To check the dialing properties in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
- **2** Click/Double-click the **Phone and Modem Options** icon, then click the **Dialing Rules** tab.
- **3** Click the location from which you are dialing, then click **Edit**.
- **4** Make sure that all settings are correct.

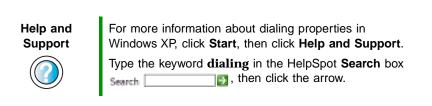



- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Click/Double-click the **Modems** icon, then click **Dialing Properties** tab. The *Dialing Properties* dialog box opens.
- **3** Make sure that all settings are correct.



- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.

Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.

Your 56K modem does not connect at 56K

Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your notebook has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your notebook has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

You can check modem connection speeds and dial-up network (DUN) connections by accessing the *gateway.your.way dial-up server*. The server also contains drivers, patches, and updates for current Gateway hardware and software.

The server provides a secure connection and is a stand-alone server. You cannot use it to access the Internet. The server cannot be accessed Mondays from 8:00 a.m. to 12:00 p.m. CT.

To access the gateway.your.way dial-up server:

- **1** Insert the red Gateway CD into the CD or DVD drive.
- **2** Click Help, then click Support Web Site.
- **3** To check your modem connection speed, click the **Direct Dial** option. After your modem connects, move the mouse pointer over the **Dial-Up Networking** icon (located next to the clock on your taskbar). Your modem connection speed appears.



Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your notebook

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your notebook. See "Back" on page 6 to make sure that the connections have been made correctly.
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use the modem cable that came with your notebook. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your notebook.
- Run Windows modem diagnostics.

To run modem diagnostics in Windows XP:

- **1** Close all open programs.
- **2** Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- **3** Click/Double-click the Phone and Modem Options icon, then click the Modems tab.

- **4** Click your modem, then click **Properties**. The *Modem Properties* dialog box opens.
- **5** Click the **Diagnostic** tab, then click **Query Modem**. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as port already open or the modem has failed to respond, the modem did not pass diagnostics.



For more information about modem troubleshooting in Windows XP, click Start, then click Help and Support.

Type the keyword modem troubleshooting in the HelpSpot Search box Search 1 then click the arrow.

To run modem diagnostics in Windows 2000:

- 1 Close all open programs.
- 2 Click Start, Settings, then click Control Panel. The Control Panel window opens.
- **3** Double-click the **Modems** icon. The *Modems Properties* window opens.
- **4** Click the **Diagnostic** tab, click the COM port next to the name of the modem, then click More Info. The *Modem Info* dialog box opens. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open* or the modem has failed to respond, the modem did not pass diagnostics.



The modem is noisy when it dials and connects

When your modem tries to connect to another modem, it begins handshaking. Handshaking is a digital "getting acquainted" conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.

- To turn down the modem volume in Windows XP:
 - 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
 - **2** Click/Double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
 - **3** Click the modem you want to adjust, then click **Properties**.
 - **4** Click the Modem tab, then adjust the **Speaker volume** control.
 - **5** Click **OK** twice to close the *Phone and Modem Options* dialog box.



To turn down the modem volume in Windows 2000:

- **1** Click **Start**, **Settings**, then click **Control Panel**. The *Control Panel* window opens.
- **2** Double-click the **Modems** icon. The *Modems Properties* dialog box opens.
- **3** Click the **General** tab, click the modem you want to adjust, then click **Properties**.
- **4** Adjust the **Speaker volume** control.
- 5 Click OK.

Mouse

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your notebook.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse. For more information, see "Cleaning the mouse" on page 210.
- Some mouse pad patterns "confuse" optical mice. Try the mouse on a different surface.

Help and Support	For a video tutorial about cleaning the mouse, click Start , then click Help and Support .
	Type the keyword mouse troubleshooting in the HelpSpot Search box Search 1 , then click the arrow.

Networks

You cannot connect to your company network

• Every network is unique. Contact your company computer department or network administrator for help.



For more information about network troubleshooting in Windows XP, click **Start**, then click **Help and Support**.

Type the keyword **network troubleshooting** in the HelpSpot **Search** box Search **1**, then click the arrow.

Passwords

Your notebook does not accept your password

■ Make sure that CAPS LOCK and PAD LOCK are turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your notebook for repair. Call Gateway Technical Support for instructions.

PC Cards

You installed a PC Card and now your notebook is having problems

- Make sure that you have correctly installed required software for the PC Card. For more information, see your PC Card's documentation.
- Make sure that the PC Card you installed is not causing a system resource conflict. For more information on resource conflicts, see "Device installation" on page 242.

Power

Your notebook is not working on AC power

- Make sure that your AC power adapter is connected correctly to your notebook. For more information, see "Connecting the AC adapter" on page 16.
- If your notebook is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your notebook is not working on battery power

- Make sure that the battery is installed correctly. For more information, see "Changing batteries" on page 137.
- Make sure that the battery is fully recharged. For more information, see "Recharging the battery" on page 135.
- Make sure that the battery is calibrated correctly. For more information, see "Recalibrating the battery" on page 136.

Your notebook will not turn off, even after pressing the power button for five seconds

■ If your notebook has "frozen," and pressing the power button for five seconds does not turn it off, insert a straightened paper clip into the reset hole on the bottom of your notebook. For the location of the reset hole, see "Bottom" on page 7.

Printer

The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

The printer is on but will not print

- Check the cable between the printer and your notebook. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- Check the port and cable for bent or broken pins.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.

To set a default printer in Windows XP:

- 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
- **2** Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- **3** Right-click the name of the printer you want to be the default printer, then click **Set as Default Printer**.





To set a default printer in Windows 2000:


- **1** Click Start, Settings, then click Printers.
- **2** Right-click on the name of the printer you want to be the default printer, then click **Set as Default**.



 Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a "Printer queue is full" error message

- Make sure that the printer is not set to work offline.
- To make sure that the printer is not set to work offline in Windows XP:
 - 1 Click Start, then click Control Panel. The *Control Panel* window opens. If your Control Panel is in Category View, click Printers and Other Hardware.
 - **2** Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
 - **3** Right-click the name of the printer you want to use. If the menu shows a check mark next to Use Printer Offline, click Use Printer Offline to clear the check mark.

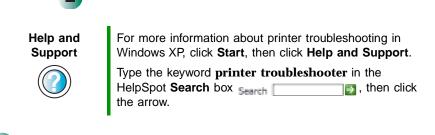



- **1** Click Start, Settings, then click Printers.
- **2** Right-click the name of the printer you want to use. If the menu shows a check mark next to **Use Printer Offline**, click **Use Printer Offline** to clear the check mark.

- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a "Printer is out of paper" error message

■ After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack. For the location of the headphone jack, see "Left side" on page 3.
- Make sure that the volume control on your notebook is turned up. For more information, see "System key combinations" on page 26.
- Make sure that the Windows volume control is turned up. For more information, see "Adjusting the volume in Windows XP" on page 78 and "Adjusting the volume in Windows 2000" on page 81.
- Make sure that Mute controls are turned off. For more information about the mute setting, see "System key combinations" on page 26 or "Adjusting the volume in Windows XP" on page 78 and "Adjusting the volume in Windows 2000" on page 81.

Help and Support	For more information about troubleshooting sound issues in Windows XP, click Start , then click Help and Support .	
	Type the keyword sound troubleshooter in the HelpSpot Search box Search , then click the arrow.	

Video

The external monitor is not working

- Make sure that you have pressed **F**N+**LCD**/**CRT** to activate the external monitor option.
- Make sure that the monitor is turned on and that the video cable is connected correctly.

Telephone support

Before calling Gateway Technical Support

If you have a technical problem with your notebook, follow these recommendations before contacting Gateway Technical Support:

- Make sure that your notebook is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.

Warning

To avoid bodily injury, do not attempt to troubleshoot your notebook problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your notebook
- Your notebook was dropped
- The case was damaged

Instead, unplug your notebook and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your notebook is nearby at the time of your call. The technician may have you follow troubleshooting steps.

Telephone numbers

Gateway offers a wide range of customer service, technical support, and information services.

Automated troubleshooting system

Service description	How to reach
Use an automated menu system and your telephone keypad to find answers to common problems.	800-846-2118 (US) 877-709-2945 (Canada)

Telephone numbers

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach
Fax on demand support	Order a catalog of documents on common problems, then order documents by document numbers. The documents will be faxed to you.	800-846-4526 (US) 877-709-2951 (Canada)
Gateway's fee-based software tutorial service	Get tutorial assistance for software issues billed by the minute.	800-229-1103 (charged to your credit card) 900-555-4695 (charged to your telephone bill)
Gateway Technical Support	 Talk to a Gateway Technical Support representative about a non-tutorial technical support question. (See "Before calling Gateway Technical Support" on page 260 before calling.) TDD Technical Support (for hearing impaired) is available: Weekdays 6:00 a.m 8:00 p.m. Central Time Weekends 6:00 a.m 5:00 p.m. Central Time 	800-846-2301 (US) 800-846-3609 (Canada and Puerto Rico) 605-232-2191 (all other countries) 800-846-1778 (TDD)
America Online	Get support for your America Online ISP account	800-827-6364 (US) 888-265-4357 (Canada)
CompuServe	Get support for your CompuServe ISP account	800-848-8990 (US)
Sales, accounting, and warranty	Get information about available systems, pricing, orders, billing statements, warranty service, or other non-technical issues.	800-846-2000 (US) 888-888-2037 (Canada)

Tutoring and training

Gateway's Technical Support professionals cannot provide hardware and software training or tutorial services. Instead, Gateway recommends the following tutoring and training resources.

Self-help

If you have *how-to* questions about using your Gateway-supplied hardware or software, see the following resources:

- The printed or online documentation that came with your hardware or software. In many cases, additional product information and online documentation for Gateway-supplied hardware can be found in our Web site's Documentation Library
- This user's guide
- The software publisher's Web site



For more how-to information about Windows XP, click **Start**, then click **Help and Support**. Type the keyword **practice** in the HelpSpot **Search** box

Search 3 , then click the arrow.

Tutoring

For help on using hardware or software that came with your Gateway notebook, contact Gateway's fee-based tutorial hotline:

- 800-229-1103 (rate charged per minute; charged to a major credit card)
- 900-555-4695 (rate charged per minute; charged to your telephone bill)

Training

Resource	Service description	For more information
In-Store Training at Gateway stores	Our friendly and knowledgeable software trainers can teach you how to use the Internet and the most popular software programs, including Microsoft Word, Excel, and PowerPoint.	www.gateway.com/store
Gateway Learning Libraries	A variety of courses and tutorials are available on CD. Select from several easy-to-use learning libraries.	www.gateway.com/training
Online Training from Learn@Gateway	More than 450 online courses are available from Learn@Gateway. All you have to do is go online and log in. You select the subject matter, and the learning format (self-paced tutorials or virtual classrooms), all from the comfort of your notebook.	www.learnatgateway.com/

Gateway provides the following in-person and computerized training:

Chapter 16: Troubleshooting

Safety, Regulatory, and Legal Information

Important safety information

Your Gateway system is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.



Always follow these instructions to help guard against personal injury and damage to your Gateway system. А



Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable work surface.
- The product should be operated only from the type of power source indicated on the rating label.
- If your computer has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- Openings in the computer case are provided for ventilation. Do not block or cover these
 openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for
 ventilation when you set up your work area. Never insert objects of any kind into the computer
 ventilation openings.
- Some products are equipped with a three-wire power cord to make sure that the product is
 properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet.
 This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician
 to install the appropriate outlet.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your system is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the
 antenna or cable system is electrically grounded to provide some protection against voltage
 surges and buildup of static charges.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- Some products have a replaceable CMOS battery on the system board. There is a danger of
 explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or
 equivalent type recommended by the manufacturer. Dispose of batteries according to the
 manufacturer's instructions.
- When the computer is turned off, a small amount of electrical current still flows through the computer. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not operate properly when the operating instructions are followed.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Important



Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

Regulatory compliance statements

Wireless Guidance

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your notebook system. These devices may operate in the 2.4 GHz (i.e. 802.11B/G LAN & Bluetooth), 5.2 GHz (i.e. 802.11A LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your notebook is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your notebook) emit less energy than is allowed in radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

As a general guideline, a separation of 20 cm (8 inches) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on and transmitting.


The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices. Examples of common restrictions are listed below:

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. 802.11B (also known as wireless Ethernet or Wifi) and Bluetooth communication devices are examples of devices that provide wireless communication.

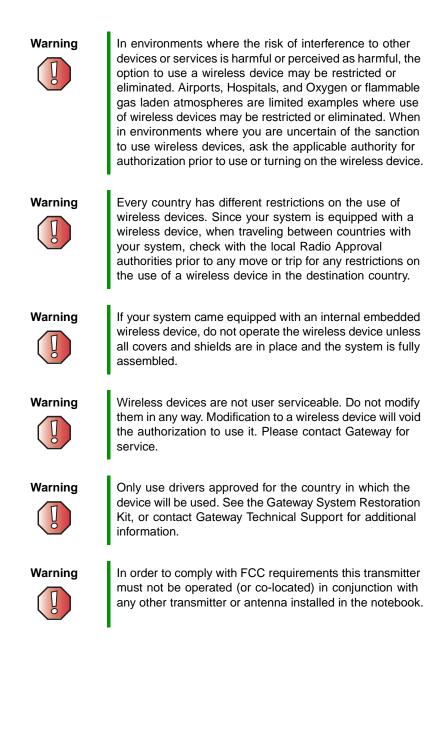

United States of America

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.

The FCC has set a general guideline of 20 cm (8 inches) separation between the device and the body, for use of a wireless device near the body (this does not include extremities). This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by the FCC.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity

Responsible party:

Gateway Companies, Inc. 610 Gateway Drive, North Sioux City, SD 57049 (605) 232-2000 Fax: (605) 232-2023

Product:

Gateway 400VTX

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution



Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.

Telecommunications per FCC part 68 (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Federal Communications Commission (FCC) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

An FCC-compliant telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada


Industry Canada (IC) Intentional emitter per RSS 210

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 - 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.

As a general guideline, a separation of 20 cm (8 inches) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by Industry Canada.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

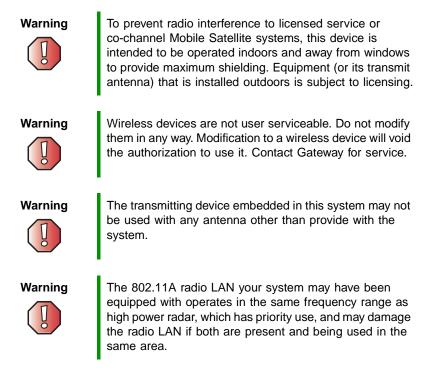

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per DOC notice (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.



To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

The **Ringer Equivalence Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Mexico

Intentional emitter

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Mexico if a COFETEL ID is on the system label.

As a general guideline, a separation of 20 cm (8 inches) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by SCT.

Unintentional emitter

At this time there are no mandatory requirements for Unintentional Emitters. However, this device does comply with multiple requirements for other countries and regions as listed on the system label and in the user's manual.

Laser safety statement

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.



Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

California Proposition 65 Warning



This product contains chemicals, including lead, known to the State of California to cause cancer and/or birth defects or reproductive harm.

Notices

Copyright © 2003 Gateway, Inc. All Rights Reserved 14303 Gateway Place Poway, CA 92064 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

1-800-GATEWAY, ActiveCPR, ALR, AnyKey, black-and-white spot design, CrystalScan, Destination, DestiVu, EZ Pad, EZ Point, Field Mouse, Gateway 2000, Gateway Country, gateway.net, Gateway stylized logo, Perfect Scholar, Solo, TelePath, Vivitron, stylized "G" design, and "You've got a friend in the business" slogan are registered trademarks and black-and-white spotted box logo, GATEWAY, Gateway Astro, Gateway @Work, Gateway Connected touch pad, Gateway Connected music player, Gateway Cyber:)Ware, Gateway @Work, Gateway Connected touch pad, Gateway Connected music player, Gateway GoBack, Gateway Gold, Gateway Education:)Ware, Gateway Flex Case, Gateway Gaming:)Ware, Gateway GoBack, Gateway Music:)Ware, Gateway Networking Solutions, Gateway Online Network (O.N.) solution, Gateway Photo:)Ware, Gateway profile, Gateway Solo, green stylized GATEWAY, green stylized Gateway logo, Gateway Teacher:)Ware, Gateway Video:)Ware, HelpSpot, InforManager, Just click it!, Learn@Gateway, Kids BackPack, SERVE-TO-ORDER, Server Watchdog, the Spotted G Gateway Logo and the Spotted G Logo, SpotShop, Spotshop.com, and Your:)Ware are trademarks of Gateway, Inc. Intel, Intel Inside logo, and Pentium are registered trademarks and MMX is a trademark of Intel Corporation. Microsoft, MS, MS-DOS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

Macrovision statement

If your computer has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A

AC adapter connecting 16 connector 6 damaged 16 defective 17 international adapters 139 access point network 179 accessories 14 safety precautions 267 accounts America Online 69 **ISP 69** user 169 acoustic handset coupler 150 ad hoc networking 181, 182 adding icons to desktop 48 user accounts 169 See also installing address e-mail 74 Web 72 airplane power adapter 14, 139 alarms 141, 143 America Online 70 application key 25 arrow keys 25 AU file 85 audio headphone jack 3 microphone jack 3 muting 27, 78, 81 playing 83, 85, 91, 93, 94 recording 83 streaming 173 troubleshooting 259 audio CD See CD audio file

streaming 173 automobile power adapter 14, 139 AVI file 85

В

background 162 backing up files 207 battery 14 alarm options 141, 143 alternate power sources 139 bay 7, 137 changing 137 charge indicator 2, 17, 134 charge status 134 charging 16, 135 conserving power 139 icons 134 installing 137 latch 7 managing power 139 meter 17, 135 monitoring charge 134 recalibrating 136 recharging 16, 135 release latch 7 replacing 137 bays battery 7, 137 hard drive 7 memory 7, 227 mini PCI 7 BIOS Setup utility 152 break system key 26 brightness system key 26, 27 broadband Internet connection 34, 68, 172 browser Web 69, 71 browsing for files and folders 56

С

cable lock notebook 5 using while traveling 151 cable modem 34, 68, 176, 179 camera See digital camera Caps Lock indicator 22 cards adding PC Card 224 eject button 3, 225 inserting memory card 116 inserting PC Card 224 installing memory card 116 installing PC card 224 memory card slots 115 PC Card eject button 3, 225 PC Card slot 3, 224 reinstalling PC Card 224 removing memory card 116 removing PC Card 225 replacing PC Card 224 troubleshooting memory card 249 troubleshooting PC Card 256 carrying case 14 CD adding tracks to your library 99 cleaning 242 copying 112 creating data 104 creating music 108 drive 89 editing track information 98 inserting 90 playing audio with MusicMatch 94 playing music 91, 93 troubleshooting 240 CD Copier 112 CD drive 5 activity indicator 90 eject button 90 identifying 89 manual eject hole 90

status indicator 22 troubleshooting 240 using 89 CD Player 93 CD-RW See CD **CD-RW** drive See DVD/CD-RW drive cellular phone memory cards 115 Certificate of Authenticity 11 cleaning audio CD 242 case 209 CD 242 computer exterior 209 computer screen 210 DVD 242 keyboard 209 LCD panel 210 mouse 210 screen 210 clicking 30 clipboard 53 close button 50 closing program 50, 65 unresponsive program 21 window 50, 65 color changing depth 156 changing desktop 159 changing number of 156 changing scheme 159 connecting AC adapter 16 camera 117 digital camera 117 external keyboard 24 keyboard 24 modem 32 printer 34, 190 scanner 34, 190

surge protector 18 to Ethernet 33 to Internet 34. 70 to network 33 to Web site 72 connections audio 3 digital camera 3, 34 Ethernet 6, 33 external audio 3 external speakers 3 headphone 3 keyboard 3 microphone 3 modem 6, 32 monitor (VGA) 6 mouse 3 network 6, 33 parallel 6, 34 power 6, 16 printer 3, 6 scanner 3 speaker 3 USB 3, 34 VGA 6 Zip drive 3 copying CD 112 files and folders 53, 65 text and graphics 65 copyright notice 276 creating data CD 104 desktop icons 48 desktop shortcuts 48 documents 61 folders 52 MP3 files 96 music CD 108 music files 96 startup diskette 196 **Customer Service** Accounting 261

Sales 261 Warranty 261 customizing 155 cutting files and folders 53, 65 text and graphics 65

D

default printer 257 defragmenting hard drive 205 deleting files and folders 47, 55, 56, 65, 202 desktop 46 adding icons 48 adding shortcuts 48 adjusting settings 156 changing background 162 changing color depth 156 changing color scheme 159 changing number of colors 156 selecting screen saver 165 using 47 using Start menu 47 device drivers See drivers dialing codes 150 digital camera connecting 117 USB port 3 digital photography connecting a digital camera 117 using memory card reader 115 directional keys 25 Disk Cleanup 202 Disk Defragmenter 205 diskette creating startup 196 inserting 87 troubleshooting 243 write-protecting 197 diskette drive 4, 87 eject button 87 slot 87

status indicator 22 troubleshooting 243 using 87 display changing resolution 158 settings 156 switching 26 troubleshooting 244 using screen saver 165 Do More With Gateway 40 documentation eSupport 42 Gateway Web site 42 help 36 HelpSpot 36 online help 41 documents creating 61 opening 63 printing 64 saving 62 double-clicking 30 downloading files 73 dragging 31 drivers 215 reinstalling 215 updating 43, 217 drives backing up files 207 CD 89 checking for errors 203 checking for free space 201 defragmenting 205 deleting files 202 diskette 4, 87 DVD 5, 89 DVD/CD-RW 5, 89, 104 hard drive 7, 231 identifying drive types 89 replacing hard drive 231 sharing 172 status indicators 22 troubleshooting 240, 243, 246

types 89 viewing contents 51 viewing files and folders 51 DSL modem 34, 68, 176, 179 DVD cleaning 242 creating data 104 inserting 90 playing 102 troubleshooting 240 DVD drive 5 activity indicator 90 eject button 90 identifying 89 manual eject hole 90 status indicator 22 troubleshooting 240 using 89 DVD/CD-RW drive 5 activity indicator 90 eject button 90 identifying 89 manual eject hole 90 status indicator 22 troubleshooting 240 using 89, 104

Ε

eject button diskette drive 87 DVD 90 electrostatic discharge (ESD) 226 e-mail 69, 74 address 74 button 28 checking for messages 75 sending 74 transferring settings from old computer 190 emergency startup diskette 196 EmPower power adapter 139 Error-checking 203 eSupport 12, 13 using 43 Ethernet connecting 33 jack 6, 33 turning wireless Ethernet on or off 183 wired network 174, 175 wireless network 174, 178 external monitor 6, 26 EZ Pad touchpad *See* touchpad

F

fan 6 Fast Ethernet 175 faxes 119 automatically canceling 131 canceling 129 configuring Fax 121, 124 failed transmission 131 installing Fax 120 receiving and viewing 129 retrying 130 sending 125 sending from program 128 sending scanned image 128 setting up cover page template 127 troubleshooting 252 files backing up 207 copying 53, 65 cutting 53, 65 deleting 47, 55, 56, 65, 202 downloading 73 finding 56, 58 moving 53 opening 30, 47 pasting 53, 65 recovering 55 renaming 65 searching for 56, 58, 187 transferring 151, 187 troubleshooting 245

types 187 viewing list 51 Files and Settings Transfer Wizard 186 finding files and folders 56, 58, 187 HelpSpot topics 38 specifications 12 floppy disk See diskette Fn key 25, 26 folders copying 53, 65 creating 52, 53 cutting 53, 65 deleting 47, 55, 65 finding 56, 58 moving 53 opening 30, 51 pasting 53, 65 recovering 55 renaming 65 searching for 56, 58 viewing list 51 fragmentation 205 function keys 25

G

game multi-player 173 Gateway eSupport 12, 13 model number 7, 10 serial number 10, 12 Web address 42 Web site 42 gateway.your.way dial-up server 251 gigabit Ethernet 175

Η

hard drive backing up files 207 bay 7 checking for errors 203

checking for free space 201 defragmenting 205 deleting files and folders 202 indicator 22 installing 231 replacing 231 scanning for errors 203 troubleshooting 246 headphone jack 3 help button 28 online 41 using 36 HelpSpot 36 playing video 39 searching 38 starting 36 Using your computer link 37 Hibernate mode 140, 145 home office network 171 hot-swapping 34, 224 hyperlinks 71

I

IEEE 802.11 174, 178 using while traveling 150 indicators See status indicators inkjet printer 14 installing battery 137 camera 117 cards 224 device drivers 215 devices 34, 242 digital camera 117 drivers 215 Fax 120 hard drive 231 InterVideo DVD player 103 memory 227 Microsoft Fax 120 PC Card 224

peripheral devices 34, 190 printer 34, 190 programs 192, 218 scanner 34, 190 software 192, 218 Windows 220 Internal wireless label 11 Internet 68 account 69 broadband connection 34 button 28 connecting to 70 downloading files 73 requirements to access 69 sharing access 172 transferring settings from old computer 189 troubleshooting 247 Internet connection sharing 172 troubleshooting 247, 251 Internet radio 101 Internet service provider (ISP) 68, 69 connecting to 70 disconnecting from 70 setting up account 69 transferring settings from old computer 189 InterVideo DVD Player 102 **IRQ conflicts 242** ISP *See* Internet service provider

J

jacks See connections

Κ

Kensington cable lock 151 lock slot 5 key combinations 26 keyboard 8, 9 buttons 24

cleaning 209 connecting 24 features 24 shortcuts 65 troubleshooting 248 USB port 3 keys application 25 arrow 25 battery status 26 Break 26 brightness 25, 26, 27 directional 25 Fn 25. 26 function 25 LCD brightness 25, 27 LCD/CRT 26 navigation 25 numeric keypad 25 Pad Lock 26 Pause 26 power status 26 Scroll Lock 26 Standby 26 Status 26 system 25 system key combinations 26 toggle display 26 volume control 25 Windows 25

L label

internal wireless 11 Microsoft Certificate of Authenticity 11 model number 7, 10 serial number 10 wireless networking 11 laser printer 14 latch battery 7 LCD panel release 2 LCD brightness system keys 25 LCD panel changing resolution 158 cleaning 210 release latch 2 switching display 26 troubleshooting 244 using screen saver 165 LCD/CRT system key 26 lights See status indicators line protector 150 line tester 150 links 71 lock cable 151 Kensington cable 5

Μ

maintenance 193 backing up files 207 checking for drive errors 203 checking hard drive space 201 cleaning case 209 cleaning component exteriors 209 cleaning computer display 210 cleaning keyboard 209 cleaning mouse 210 creating startup diskette 196 defragmenting 205 deleting files 202 suggested schedule 194 using Scheduled Task Wizard 207 virus protection 198 maximize button 50 Media Player 85, 91 memory 14 adding 227 bay 7, 227 installing 227 replacing 227 troubleshooting 249 upgrading 227

memory card reader 4 memory card types supported 116 status indicator 22 using 115 memory cards See cards menu bar 50 messages checking e-mail 75 sending e-mail 74 microphone jack 3 Microsoft Certificate of Authenticity 11 Fax 119 Wordpad 61 MIDI file 85 mini PCI bay 7 minimize button 50 model number 10, 151 modem 69 cable 34. 68 connecting 32 connection speed 251 DSL 34, 68 international adapter 150 jack 6, 32 protecting from power surge 18 troubleshooting 249 monitor See LCD panel monitor (VGA) port 6 mouse cleaning 210 troubleshooting 254 USB port 3 moving files 53 files from old computer 185, 187 folders 53 Internet settings from old computer 189 pointer 30 screen objects 31

settings from old computer 185 MP3 file creating 96 editing track information 98 playing 85 streaming 173 MP3 player memory cards 115 MPEG file See MP3 file 85 multi-function buttons 8, 28 multimedia adjusting volume 78, 81 playing audio CD 91, 93 playing DVD 102 recording audio 83 using CD drive 89 using diskette drive 87 using DVD drive 89 using recordable CD drive 89 using Windows Media Player 85, 91, 102 multi-player game playing 173 music See audio music library building 99 changing settings 100 **MusicMatch** building music library 99 changing library settings 100 creating MP3 files 96 creating music files 96 editing track information 98 listening to Internet radio 101 playing audio CD 94 muting sound 27, 78, 81 My Computer button 28

Ν

navigation keys 25 network

jack 6, 33 troubleshooting 255 network equipment shopping list 177, 180, 182 networking access point 179, 180 ad hoc 181, 182 computers 171 data transfer speed 175, 178 Ethernet 174, 175 games 173 internal wireless label 11 peer-to-peer 181, 182 selecting connection type 174 sharing devices 173 sharing drives 172 sharing Internet connections 172 sharing printers 173 signal strength 178 streaming audio 173 streaming video 173 turning off wireless Ethernet 183 turning on wireless Ethernet 183 wired connections 174, 175 wireless connections 174, 178 non-technical support Accounting 261 Sales 261 Warranty 261 Norton Antivirus 198, 199 numeric keypad 25 numeric keypad status indicator 23

0

online help 36, 41 button 28 opening documents 63 files 30. 47 folders 30, 51 LCD panel 2 notebook 2 programs 30, 47

shortcut menu 31 Pad Lock

Ρ

status indicator 23, 26 system key 26 parallel port 6, 34 password 151, 255 pasting files and folders 53, 65 text and graphics 65 pause text scrolling 26 PC Cards See cards PC Doctor 239 PCMCIA Cards See cards PDA memory cards 115 peer-to-peer networking 181, 182 peripheral devices 34 photography *See* digital photography playing audio CD 91. 93 audio CD with MusicMatch 94 audio file 83, 85 DVD 102 Media Player file 85 multimedia files 85 multi-player games 173 music CD 91, 93 Windows Media Player file 85 Plug and Play devices USB support for 34 pointer 29 moving 30 ports See connections power AC adapter 16, 139 advanced settings 141, 144 alarms 141, 143

automobile/airplane adapter 139 battery 21, 134, 135, 136, 137, 139 button 9, 19, 26, 141 changing modes 140 changing schemes 141 changing settings 141 connector 6, 16 conserving battery power 139 damaged cord 16, 17 EmPower adapter 139 extending battery life 139 Hibernate mode 140, 145 indicator 2, 19 international adapter 152 management 133, 139 schemes 141 source problems 18 SpeedStep settings 147 Standby mode 19, 140 Standby/Resume 26 status box 26 status indicator 2 surge protector 18 troubleshooting 256 turning off notebook 20 turning on notebook 19 power adapter airplane 14 automobile 14 printer default 257 inkjet 14 installing 34, 190 laser 14 parallel port 6 sharing 173 troubleshooting 257 USB port 3 printing documents 64 programs closing 65 closing unresponsive 21

installing 192, 218 opening 30, 47 reinstalling 192, 218

R

radio listening with MusicMatch 101 radio approval authorities 150 radio frequency wireless connections 150 RAM See memory rebooting notebook 21 recalibrating battery 136 recharging battery 135 recordable drive activity indicator 90 eject button 90 identifying drive 89 manual eject hole 90 status indicator 22 troubleshooting 240 using 89, 104 recording audio file 83 CD tracks 96 data CD 104 music CD 108 recovering files and folders 55 Recycle Bin 47 deleting files and folders 55 emptying 56 recovering files and folders 55 re-dialing telephone 130 reinstalling drivers 215 peripheral devices 190 printer 190 programs 192, 218 scanner 190 software 192, 218 Windows 220 See also installing

removing files and folders 47, 55, 56, 65. 202 renaming files and folders 65 replacing See installing reset hole 7 using 21 resetting notebook 21 resolution changing 158 restarting notebook 21 Restoration CDs 214 restoring files and folders 55 right-clicking 31 rocker switch 29, 30 changing settings 168 router 176, 177 Roxio Easy CD Creator 104

S

safety caring for computer 194 general precautions 265 guidelines for troubleshooting 238 static electricity 226 saving documents 62 ScanDisk 203 scanner installing 34, 190 USB port 3 scanning drive for errors 203 for viruses 198 Scheduled Tasks Wizard 207 screen adjusting settings 156 changing color depth 156 changing number of colors 156 changing resolution 158 saver 165 troubleshooting 244, 259 screen objects getting information 31

moving 31 selecting 30 Scroll Lock status indicator 23, 26 system key 26 Search utility 59 searching for files and folders 56, 58, 59, 187 in HelpSpot 38 security features Kensington cable lock 5 security while travelling 151 serial number 10, 12, 151, 192 setting up safety precautions 266 sharing devices 173 drives 172 Internet connection 172 printer 173 See also networking shortcut menus accessing 31 shortcuts adding to desktop 48 buttons 28 closing programs 65 closing windows 65 copying 65 cutting 65 deleting files and folders 65 keyboard 65 opening menu 31 pasting 65 renaming files and folders 65 selecting adjacent items in list 65 selecting items in list 65 switching between files, folders, or programs 65 shutting down notebook 20, 21 small office network 172 SO-DIMM 227 software

See programs sound adjusting 27, 78, 81 controls 25, 78, 81 muting 27, 78, 81 troubleshooting 259 Sound Recorder making audio recordings 83 playing file 83 speakers built-in 2 jack 3 specifications 12 SpeedStep technology 141, 147 Standby mode 19, 26, 140 Standby system key 26 Start button 47 Start menu 47 starting notebook 19 programs 30, 47 startup diskette 196 password 151 static electricity 226 status indicators 9 battery charge 2, 17, 134 Caps Lock 22 CD 22 diskette drive 22 drive activity 22 **DVD 22** DVD/CD-RW 22 hard drive 22 memory card reader 22 numeric keypad 23, 26 Pad Lock 23, 26 power 2 recordable drive 22 Scroll Lock 23, 26 streaming audio and video 173 support tool PC Doctor 239

surge protector 18 Suspend 26 system identification label 7, 10 system keys 25 combinations 26

Т

taskbar 47 **Technical Support 261** technical support automated troubleshooting 261 eSupport 12, 13 FaxBack support 261 resources 260 Technical Support 261 tips before contacting 260 tutorial service 261 telephone acoustic handset coupler 150 automatically canceling fax 131 canceling fax 129 configuring Fax 121, 124 installing Fax 120 line protector 150 line tester 150 receiving and viewing faxes 129 retrying fax 130 sending fax 125 sending faxes from program 128 sending scanned image fax 128 setting up fax cover page template 127 using Fax 119 telephone support 260 title bar 50 touchpad 9 buttons 29, 30 changing settings 167 clicking 30 double-clicking 30 dragging screen objects 31 moving pointer 29, 30 moving screen objects 31

opening files, folders, and programs 30 opening shortcut menu 31 right-clicking 31 rocker switch 29, 30 selecting screen objects 30 training CD 263 classroom 263 Gateway Learning Libraries 263 Learn@Gateway 263 transferring files from Internet 73 files from old computer 185, 187 Internet settings from old computer 189 settings from old computer 185 travel tips 149 troubleshooting audio 259 automated system 261 CD drive 240 cleaning CD 242 cleaning DVD 242 device installation 242 diskette drive 243 display 244 DVD drive 240 DVD/CD-RW drive 240 Error-checking 203 faxed answers 261 faxes 252 files 245 gateway.your.way dial-up server 251 general guidelines 239 hard drive 246 Internet connection 247, 251 IRQ conflict 242 keyboard 248 LCD panel 244 memory 249 memory card reader 249 modem 249

mouse 254 network 255 passwords 255 PC Cards 256 PC Doctor 239 power 256 printer 257 reinstalling drivers 215 safety guidelines 238 screen 244, 259 screen area 244 screen resolution 244 sound 259 support tool 239 technical support 260 telephone support 260 video 259 Web site connection speed 248 turning off notebook 20. 21 wireless Ethernet 183 turning on notebook 19 wireless Ethernet 183 tutoring fee-based 262

U

updating device drivers 43, 217 Norton AntiVirus 198 upgrading 223 USB port 3, 34 user accounts adding in Windows XP 169 switching in Windows XP 169

V

video playing 85, 102 streaming 173 troubleshooting 259 video file streaming 173 virus protecting against 198 removing with Norton AntiVirus 198 volume adjusting 27, 78, 81 adjusting modem 253 controls 25, 78, 81 muting 27, 78, 81 system keys 27 troubleshooting 259

W

waking up notebook 19 WAV file 85 Web browser 69, 71 button 28 Web page 71 Web site 71 connecting to 72 downloading files 73 Gateway 42 window 49 close button 50 closing 50, 65 maximize button 50 menu bar 50 minimize button 50 title bar 50 Windows clipboard 53 desktop 46 Files and Settings Transfer Wizard 186 installing 220 Product Key Code 11 reinstalling 220 reinstalling drivers 215 Search utility 59 updating drivers 217 Windows key 25 Windows Media Player 85, 91, 102

wired Ethernet network 174, 175 equipment list 177 example 176 wireless Ethernet label 11 using while traveling 150 wireless Ethernet network 174, 178 access point equipment list 180 access point example 179 ad hoc equipment list 182 ad hoc example 181 peer-to-peer equipment list 182 peer-to-peer example 181 turning off 183 turning on 183 Wordpad 61 World Wide Web (WWW) 71 downloading files 73 write-protection for diskettes 197

Ζ

Zip drive 207 USB port 3

Before You Start!



Connect to AC power

- Connect the AC adapter to the notebook.
- Connect the AC adapter to the power cord and the power cord to an electrical outlet. You can use the notebook while the adapter is connected to AC power.

