 



**SANYO**

Digital Movie Camera  
VPC-HD1AEX  
VPC-HD1A


# Xacti

## QUICK GUIDE

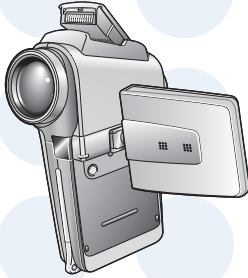

Printed in Japan  
1AG6P1P3127- SX819/EX, U (0806CR-SY)


### STEP 1 RECORD A VIDEO CLIP

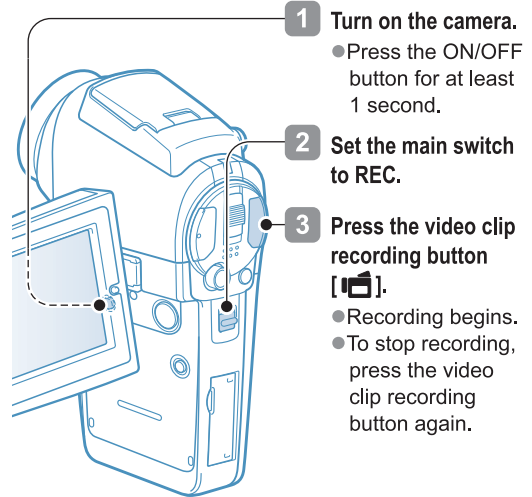


#### If the image is not captured...

Is there enough power left in the battery? Recharge the battery pack.  
(See "CHARGE THE BATTERY PACK" on the reverse side.)  
Is an SD Memory Card installed in the camera? Install a card.


### STEP 2 CAPTURE A STILL IMAGE

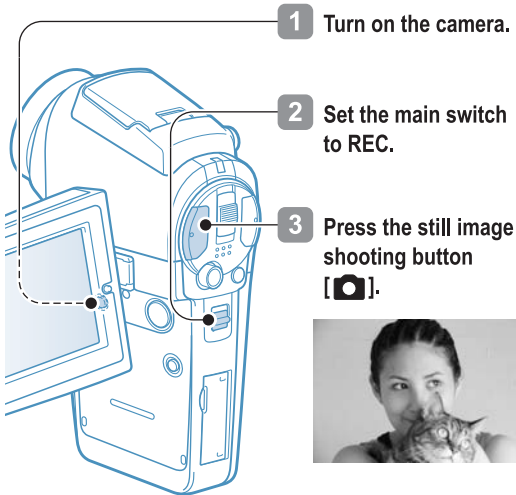


You can capture a still image while recording a video clip.

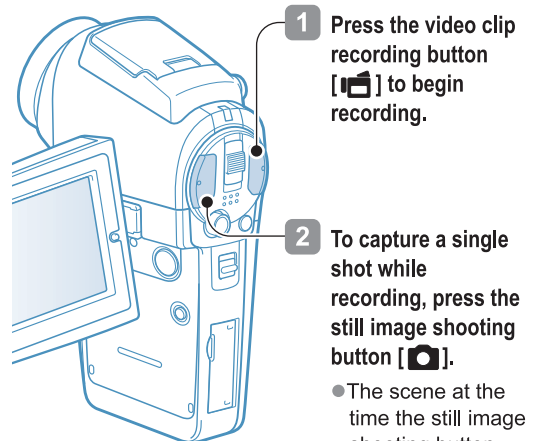

## STEP 3 VIEWING IMAGES

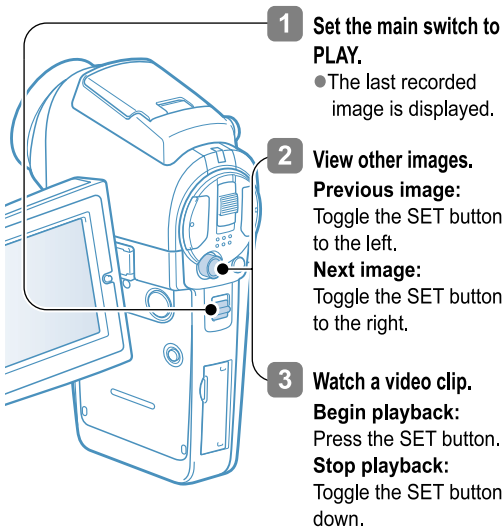

## STEP 4 ERASING IMAGES

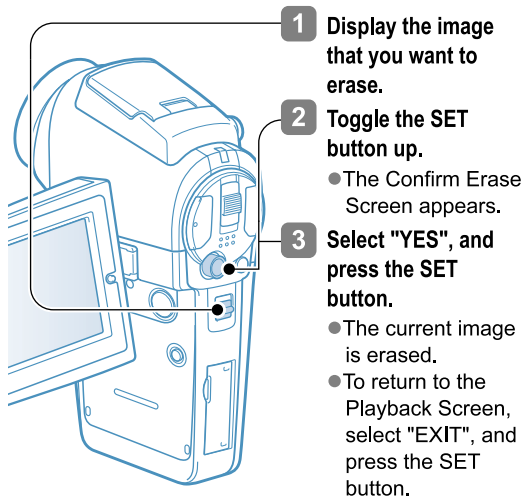


### Did your photos turn out the way you hoped?

Even if you make a mistake, it's easy to erase the pictures you aren't satisfied with. Unlike film cameras, with a digital camera you can take all the photos you want, keep the ones you like and delete the rest.

## CHARGE THE BATTERY PACK

Use the supplied AC adaptor to charge the battery pack while it is installed in your camera.

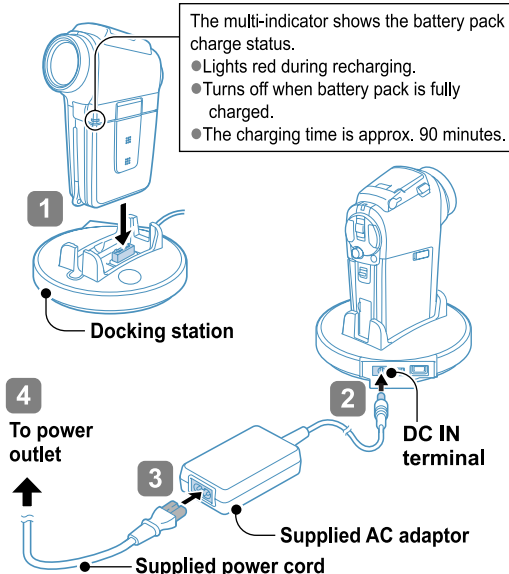

## CAMERA SHORTCUTS

Some of the camera functions can be accessed using the following shortcuts, as well as from the Setting Screen menus.

### ■ Shooting mode

#### Adjust the monitor brightness:

Press and hold the MENU button for at least 1 second.

#### Instant review playback:

Press the SET button.

#### [] Adjust the exposure:

Toggle the SET button to the right.

#### [] Change the focus range:

Toggle the SET button down.

#### [] Lock the focus:

Toggle the SET button up.

### ■ Playback mode

#### Display the image properties:

Press the MENU button for about 1 second.

#### Erase an image:

Toggle the SET button up.