

About this manual

Dear customer,

Thank you for choosing our product.

Please read through these instructions carefully.

Please pay particular attention to the following safety instructions.

These instructions are part of this product.

Please retain these instructions for future reference.

Safety Instructions

Electrical devices are not for children. Never allow children to use electrical devices unsupervised.

Batteries can be extremely dangerous if swallowed. Therefore keep this device and batteries out of reach of small children.

If a battery is swallowed, seek medical help immediately.



Carrying strap

To avoid danger of suffocation, do not put the carrying strap around a child's neck.



Proper recycling

Batteries and packaging material should not be disposed in domestic waste.

Batteries must be handed in to a used-battery collection point.

Separated disposal of packaging material cares for the environment.



Dampness and Cleaning

This product is not waterproof! Do not submerge the player in water or let it come in contact with water. If water penetrates the player, it can cause serious damage.

Do not use cleaning agents, which contain alcohol, ammonia, benzene or abrasives, as these can damage the player.



Heat

Do not expose the device to direct sunlight. Ensure that the device is not exposed to any direct heat sources, such as radiators or open fires. Ensure that the ventilation slots of the device are not covered.

Important information for hearing protection

Caution:

Your hearing is important to you and us. Therefore please be careful when using this device. We recommend you to:

Avoid high volumes.

If the device is to be used by children, make sure that it is not set too loud.

Attention!

Volumes that are too high can cause irreparable damage to children's hearing.

SETTING A SAFE VOLUME LEVEL

If you continually listen to loud music, your hearing gradually adapts to it and gives you the impression that the volume is lower.

What seems normal to you can actually be damaging.

To protect yourself from this, set the volume to a low level.

Increase the volume slowly, until you can hear clearly and without problems.

Damage to your hearing can be extensive and cannot be reversed.

If you notice a problem with your ears, please consult a doctor.

Do not use the device when in traffic.

Traffic calls for your increased attention.

Wearing headphones and playing music too loud distracts you from the traffic.

Surrounding noises cannot be heard.

Accidents can result from lack of attention.

Interference with other equipment

If TV or radio interference occurs during use, place the device in a different location in the room/building.

Player illustration



- | | |
|---------------|----------------|
| 1. HOLD | 2. A-B/REC |
| 3. Play/ Stop | 4. NEXT |
| 5. Line-in | 6. String hole |
| 7. VOL+ | 8. Earphone |
| 9. MENU | 10. Previous |
| 11. VOL- | 12. LCD |
| 13. MIC | 14. USB |

SCREEN DISPLAY

Features

- Supports MP3 and WMA
- Lyrics show in step
- Screen saving
- 6 EQ
- Digital recorder
- FM radio
- A-B segment repeat
- Line-in

- Shutdown automatically
- Graphic menu
- Removable disk

WIN98 User

As for WIN98 user, please install the software on the CD provided, before connecting your player. This will install the necessary drivers.

- 1、 Place the CD in the CD-ROM drive of your computer. If the CD does not start automatically, open Windows Explorer.
 - a.) Double click <My Computer> .
 - b.) Select the CD ROM drive, in which the installation CD is inserted and double click to confirm.
 - c.) Run the **Setup.exe** file on the CD-ROM by double clicking on it.
- 2、 The Setup Wizard guides you through the installation, click on **Next>**.

3、 When it appears the following imagine, click on **Yes** to continue.

4、 Select a drive on which you would like to install the program and click on **Next>**.

- 5、 Click on **Next>** to start the installation.
- 6、 The program and the device drivers will now be installed onto your computer.
- 7、 After successful installation, close the program by clicking on **Finish**.

When you connect the player to the USB Port of your PC, the player is automatically detected by the operating system and installed.

Upload and download

When connects this device to PC, it will enter USB mode and display as the following.

The operating system detects the player as a **USB removable storage device** e.g.(H:) in the **My Computer**.

You can now work with your player as you would with a normal drive, i.e. you can copy, rename or delete files or create folders.

Do not remove the player from your USB port until the copying process is complete.

Please do not connect the player to PC when music is playing.

HOLD

Push the HOLD key to the ON position, to lock other keys to avoid accidental pressing.

The screen will display the message "LOCKED".
And there will be a HOLD icon on the screen.

In locked state, the player will make no response when you press other keys.

POWER ON

Press PLAY key to start the player.
Now the player is ready to play music.

Please make sure that the HOLD switch is on the OFF opposite.



If you press PLAY key to start the player when the HOLD switch is ON, the player will show the message “LOCKED” and then shut down automatically.

Shutdown

Press and hold PLAY key for about 3 seconds to turn off the device.
If there is no operating in the off time set, or the sleep time set elapsed, the player will shut down automatically.

Main menu

Press MENU key to show the main menu.
Structure of the main menu:

MUSIC
VOICE
FM
RECORD
SET
DELETE
ABOUT
EXIT

MUSIC: Music mode.

VOICE: To playback the recording files.

FM: To receive local FM program.

RECORD: Record mode

SET: System settings.

DELETE: To delete files.

ABOUT: To get the information about this player.

Press PREVIOUS or NEXT key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

Music

Press MENU key to show the main menu.
Select to enter the music mode, the player will be ready to play music.

Press PREVIOUS key or NEXT key to select the music you want to play.
Press VOL+ key or VOL- key to adjust the volume.
After selecting the music, press PALY key to play.
Now you can enjoy your music.

When the music is playing,
Press PLAY key to stop temporarily, and press PLAY key again to continue.
Long press PLAY key for about 1 second to stop playing.
Press PREVIOUS or NEXT key to play previous or next track.
Press and hold PREVIOUS or NEXT key to quickly backward or fast forward.
Press VOL+ key or VOL- key to adjust the volume.
Press A-B/REC key to set A-B segment repeat.
Press MENU key to show main menu.

A-B Repeat

When the music is playing, press A-B/REC key to set A-B segment repeat.

Press A-B key to set the beginning point of the A-B segment. It will show the icon "A-" on the LCD.

Press A-B key again to set the end point of the A-B segment. It will show the

icon “A-B” on the LCD.

Then the player begins to play the A-B segment again and again, until you press A-B key for the third time to exit A-B segment repeat.

Lyrics show in step

This player supports “*.LRC” file.

Keep the music file and LRC file in the same folder with the same name.

For example, the name of the music file: Rhythm of the rain.mp3,

the name of the LRC file: Rhythm of the rain.lrc

Then the lyrics will show in step when music is playing.

RECORD

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "RECORD".

Press MENU key to start to record.

Press PLAY key to stop recording temporarily and press again to continue.

Press MENU or A-B/REC key to stop recording and save the recording file.

The recording files are saved in WAV format, named as V***.WAV.

When you stop the recording, the player will return to VOICE mode automatically.

User can also press A-B/REC key to start new recording in the VOICE mode.

VOICE

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "VOICE".

Press MENU key to enter the VOICE mode.

If there are any recording files in the player, the LCD will show as the following:

Press PREVIOUS key or NEXT key to select the recording file you want to playback.

Press PLAY key to play.

If there is no recording file in the player, the screen will give the message "> NO FILES<"

Press A-B/REC key to start new recording.

FM radio

Press MENU key to show the Main Menu.
Press PREVIOUS or NEXT key to select the item "FM".
Press MENU key to enter the FM mode.



Press MENU key to select from the three working mode, Radio, Scan and Store.

Radio
Scan
Store
Exit

Press A—B/REC key to record current FM program.
The FM recording files are saved in WAV format, named as F***.WAV。

SET

Press MENU key to show the Main Menu.
Press PREVIOUS or NEXT key to select the item "SET".
Press MENU key to enter the SET interface.

Structure of the SET submenu:

EQ
Play Mode
Screen Savings
Power set
Record Set
Language
Exit

Press PREVIOUS key or NEXT key to select.
Press MENU key to confirm.
Press PLAY key to exit.
If there is no any operation in 8 seconds, the system will exit automatically.

EQ

Press MENU key to show the Main Menu.
Press PREVIOUS or NEXT key to select the item "SET".
Press MENU key to enter the SET interface.
Press PREVIOUS or NEXT key to select the item "EQ".
Press MENU key to enter the EQ set interface.

This device offers 6 kinds of EQ modes.

Structure of the EQ submenu menu:

CLASSIC
POP
BASS
NORMAL
ROCK
JAZZ

Press PREVIOUS key or NEXT key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

PLAY MODE

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "PLAY MODE".

Press MENU key to enter the PLAY MODE set interface.

This device offers 6 kinds of repeat modes.

Structure of the EQ submenu menu:

NORMAL
REPEAT ONE
REPEAT ALL
SHUFFLE
SHUF & REPE
Intro

NORAML: Play all tracks for once then stop.

REPEAT ONE: Play the single track repeatedly.

REPEAT ALL: Play all tracks repeatedly.

SHUFFLE: Play all tracks for once at random then stop.

SHUF & REPE: Play all tracks at random repeatedly.

Intro: Play the first 10 seconds of each track.

Press PREVIOUS key or NEXT key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

User can also press short-cut key A—B/REC to adjust play mode in idle state.

Screen Savings

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "Screen Savings".

Press MENU key to enter the Screen Savings interface.

There are 7 items in Screen Savings, 5, 10, 20, 30, 40, 50, ∞。
5, 10, 20, 30, 40, 50 mean the screen saving will start to work after the time set if there is no any operation.

∞ means to cancel the screen saving.

Press VOL+ key or VOL- key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

Power Set

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "Power Set".

Press MENU key to enter the Power Set interface.

There are 4 items in Power Set mode, DISABLE, 2MINS, 5MINS and 10MINS. 2MINS, 5MINS and 10MINS mean the player will shutdown automatically in 2, 5, or 10 minutes in idle state, if there is no any operation. Disable means never shutdown automatically.

Press VOL+ key or VOL- key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

Record Set

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "Record Set".

Press MENU key to enter the Record Set interface.

Structure of the Record Set:

Press VOL+ key or VOL- key to select the item.

Press MENU key to adjust.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

LINE IN

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "Record Set".

Press MENU key to enter the Record Set interface.

Select the item Source from the Record Set interface.

Press PLAY key to choose the item LINE IN.

Connect the player to the music device through the Line-in cable.

Choose to enter Record mode to record.

Language

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "SET".

Press MENU key to enter the SET interface.

Press PREVIOUS or NEXT key to select the item "LANGUAGE".

Press MENU key to enter the Language Set interface.

This player offers 7 kinds of languages.

Structure of the Language submenu:

ENGLISH & GBK
ENGLISH & BIG5
中文&简体
中文&繁体
ENGLISH & KOR
ENGLISH & JPN
ENGLISH & EUR

Press PREVIOUS key or NEXT key to select.

Press MENU key to confirm.

Press PLAY key to exit.

If there is no any operation in 8 seconds, the system will exit automatically.

DELETE

Press MENU key to show the Main Menu.

Press PREVIOUS or NEXT key to select the item "DELETE".

Press MENU key to enter the DELETE interface.

PRESS VOL+ or VOL- key to select the file type you would like to delete,
Music or Voice?

Music
Voice
Exit

Press MENU key to confirm to enter the file deletion interface.

Press VOL+ or VOL- key to select "YES".

PRESS MENU to confirm.
Press PLAY key to exit.

ABOUT

Press MENU key to show the Main Menu.
Press PREVIOUS or NEXT key to select the item "ABOUT".
Press MENU key to enter the information about the player.

You can see the memory information and the reversion of the firmware in ABOUT interface.

注意此处删除了一个功能

Accessory

Please check that the following accessories have been provided:

Headphone
CD
USB cable
Line-in cable
User Manual
Carrying strap

Specifications

Memory	64/128/256MB
Battery	AAA battery
OLED	128*64 dots matrix
Dimension	73*30*20mm
S/N radio	90dB
Frequency range	20Hz – 20KHz
File type	MP3 / WMA
WMA Bit Rate	32 Kbps - 384 Kbps
MP3 Bit Rate	8 Kbps - 320 Kbps