

---

 
 
# TomTom ONE



## 1. What's in the box

---

### 1 Your TomTom ONE

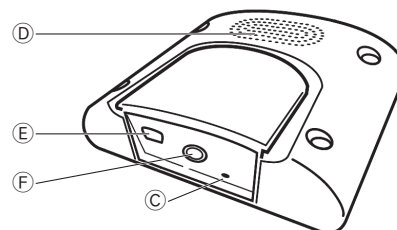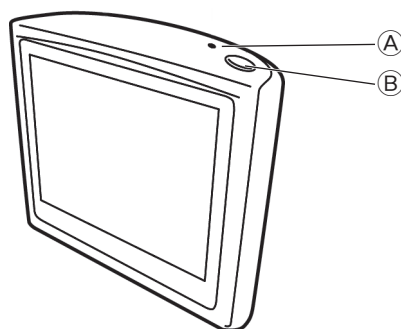

- Ⓐ Charging light
- Ⓑ On/off button
- Ⓒ Reset button
- Ⓓ Speaker
- Ⓔ USB connector
- Ⓕ RDS-TMC connector


### 2 Car charger



 
### 3 Documentation pack



### 4 Windscreen holder

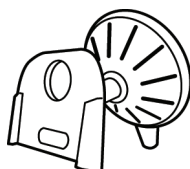

### 5 USB cable

 

## 2. Before you start...

---

### Safety Notice

Your TomTom ONE contains a GSM module which can interfere with electrical devices such as cardiac pacemakers, hearing aids and aviation equipment.

Interference with these devices may endanger the health or life of others.

Do not use near unprotected electrical units nor in areas where the use of mobile telephones is prohibited, such as hospitals and airplanes.

### Switching on and off

To switch your TomTom ONE on or off, press and hold the On/Off button for 2 seconds. The first time you switch on, it may take a short while for your device to start.

---

**Note:** *In rare cases, your ONE may not start correctly. If this happens, press the reset button, then switch on the device again.*

---

### Setting up

To set up your TomTom ONE you need to answer a few questions by tapping the screen.

---

**Important:** Take care to select the correct language, since the language you choose will be used for all menus and written instructions.

---

### Battery notes

For information on connecting your computer, see **Using TomTom HOME** on page 37.

---

**Note:** *Your TomTom ONE uses a small amount of battery power to remember the last screen being shown when the device is switched off.*

*If you do not charge your ONE for a prolonged period of time, the next time you start your ONE it will show the default starting screen. All other device settings will still be maintained.*

---

## Improving reception

If your TomTom ONE takes longer than 5 minutes to find your current position, make sure that the device is in an open space away from tall objects, such as buildings or trees.

When you connect your TomTom ONE to your computer, you can use TomTom HOME to download information about GPS satellite positions during the next 7 days. This helps your ONE to find your position faster.

---

**Important:** Some vehicles have heat reflective shielding in the windscreen. This may prevent your ONE from locating your current position.

---

## Windscreen holder

Use the windscreen holder to install your TomTom ONE inside your car.

To attach the holder, press the suction cup firmly to the windscreen in your car, in an area of the windscreen where the glass is flat.

Make sure that both the holder and your windscreen are clean and dry before you attach the holder. Place the holder so that it does not interfere with your view of the road.

## Take care of your TomTom ONE

Never leave your TomTom ONE or accessories on view when you leave the car or they may become an easy target for thieves.

You can set a password for your TomTom ONE which must be entered every time you start your ONE. For more information, see **Using TomTom HOME** on page 37.

It is important to take care of your ONE.

- Your ONE is not designed for use in extreme temperatures and any such exposure may cause permanent damage.
- Do not open the casing of your ONE under any circumstances. Doing so may be dangerous and will invalidate the warranty.
- Wipe or dry the screen of your ONE using a soft cloth. Do not use any liquid cleaners.

### 3. Making your first journey

 
Planning a route with your TomTom ONE is easy. To plan your first route, follow the steps below.

**Important:** You should always plan your journey before you start driving. It is dangerous to plan a route while driving.


1. Tap the screen to bring up the Main Menu.

**Note:** The buttons on your ONE are shown in full colour unless a button is currently unavailable. For example, the button named **Find alternative...** in the Main Menu is not available until you have planned a route.

2. Tap **Navigate to...**

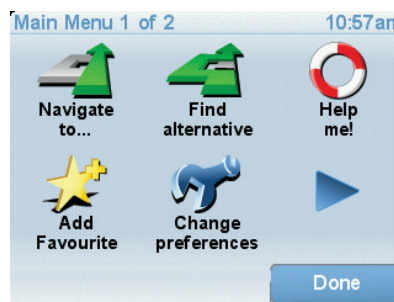

 3. Tap **Address**.

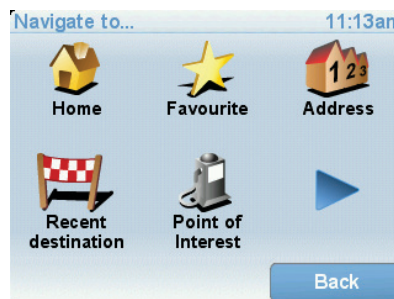

When you enter an address, you can choose from the following options:

- **City centre** - tap this button to set your destination as the centre of a city or town.
- **Street and house number** - tap this button to set an exact address as your destination.
- **Postcode** - tap this button to enter a postcode as your destination.
- **Crossing or intersection** - tap this button to set your destination as the point where two streets meet.

For your first journey, we will enter an exact address.

4. Tap **Street and house number**.



---

**Note:** When planning a trip for the first time your ONE asks you to choose a country. Your choice is saved and used for all routes you plan.

You can change this setting at any time by tapping the country flag.

---

5. Start to type the name of the town where you want to go.

 


As you type, the names of the towns that match what you have typed are shown. When your destination appears in the list, tap the name of the town to set the destination.

6. Start to type the name of the street and select it when it is shown.

As with the name of the town, the names of the streets that match what you have typed are shown. When your destination appears in the list, tap the name of the street to set the destination.

7. Now enter the house number of your destination and then tap **Done**.

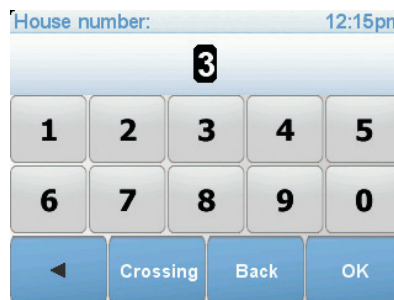


8. Your ONE asks if you need to arrive at a particular time. For this exercise, tap **NO**.

The route is calculated by your ONE.

9. When the route has been calculated, tap **Done**.

 Your ONE will immediately begin to guide you to your destination, using both spoken instructions and on-screen directions.

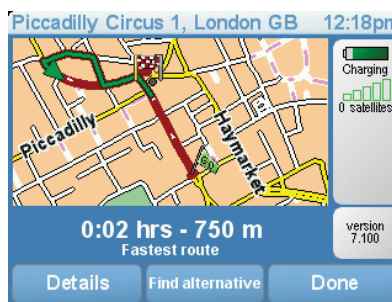

## Arrival times

When you plan a route, your TomTom ONE asks you if you need to arrive at a particular time.

Tap **YES** to enter a preferred arrival time.

Your ONE calculates your arrival time and shows you whether you will arrive on time.

You can also use this information to work out when you need to leave. If your ONE shows that you will arrive 30 minutes early, you can wait and leave in 30 minutes time, rather than arrive early.

Your arrival time is constantly recalculated during your journey. The status bar shows whether you will arrive on time or if you are going to be late, as shown below:



You will arrive 55 minutes before the arrival time you entered.

If the estimated arrival time is more than five minutes before the time you entered, it is shown in green.



You will arrive 3 minutes before the arrival time you entered.

If the estimated arrival time is less than 5 minutes before the time you entered, it is shown in yellow.



You will arrive 19 minutes late.

If the estimated arrival time is later than the time you entered, it is shown in red.



### Status bar preferences

Tap **Status bar preferences** in the Preferences menu, to enable or disable arrival time notifications.










Select the required options on the first menu screen and then tap **Done**.

To enable arrival time notifications, select **Show leeway to arrival time**.

To disable arrival time notifications, unselect **Show leeway to arrival time**.

## What are the other navigation options?

When you tap **Navigate to...**, you can set your destination in many ways, not just by entering the address. The other options are listed below:

 <b>Home</b>	<p>Tap this button to navigate to your Home location.</p> <p>You will probably use this button more than any other.</p> <p>For information about setting your Home location, see <b>Change Home location</b> on page 29.</p>
 <b>Favourite</b>	<p>Tap this button to select a Favourite as your destination.</p> <p>For more information about Favourites, see <b>Favourites</b> on page 17.</p>
 <b>Address</b>	<p>Tap this button to enter an address as your destination.</p>
 <b>Recent destination</b>	<p>Tap this button to select your destination from a list of places you have recently used as destinations.</p>
 <b>Point of Interest</b>	<p>Tap this button to navigate to a Point of Interest (POI).</p> <p>For more information about POIs and navigating to a POI, see <b>Points of Interest</b> on page 20.</p>
 <b>GPS position</b>	<p>Tap this button to select your GPS position, as your destination.</p> <p>For more information about GPS, see <b>Global Positioning System (GPS)</b> on page 36.</p>
 <b>Point on map</b>	<p>Tap this button to select a point on the map as your destination using the map browser.</p> <p>For more information about the map browser, see <b>Driving View</b> on page 1.</p>
 <b>Latitude Longitude</b>	<p>Tap this button to enter a destination using latitude and longitude values.</p>
 <b>Position of last stop</b>	<p>Tap this button to select your last recorded position, as your destination.</p> <p>For more information about the GPS, see <b>Global Positioning System (GPS)</b> on page 36.</p>

## Planning a route in advance

You can also use your ONE to plan journeys in advance by selecting both your starting point and your destination. You could, for example, do the following:



- Find out how long a journey is going to take before you start.
- Check the route of a journey you are planning.
- Check a route for someone who is coming to visit you, so that you can explain the route to them.

To plan a route in advance, follow these steps:

1. Tap the screen to bring up the main menu.
2. Tap the arrow button to move to the next menu screen and tap **Prepare route**.



### Prepare route

3. Select the starting point for your journey in the same way that you would select your destination.
4. Set the destination for your journey.
5. Choose the type of route that should be planned.
  - **Fastest route** - the route which takes the least time.
  - **Shortest route** - the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.
  - **Avoid motorways** - a route which avoids motorways.
  - **Walking route** - a route designed for making the journey on foot.
  - **Bicycle route** - a route designed for making the journey on a bicycle.
  - **Limited speed** - a route for a vehicle which can only be driven at a limited speed. You have to specify the maximum speed.
6. Your TomTom ONE plans the route between the two locations you selected.

### More information about a route

You can access these options for the route you last planned, by tapping **View route** in the Main Menu.

To find out about your route in detail, tap the **Details** button on the route summary screen.

You can then select from the following options:



Tap this button for a list of all the turn instructions on the route.

This is very useful if you need to explain a route to someone else.



Tap this button to see each turn in the journey. Tap the right and left arrows to move forwards and backwards through the journey.

Tap the screen to turn off the 3D display and view the map from above.



Tap this button to see an overview of the route using the map browser.  
For more information about the map browser, see **Driving View** on page 1.



Tap this button to watch a demo of the journey. You can interrupt the demo at any time by tapping the screen.



Tap this button to open the route summary screen.

---

## 4. Finding alternative routes

---

Once you have planned a route, you may want to change something about the route, without changing your destination.

### Why change the route?

Maybe for one of these reasons:

- You can see a roadblock or a line of traffic ahead.
- You want to travel via a particular location, to pick someone up, stop for lunch or fill up with petrol.
- You want to avoid a difficult junction or a road you don't like.



Tap **Find alternative...** in the Main Menu to change the route that is currently planned.

Then tap one of the options below.



Tap this button to calculate an alternative to the route already planned.

Your ONE will look for another route from your current location to your destination.

If you decide you would prefer to use the original route after all, tap **Recalculate original**.

### Why would I need to do this?

Apart from the roads near your position and near your destination, the new route will use totally different roads to reach your destination. This is an easy way of calculating a totally different route.



Tap this button if you can see a roadblock or a line of traffic ahead. You then have to choose how much of the route ahead you want to avoid.

Choose from the different options: 100m, 500m, 2000m, 5000m. Your ONE will recalculate your route avoiding the section of the route for the distance you selected.

Don't forget that once a new route is calculated, you may have to turn off the road you are on very soon.

If the roadblock suddenly clears, tap **Recalculate original** to return to your original route.



**Travel via...**

Tap this button to change your route so that it passes a particular location, perhaps to pick someone up on the way.

You choose the location you want to pass in the same way as you choose a destination. So you can select from all the same options: for example, **Address, Favourite, Point of Interest** and **Point on map**.

Your ONE will calculate a new route to your destination that passes the location you chose.



**Recalculate original**

Tap this button to return to the original route without deviations to avoid roadblocks or travelling via particular locations.



**Avoid part of route**

Tap this button to avoid a part of the route. Use this button if you see that your route includes a road or junction you don't like, or which is well-known for traffic problems.

You then choose the road you want to avoid from a list of the roads on your route.



**Minimise traffic delays**

Tap this button to recalculate your route so that it avoids traffic problems as much as possible. Your ONE will check if there are any traffic problems on your route and work out the best route to avoid the problems.

For more information about using TomTom Traffic, see **Traffic information** on page 23.

---

## 5. Sounds and voices

---

The sound on your TomTom ONE is used for features such as:

- Spoken instructions
- Warnings

### How do I change the volume level?

You can change the volume in three ways:

- Tap the bottom left hand area of the Driving View. The last spoken instruction is repeated and the volume level is shown.

Move the volume slider to adjust the volume.

- In the Main Menu, tap **Change preferences**, then tap **Volume preferences**.

Tap **Test** to check your changes.

### Changing the volume automatically



Your TomTom ONE can change the volume automatically.

1. In the Main Menu, tap **Change preferences**.
2. Tap **Volume preferences**.
3. Select **Link volume to car speed**.
4. Tap **Done**.

### Selecting a voice



To change the voice being used by your TomTom ONE, tap **Change voice** in the Preferences menu and select a voice from the list.

## 6. Help me!

---

Help me! provides an easy way to navigate to emergency services centres and other specialist services and contact them by phone.

For example, if you are involved in a car accident, you could use Help me! to call the nearest hospital and tell them your exact location.

### How do I use Help me! to phone a local service?

You can use Help me! to find and make contact with a service centre.

When you select a service centre, your current location and the phone number of the POI are shown.

To use Help me! to locate a service centre, contact the centre by phone and navigate from your current location to the centre, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Help me!**
3. Select the type of service you require, for example, Nearest hospital.
4. Select a centre from the list, the nearest is shown at the top of the list.

Your ONE shows the location of the service centre on the map and the contact details.

5. To navigate your way to the centre on foot, tap **Walk there**.

Your ONE starts guiding you to your destination.

## Options



### Phone for help

Use your TomTom ONE to find the location of a service, and the contact details.

- **Emergency services**
- **Emergency breakdown services**
- **Nearest police station**
- **Nearest doctor**
- **Nearest hospital**
- **Nearest public transport**
- **Nearest car repair services**
- **Nearest dentist**
- **Nearest pharmacy**
- **Nearest vet**

---

**Note:** *In some countries, information may not be available for all services.*

---



### Drive to help

Use your TomTom ONE to navigate your way by road to a service centre.

- **Nearest car repair services**
- **Nearest hospital**
- **Nearest doctor**
- **Nearest police station**
- **Nearest pharmacy**
- **Nearest dentist**

---

**Note:** *In some countries, information may not be available for all services.*

---



### Walk to help

Use your TomTom ONE to navigate your way on foot to a service centre.

- **Nearest petrol station**
- **Nearest public transport**
- **Nearest police station**
- **Nearest pharmacy**
- **Home**
- **Nearest doctor**

---

**Note:** *In some countries, information may not be available for all services.*

---



### Where am I?

Your TomTom ONE shows your current location.

You can then tap **Phone for help** to select the type of service you want to contact.



**First Aid guide**

Tap this button to read the British Red Cross First Aid guide.



**Other guides**

Tap this button to read a selection of useful guides.

---



## 7. Favourites

---

### What are Favourites?

Favourites are places that you often visit. You can create Favourites so that you don't have to enter the address every time you want to navigate there.

They don't have to be places you especially like, just useful addresses.

### How can I create a Favourite?

From the Main Menu, tap **Add Favourite**.

---

**Note:** The button **Add Favourite** may not be shown on the first page of the Main Menu. Tap the arrow to open other pages in the Main Menu.

---

You can then select the location of the Favourite from the list below.

Give your Favourite a name that is easy to remember. Your ONE will always suggest a name, usually the address of the Favourite. To enter the name, just start typing. You don't have to delete the suggested name.



Home

You can set your Home location as a Favourite.



Favourite

You cannot create a Favourite from another Favourite. This option will always be unavailable in this menu.

To rename a Favourite, tap **Manage Favourites** in the Preferences menu.

For more information, see **Manage Favourites** on page 29.



Address

You can specify an address to be a Favourite. When you enter an address, you can choose from four options.

- **City centre**
  - **Street and house number**
  - **Postcode**
  - **Crossing or intersection**
-



**Recent  
destination**

Select a Favourite location from a list of places you have recently used as destinations.



**Point of  
Interest**

You can add a Point of Interest (POI) as a Favourite.

**Does it make sense to do this?**

If you visit a POI you particularly like, for example a restaurant, you can add it as a Favourite.

To add a POI as a Favourite, tap this button, then do the following:

1. Narrow your choice of POIs by selecting the area where the POI is.

You can select one of these options:

- **POI near you** - to search from a list of POIs near your current position.
- **POI in city** - to choose a POI in a particular town or city. You have to specify a town or city.
- **POI near Home** - to search from a list of POIs near your Home location.

If you are currently navigating to a destination, you can also select from a list of POIs which are on your route or near your destination. Choose one of these options:

- **POI along route**
- **POI near destination**

2. Select the category of POI.

Tap the category of POI if it is shown or tap the arrow to choose from the complete list.

Tap **Any POI category** to search for a POI by name.

For more information about POIs, see **Points of Interest** on page 20.



**My location**

Tap this button to add your current position as a Favourite.

For example, if you stop somewhere interesting, while you are there you can tap this button to create the Favourite.



**Point on map**

Tap this button to create a Favourite using the map browser.

Select the location of the Favourite using the cursor, then tap **Done**.

For more information about the map browser, see **Browse Map** on page 27.



**Latitude  
Longitude**

Tap this button to create a Favourite by entering latitude and longitude values.

---



Tap this button to select your last recorded position as your destination.

For more information about the GPS, see **Global Positioning System (GPS)** on page 36.

---

### How can I use a Favourite?

You will normally use a Favourite as a way of navigating to a place without having to enter the address. To navigate to a Favourite, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...**
3. Tap **Favourite**.
4. Select a Favourite from the list.

Your ONE calculates the route for you.

5. When the route is calculated, tap **Done**.

Your ONE will immediately start guiding you to your destination with spoken instructions and visual instructions on the screen.

### How many Favourites can I create?

You can create up to 48 Favourites. If you want to add more than 48, we suggest that you make some POI categories and add some of your Favourites as POIs.

For more information about POIs, see **Points of Interest** on page 20.

### How can I delete a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

---

**Tip:** Tap the arrow to move to the next page.

---

4. Tap the Favourite you want to delete.
5. Tap **Delete**.

### How can I change the name of a Favourite?

1. Tap the screen to bring up the Main Menu.
2. Tap **Change preferences** to open the Preferences menu.
3. Tap **Manage Favourites**.

---

**Tip:** Tap the arrow to move to the next page of buttons.

---

4. Tap the Favourite you want to rename.
5. Tap **Rename**.

## 8. Points of Interest

---

Points of Interest or POIs are useful places on the map. Here are some examples:

- Restaurants
- Hotels
- Museums
- Parking garages
- Petrol stations

### Showing POIs on the map

1. Tap **Show POIs on map** in the Preferences menu.



2. Select the POI categories to display on the map.

Tap **Find** to search for a POI by name.

3. Tap **Done**.

The POIs you have selected are shown as symbols on the map.

### Navigating to a POI

You can use a POI as your destination. For example, if you are travelling to an unfamiliar city, you could choose a POI to help find a parking garage.

1. Tap the screen to bring up the Main Menu.
2. Tap **Navigate to...** in the Main Menu.
3. Tap **Point of Interest**.
4. Tap **POI in city**.
5. Narrow your choice of POIs by selecting the area where the POI is located.

You can select one of these options:

- **POI near you** - to choose from a list of POIs near to your current location.
- **POI in city** - to find a POI in a particular town or city.
- **POI near Home** - to choose from a list of POIs near to your Home location.

You can select from a list of POIs which are along your route or close to your destination. Choose from one of these options:

- **POI along route**
- **POI near destination**

6. Type the name of the town you want to visit and select the town when it appears in the list.

7. Tap **Parking garage**.

8. Select the category of POI:

Tap **Any POI category** to search for a POI by name.

Tap the category of POI, if it is shown.

Tap the arrow to choose from the complete list of categories. Select the category from the list or start to type the name of the category and select it when it appears in the list.

9. Select a parking garage. The distance listed next to each POI is the distance from the city centre.

10. From the list of POIs shown, select the POI you want to navigate to.

The table below explains the distances listed next to each POI.

POI near you	Distance from your current location
POI in city	Distance from the city centre
POI near Home	Distance from your Home location
POI along route	Distance from your current location
POI near destination	Distance from your destination
Last POI	Distance to the last POI you visited

If you know the name of the POI, tap **Find** and type the name. Select it from the list when it is shown.

11. Select a parking garage. The distance listed next to each POI is the distance from the city centre.

Once you have selected a POI, the route to the POI is calculated by your TomTom ONE.

The route to the POI is then calculated by your TomTom ONE.

## How can I set warnings for POIs?

1. Tap the screen to bring up the main menu.
2. Tap **Change preferences**.
3. Tap **Manage POIs**.

---

**Note:** The **Manage POIs** button is only available when all menu buttons are shown. To show all menu buttons, tap **Show ALL menu options** in the Preferences menu.

---

4. Tap **Warn when near POI**.



Tap this button to receive a warning when you travel near to the location of a POI.

5. Select the category of POI you want to be warned about.

Select the category from the list or start to type the name of the category and select it when it is shown in the list.

6. Set how close the POI should be when you receive a warning.

7. Choose the warning sound for the category of POI you selected.

## 9. Traffic information

---

---

**Important:** Reliable TMC Traffic reception is highly dependent upon optimal antenna placement, vehicle features such as windscreen reflective shielding, the surrounding environment such as mountains and high buildings and RDS-TMC Radio station transmission signal strength.

Some vehicles have a heat reflective shield embedded in the windscreen, which may prevent a navigation device from locating your current position.

---

### The Traffic Message Channel (TMC)

TMC transmits traffic information as a radio signal and is available free-of-charge in many countries.

TMC is not a TomTom Service, but is available when using the TomTom RDS-TMC Traffic Receiver. The TomTom RDS-TMC Traffic Receiver is included with some products and available as an accessory for others.

---

**Note:** *TomTom is not responsible for the availability or quality of traffic information provided by TMC.*

*TMC is not available in all countries or regions. Visit [www.tomtom.com/plus](http://www.tomtom.com/plus) to check for availability in your country or region.*

---

### Using Traffic

When you connect the RDS-TMC Traffic Receiver, the Traffic bar is shown on the right-hand side of the Driving View. Your TomTom begins to retrieve the latest traffic information.

### Using traffic information

Whenever you plan a route using the latest traffic information, your TomTom ONE plans the route to avoid areas where there is heavy traffic.

You can also recalculate your route if the traffic situation changes after you start a journey:


1. Tap **Change Traffic preferences** in the Traffic menu.
2. Select **Automatically optimise route after every update**.

When your ONE receives new traffic information, your route will be re-planned to the fastest route possible. Don't forget that the fastest route might still include traffic.

### Setting up TMC

Before connecting the RDS-TMC Traffic Receiver for the first time, make sure your TomTom device is switched off.

 1. Attach the TomTom device to the Windscreen holder.
2. Plug the TMC receiver into your TomTom device or the Windscreen holder, depending on your product.
3. Position the TomTom device at the bottom left corner of the car windscreen.

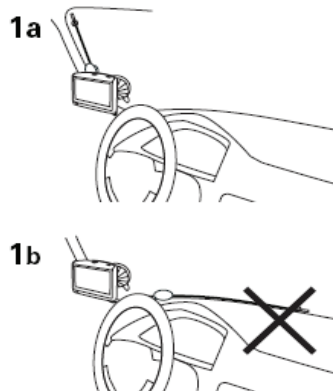

4. Press the transparent suction cup at the tip of the antenna firmly against the upper left corner of the car windscreen.
5. Press the second transparent suction cup firmly against the bottom left corner of your windscreen.
6. Place the egg shaped receiver with the black suction cup on the windscreen at any place convenient. Avoid putting too much tension on the cables.

The Traffic bar is shown in the Driving View and your TomTom searches for a radio station that carries RDS-TMC information.



While your TomTom is searching for a radio station, the following symbols are shown on the top of the Traffic bar:



Your TomTom is looking for a radio station.



Your TomTom has found a radio station and is checking if the radio station carries RDS-TMC information.



Your TomTom is tuned to a radio station and receives RDS-TMC information when available.

## Setting the frequency

If you want to tune to a particular radio station, you can enter the frequency as follows:

1. Tap the Traffic bar in the Driving View.
2. Tap **Tune RDS-TMC**.



3. Enter the frequency of the radio station.

4. Tap **Done**.

Your TomTom looks for the radio station. If it does not find the station you requested, it will search for the next available station.

---

**Note:** *If radio reception is poor, for example when you are driving through a mountain valley, RDS-TMC reception will also be affected.*

---

## Setting the country

If you are driving close to a country border, your TomTom may tune to a radio station from a neighbouring country. If this happens you will only receive RDS-TMC traffic information for the neighbouring country.

To avoid tuning to a radio station in another country, set the required country as follows:

1. Tap the screen to open the Main Menu.
2. Tap TomTom **Traffic**.
3. Tap **Select RDS-TMC country**.
4. Select the country that you want to receive traffic reports for.

Your TomTom searches for a radio station located in the country you have chosen.

## Driving View

Traffic incidents are shown in the Driving View and on the Traffic bar.

Incidents are shown on the Traffic bar, in the order that they occur along your planned route.

The estimated time for any delay is shown next to the incident symbol.

The distance from your current location to the next Traffic incident on your route, is shown at the bottom of the Traffic bar.

Incidents are also shown in the Driving View, so that you can view the precise location of any incident.



For more detailed information about specific Traffic incidents, tap the Traffic bar, then tap **Show traffic info**.

## Traffic Status menu

Tap the Traffic bar in the Driving View to open the Traffic Status menu.



**Tune automati-  
cally**

Tap this button to have your ONE search for a radio frequency that carries RDS-TMC information.



**Tune manually**

Tap this button to enter a radio frequency that carries RDS-TMC information.



**Minimise  
traffic delays**

Tap this button to replan your route based on the latest traffic information.



**Show home-  
work traffic**

Tap this button to calculate and show the route from your home location to your place of work.



**Update traffic  
info**

Tap this button to receive the latest traffic information.



**Show traffic on  
route**

Tap this button to show areas of traffic congestion along your current route.



**Change Traffic  
preferences**

Tap this button to change your preferences for how Traffic works on your ONE.



**Disable Traffic**

Tap this button to disable Traffic and to stop receiving traffic information updates.



**Browse map**

Tap this button to browse the map and see the traffic information displayed on the map.



**Help**

Tap this button to view the guided tour on how to use TomTom Traffic.

## 10. Preferences

---

You can change the way your TomTom ONE looks and behaves.

Tap **Change preferences** in the Main Menu.

### Use night colours / Use day colours



**Use Night  
colours**

Tap this button to reduce the brightness of the screen and show darker colours on the map.

#### **When should I use this?**

When it's dark, it is easier to see the screen if the display on your ONE is not brightly lit.



**Use day  
colours**

To change back to a brighter screen showing brighter colours on the map, tap **Use day colours**.

### Show POI on map



**Show POI on  
map**

Tap this button to set which categories for the Points of Interest (POIs) should be shown on the map.

Select the POIs that you want to see on the map from the list.

When you select a POI, it is shown on the map using the symbol you can see next to each category in the list.

To find a POI category quickly, tap **Find**, then start to type the name of the POI category. As soon as the category is shown in the list, you can select it.

For more information about POIs, see **Points of Interest** on page 20.

## Safety preferences



Safety preferences

Tap this button to set the following safety preferences:

- **Hide most menu options while driving**
- **Suggest driving breaks**
- **Show safety reminders**
- **Warn when near places of worship or schools**
- **Warn when driving faster than allowed**
- **Warn when driving faster than a set speed**
- **Warn not to leave the device in the car**

If you select one or more of the warnings, you will also be asked to select a sound to be played whenever a warning is displayed.

Select whether or not your TomTom ONE should warn you about which side of the road you should be driving on.

Decide if you want the map display to be turned off in special circumstances and press **Done**.

### What happens when I use the Turn off map display option?

When you turn off the map display, instead of seeing your position on a map in the Driving View, you will only see information about the next instruction.

Tap the button and select an option for when the map should be turned off. These are the options:

- **Always** - The map will not be shown and you will only see information about the next instruction and arrows showing direction.
- **Above a certain speed** - you set the speed at which point the map will be turned off. This option is useful for situations when the map might be distracting, such as when you are driving fast.
- **Never** - the map is never turned off.

## Turn off sound / Turn on sound



Turn off sound

Tap this button to turn off spoken instructions.

The button changes to **Turn on sound**. If you turn off the sound, warnings for upcoming POIs are also turned off.

---

### Tips

To change the volume, tap **Volume preferences** in the Preferences menu.

For more information, see **Volume preferences** on page 29.

 
To change the volume quickly while you are driving, tap the bottom left-hand section of the Driving View and move the slider.

To change the voice being used by your ONE, tap **Change voice** in the Preferences menu.

For more information, see **Selecting a voice** on page 13.

---

## Volume preferences



**Volume preferences**

Tap this button to change the volume for spoken instructions.

## Manage Favourites



**Manage Favourites**

Tap this button to rename or delete Favourites.

To find a Favourite quickly, tap **Find**, then start to type the name of the Favourite. As soon as the Favourite is shown in the list, you can select it.

For more information about Favourites, see **Favourites** on page 17.

## TomTom Safety Cameras



**TomTom Safety Cameras**

Tap this button to use TomTom Safety Cameras.

## Change voice



**Change voice**

Tap this button to change the voice that is used for announcing commands directions.

For more information about Voices, see **Sounds and voices** on page 13.

## Warn when near POI



**Warn when near POI**

Tap this button to announce a warning when your are approaching a Point of Interest.

For more information about Points of Interest, see **Points of Interest** on page 20.

## Change Home location



**Change Home location**

Tap this button to set or change your Home location.

**Do I need to use my actual home address for the Home location?**

No. Your Home location can be a place you go often, for example, your office. It can be your actual home address, but it can be any address you like.

#### Why should I set a Home location?

Having a Home location means that you have a quick and easy way to navigate there, by tapping the Home button in the **Navigate to...** menu

## Manage maps



### Manage maps

Tap this button to do the following:

- **Download a map** - you can buy new maps using TomTom HOME.  
For more information, see **Using TomTom HOME** on page 37.
- **Switch map** - tap this button to change the map you are using.
- **Delete a map** - tap this button to delete a map. This might be necessary to create more space on your ONE, for example when you want to load a different map.

---

**Note:** Don't delete a map unless you have already made a backup of the map. If you delete a map before you make a backup, you will no longer be able to load the map on your ONE.

---

For more information about making a backup, see **Using TomTom HOME** on page 37.

You can also download, add and delete maps using TomTom HOME.

## Change 2D/3D display / Turn on 2D display



### Turn on 2D display

Tap **Turn on 2D display** to change the perspective for viewing the map.

For example, the 2D view shows a two dimensional view of the map as though viewed from above.



### Change 2D/3D display

To switch the view to a three dimensional perspective, tap **Change 2D/3D display** and select a view from the list.

#### When should I use this?

In some situations, it is easier to see the map from above. Perhaps if the road network is complicated or for times when you are walking while using your ONE to navigate.

## Compass preferences



Compass preferences

 
Tap this button to configure the compass. The following options are available:

- **None** - the compass is not shown.
- **One with arrow pointing north** - the arrow always points towards north and the direction you are moving is shown at the top of the compass.
- **One with arrow showing your heading** - the arrow always shows the direction you are moving.

If you select one of these options, you then need to select the features that are shown in the middle of the arrow:

- **Direction** - your direction is shown as a compass point, displayed in the centre of the compass arrow.
- **Degrees** - your direction is shown as compass degrees, displayed in the centre of the compass arrow.
- **Nothing**
- **One with arrow pointing to your destination** - the arrow always points towards your destination. The distance to your destination is displayed in the compass arrow.

## Change map colours



Change map colours

Tap this button to select the colour schemes for day and night map colours.

You can also download more colour schemes from TomTom PLUS.

## Brightness preferences



Brightness preferences

Tap this button to set the brightness of the screen.

You can set the brightness separately for day map colours and for night map colours.

You can set the map colour scheme by tapping **Change map colours**. For more information, see **Change map colours** on page 31.

## Status bar preferences



Status bar preferences

Tap this button to select the information shown on the status bar:

- **Remaining time** - the estimated time left until you reach your destination.
- **Remaining distance** - the distance left until you reach your destination.
- **Current time**
- **Arrival time** - your estimated arrival time.
- **Speed**
- **Direction**
- **Show next street name** - the name of the next street on your journey.
- **Show current street name**
- **Show leeway to arrival time** - your ONE shows how late or early you will be compared with the preferred arrival time that is set during the planning of a route.
- **Show max speed next to speed** - only available when speed (above) is also selected.
- **How should the status bar be displayed?**

**Horizontal** - If you choose this option, the status bar will be shown at the bottom of the Driving view.

**Vertical** - If you choose this option, the status bar will be shown at the right-hand side of the Driving view.

---

**Note:** If the speed limit for the road you are on is available, it is shown next to your speed.

If you drive faster than the speed limit, your speed is shown in red.

---

 
## Guided tours



Guided tours

Tap this button to show one of the Guided tours on how to use your TomTom ONE.

## Set units



Set units

Tap this button to set the type of units that will be shown for the following:

- Distance
- Time
- Latitude and longitude
- Temperature
- Air pressure



## Operate left-handed / Operate right handed



**Operate left-handed**

Tap this button to move important buttons, for example, the **Done** and **Cancel** buttons as well as the zoom bar, to the left hand side of the screen. This makes it easier to tap the buttons with your left hand without blocking the screen.

To move the buttons back to the right hand side of the screen, tap **Operate right-handed**.

## Keyboard preferences



**Keyboard preferences**

You use the keyboard to enter your destination or to find an item in a list, such as a POI.

Tap this button to select the size of the keys on the keyboard and the keyboard layout. You can select from two sizes:

- **Large keyboard**
- **Small keyboard**

Three keyboard layouts are available:

- **ABCD keyboard**
- **QWERTY keyboard**
- **AZERTY keyboard**

---

**Note:** The keyboard does not include accents of any kind for any language so you don't have to worry about entering letters with accents. Simply type the letter without the accent and your ONE will recognise the word.

---

## Planning preferences



**Planning preferences**

Tap this button to set the kind of route planned when you select a destination.

The following options are available:

- **Ask me every time I plan**
- **Always plan fastest routes**
- **Always plan shortest routes**
- **Always avoid motorways**
- **Always plan walking routes**
- **Always plan bicycle routes**
- **Always plan for limited speed**

Then answer the following question:

**Do you want the route summary screen to close automatically after 10 seconds?**

## Set owner



Set owner

Tap this button to enter your name and address as the owner of your ONE and to change or delete a 4-digit password for your ONE.

---

**Note:** You can only change or delete a 4-digit password on your TomTom ONE.

---

You can create a 4-digit password for your ONE using TomTom HOME:

1. Connect your ONE to your computer and turn on your ONE and your computer.

TomTom HOME starts automatically.

For information about installing TomTom HOME on your computer, see **Installing TomTom HOME** on page HIDDEN.

2. From the Options menu in TomTom HOME, click My ONE.
3. Click the ON/OFF button on the picture of your ONE to start the application on your computer.
4. From the Main Menu, click **Change preferences**.
5. Click **Set Owner**. You can now set a 4-digit password for your ONE.

You can only create a 4-digit password using TomTom HOME.

## Change language



Change language

Tap this button to change the language used for all the buttons and messages you see on your ONE.

You can choose from a wide range of languages. When you change the language, you are also given the opportunity to change the voice.

## Set clock



Set clock

Tap this button to select the type of clock that is shown and set the time.

The easiest way to set the time is by tapping the **Sync** button. Your ONE will then take the time from GPS information.

For more information about GPS, see **Global Positioning System (GPS)** on page 36.

---

**Note:** After using **Sync** to set the time, you may have to adjust the hours depending on your time zone. Your ONE works out your time zone and always keeps the time correct using GPS information.

---

You can only use **Sync** if you have GPS reception, so you cannot set the clock in this way when you are indoors.

---

## Reset factory settings



**Reset factory  
settings**

Tap this button to restore the factory settings to your TomTom ONE.

All your settings, including Favourites, your Home location, warnings for POIs and any Itineraries you have created, as well as recent destinations and recent calls and callers, will be deleted.

## 11. How does navigation work?

---

### Global Positioning System (GPS)

In order to navigate you to your destination, your TomTom ONE must know where you are now. To find your current position, your ONE uses the Global Positioning System (GPS). GPS is available for free and without subscription.

The GPS uses satellites to transmit signals to GPS receivers. Your TomTom ONE has a built-in GPS receiver. Using the GPS signal, your ONE can work out where you are and how fast you are going. GPS signals work in all weather, anywhere in the world.

---

**Note:** *Your TomTom ONE does not transmit your position, so others cannot use it to track you while you are driving.*

---

### Maps

Once your TomTom ONE knows where you are and you have told it where you want to go, it uses the digital map on the memory card or hard disk to work out the best route to your destination.

## 12. Using TomTom HOME

---

TomTom HOME is a free software program for your computer that enables you to:

- Manage maps, voices, POIs and more.
- Buy TomTom services and manage your subscriptions.
- Update your TomTom with the latest software and services automatically.
- Make and restore backups.
- Set a password to restrict access.

### Installing TomTom HOME

Install TomTom HOME on your computer in the following way.

- Connect your computer to the Internet and then connect your TomTom ONE to your computer using the USB cable.

A pop-up window appears. Select **Run** TomTom HOME. Click **OK** and follow the on-screen instructions.

If the pop-up window does not appear, browse to the TomTom device on your computer and run the file named **Install** TomTom HOME.

- TomTom HOME is also available for download from the TomTom website.

For more information visit **[www.tomtom.com/home](http://www.tomtom.com/home)**

Once installed, TomTom HOME will start automatically whenever you connect your TomTom to your computer.

### HOME Help Topics

In the TomTom HOME Help topics you can find all kinds of tips and tricks on how to use TomTom HOME.

### MyTomTom Account

In order to buy content and services through TomTom HOME you will have to set up a MyTomTom account for the device you want to buy the content for. You will be asked to create an account when you start using TomTom HOME.

## 13. TomTom limited warranty

---

### WARRANTOR

Non-U.S. and non-Canadian purchases: If you have made your purchase outside the United States and Canada, this Limited Warranty is granted by and this Limitation of Liability is stipulated for the benefit of TomTom International B.V., Rembrandtplein 35, 1017 CT Amsterdam (The Netherlands).

### WHAT THIS WARRANTY COVERS

1) TomTom International B.V. ("TomTom") warrants to you that the Hardware will be free from defects in workmanship and materials under normal use ("Defects") for a period of one (1) year from the date that the Hardware was first purchased by you ("Warranty Period"). During the Warranty Period the Hardware will be repaired or replaced at TomTom's choice ("Limited Warranty") without charge to you for either parts or labour. This Limited Warranty covers the replacement of the Hardware only. If the Hardware is repaired after the Warranty Period has expired, the Warranty Period for the repair will expire six (6) months after the date of repair.

### WHAT THIS WARRANTY DOES NOT COVER

2) The Limited Warranty does not apply to normal wear and tear, does not apply when the Hardware is opened or repaired by someone not authorized by TomTom and does not cover repair or replacement of any Hardware or part thereof damaged by: misuse, moisture, liquids, proximity or exposure to heat and accident, abuse, non-compliance with the instructions supplied with the Hardware, neglect or misapplication. The Limited Warranty does not cover physical damage to the surface of the Hardware. This Limited Warranty does not cover any software that may accompany or be installed on the Hardware. The Limited Warranty does not cover the installation, removal or maintenance of the Hardware or any costs related herewith.

### HOW TO MAKE A WARRANTY CLAIM

3) In order to make a claim of a Defect, you must contact TomTom by email during the Warranty Period via [www.tomtom.com](http://www.tomtom.com) to explain the Defect and to obtain an RMA number (Return Materials Authorization) if necessary. You must return the Hardware during the Warranty Period, along with an explanation of the Defect, to the address provided to you by TomTom. If a defect arises and a valid claim under this Limited Warranty is received by TomTom after the first one hundred and eighty (180) days of the Warranty Period, TomTom is entitled to charge you for any reasonable shipping and handling costs made in connection with the repair or replacement of the Hardware. You must comply with any other return procedures stipulated by TomTom, if any.

## YOUR LEGAL RIGHTS

4) Some countries may not allow the exclusion or limitation of damages. If any part of this Limited Warranty is held to be invalid or unenforceable, the remainder of the Limited Warranty shall nonetheless remain in full force and effect.

5) This Limited Warranty is the only express warranty made to you and is provided in lieu of any other express warranties or similar obligations (if any) created by any advertising, documentation, packaging, or other communications.

6) Except for the Limited Warranty and to the maximum extent permitted by applicable law, TomTom and its suppliers provide the Hardware "AS IS AND WITH ALL FAULTS", and hereby disclaim all other warranties and conditions, whether express, implied or statutory, including, but not limited to, any (if any) implied warranties, duties or conditions of satisfactory quality, of fitness for a particular purpose, of reliability or availability, of accuracy or completeness of responses, of results, of workmanlike effort, of lack of viruses, and of reasonable care and skill, all with regard to the Hardware, and the provision of or failure to provide support or other services, information, software, and related content through the Hardware or otherwise arising out of the use of the Hardware. Also, there is no warranty or condition of quiet enjoyment, quiet possession, or non-infringement with regard to the Hardware. This exclusion does not apply to (i) any implied condition as to title and (ii) any implied warranty as to conformity with description.

7) This Limited Warranty does not affect any legal rights under applicable national legislation governing the sale of consumer goods.

8) This Limited Warranty cannot be transferred to any other person.

## LIMITATION OF LIABILITY

9) Neither TomTom nor its suppliers shall be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise (including in each case, but not limited to, damages for the inability to use the equipment or access data, loss of data, loss of business, loss of profits, business interruption or the like) arising out of the use of or inability to use the Hardware even if TomTom has been advised of the possibility of such damages.

10) Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of TomTom and any of its suppliers shall be limited to the amount actually paid by you for the Hardware.

11) TomTom shall not be liable for (i) any fraud on the part of its employees and/or agents; or (ii) any fraudulent misrepresentation on the part of its employees and/or agents.

12) Notwithstanding the above, neither party's liability for death or personal injury resulting from its own negligence shall be limited.

## 14. Addendum

---

### Important Safety Notices and Warnings

#### Global Positioning System

The Global Positioning System (GPS) is a satellite-based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the Government of the United States of America which is responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your TomTom device. TomTom does not accept any liability for the availability and accuracy of GPS.

#### Use with Care

Use of a TomTom device for navigation still means that you need to drive with due care and attention.

#### Aircraft and Hospitals

Use of devices with an antenna is prohibited on most aircraft, in many hospitals and in many other locations. A TomTom device must not be used in these environments.

#### Battery

This product uses a Lithium-Polymer battery. Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 C (140 F). Failure to follow these guidelines may cause the Lithium-Polymer battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 C/32 F) or high (over 45 C/113 F) temperatures.

Temperatures: Standard operation: -10 C (14 F) to +55 C (131 F); short period storage: -20 C (-4 F) to + 60 C (140 F); long period storage: -20 C (-4 F) to +25 C (77 F).



THE LITHIUM-POLYMER BATTERY CONTAINED IN THE PRODUCT MUST BE RECYCLED OR DISPOSED OF PROPERLY. USE YOUR TomTom ONLY WITH THE SUPPLIED DC POWER LEAD (CAR CHARGER/BATTERY CABLE) AND AC ADAPTER (HOME CHARGER) FOR BATTERY CHARGING.

To recycle your TomTom unit please see your local approved TomTom service center.



## CE Marking



This equipment complies with the requirements for CE marking when used in a residential, commercial, vehicular or light industrial environment.

## R&TTE Directive

This equipment complies with the essential requirements of EU Directive 99/5/EC.

Diese Ausrüstung erfüllt die wesentlichen Anforderungen der EU-Richtlinie 99/5/EC.

Cet équipement remplit les conditions édictées dans la Directive EC/99/5.

Deze apparatuur is conform de eisen van de EU-richtlijnen 99/5/EC.

Questa apparecchiatura soddisfa le condizioni essenziali della Direttiva Europea 99/5/EC.

Este equipo cumple con los requisitos esenciales de la Directiva 99/5/EC de la EU.

Dette udstyr overholder de grundlæggende krav i EU-direktiv 99/5/EC.

Denna utrustning rättar sig efter de nödvändiga krav från EU direktiv 99/5/EC.

Tämä laite täyttää oleellisilta osin EU:n direktiivin 99/5/EY vaatimukset.

Este equipamento está em conformidade com os requisitos essenciais da Directiva da UE 99/5/CE.

TomTom tímto prohlašuje, že TomTom je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1995/5/ES (NV č. 426/2000 Sb.) a Prohlášení o shodě je k dispozici na [www.TomTom.com](http://www.TomTom.com). Toto zařízení lze provozovat v České republice na základě generální licence č. GL - 12/R/2000.

Seadmed vastavad EL direktiivi 99/5/EÜ põhinõuetele.

A jelen berendezés megfelel az EU 99/5/EC direktívája meghatározta székséges előírásoknak.

Ši įranga atitinka visus ES direktyvos 99/5/EB reikalavimus.

Šis produkts atbilst visām ES noteiktajām Direktīvām 99/5/EC.

Sprzęt ten jest zgodny z podstawowymi wymaganiami Dyrektywy UE 99/5/EC.

TomTom týmto vyhlasuje, že TomTom spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1995/5/ES (NV č.443/2001 Z.z.) a Vyhlásenie o zhode je k dispozícii na [www.TomTom.com](http://www.TomTom.com). Toto zariadenie je možné prevádzkovať v Slovenskej republike na základe Všeobecného povolenia č. VPR-01/2001.

Bu cihaz AB Direktifi 99/5/AT'nin zorunlu gerekliliklerine uygundur.

## WEEE Directive



In line with EU Directive 2002/96/EC for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling.

In Übereinstimmung mit der Richtlinie 2002/96/EG des Europäischen Parlaments und des Rates über Elektro- und Elektronik-Altgeräte (WEEE) darf dieses Elektrogerät nicht im normalen Hausmüll oder dem Gelben Sack entsorgt werden. Wenn Sie dieses Produkt entsorgen möchten, bringen Sie es bitte zur Verkaufsstelle zurück oder zum Recycling-Sammelpunkt Ihrer Gemeinde.

Conformément à la Directive 2002/96/EC sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en le renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

In navolging van richtlijn 2002/96/EG van het Europees Parlement en de Raad betreffende afgedankte elektrische en elektronische apparatuur (AEEA) mag dit elektrische product niet als ongescheiden huisvuil worden weggedaan. Breng dit product terug naar de plaats van aankoop of naar het gemeentelijke afvalinzamelingspunt voor recycling.

In ottemperanza alla Direttiva UE 2002/96/EC sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE), questo prodotto elettrico non deve essere smaltito come rifiuto municipale misto. Si prega di smaltire il prodotto riportandolo al punto vendita o al punto di raccolta municipale locale per un opportuno riciclaggio.

De conformidad con la Directiva 2002/96/CE de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo al punto de venta o a un punto de recogida municipal para su reciclaje.

I henhold til EU-direktiv 2002/96/EF om affald af elektrisk og elektronisk udstyr (WEEE) må dette udstyr ikke bortskaffes som usorteret husholdningsaffald. Bortskaf dette produkt ved at returnere det til salgsstedet eller til det lokale indsamlingssted, så det kan genbruges.

I linje med EU-direktiv 2002/96/EG om avfall som utgörs av eller innehåller elektriska eller elektroniska produkter (WEEE) får denna elektriska produkt inte bortskaffas som osorterat kommunalt avfall. Bortskaffa den i stället genom att lämna in den på försäljningsstället eller din lokala återvinningsstation.

EU:n sähkö- ja elektroniikkalaiteromudirektiivin (2002/96/EY) mukaisesti tätä elektroniikkalaitetta ei saa laittaa lajittelemattoman yhdyskuntajätteen sekaan. Hävitä laite palauttamalla se ostopaikkaan tai viemällä se elektroniikkaromun keräyspisteeseen.

De acordo com a Directiva Europeia 2002/96/EC sobre resíduos sólidos de equipamento eléctrico e electrónico (WEEE), este produto eléctrico não pode ser deitado fora juntamente com o lixo municipal indiferenciado. Por favor, no final da vida útil deste produto, devolva-o ao estabelecimento de aquisição, ou entregue-o no local de recolha apropriado para reciclagem designado pelo seu município.

V souladu se směrnici EU č. 2002/96/ES o odpadních elektrických a elektronických zařízeních (OEEZ) se tento elektrický výrobek nesmí likvidovat jako netříděný komunální odpad. Při likvidaci tento výrobek vraťte prodejci nebo ho odevzdejte k recyklaci do komunálního sběrného zařízení.

Vastavalt EL direktiivile 2002/96/EÜ, mis käsitleb elektri- ja elektroonikaseadmete jäätmeid (WEEE), ei või antud toodet visata majapidamisjäätmete hulka. Palun tagastage antud toode taaskasutamise eesmärgil müügipunkti või kohaliku piirkonna jäätmekogumise punkti.

Az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK (WEEE) irányelvnek megfelelően ezt az elektromos berendezést tilos

szortírozatlan, közösségi hulladékgyűjtőbe dobni. A terméket használata befejeztével vigye vissza az eladási ponthoz vagy a helyi közigazgatási újrahasznosító gyűjtőhelyre.

Pagal ES Direktyvą 2002/96/EB dėl elektros ir elektroninės įrangos atliekų (WEEE), šio elektros gaminio negalima išmesti su buitinėmis atliekomis. Šį gaminį reikia grąžinti į tą vietą, kur jis buvo pirktas, arba į miesto atliekų perdavimo punktą.

Saskaņā ar ES Direktīvu 2002/96/EC par elektrisko un elektronisko iekārtu atkritumiem (EEIA), šo elektrisko iekārtu ir aizliegts nodot kopā ar citiem nešķirotiem sadzīves atkritumiem. Lūdzu nododiet šo iekārtu atpakaļ tās tirdzniecības vietā vai Jūsu tuvākajā sabiedriskajā iekārtu savākšanas punktā to pārstrādei.

Zgodnie z Dyrektywą Nr 2002/96/WE w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), niniejszego produktu elektrycznego nie wolno usuwać jako nie posortowanego odpadu komunalnego. Prosimy o usunięcie niniejszego produktu poprzez jego zwrot do punktu zakupu lub oddanie do miejscowego komunalnego punktu zbiórki odpadów przeznaczonych do recyklingu.

V súlade so smernicou 2002/96/ES o odpade z elektrických a elektronických zariadení (OEEZ) sa toto elektrické zariadenie nesmie odstraňovať ako netriedený komunálny odpad. Výrobok odstráňte jeho vrátením v mieste nákupu alebo odovzdaním v miestnom zbernom zariadení na recyklovanie.

Atık elektrikli ve elektronik cihazlar konulu 2002/96/AT sayılı AB Direktifine (WEEE) uygun olarak bu cihaz, ayrılmamış belediye atıklarıyla birlikte atılmamalıdır. Lütfen bu ürünü, satış noktasına iade ederek veya belediyenizin geri dönüşüm için toplama merkezine götürerek atın.

## Ctick



**N14644**

This product displays the Ctick to show it complies with all relevant Australian and New Zealand regulations.

## This Document

Great care was taken in preparing this manual. Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice.

TomTom shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the performance or use of this material. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from TomTom International B.V.

### Part numbers

## 15. Copyright notices

---

---

© 2007 TomTom International B.V., The Netherlands.

*Patents Pending. All rights reserved.*

*TomTom and the TomTom logo are registered trademarks of TomTom International B.V., The Netherlands. All other trademarks are the property of their respective owners.*

*Our end user license agreement and a limited warranty apply to this product; they are included in this package. You can also review both at [www.TomTom.com/legal](http://www.TomTom.com/legal)*

---

---

### *Data Source*

© 2007 Tele Atlas N.V. Based upon:

*Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldoorn 2007.*

© Ordnance Survey of Northern Ireland.

© IGN France.

© Swisstopo.

© BEV, GZ 1368/2007.

© Geonext/DeAgostini.

© Norwegian Mapping Authority, Public Roads Administration /

© Mapsolutions. © DAV.

*This product includes mapping data licensed from Ordnance Survey with the permission of the Controller of Her Majesty's Stationery Office. © Crown copyright and/or database right 2007. All rights reserved. Licence number 100026920.*

---

---

*Some images are taken from NASA's Earth Observatory.*

*The purpose of NASA's Earth Observatory is to provide a freely-accessible publication on the Internet where the public can obtain new satellite imagery and scientific information about our home planet.*

*The focus is on Earth's climate and environmental change:  
[earthobservatory.nasa.gov/](http://earthobservatory.nasa.gov/)*

---