

# Basic Manual



A5527SA

by SANYO

**au** by KDDI

Contents/  
Before Use

Phone Call

Global  
Functions

Inputting  
Characters

Address Book/  
Pair Function

Mail

Camera

EZweb

EZ Navi

SimpleMode

Troubleshooting/  
Remote Auto Lock

Other Features/  
Index

## Welcome

Thank you very much for purchasing the A5527SA.

Before using, read the A5527SA “Basic Manual (this PDF manual)” to ensure correct use of your A5527SA. After you have finished reading, store this PDF manual and the printed manuals in a safe place so that you can retrieve them whenever you need.

Contact au shop or au Customer Service Center if you lose either of these manuals.

### Printed Manuals for the A5527SA

The A5527SA comes with Basic Manual and Manual.

#### ● A5527SA Basic Manual



Equivalent to this English PDF manual.

#### ● A5527SA Manual




English version is not available.

The following manuals are available on the au website:


- Download site for “Basic Manual” (Japanese and English) and “Manual” (Japanese only)  
(<http://www.au.kddi.com/torisetu/index.html>)
- The au online manual (Japanese) for searching by keyword  
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from EZweb:

<How to access>

 → “Top Menu” → “auお客さまサポート (au Customer Support)” → “調べる (Information)”  
→ “オンラインマニュアル(Online Manual)”.

#### Check the website of SANYO Electric Co., Ltd. below, for the troubles on your A5527SA.

- From A5527SA → Press  for more than one second. (SANYO Keitai Planet, in Japanese only)
- From PC → <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

- Fonts or indications may be different from those on the actual screen, or may be partly omitted for better readability of PDF manual. Note that this PDF manual may not reproduce actual screen color tones exactly.
- Screen color tones shown in this manual are those obtained with the default setting.

# Cellphone Etiquette

Cellphones emit weak radio waves at all times even if you just turn the power on. Enjoy and safely use your cellphone without forgetting those who are around you.

## The use of cellphones is forbidden in some places.

- Using cellphones while driving is dangerous and forbidden by law.
- Using cellphones in airplanes is forbidden by law. Be sure to turn your cellphone OFF.



## Consider where to use your cellphone and be careful how loudly you talk.

- Do not make calls in cinemas, theaters, museums, libraries, and other similar places. Turn your cellphone off or set it to the silent mode to prevent others around you from being inconvenienced by ring tones.
- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.
- Get other people's permission before you start taking photos with the cellphone's camera.




## Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers. Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.



# What You Can Do with the A5527SA


## Mail

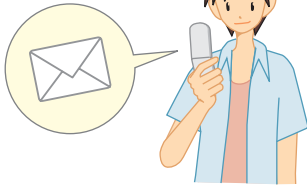

You can send mail to other cellphones or personal computers.

Page 50

## Camera

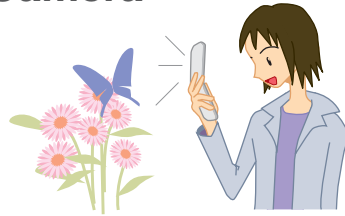

You can take photos or movies and send them easily by E-mail.

Page 62


## EZ Navi



You can access position information using the functions such as EZ Navi Walk, Position Search, and Area Message.

Page 74

## EZweb

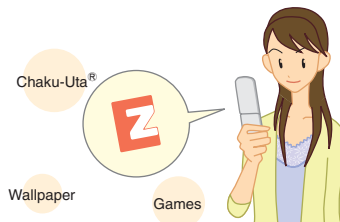

You can download Chaku-Uta®, wallpaper and others.

Page 67

## Use Overseas



You can use the A5527SA overseas with global functions.

Page 34

For information on other features, see page 87.



# Silent Mode and In-Phone Ans Mach

## Silent Mode

You can use the silent mode to turn incoming rings and other tones off to prevent others from being inconvenienced.

Press **mute** for more than one second in the standby screen.



Transportation systems like trains, buses, etc.



Public facilities like libraries, museums, etc.



During lectures, meetings, etc.

## In-Phone Ans Mach

You can play answering message and record caller's message when you cannot answer a call.

Press **mute** for more than one second in the standby screen.



Standby screen



Incoming call

Screen while answering




Recording ends



# Check the Power, Radio Waves, and Battery!

## Usually, keep the “power” ON.

Keep the power on to make or answer calls.  
Press  for more than one second.




Page 13

## You cannot talk on the phone if A5527SA is not receiving “radio waves”.



It may be difficult to receive radio waves in some places even in service areas.

 indicates the reception state.

Page 13

## Pay attention to the remaining “battery” power.



You cannot use the cellphone when the battery goes off. Charge the battery soon when the remaining power is too low.

 indicates the remaining battery power.

Page 13

# Do Not Use the Cellphone While Driving

## Using cellphone while driving is subject to penalties.

Holding a cellphone in a hand and use it for a call or gazing at a screen to see mails, etc. while driving is subject to penalties.

(November 1, 2004 Implementation of the Revised Road Traffic Law)



Holding a cellphone in a hand and use it for a call




Gazing at a screen to see mails, etc.

## Use drive mode or turn the power off while driving.


### Drive Mode

When the drive mode is set, the caller will hear the answering message “Now driving. I can’t answer the phone right now... (Japanese)”, and can leave a message in the In-Phone Ans Mach.

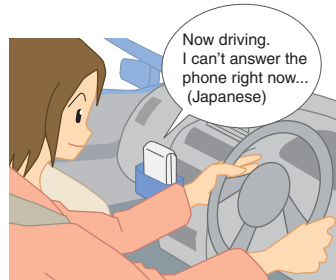

From the standby screen, press , use to select “Car”, and press [Select].

#### Standby screen

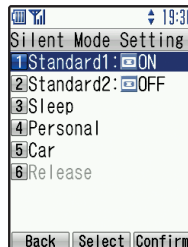

Select “Car” and press [Select].



# Watch Out for Junk Mail and One-Ring Calls!

## If you receive junk mail...

### ● Mail Filter

Using the mail filter function, you can reject mail sent from specified addresses and Spoof e-mail.

The following mail functions are the main methods available for preventing the arrival of junk mail:

- Reject mail with “未承諾広告※ (Unsolicited Ad Mail)” in the subject
- Reject mail from specified addresses
- Reject Spoof e-mail

Page 57

### ● Change E-mail Address

You can prevent arrival of junk mail by changing E-mail address.

Page 22




## If you receive a call from unknown number...

It may be a “One-Ring Call” which intends to trick you into calling back and accessing unwanted pay programs. Be careful of a call from unknown number.

### ● Icon for One-Ring Calls

The icon (📞) is displayed in the log of One-Ring Call and lets you know the caller hung up within 3 seconds.

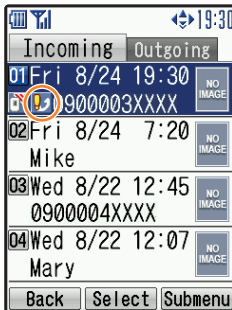

# Disaster Message Board Service

## About Disaster Message Board

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be confirmed from anywhere in Japan through EZweb or Internet.

### Registering safety information

- When a big scale disaster occurs, you can register your safety information such as your condition and comments from a cellphone to the “災害用伝言板 (Disaster Message Board)” created on the EZweb.
- After registering your safety information, you can notify by E-mail your family or acquaintances you have previously specified that you registered your safety information on the “災害用伝言板(Disaster Message Board)”.

### Confirming safety information

- You can confirm the safety information of the person you want to know about by entering his/her phone number from EZweb or Internet\*.
- \* When you confirm the safety information from other carriers' cellphone, PHS or personal computer, access the following URL.  
<http://dengon.ezweb.ne.jp/>

災害用伝言板  
伝言板トップ


～サービス提供中～  
安否情報の登録・確認ができます。

[登録\(登録可能地域は下記のご利用地域情報を参照ください\)](#)  
[確認](#)  
[削除](#)  
[お知らせメール設定](#)  
[サービス概要](#)  
[ご利用地域情報](#)  
[お問合せ](#)  
[災害対策への取り組み](#)

[English](#)

(C)KDDI  
OK BrsrMnu

How to access	 → Top Menu → 災害用伝言板 (Disaster Message Board)
	<a href="http://dengon.ezweb.ne.jp/">http://dengon.ezweb.ne.jp/</a>

- \* The maximum preservation period of the registered information is 72 hours.
- \* The maximum available number of each registration is 10. When the number of registration exceeds 10, the information will be overwritten from the oldest one.
- \* The demonstration of this service can be referred to anytime by accessing  → Top Menu → auお客さまサポート (au Customer Support) → 災害用伝言板(デモ版) (The demonstration of Disaster Message Board).
- \* You can use English version by selecting “English”.

# Contents

Cellphone Etiquette .....	1
What You Can Do with the A5527SA .....	2
Silent Mode and In-Phone Ans Mach .....	3
Check the Power, Radio Waves, and Battery! .....	4
Do Not Use the Cellphone While Driving .....	5
Watch Out for Junk Mail and One-Ring Calls! .....	6
Disaster Message Board Service .....	7
Contents.....	8

## Before Use

Confirming the Packed Contents .....	10
Names of Parts .....	11
How to Charge the Battery Pack .....	12
Turn the Power On/Off .....	13
Basic Operation .....	14
Viewing the Screen .....	16
About Menu .....	17
Setting the Language to English .....	18
Initial Setting for E-mail and EZweb .....	20
Confirming Your Cellphone Number/E-mail Address .....	21
Changing Your E-mail Address .....	22

## Phone Call

Making a Call .....	24
Making an International Call .....	25
Answering a Call .....	26
Calling Back (Outgoing Calls/Incoming Calls Log) .....	27
Adjusting the Caller's Voice Volume .....	27
Adjusting the Ringer Volume .....	28
Changing the Ringer Type .....	30
Setting the Silent Mode .....	31
Using the In-Phone Ans Mach .....	32

## Global Functions

Using Overseas .....	34
----------------------	----

## Inputting Characters

About Inputting Characters .....	36
How to Input Characters .....	38

## Address Book/ Pair Function


Saving to the Address Book .....	42
Making a Call from the Address Book .....	45
Editing an Entry in the Address Book .....	46
Saving from Outgoing Calls/Incoming Calls Log .....	47
Setting a Pair Partner .....	48
Making a Call to a Pair Partner .....	49

<b>Mail</b>	About E-mail .....	50
	Creating and Sending an E-mail .....	51
	Reading a Received E-mail .....	54
	Replying to a Received E-mail .....	56
	Blocking Junk Mails .....	57
	About C-mail .....	58
	Creating and Sending a C-mail .....	59
	Reading a Received C-mail .....	61
<b>Camera</b>	What You Can Do with the Camera .....	62
	Taking a Photo .....	64
	Viewing Photos .....	65
	Sending Photos by E-mail .....	66
<b>EZweb</b>	About EZweb.....	67
	Accessing Information Sites .....	68
	Inquiring Toll .....	69
	Downloading Chaku-Uta® and Set It as a Ringer for Incoming Calls .....	70
	Registering Frequently-Accessed Information Sites .....	72
<b>EZ Navi</b>	What You Can Do with EZ Navi .....	74
<b>SimpleMode</b>	About SimpleMode .....	76
	Using SimpleMode .....	79
<b>Troubleshooting/ Remote Auto Lock</b>	Troubleshooting .....	84
	Before Losing...(Remote Auto Lock) .....	85
<b>Other Features/ Index</b>	Other Features .....	87
	Index .....	88


# Before Use

## Confirming the Packed Contents


- A5527SA Main Unit

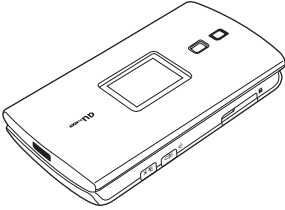


- Battery Pack (Installed in the main unit)

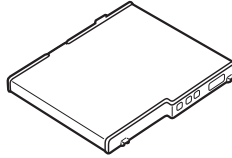


- Desktop Holder

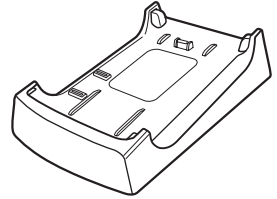

- AC Adapter

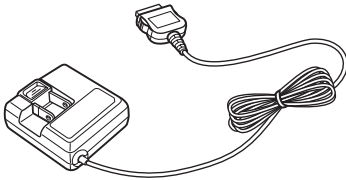


- SANYO Flat-type Stereo Earphones 04

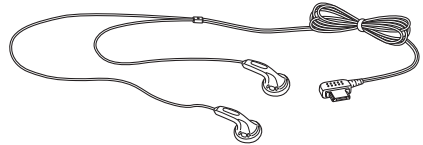

- Basic Manual (Japanese)



- Manual (Japanese)

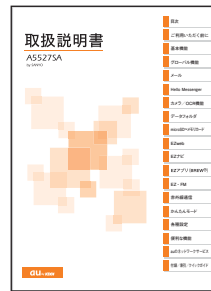

- Warranty (Japanese)
- GLOBAL PASSPORT Owner's Manual





- Precautions in Use (Japanese)

### Information

- A microSD™ Memory Card (Commercially Available) is not included in this package. Please purchase your own memory card.



# Names of Parts

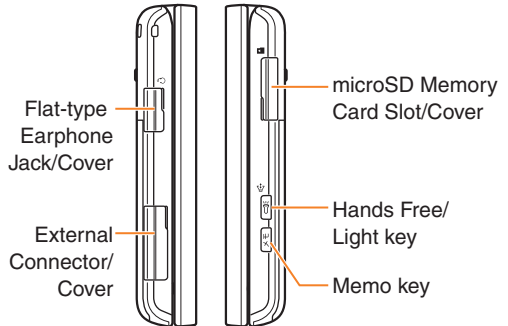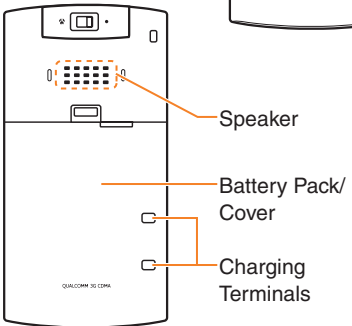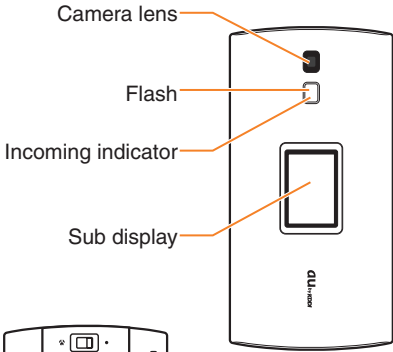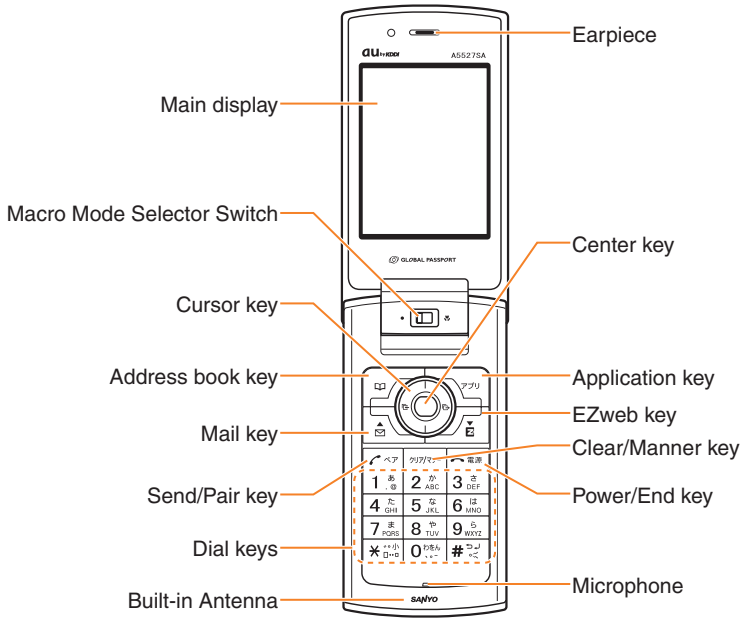

# How to Charge the Battery Pack


The battery pack is not fully charged at the time of purchase. Before using your cellphone, charge the battery pack in the following ways.

## ● To Charge Using the Desktop Holder

Connect the AC adapter to the desktop holder, plug the power plug into a power outlet, and insert the A5527SA to the desktop holder. A confirmation tone sounds once when charging begins. It also sounds when charging is completed.

### Incoming Indicator

- Red light is on → Charging
- Light is off → Charging is completed

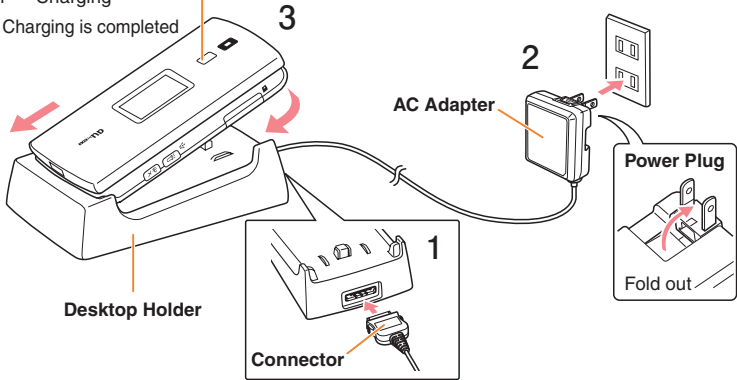


## ● To Charge Using the AC Adapter

Connect the AC adapter to the external terminal of the A5527SA and plug the power plug into a power outlet. A confirmation tone sounds once when charging begins. It also sounds when charging is completed.

### Incoming Indicator

- Red light is on → Charging
- Light is off → Charging is completed

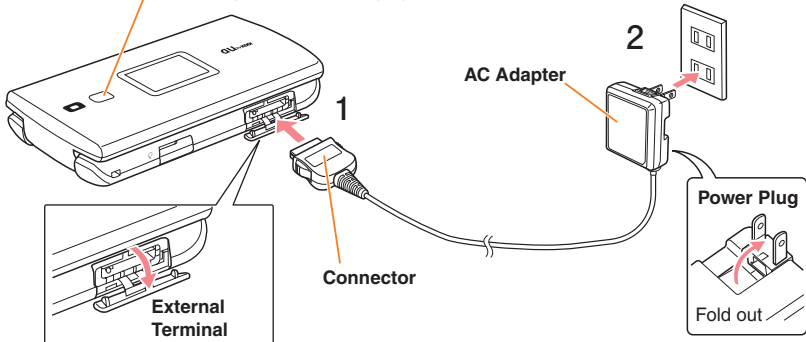

# Turn the Power On/Off

## ● To Turn the Power On


Press  for more than one second.

The standby screen is displayed.


## ● To Turn the Power Off

Press  for more than one second.



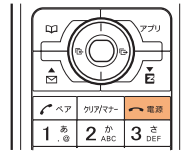

Standby screen




## Confirming the Reception State and Remaining Battery Power







**Check here for remaining battery power!**

			
Fully charged	Low	Requires charging	Fully discharged

\*  is displayed while charging.

**Check here for the reception state!**

				Out
Strong	Medium	Weak	Too weak	Out of service area

\* You cannot receive or make calls when "Out" (Out of service area) is displayed.

# Basic Operation





## Key Functions

### Cursor Keys

- Move cursor or screen
- In the standby screen,
 

Press	Displays
Up	Profile
Down	Calendar
Left	Incoming Calls log
Right	Outgoing Calls log

Cursor keys are indicated in this manual as follows:

Up	Down	Left	Right
			

### Address Book Key

- Displays Address Book

### Mail Key


- Displays E-Mail/C-Mail Menu

### Talk/Pair Key

- Makes/Receives calls
- Displays Pair Menu

### Clear/Manner Key

- Sets the silent mode
- Deletes entered characters

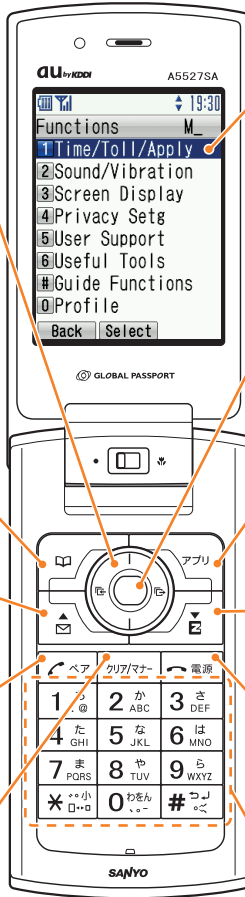

### Cursor

### Center Key

- Displays Main Menu
- Selects an item where the cursor is placed

### Application Key

- Launches EZ apps (BREW®)

### EZweb Key

- Displays EZ Menu

### Power/End Key

- Turns the power on/off
- Ends a call

### Dial Keys

- Enters phone numbers or characters



### Memo Key


- Sets the In-Phone Ans Mach
- Plays recorded messages

### Hands Free/Light Key

- For using Hands Free function
- For using as Light

# Executing Functions Displayed at the Bottom

The functions displayed at the bottom of the screen correspond with the keys as follows:

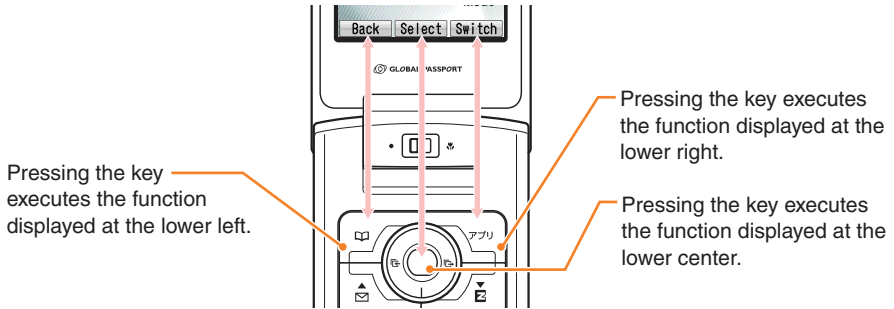

# Selecting Items/Returning

To select an item, use to move the cursor and press .


An item with numeric icon can also be selected by pressing the corresponding dial key.

To go back to the previous screen, press . When **Back** is displayed at the bottom of the screen, pressing the corresponding key also allows you to return to the previous screen.

To return to the standby screen, press .

## <Example>



### Standby screen

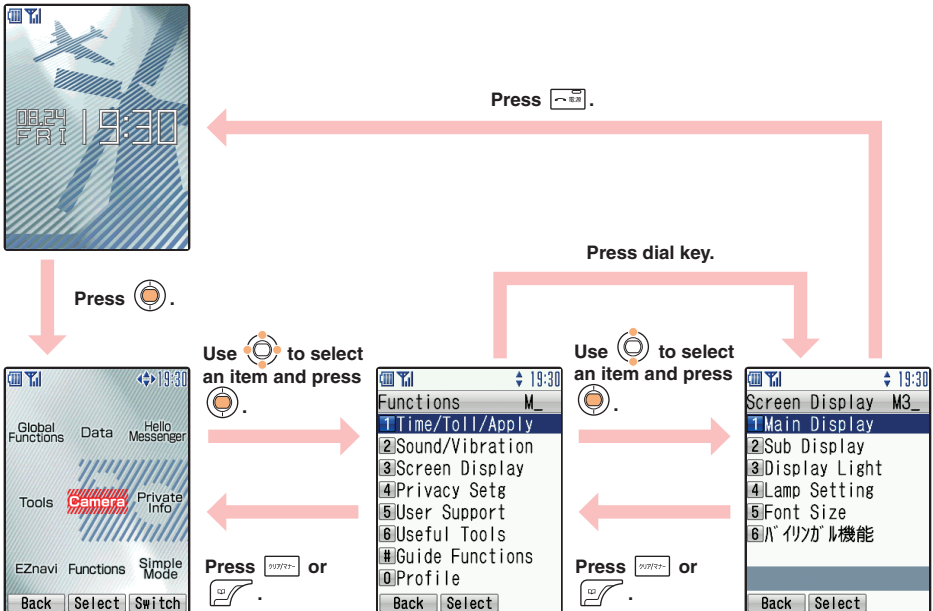

# Viewing the Screen

## Indications in the Main Screen

The following icons are displayed in the main screen and indicate the status of your A5527SA. Icons and the number of cases are displayed when you have received missed calls or mails.

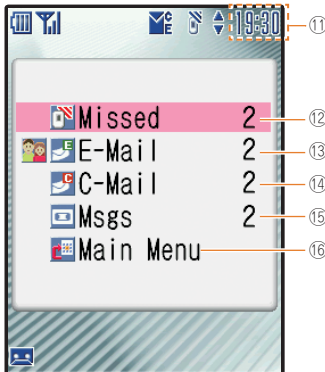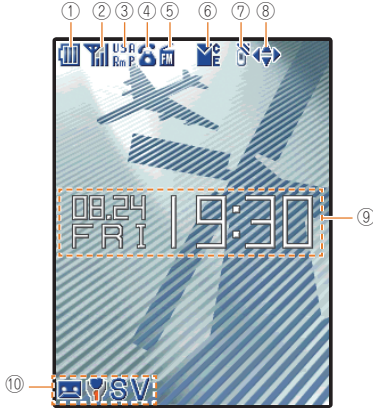


①		Battery level
		Charging
②		Reception state
		Roaming area * No indication when set to "Japan".
③		Phone calls are available in roaming area
		Packet communication is available in roaming area
④		During a call
		Using EZweb
		Running EZ apps
⑤		Running Hello Messenger
		Running EZ·FM
⑥		Unread E-mail
		Unread C-mail
⑦		Unchecked missed call
		Indicates the directions to scroll
⑧		Appears when the volume setting is available while confirming or playing data
	⑨ Current date and time	
⑩		Silent Mode is ON
		In-Phone Ans Mach is ON

⑪	Current time	
⑫		Missed Call
⑬		New E-mail*
⑭		New C-mail*
⑮		New memo in the In-Phone Ans Mach
⑯		To main menu

\* is displayed when you have a mail from pair partner.


# About Menu

## About Main Menu

Pressing  in the standby screen launches the Main Menu.

Each function can be accessed by using  to select an item and pressing .


### <Example> Accessing Camera from Main Menu

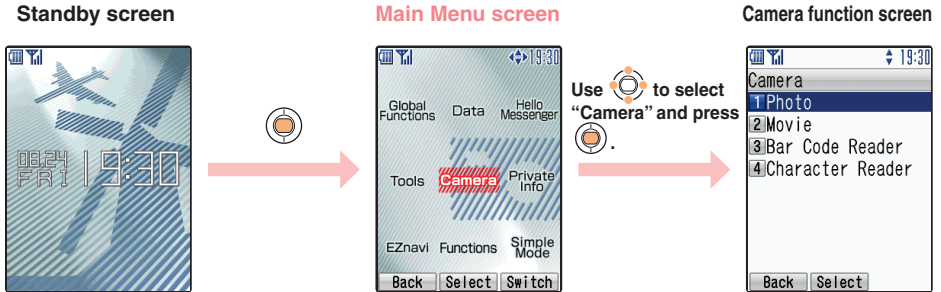

## About Submenu


When **Submenu** is displayed at the bottom of the screen during each operation, you can access related functions or information by pressing the key that corresponds to Submenu.

### <Example> Displaying Photo's Submenu

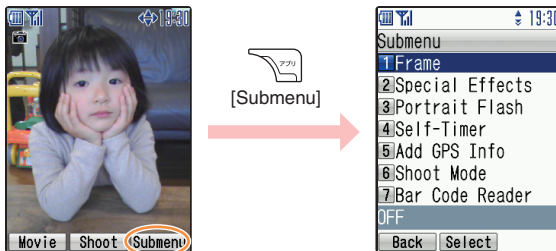


# Setting the Language to English



1 Press  in the standby screen.

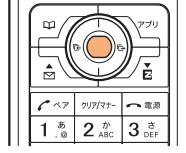


2 Use  to select “機能” and press  [選択].

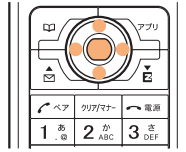

3 Use  to select “画面表示” and press  [選択].

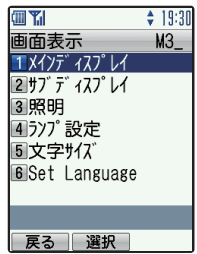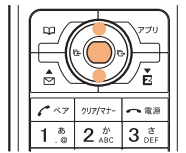


4 Use  to select “Set Language” and press  [選択].

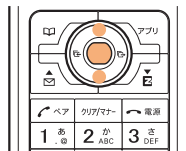





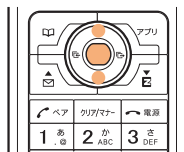

**5** Use  to select “English” and press  [選択].




**Information**

- You can set the language to Japanese by pressing in turn     from the standby screen.

# Initial Setting for E-mail and EZweb

To use E-mail and EZweb services, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using E-mail and EZweb services for the first time. The initial setting automatically determines your E-mail address. To change it as you like, see “Changing Your E-mail Address” (p.22).

**1** Press  in the standby screen.

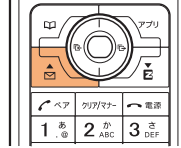


To Use EZweb,  
Initial Setting  
will Take Effect.  
Press [OK]  
and Please Wait

OK

**2** Press  [OK].

Your E-mail address is determined automatically by the initial setting.

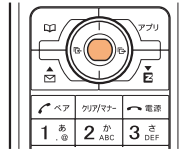

Welcome to EZweb.  
Your e-mail address  
is:  
@@@@@@@@@@@@@@@@@ezw  
eb.ne.jp  
-Hint-  
If you want to  
change your e-mail  
address, push OK  
and enter a new



OK BrsrMnu

**3** Press  [OK].

The initial setting is completed and E-mail Menu appears.




## Information

- Pressing  /  in the standby screen also allows you to do the initial setting.



# Confirming Your Cellphone Number/E-mail Address

**1** Press  in the standby screen.

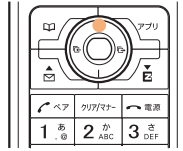
Your cellphone number and E-mail address are displayed.




**Information**

- You can also display them from the standby screen by pressing , and then .



# Changing Your E-mail Address

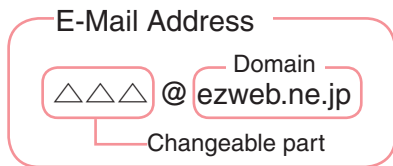



**1** Press  in the standby screen.

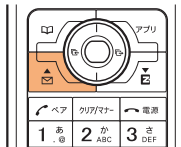

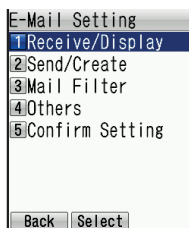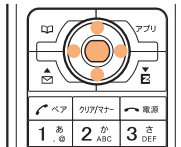



**2** Use  to select “E-Mail Setting” and press  [Select].

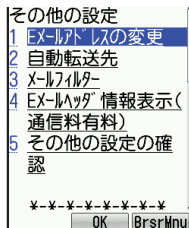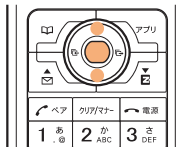

**3** Use  to select “Others” and press  [Select].




**4** Use  to select “Eメールアドレスの変更 (Change E-mail Address)” and press  [OK].

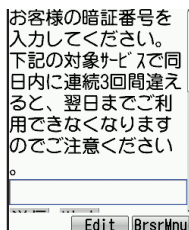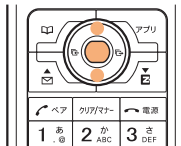

## 5 Enter your Security Code, press

[Set], use  to select **送信** (Send), and press  [OK].

 
- Security Code is the 4-digit number you wrote in the application form when purchasing.
- If you enter a wrong Security Code 3 times in a row within the same day, you will not be allowed to perform setup operations until the following day.



EX-メール™ を変更します。以下のご注意を確認した上で EX-メール™ の変更を行ってください。

**承諾する**  
戻る  
OK BsrMnu

## 6 Use to select “承諾する (Agree)” and press [OK].

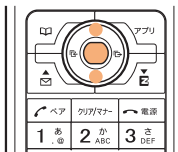

EX-メール™ を変更します。ご希望の EX-メール™ を入力してください。

@ezweb.ne.jp  
送信 リセット  
Edit BsrMnu

## 7 Use to select the input field, enter an E-mail address, and press [Set].

- See “Inputting English Characters” (p.39) about the characters available for E-mail address and the way of entering E-mail address.




の「0」を使用することはできません。

@@@@@@@@@@@@@@@@  
@ezweb.ne.jp  
送信 リセット  
前のページへ  
OK BsrMnu

## 8 Use to select **送信** (Send) and press [OK].

- When the E-mail address you entered is already being used, enter a different one.

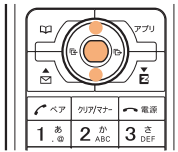


新しい EX-メール™ レジは  
@@@@@@@@@@@@@@@@  
@ezweb.ne.jp  
です。  
よろしいですか？

OK キャンセル  
OK BsrMnu

## 9 Use to select **OK** and press [OK].

 Your E-mail address is changed.




# Phone Call

## Making a Call



**1** From the standby screen, press **0** (ひら) - **9** (わん) to enter a phone number.

- To call a regular phone, enter a phone number starting with the area code.

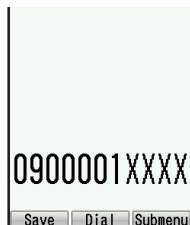


**2** Press **へア**.

To end the call, press **へア**.

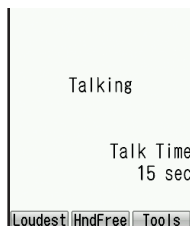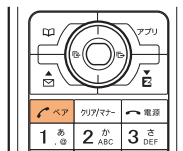

## To Select the Way of Dialing

**1** After entering a phone number, press **ダイヤル** [Dial], use **ダイヤル** to select the way of dialing, and press **ダイヤル** [Select].

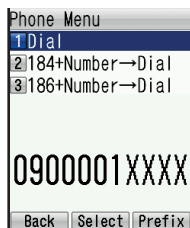


- The following are details of each menu:
  - Dial** : Makes a call in accordance with the Caller ID setting.
  - 184+Number → Dial** : Not notify the other party of your cellphone number.
  - 186+Number → Dial** : Notifies the other party of your cellphone number.

# Making an International Call

## au International Call Service

Available without any additional application.

Example: To call 212-123-XXXX in the USA

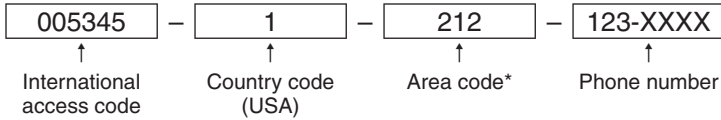


\* When an area code begins with "0", dial excluding "0".

- Calling charges for this service are added to monthly au calling charges and billed together.
- Check the Country code at au Customer Service Center.
- For charges, refer to Global Passport Owner's Guide or contact au Customer Service Center.

## 001 KOKUSAI MOBILE TALK

Application required.

For inquiries, contact KDDI Customer Service Center at 0077-7160 (Toll-free; open 9:00 to 20:00 every day including weekends and national holidays).

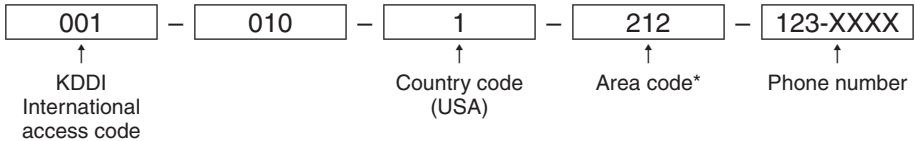

\* When an area code begins with "0", dial excluding "0".



- Calling charges for 001KOKUSAI MOBILE TALK are charged separately from monthly au calling charges.
- Check the Country code at au Customer Service Center.

For charges, refer to Global Passport Owner's Guide or contact au Customer Service Center.

# Answering a Call

**1** Press  to answer the call.

To end the call, press .

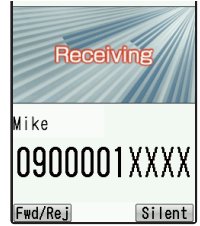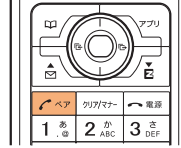


## On-screen display for Incoming calls




<b>Phone number</b>	The caller notifies his/her phone number. If the caller is already saved in the Address book, his/her name or image is also displayed.
<b>ID Unsent</b>	The caller does not notify his/her phone number.
<b>Payphone</b>	The caller is making a call from a payphone.
<b>Unsupported</b>	The caller is making a call from a phone that does not support ID notification.





## ● When You Could Not Answer a Call (Missed Call)



 (Missed) and the number of missed calls are displayed.

**1** Use  to select  (Missed) and press .

Incoming calls log is displayed.

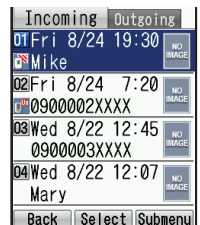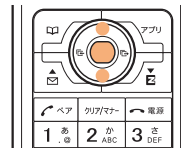




 
# Calling Back (Outgoing Calls/Incoming Calls Log)

<Example> Calling back from the Incoming calls log


**1** Press  in the standby screen.

The incoming calls log is displayed.




**2** Use  to select a desired number and press .

The phone starts dialing the phone number you selected.

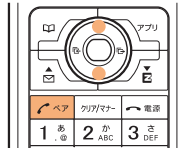





### Information

- To call back to a number from outgoing calls log, press  in the standby screen.
- The latest 20 phone numbers you dialed and received are saved in each log.


# Adjusting the Caller's Voice Volume


**1** Press  during a call.

- : turns the volume up
  - : turns the volume down
- 5 levels of adjustment (Level 1 to 5) are available.

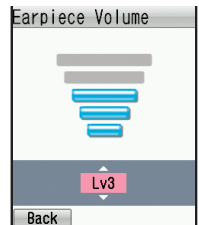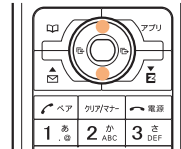


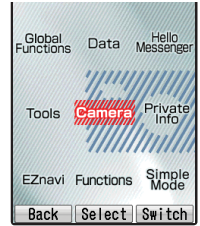
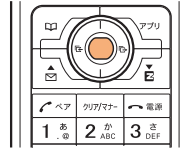
### Information

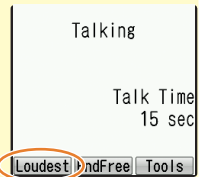

- If you press  [**Loudest**] during a call, the volume will be louder than level 5. This setting will be automatically released once the call is completed.







# Adjusting the Ringer Volume


1 Press  in the standby screen.

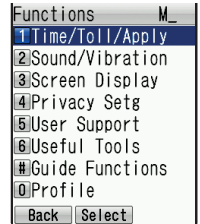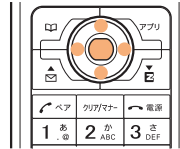

2 Use  to select “Functions” and press  [Select].




3 Use  to select “Sound/ Vibration” and press  [Select].

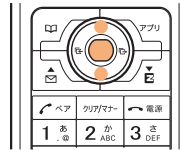




4 Use  to select “Incoming Call” and press  [Select].

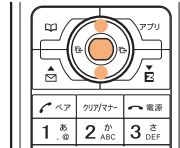
The actual volume is displayed in incoming call setting screen.





5



Use  to select “Volume” and press  [Select].

: turns the volume up

: turns the volume down

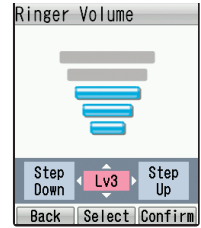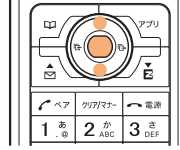5 levels of adjustment (Level 1 to 5) are available.







- To confirm the volume, press  [Confirm].
- To mute the ringer, set the volume to S (OFF).
- To set Step down/Step up, press .

Step Down : The volume turns down step by step.

Step Up : The volume turns up step by step.

6


Use  to adjust the volume and press  [Select].

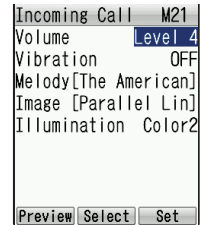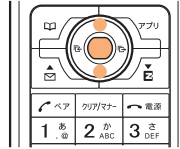

7

Press  [Set].

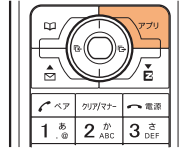

The volume is changed.





# Changing the Ringer Type



<Example> Setting the ringer type in “Original”

1

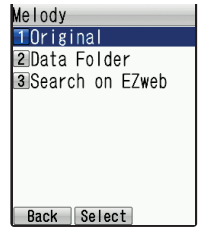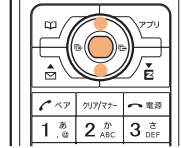
After the step 4 on page 28, use  to select “Melody” and press  [Select].





2

Use  to select “Original” and press  [Select].



Ringer list is displayed.

- To confirm the selected ringer, press  [Confirm].

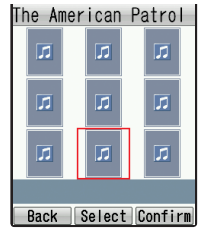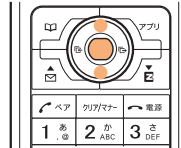

3


Use  to select a ringer type and press  [Select].

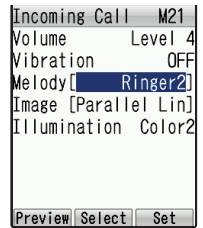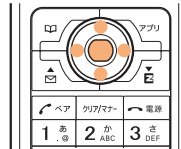

4

Press  [Set].

The ringer is changed.

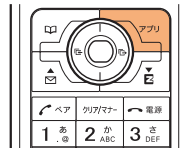



## Information



- The default ringer is “The American Patrol”.
 
# Setting the Silent Mode

When the silent mode is set, your cellphone vibrates to notify you of incoming calls and records the caller's message in the In-Phone Ans Mach when you cannot answer a call.

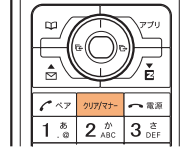
- 1 Press  for more than one second in the standby screen.





 
The silent mode is set and   SV appear in the standby screen.



## To Release the Silent Mode

- 1 Press  for more than one second while setting the silent mode.

  SV disappear from the standby screen.

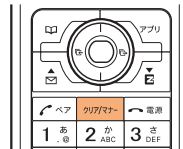



# Using the In-Phone Ans Mach

When the In-Phone Ans Mach is set, you can play answering message and record caller's message.

## Setting the In-Phone Ans Mach

- 1 Press **メモ** for more than one second in the standby screen.

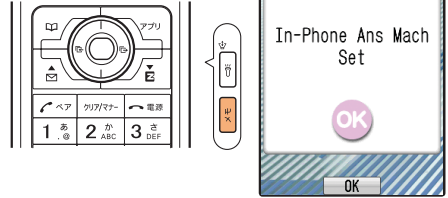


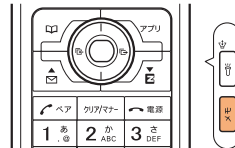
In-Phone Ans Mach is set and  appears in the standby screen.



## To Release the In-Phone Ans Mach

- 1 Press **メモ** for more than one second while setting the In-Phone Ans Mach.


 disappears from the standby screen.






# Playing Back the Recorded Messages


When a message is recorded in the In-Phone Ans Mach, the standby screen notifies you.







 (Msgs) and the number of recorded messages are displayed.

**1** Use  to select  (Msgs) and press .



Playback screen is displayed.

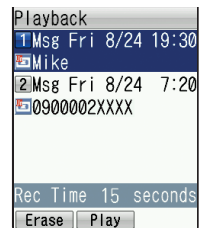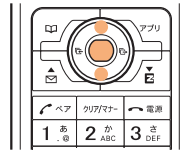- To delete a message, press  [Erase].




**2** Use  to select a desired message and press  [Play].

The message is played.

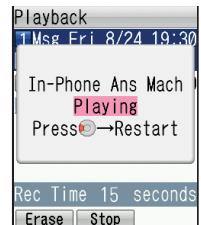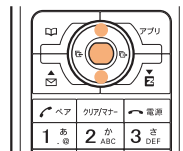

## Information

 - Up to 3 messages (including voice memo) can be recorded, and the available recording time for each message is 20 seconds.
- In-Phone Ans Mach cannot be set when the maximum number of message is recorded.
- You can also display the playback screen from the standby screen by pressing , and then select "Playback"



# Global Functions


## Using Overseas


You can use the A5527SA overseas with global functions.

### Setting Area


1 Press  in the standby screen.

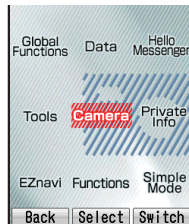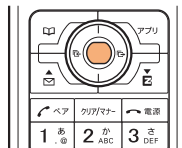

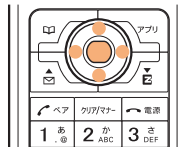



2 Use  to select "Global Functions", press  [Select] and press  [OK].

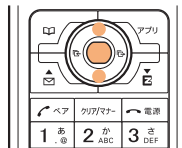

3 Use  to select "Area Setting" and press  [Select].




4 Use  to select "Overseas" and press  [Select].

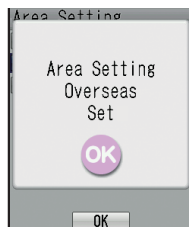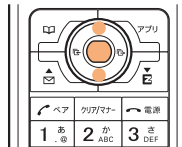







# Calling to Japan from Overseas



1

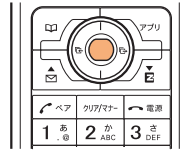From the standby screen, enter a phone number and press  [Dial].



2

Use  to select “Dial to Japan”, press  [Select] and press .

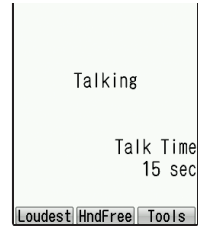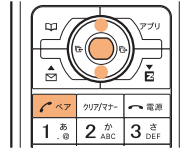

Global Functions

## Information

- Although the preferred roaming list (PRL) is already stored in the phone at the time of purchase, the list may be updated several times a year. Update it before departure.
- You can use like a normal cellphone when calling from Japan to an overseas cellphone compatible with GLOBAL PASSPORT.
- You need to sign up for the EZweb service before departure. Initial setting of EZweb must also be done in Japan.

# Inputting Characters

## About Inputting Characters


It is necessary to input characters when saving an entry to the Address Book, or creating an E-mail, for instance. Kanji, Hiragana, Katakana, English, numbers, pictograms, emoticons, symbols, and phrases can be inputted.




### Changing the Character Input Mode

Inputting Characters



**1** Press  in the text input screen.

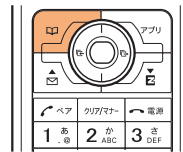

A list of character input modes is displayed.



**2** Use  or  [Switch] to select an input mode and press  [Select].

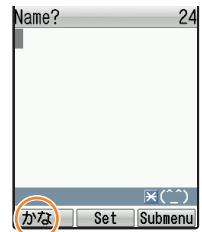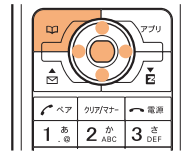The currently selected input mode is shown at the bottom of the text input screen.



かな	Kana/Kanji mode	カナ	Full-sized Katakana mode	か	Half-sized Katakana mode
AB	Full-sized and uppercase English mode	a b	Full-sized and lowercase English mode	12	Full-sized number mode
AB	Half-sized and uppercase English mode	a b	Half-sized and lowercase English mode	12	Half-sized number mode
	Pictograms mode	(^_^)	Emoticons mode	Sym.	Symbols mode
	Undo	—	—	Chara	Chara Moji mode

#### Information

- Input modes available for text input screen in each function vary.

# Key Assignment of Characters

Several characters are assigned to one key. Pressing the same key repeatedly displays a character you want to input.

## Example (in the English mode)

Press **2** カ ABC once → **a** → twice → **b** → 3 times → **c** → 4 times → **A** → 5 times → **B** → 6 times → **C** → 7 times → **2** → 8 times → **a** → ...

## Character assignment table

Key \ Input mode	Kana/Kanji (Full-sized)	Katakana (Full-sized/Half-sized)	English (Full-sized/Half-sized)	Number (Full-sized/Half-sized)
<b>1</b> <small>ア IJKL</small>	あいうえおあいうえお 1	アイウエオアイウエオ 1	. @ - _ / : ~ 1	1
<b>2</b> <small>カ ABC</small>	かきくけこ 2	カキクケコ 2	a b c A B C 2	2
<b>3</b> <small>サ DEF</small>	さしすせそ 3	サンスセン 3	d e f D E F 3	3
<b>4</b> <small>タ GHI</small>	たちつてとっ 4	タチツテトツ 4	g h i G H I 4	4
<b>5</b> <small>ナ JKL</small>	なにぬねの 5	ナニヌネノ 5	j k l J K L 5	5
<b>6</b> <small>ヒ MNO</small>	はひふへほ 6	ハヒフヘホ 6	m n o M N O 6	6
<b>7</b> <small>マ PQRS</small>	まみむめも 7	マミムメモ 7	p q r s P Q R S 7	7
<b>8</b> <small>ヤ TUV</small>	やゆよやゆよ 8	ヤユヨヤユヨ 8	t u v T U V 8	8
<b>9</b> <small>ワ XYZ</small>	らりるれろ 9	ラリルレロ 9	w x y z W X Y Z 9	9
<b>0</b> <small>ワXYZ</small>	わをんわ。ー・～! ? _ 0	ワランワ。ー・～! ? _ 0	0 . . - ~ ! ? _	0
<b>*</b> <small>上/下</small>	* (Voiced sound symbol) ° (Semi-voiced sound symbol)	_____		✕
	Switch between uppercase and lowercase			
	Switch to a list of pictograms, emoticons and symbols			
<b>#</b> <small>上/下</small>	Enter ↵ (Linefeed)			#
	Display candidate words in reverse order while inputting characters (which are not set yet) (Back function)			

- \* “ ~ ” can be inputted only when inputting full-sized characters. It changes to “ ~ ” when inputting half-sized characters.
- \* “ っ ” (lowercase character) can be inputted only when inputting full-sized characters.
- \* \_ indicates a space.
- \* Inputting voiced sound symbol/semi-voiced sound symbol or switching uppercase/lowercase can be done by pressing **\*** 上/下 after inputting the character.  
(A list of pictograms, emoticons and symbols is displayed if you press it after the inputted character is set.)
- \* Ex.) つ → っ → づ → っ      八 → バ → パ → 八      a → A → a

# How to Input Characters

## Inputting Kana or Kanji

<Example> Inputting “岡垣” in a name input screen of the Address Book

1

In a text input screen,

press  5 times ..... 「お」



press  once ..... 「か」



 (makes a cursor move)

press  once ..... 「か」

press  (voiced sound symbol) ... 「が」

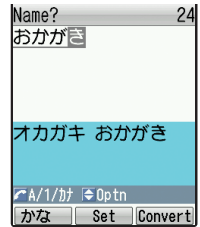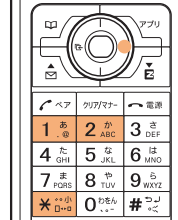press  twice ..... 「き」




- To consecutively input characters assigned to a same key, move the cursor to the right.
- Candidate words are displayed when inputting a character. You can input by selecting a candidate word with .
- When you press  before converting or setting an inputted character, you can change it to a character which may be displayed in number, English, or Katakana mode. However, a space is displayed when there is no corresponding character in number, English, or Katakana mode.

2



Press  [Convert].

“おかがき” is converted to Kanji.


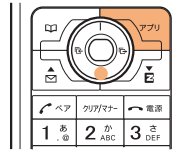
Then pressing  displays a list of candidate words.



3

Use  to select “岡垣” and press  [Select].

“岡垣” is inputted.

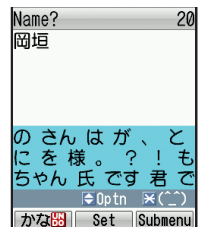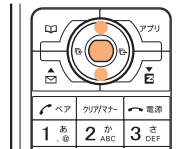

# Inputting English Characters

<Example> Inputting “komatsu” in an E-mail address input screen of the Address Book

1

In a text input screen,

press **5** (な JKL) twice..... 「k」

press **6** (は MNO) 3 times... 「o」

 (makes a cursor move)



press **6** (は MNO) once..... 「m」

press **2** (か ABC) once..... 「a」

press **8** (や TUV) once..... 「t」

press **7** (ま PQRS) 4 times... 「s」

press **8** (や TUV) twice..... 「u」

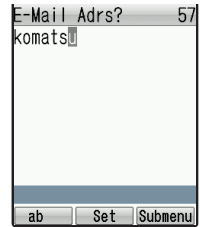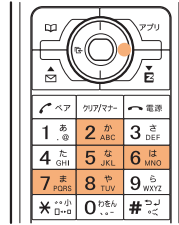

- To consecutively input characters assigned to a same key, move the cursor to the right.
- To input an E-mail address, you can input “@ezweb.ne.jp” by selecting it from phrases. See “Inputting Phrases” (p.40) about inputting phrases.

## Characters available for E-mail Addresses



Key	Available characters								
<b>1</b> (あ い う)	.	@	.	_	/	:	~	1	
<b>2</b> (か ABC)	a	b	c	A	B	C	2		
<b>3</b> (さ DEF)	d	e	f	D	E	F	3		
<b>4</b> (た GHI)	g	h	i	G	H	I	4		
<b>5</b> (な JKL)	j	k	l	J	K	L	5		
<b>6</b> (は MNO)	m	n	o	M	N	O	6		
<b>7</b> (ま PQRS)	p	q	r	s	P	Q	R	S	7
<b>8</b> (や TUV)	t	u	v	T	U	V	8		
<b>9</b> (ら WXYZ)	w	x	y	z	W	X	Y	Z	9
<b>0</b> (ひらがな, かな, 数字)	0	,	.	-	~	!	?		



\* Characters in   cannot be used for your E-mail address when you change it.

# Inputting Phrases



<Example> Inputting “@ezweb.ne.jp” in an E-mail address input screen

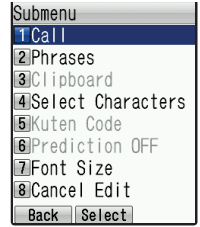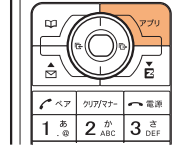
 
**1** Press  [Submenu] in a text input screen.




**2** Use  to select “Phrases” and press  [Select].

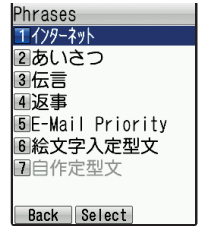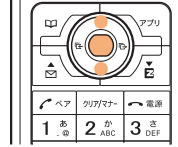

Groups of phrases are displayed.




**3** Use  to select “インターネット(Internet)” and press  [Select].

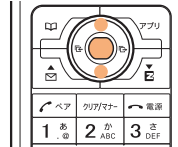A list of phrases is displayed.



**4** Use  to select “@ezweb.ne.jp” and press  [Select].

“@ezweb.ne.jp” is inputted.

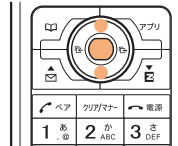




# Inputting Pictograms, Emoticons and Symbols




## <Example> Inputting a pictogram

**1** Press  in a text input screen.



A list of input mode is displayed.

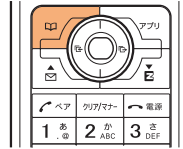



-  ...Pictogram
-  ...Emoticon
- Sym.**...Symbol



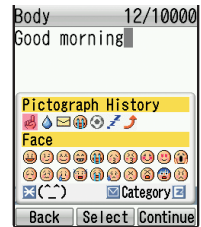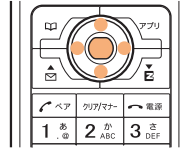

**2** Use  to select  and press  [Select].



A list of pictograms is displayed.





- To change categories, press  or .
- To switch between pictograms, emoticons and symbols, press .
- To input consecutively, press  [Continue].

**3** Use  to select a pictogram and press  [Select].

The pictogram is inputted.

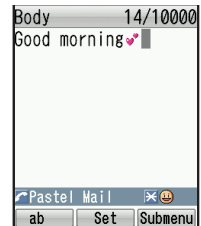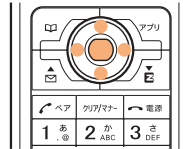

### Information

  - To delete one character, put the cursor on the character you want to delete and press .
- To delete multiple characters, press  for more than one second to either delete all characters to the right of the cursor or delete all displayed characters when there are no characters to the right of the cursor.

# Address Book


## Saving to the Address Book




You can save phone numbers to which you call frequently, names, and E-mail addresses.


### <Example> Saving a name, phone number and E-mail address

- 1** Press  for more than one second in the standby screen.

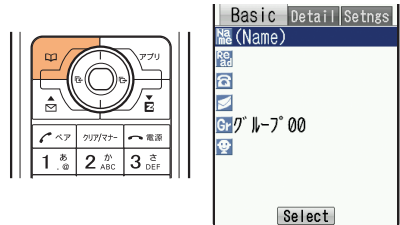Address book registration screen is displayed.




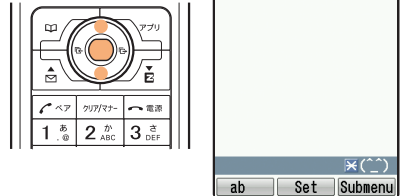


- 2** Use  to select  (Name) and press  [Select].




- 3** Enter a name and press  [Set].

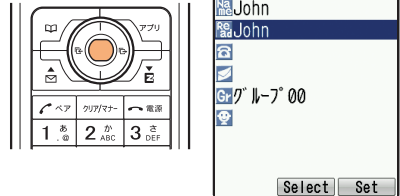- See "Inputting Characters" (p.36) about the way of inputting characters.
- The reading is automatically entered.




- 4** Use  to select  (Phone No.1) and press  [Select].


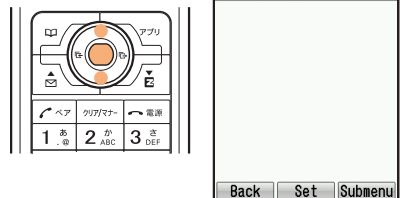




5

Enter a phone number and press  [Set].

- Enter the area code when saving a regular phone number.

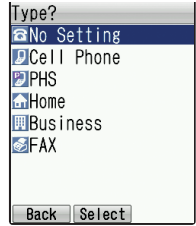
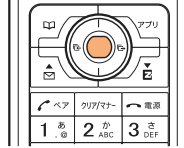


6

Use  to select a type of phone number and press  [Select].



The icon of selected type is displayed.

- If you do not enter E-mail address, go to step 10.

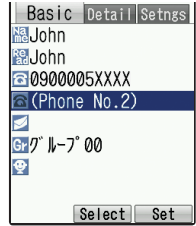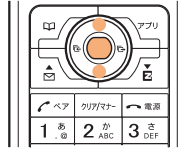


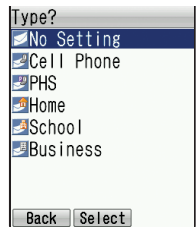
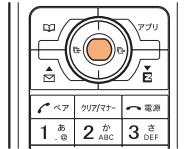
7

Use  to select  (E-Mail Address1) and press  [Select].

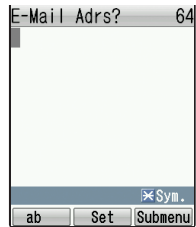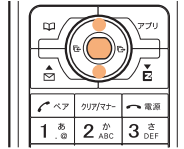



8


Enter an E-mail address and press  [Set].



9

Use  to select a type of E-mail address and press  [Select].



The icon of selected type is displayed.

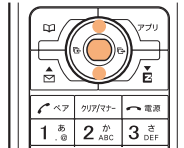

10

Press  [Set].



Pop-up screen which indicates Memory No. is displayed.

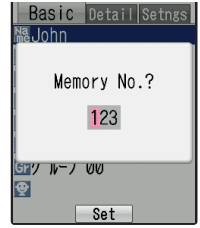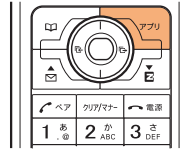

11

Press  [Set].

Saving to the Address Book is completed.

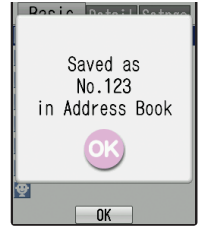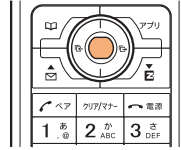


**Information**


- Up to 1000 entries can be saved.
- You can also save some information such as group, image and address.
- An entry can contain up to 3 phone numbers and 3 E-mail addresses.
- The smallest available memory number from 000 to 999 is automatically assigned. You can assign any number by pressing dial keys.


# Making a Call from the Address Book



**1** Press  in the standby screen.

Address book list is displayed.


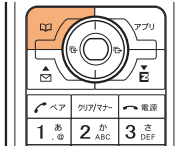


**2** Use  to select a person to call and press .

- Use  to select the number 1 to 3 when the entry has some numbers.

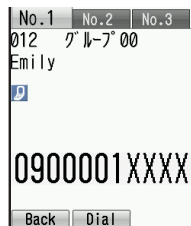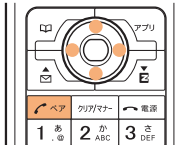

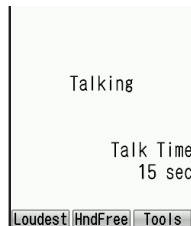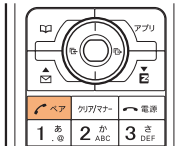


**3** Press .







Address Book/Pair Function

# Editing an Entry in the Address Book

- 1** From the standby screen, press , use  to select an entry to edit, and press  [Select].

 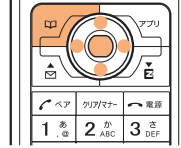
The address book detailed screen is displayed.




- 2** Press  [Submenu], use  to select “Edit” and press  [Select].

The address book registration screen is displayed.






- You can delete the displayed address book data by selecting “Delete” after pressing  [Submenu].

- 3** Edit the entry and press  [Set].



Yes : Overwrites the entry.

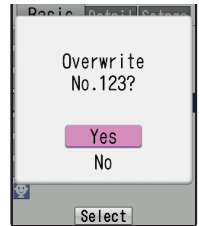No : Registers the edited information under a different Memory No.






- 4** Use  to select “Yes” and press  [Select].

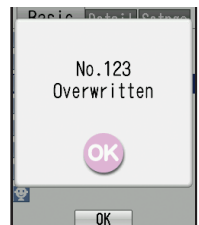
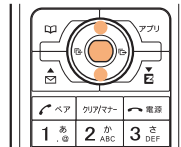
The entry in the Address Book is edited.







# Saving from Outgoing Calls/Incoming Calls Log

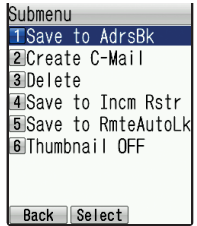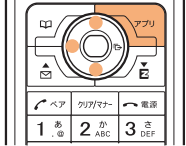

<Example> Saving from Incoming calls log


**1** From the standby screen, press , use  to select the log to save, and press  [Submenu].

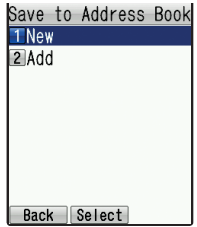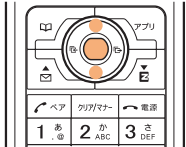

**2** Use  to select “Save to AdrsBk” and press  [Select].




**3** Use  to select “New” and press  [Select].  
Address book registration screen is displayed. The phone number of the selected entry is automatically entered.

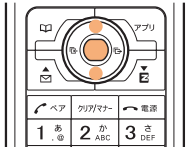

**4** Refer to “Saving to the Address Book” (p.42) to save the entry.

Address Book/Pair Function


**Information**

- To save from Outgoing Calls log, press  in the standby screen and follow the steps above.


# Pair Function




## Setting a Pair Partner



You can select 5 persons from saved entries in the Address Book and set them as pair partners. This function allows you to call or send mail easily to them.

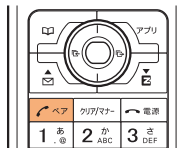

**1** Press  in the standby screen.



Pair menu is displayed.



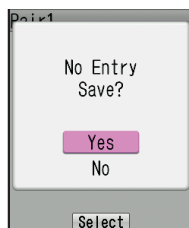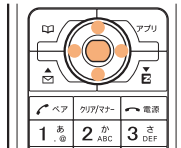


**2** Use  to select a number, use  to select "Save/Release", and press  [Select].

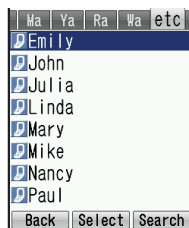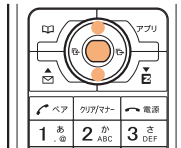

**3** Use  to select "Yes" and press  [Select].



**4** Use  to select a partner, press  [Select] and press  [Set].




### Information




- Pair partners can be selected from the Address Book. Save a partner to the Address Book before setting him/her as pair partner. See "Saving to the Address Book" (p.42) for details.
- If you delete a pair partner from the Address Book, the partner is also deleted from Pair menu.



# Making a Call to a Pair Partner

**1** Press  in the standby screen.

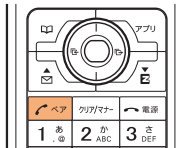Pair menu is displayed.



**2** Use  to select a partner to call, use  to select "Phone" and press  [Select].

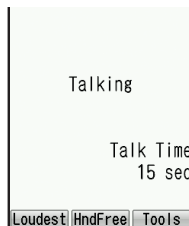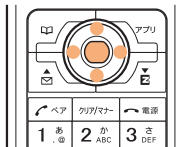

## Information


- You can also send E-mail and C-mail to pair partners.

## About E-mail (Subscription to EZweb required)

To use E-mail, you need to subscribe to the EZweb service. If you did not subscribe to it when you purchased your phone, please contact the au Customer Service Center or an au shop for further information. Make sure that you do the initial setting before using E-mail for the first time. See “Initial Setting for E-mail and EZweb” (p.20) about the initial setting.

E-mail allows you to exchange mails of up to 5000 full-sized (or 10000 half-sized) characters with other cellphones or personal computers that support E-mail. Photos and movies can also be sent and received.

- \* You can send E-mail to up to 5 recipients at a time.
- \* You can send up to 1000 E-mails (or to up to 1000 recipients) in a day.
- \* Sending or receiving mail with an attached file may take more time than usual, depending on its size or radio wave conditions.
- \* Packet charges will differ depending upon the amount of data sent or received in the E-mail.

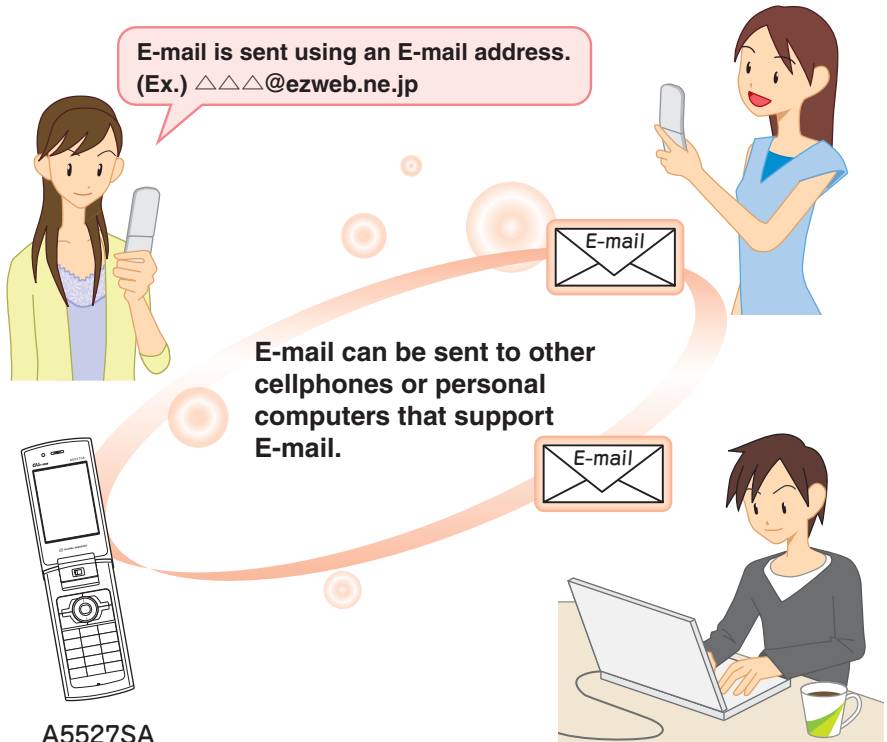






# Creating and Sending an E-mail



**1** Press  in the standby screen.

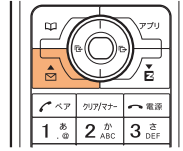


E-Mail Menu is displayed.





**2** Use  to select “Create New” and press  [Select].

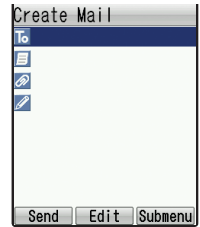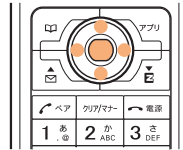

Create Mail screen is displayed.



**3** Use  to select **To**, press  [Edit] and press  [Edit].

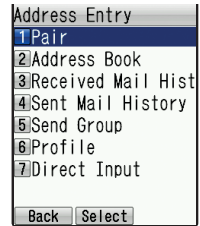
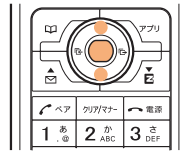
Address Entry screen is displayed.






**4** Use  to select “Address Book” and press  [Select].

Address book list is displayed.

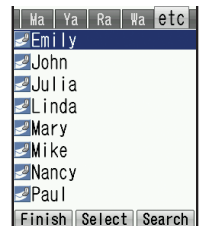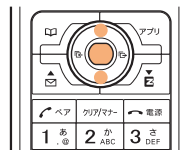
• Address Entry screen also allows you to enter an E-mail address manually or select it from Received Mail History or Sent Mail History.



5



Use  to select a recipient, press  [Select] and press  [Select].

- Use  to select  1 to 3 when the entry has some E-mail addresses.

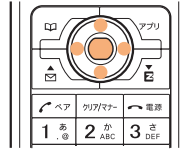

6



Press  [Finish].

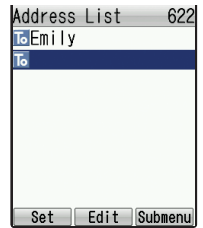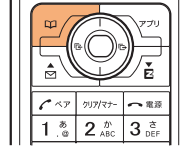

7

Press  [Set].



E-mail address is entered.

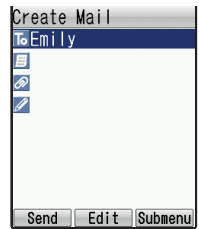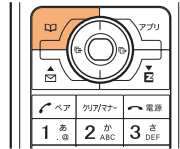

8

Use  to select  and press  [Edit].

Subject input screen is displayed.

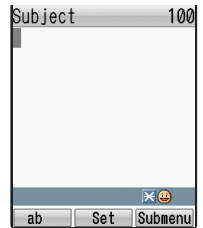
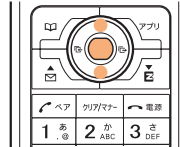


9

Enter a subject and press  [Set].

The subject is entered.

- See "Inputting Characters" (p.36) about the way of inputting characters.
- Subject can use up to 50 full-sized (or 100 half-sized) characters.

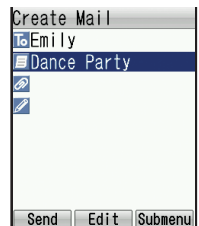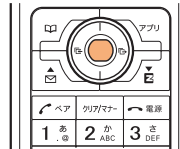


10

Use  to select  and press

 [Edit].

Body text input screen is displayed.


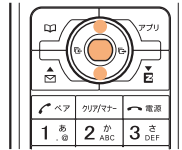


11

Enter a body text and press

 [Set].

Body text is entered.

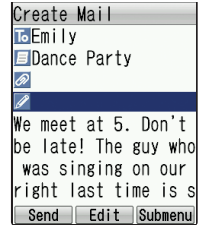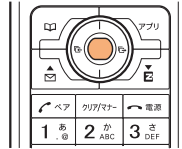


12

Press  [Send].

Created mail is sent.

- After finished sending, the mail is saved in Outbox as sent mail.

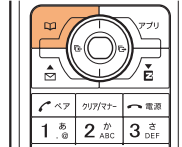





Mail

# Reading a Received E-mail


When an E-mail is received, the standby screen notifies you.







 (E-Mail) and the number of E-mail are displayed.

**1** Use  to select  (E-Mail) and press .


Inbox screen is displayed.

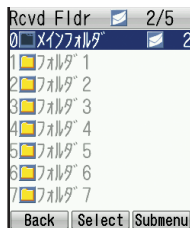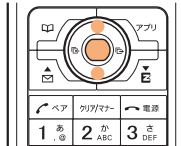

- The color is changed and  with the number of E-mail is displayed when the folder has new mail.




 
**2** Use  to select “メインフォルダ” (Main folder)” and press  [Select].


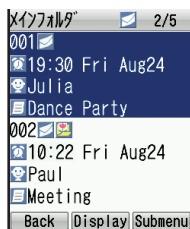
Received mail list is displayed.




**3** Use  to select a mail and press  [Display].

Received mail is displayed.

- To display a previous or next mail, press  or .

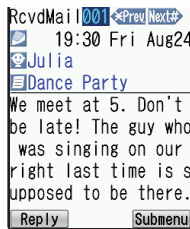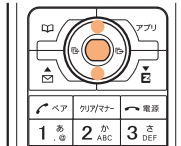



## How to view a received mail

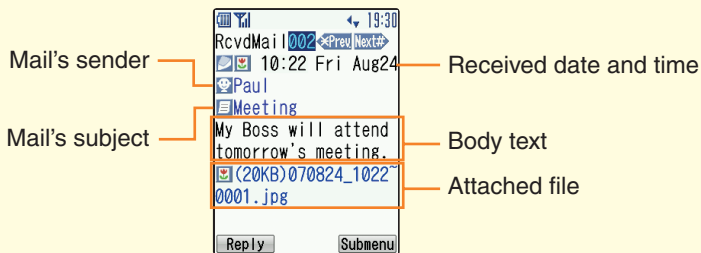

## ● Displaying an E-mail in Inbox

- 1 From the standby screen, press , use to select "Inbox", and press [select].

Inbox screen is displayed.

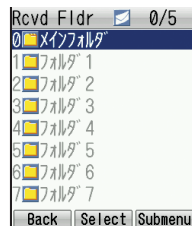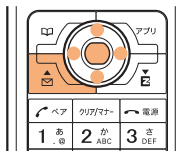


Mail

- 2 Follow the steps 2 to 3 on page 54 to display a mail.

## ● When a Photo Is Attached in a Received Mail

- 1 Display a received mail, use to select a file name which appears after the body text, press [Receive], and press [Play].

Attached file is played.

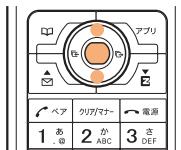

### Information



- Depending on the file size, attached file may be displayed automatically or by selecting the attached file and pressing [Play].




# Replying to a Received E-mail


**1** After the step 3 on page 54,  
press  [Reply].


Create Mail screen is displayed. The recipient is entered and the subject and body text of the received mail is quoted.

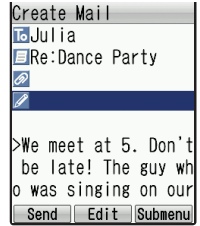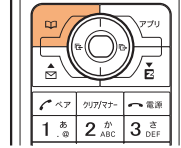
- Subject is prefixed with "Re:".
- Subject can be edited.



**2** Use  to select  and press  [Edit].

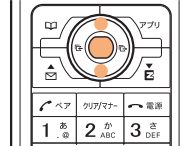


**3** Enter a body text and press  [Set].

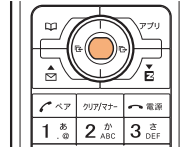

**4** Press  [Send].

Created mail is sent.

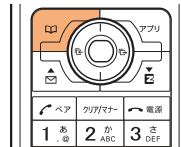







# Blocking Junk Mails

To block junk mails, it is recommended to set メールフィルター (Mail Filter). By selecting “サポート設定(supportive settings)”, you can set メールフィルター (Mail Filter) easily by answering the Inquiry on the screen.

## ● Setting メールフィルター (Mail Filter)

Example: To access “サポート設定(supportive settings)”

Press  in the standby screen.

- ▶ Select “E-Mail Setting” and press  [Select].
- ▶ Select “Mail Filter” and press  [Select].
- ▶ Select “次へ (Next)” and press  [OK].
- ▶ Enter your Security Code and press  [Set].
- ▶ Select “送信 (Send)” and press  [OK].
- ▶ Select an item and press  [OK].

## ● カンタン設定(Easy Setup)

サポート設定  
(supportive settings)

Sets the filter by answering the inquiry.  
For the users who would like to check each setting condition.

フィルターレベル(高)  
(Filter level (Strict))

Rejects mails from PC.  
For the users who send/receive the mails only between cellphones.

フィルターレベル(中)  
(Filter level (Medium))

Blocks Unsolicited Ad Mail and Spoof e-mail, as well as all mail from designated addresses.



For the users who are annoyed by a stalker or a specific junk mailer.

フィルターレベル(低)  
(Filter level (Normal))

Blocks the Unsolicited Ad Mails or the Spoof e-mails.  
The filter minimally required.

### Information

- You can also block junk mails by changing your E-mail address. See “Changing Your E-mail Address” (p.22) about changing the E-mail address.

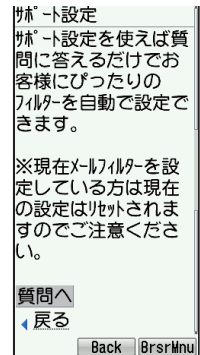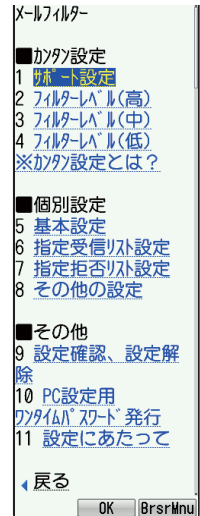

# About C-mail (standard service)

C-mail allows you to exchange mail of up to 50 full-sized (or 100 half-sized) characters with other au cellphones that support C-mail.

- \* C-mail transmission fees are charged when sending C-mail.
- \* C-mail Safety Block

C-mail safety block allows you to reject C-mails that include URL to access (http://□□□□,https://□□□□) or phone numbers in the C-mail body text. This function is valid by default.

**C-mail is sent using a phone number.  
(Ex.) 090-0001-xxxx**



Mail

**C-mail can be sent to au cellphones  
that support C-mail**



A5527SA







# Creating and Sending a C-mail

1

Press  for more than one second in the standby screen.


C-Mail Menu is displayed.

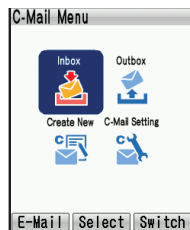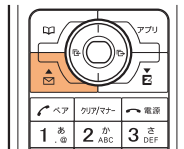

2

Use  to select “Create New” and press  [Select].



Create Mail screen is displayed.

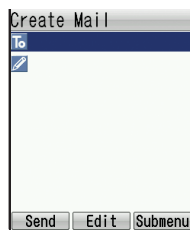

3

Use  to select **To** and press  [Edit].

Address Entry screen is displayed.

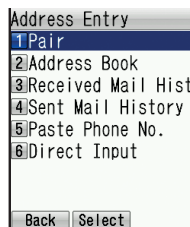
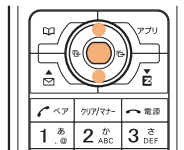


4

Use  to select “Address Book” and press  [Select].



Address book list is displayed.

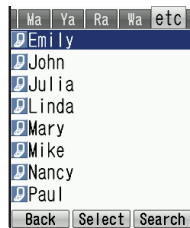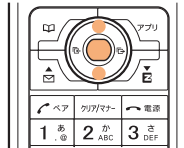
- Address Entry screen also allows you to enter an address manually or select it from Received Mail History or Sent Mail History.




Mail

5


Use  to select a recipient and press  [Select].

- Go to step 7 when the entry has only one phone number.
- Use  to select the number 1 to 3 when the entry has some phone numbers.

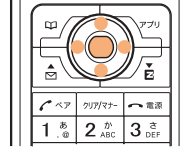

6



Press  [Select].

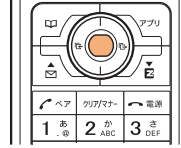

7

Use  to select  and press  [Edit].

Body text input screen is displayed.

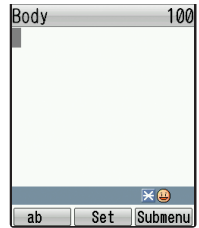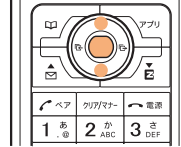


8

Enter a body text and press  [Set].

Body text is entered.

- See "Inputting Characters" (p.36) about the way of inputting characters.

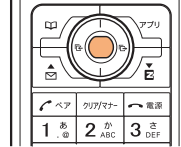


9

Press  [Send].

Created mail is sent.


- After finished sending, the mail is saved in Outbox as sent mail.

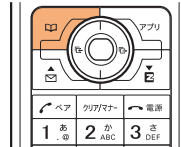

# Reading a Received C-mail

When a C-mail is received, the standby screen notifies you.


 



 

 (C-Mail) and the number of E-Mail are displayed.

1

Use  to select  (C-Mail) and press .

Received mail is displayed.

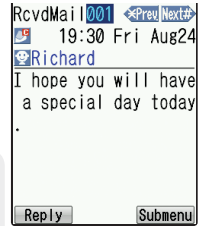




- The newest mail is displayed when you have some new mails.  
You can display a previous or next mail by pressing  or .
- To reply to the sender, press  [Reply].



Mail

## ● Displaying a C-mail in Inbox

1

From the standby screen, press  for more than one second, use  to select "Inbox", and press  [Select].

Inbox screen is displayed.

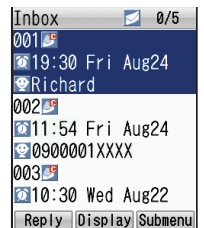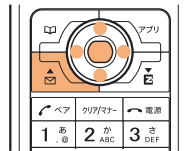

2

Use  to select a mail and press  [Display].

# Camera

## What You Can Do with the Camera

### Take photos and movies

You can take photos and movies with this 1.34-megapixel camera. You can also add frames and special effects to photos, and take picture with the timer.

### Photos you took can be...

#### ● Used in the A5527SA

You can set taken photos as the standby screen, or register them to the Address Book to display when you receive incoming calls.


Incoming  
Call



#### ● Sent by E-mail

You can attach photos and movies of 500 KB or less to E-mail and send them to personal computers or other cellphones.

\* It may take more time than usual, depending upon radio wave conditions.

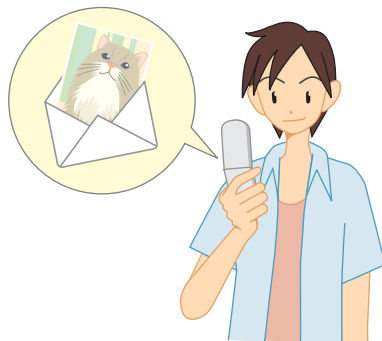

#### ● Printed out

Photos you take can be saved onto a microSD™ Memory Card (commercially available) and can be printed out with a printer or at a DPE shop.





# How to Hold Your Cellphone When Shooting

When you take photos or movies, put the subject inside the screen and hold the cellphone firmly with both hands to prevent a blur.

**When shooting with a vertical screen**

**When shooting with a horizontal screen**

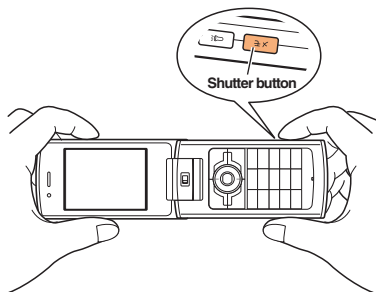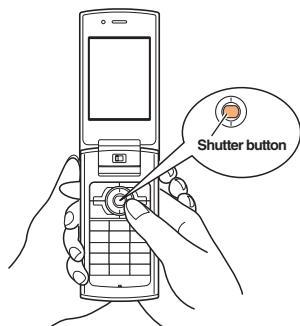

## About the Shoot and Movie modes

The most appropriate Shoot or Movie mode can be selected depending upon the purpose for the image. The size and file name that will be used for the images in each mode are as follows.

### Mode for taking photos

Shoot mode	Image size	File name	Location saved
QQVGA size	120x160	Save date_time~serial number	"Photo Folder" in the Data Folder
QVGA size	240x320		
0.3M size	640x480	SA2A+serial number	"DSC Folder" in the microSD™ Memory Card*
1M size	1280x960		




\* Photos are saved in the "Photo Folder" when a microSD™ Memory Card is not inserted.

### Mode for recording movies



Movie mode	Image size	File name	Location saved
Standard S size	96x80	S_Save date_time~serial number	"Movie Folder" in the Data Folder
Standard M size	128x96	Save date_time~serial number	
High M size	128x96		
High L size	176x144		
Video S size (Std)	96x80		Save date_time~serial number
Video M size (Std)	128x96		
Video M size (High)	128x96		
Video L size (High)	176x144		

\* Movies are saved in the "Movie Folder" when a microSD™ Memory Card is not inserted.


# Taking a Photo

- 1 From the standby screen, press , use  to select “Camera”, and press  [Select].

Camera functions are displayed.

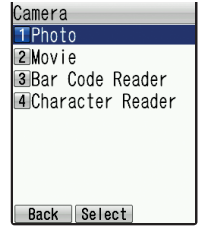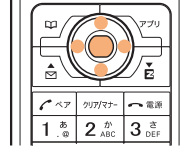


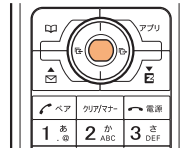
- 2 Use  to select “Photo” and press  [Select].

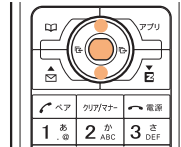

- 3 Press  [Shoot].

Shutter sounds and taken photo is displayed.

- To retake the photo, press .





- 4 Press  [Save].

Taken photo is saved.





# Viewing Photos

- 1** From the standby screen, press , use  to select “Data”, and press  [Select].

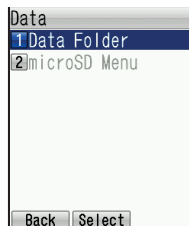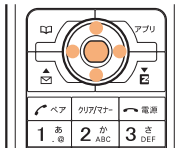



- 2** Use  to select “Data Folder” and press  [Select].

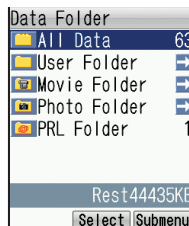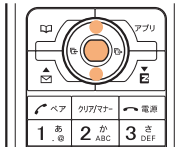

- 3** Use  to select “Photo Folder” and press  [Select].

Photo Folder list is displayed.

- All photos are saved in “All Photo”.

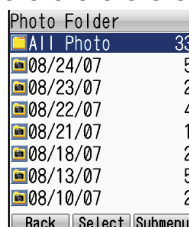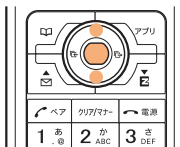







- 4** Use  to select a folder which contains a photo to view, and press  [Select].

Photo list is displayed.



- 5** Use  to select a photo and press  [Play].

Selected photo is displayed.

- To display a previous or next photo, press  or .




# Sending Photos by E-mail

**1** After taking a photo (follow the steps 1 to 3 on page 64), press

 [E-Mail].

Create Mail screen appears with a taken photo attached.

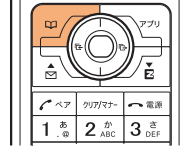

**2** Follow “Creating and Sending an E-mail” (p.51) and send E-mail.

## Information

- Sending E-mail may take more time than usual, depending upon radio wave conditions.




## About EZweb

To use EZweb, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using the EZweb for the first time. See “Initial Setting for E-mail and EZweb” (p.20) about the initial setting.

EZweb is an information service for enjoying the Internet on your cellphone. You can obtain Chaku-Uta® and the latest news from information sites.

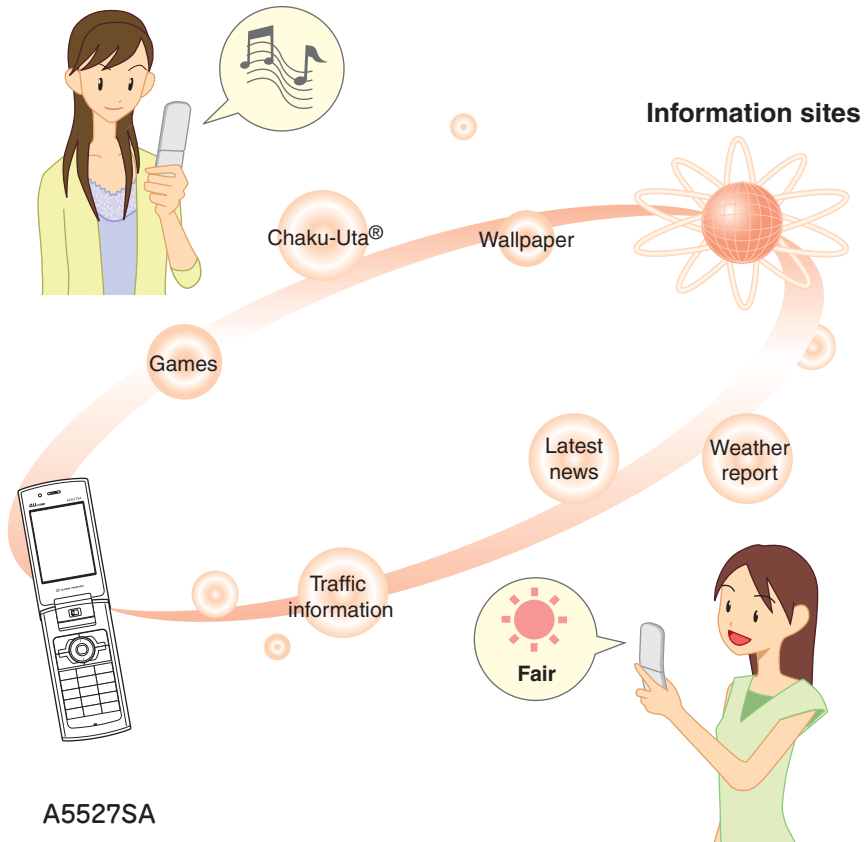


- \* Packet charges will be based on the actual amount of data sent and received while connected to EZweb and not on the amount of time you connect.
- \* Some information sites are subject to additional information costs besides communication costs.




# Accessing Information Sites
 
## Displaying the EZ Top Menu

1

From the standby screen, press , use  to select “Top Menu”, and press  [Select].



EZ Top Menu is displayed.

### EZ Top Menu

 


①	Provides a search engine for information available by the keyword entry.
②	Searches for a site by category.
③	Accesses recommended fun and convenient sites.
④	The latest top news topics are delivered by an automatic update.
⑤	Provides special discount campaign information and other recommended contents.
⑥	Offers gifts and free valuable information to EZweb service subscribers.
⑦	Provides weather news, fortune-telling, or the useful function of train connection search.
⑧	Provides the latest information such as news, weather, or useful information for business.
⑨	You can search the connection of train, map or other local information.
⑩	Provides information about shops where you can purchase goods with your cellphone, and the information about the auction where you can sell or buy easily.
⑪	Provides useful information for daily life.
⑫	Provides the latest information about games, music, books, and information on hobby or entertainment trends.
⑬	Provides interesting, convenient and fun information on SNS and blogs, etc.
⑭	Provides the various information, useful tools, or large storage spaces, which are appropriate for your selection of the services.
⑮	Introduces au-recommended information and sites.
⑯	Provides phone bills, application forms, au online manuals, and au announcement.
⑰	Introduces カンタンアクセス・オープンサイト (Simple Access & Open Site).
⑱	Registers/checks the safety information in disasters.
⑲	Introduces English sites.


### Information

- The layout and contents of the screens in this manual are examples and are subject to change.

# Basic Operation while Using EZweb



- You can display the next screen by using to select an item and pressing .
- You can return to the previous screen by pressing or , and you can go back to EZ Top Menu by pressing it for more than one second.
- You can scroll the screen by pressing (Up) or (Down) when it continues.

## EZ Top Menu

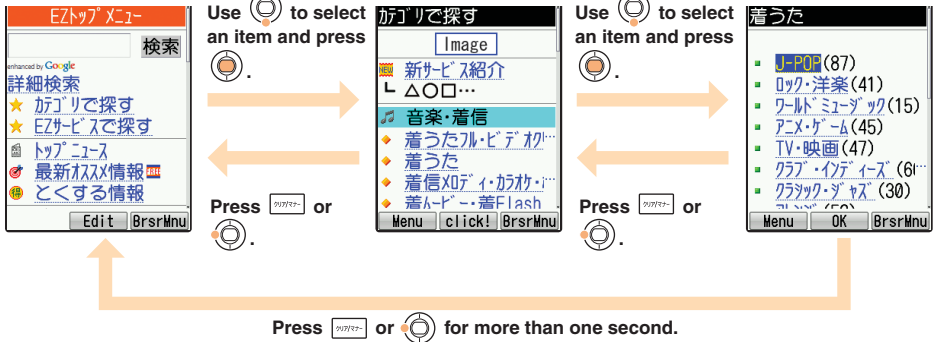



# Inquiring Toll

**1** From the standby screen, press in that order.

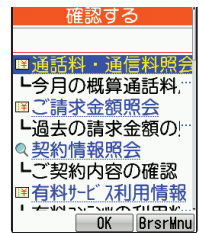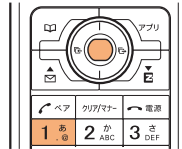

EZweb

**2** Use to select “通話料・通信料照会 (call or communication charge inquiry)” press [OK].

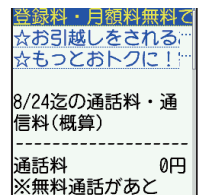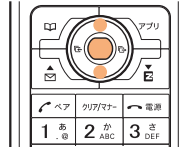




## Information


- The on-screen call or communication charge should be used only as a guide.


# Downloading Chaku-Uta® and Set It as a Ringer for Incoming Calls



You can download Chaku-Uta® from information site and set it as a ringer for incoming calls. You can also download wallpaper and set it to the standby screen and others.

 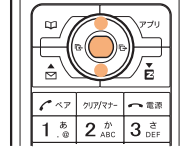
- 1** From EZ Top Menu, use  to select “カテゴリで探す (Search by category)” and press  [OK].


 


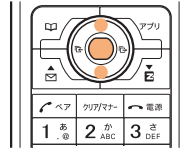
- 2** Use  to select “着うた (Chaku-Uta)” and press  [OK].



- 3** Use  to select a category and press  [OK].

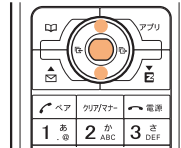


- 4** Use  to select an information site, press  [OK], and download following the on-screen instructions.


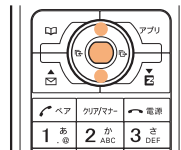




**5****Press  [Play].**


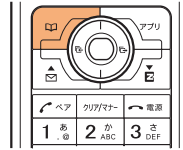
Downloaded data is played.

**6****Press  [Set].**

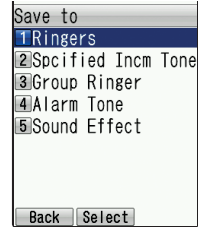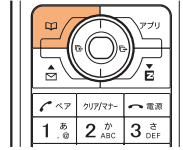
Save to screen is displayed.

**7****Use  to select "Ringers" and press  [Select].**

Registration destinations of the selected target are displayed.

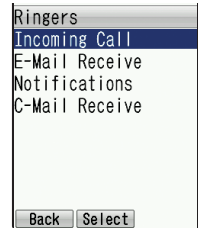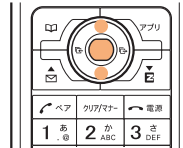**8****Use  to select "Incoming Call" and press  [Select].**

Downloaded data is set as ringer for "Incoming Call".

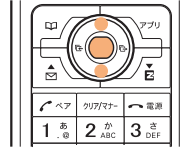**Information**

- When you access a site requiring additional information fee, input your EZ Password or Premium EZ Password.  
EZ Password: The 4-digit number that you have filled in the application form at the time of purchase.  
Premium EZ Password: The 4-digit number that you have filled in the application form at the time of purchase.  
Follow the on-screen instructions to input either of the passwords.
- Download procedure depends on the site. The procedure described above shows an example and may differ from the actual one.



# Registering Frequently-Accessed Information Sites



You can access information sites easily by registering frequently-accessed sites to “Bookmark(s)”.

## Registering to Bookmark

**1** Display a site you want to register and press  [BrsrMnu].

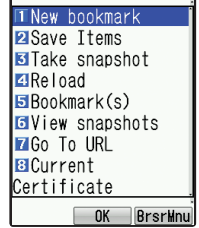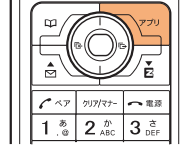
Browser menu is displayed.



**2** Use  to select “New bookmark” and press  [OK].


The title, URL, and folder name are displayed.

- Some information sites may not be registered to Bookmark.

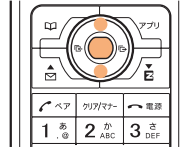

**3** Press  [Save].

The site is registered to Bookmark.

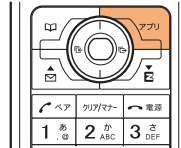

### Information



- Up to 100 sites can be registered in Bookmark.

# Viewing an Information Site Registered as a Bookmark

1

Press  in the standby screen.



EZweb Menu is displayed.

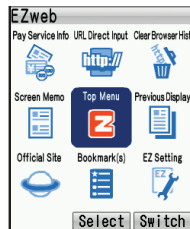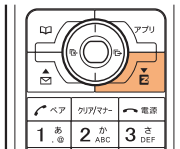



2

Use  to select “Bookmark(s)” and press  [Select].

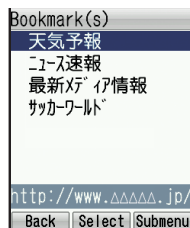
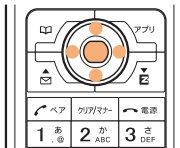
A list of registered information sites is displayed.



3

Use  to select a site you want to view and press  [Select].

You can connect to the selected information site.

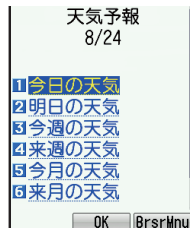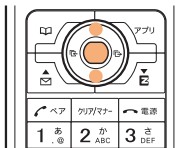


# EZ Navi (Subscription to EZweb required)

## What You Can Do with EZ Navi

EZ Navi is a useful service which provides you with global positioning information (GPS information).

\* Packet fees will be charged whenever you use one of the functions under the EZ Navi service. Other fees may also be charged for some functions.

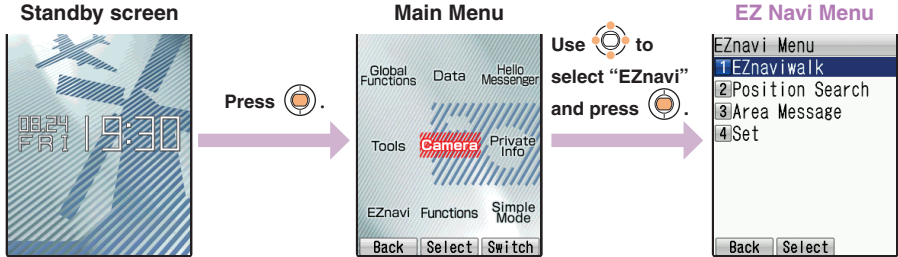

### “EZ Navi Walk” for When You Go Out

Displays various menus that are useful when you are out.



#### Going-Out Menu



<b>ナビをする*1 (Navigation)</b>	Provides the navigation (voice directions) to the destination, or you can search for shops or facilities around your present location.
<b>地図を見る*1 (無料) (View Map (free))</b>	You can view a map of your present location or any other location.
<b>乗換検索する*1 (無料*2) (Search Connection (free))</b>	You can search the connection of train, timetable and railway information.
<b>道路情報を見る (View Traffic Info)</b>	Check real-time traffic information on the major roads all over Japan.
<b>もっとナビウォーク (EZ Navi Walk)</b>	Provides explanations about each setting or search on PC.
<b>インフォメーション (Information)</b>	You can register for memberships or make inquiries.

\*1: You can also select the service using your voice (“声de入力 (Voice input)”).  
\*2: A portion of these menus are charged services.

#### My Spot



Just register the position of your home and favorite places (office, friends' houses, shops, etc.) for easy navigation when you go there.

#### View My Map



When you are in an unfamiliar place or when you lose your way, simply select “View My Map”. A map around your current position is displayed in real-time.

Navigation engine by NAVITIME JAPAN/MAP: 昭文社/住友電工



## “Position Search” allows you to confirm the current position of your child

This service allows you to use the A5527SA to confirm the position of an au cellphone that supports Position Search. The following 2 types of Position Search services are available.

### いつでも位置確認 (Auto Position Search)

Register the phone numbers of the mother and the child to each other's cellphone. The mother can check where her child is by Auto Position Search, without any operation by the child.

\* Additional monthly charge is required.



### 位置確認メール (Position Search Mail)

The mother can send a mail to her child for Position Search. She can easily check where her child is without any service registration, as long as her child's phone number is registered in the address book.

\* Operation by the child is required to use Position Search Mail.



## “Area Message” sends you notification during a designated time period and area

A mother can be automatically notified by mail when her child enters (or is in) a pre-determined area during the time period that she registers in advance. It is also possible for her to receive notification when the child leaves (or is out of) the pre-determined area.



### Information

- The additional information fee may be charged separately from the packet communication fee, to use EZ Navi.
- In addition to the packet communication fee, separate information fees are charged for receiving positioning information and viewing maps.
- EZ Navi and Security Navi services are not available outside of Japan.
- “安心ナビ (Security Navi)” service is only available between cellphones compatible with the service.
- Register phone numbers to the address book between cellphones compatible with the service, before using “安心ナビ (Security Navi)”.
- Before using “安心ナビ (Security Navi)”, be sure to confirm and agree to the Terms of Use on starting the service, and make the settings of the Navi Password. \* The other party is also required to agree to the Terms of Use.
- Area information may appear differently in underpasses, indoor or near buildings where the reception level of the radio wave from GPS satellites is poor.
- If the positioned location information is different from the actual location, Area Message may not be notified correctly.
- Positioning location is not available when the other party's cellphone is under following conditions; out of service area, with Incoming Reject set, with no application, under operation, or incompatible with the service.
- When you stop the C-mail service or “EZapps Restrict” is set, “安心ナビ (Security Navi)” is not available.
- The EZ apps communication fee is included in Free Calling Time, however, it is excluded from the discount service of Family C-mail and Packet Communication Discount Service.
- The layout or contents of the screen in this manual are examples and are subject to change.



# SimpleMode

## About SimpleMode

Setting SimpleMode allows you to simplify operation to the frequently used functions such as phone function, Address Book, Camera, Mails, and EZweb.



### Setting SimpleMode

**1** Press  in the standby screen.

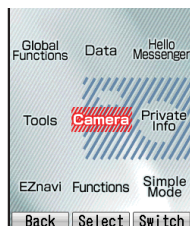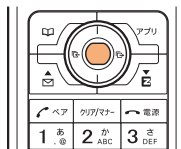


**2** Use  to select "SimpleMode" and press  [Select].

Confirmation screen is displayed.

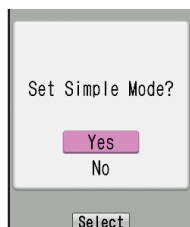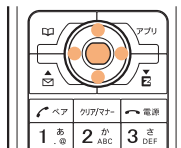

**3** Use  to select "Yes" and press  [Select].



SimpleMode is set.

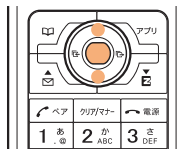





## ● Releasing SimpleMode

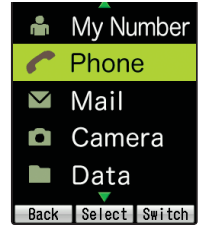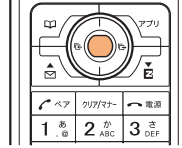

**1** Press  in the standby screen.

Simple Menu is displayed.

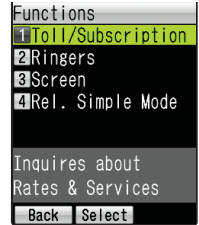
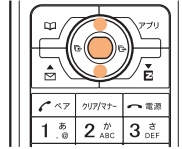



**2** Use  to select “Functions” and press  [Select].




**3** Use  to select “Rel. Simple Mode” and press  [Select].

Confirmation screen is displayed.

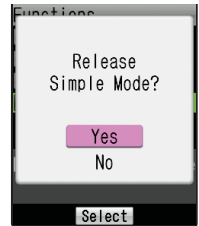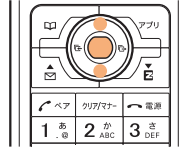

**4** Use  to select “Yes” and press  [Select].

SimpleMode is released.

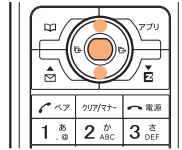


### Information

- Setting SimpleMode may change what you have set in normal mode. Some functions inform you of the change by displaying a message.

# Simple Menu

In SimpleMode, functions are accessed from Simple Menu.

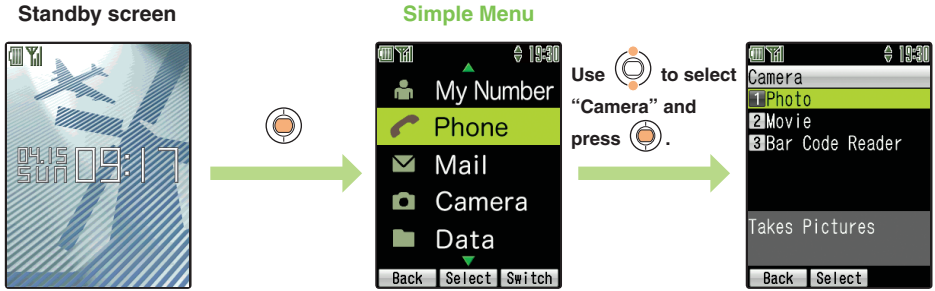





Phone	<b>Address Book</b>	Save to or search in the Address Book
	<b>Incoming</b>	Display the incoming calls log
	<b>Outgoing</b>	Display the outgoing calls log
	<b>In-Phone Ans Mach</b>	Set/Release/Replay the In-Phone Ans Mach
Mail	<b>E-Mail</b>	Create E-mail/Confirm sent or received E-mail, Check for new mail, Change your E-mail address
	<b>C-Mail</b>	Create C-mail/Confirm sent or received C-mail
Camera	<b>Photo</b>	Take photos
	<b>Movie</b>	Record movies
	<b>Bar Code Reader</b>	Read bar codes (QR codes)
Data	<b>Data Folder</b>	Confirm data saved in the Data Folder
	<b>microSD Folder</b>	Confirm data saved in a microSD™ Memory Card (commercially available)
	<b>microSD Mail Fldr</b>	Confirm data saved in the Mail Folder in a microSD™ Memory Card (commercially available)
Functions	<b>Toll/Subscription</b>	Inquire about toll or subscribe to services
	<b>Ringers</b>	Set ringer melody and volume for incoming call, Set/Release the Silent Mode
	<b>Screen</b>	Set font size and wallpaper
	<b>Rel. Simple Mode</b>	Cancel SimpleMode
Tools	<b>Calendar</b>	Display calendar
	<b>Alarm</b>	Set/Cancel alarm
	<b>Calculator</b>	Calculator function
	<b>EZ·FM</b>	FM radio function
<b>Hello Messenger</b>		Start up Hello Messenger
Global Functions	<b>Area Setting</b>	Set destination
	<b>PRL Setting</b>	Set roaming area information
<b>My Number</b>		Display your phone number and E-mail address


# Using SimpleMode

## Saving to the Address Book



In SimpleMode, you can save names, readings, phone numbers, and E-mail addresses.

- 1 From Simple Menu, use  to select "Phone", press  [Select], use  to select "Address Book", and press  [Select].

Address book list is displayed.


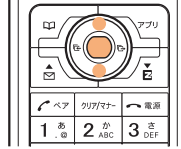



- 2 Press  [New].

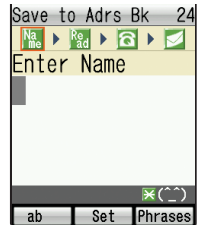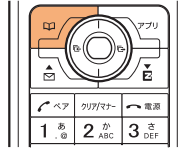


- 3 Enter a name and press  [Set].



- After entering a name, the reading is automatically entered.

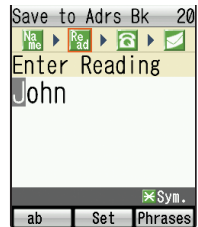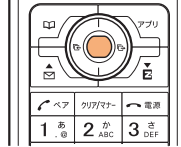

- 4 Confirm the reading and press  [Set].



The ways of entering phone number are displayed.

- If you do not enter phone number, press  [Next].

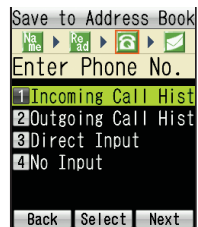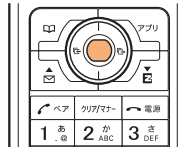


5


Use  to select “Direct Input” and press  [Select]

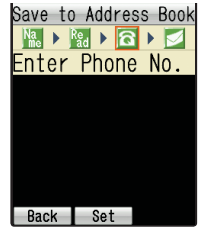
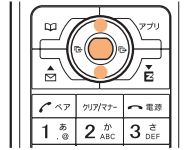


6

Enter a phone number and press  [Set].



The ways of entering E-mail address are displayed.

 - Enter the area code when saving a regular phone number.
- If you do not enter E-mail address, press  [Next].

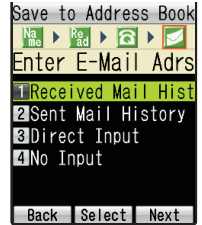


7


Use  to select “Direct Input” and press  [Select].

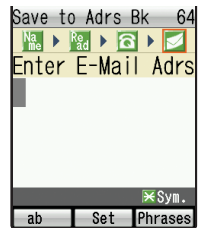
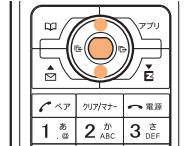


8


Enter an E-mail address and press  [Set].

Address book registration screen is displayed.

- To edit a focused item, press  [Select].

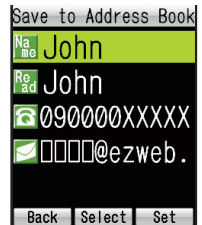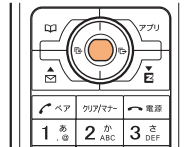



9

Press  [Set].

Saving to the Address Book is completed.



### Information



- You can also save an entry from the standby screen by pressing , and then  [New].

# Creating and Sending an E-mail



1

From Simple Menu, use  to select "Mail" and press  [Select].

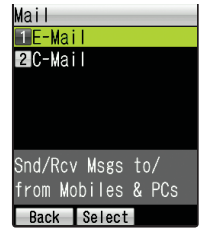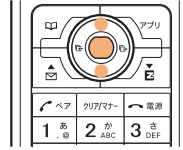
Select mail type screen is displayed.



2

Use  to select "E-Mail" and press  [Select].



E-Mail Menu is displayed.

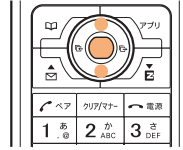

3

Use  to select "Create New" and press  [Select].


Enter Address screen is displayed.

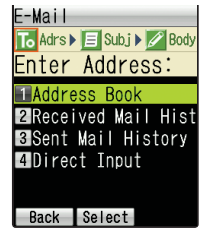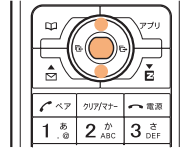



4

Use  to select "Address Book" and press  [Select].


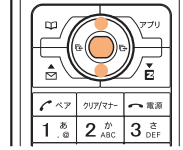
Address book list is displayed.



5

Use  to select a recipient and press  [Select].

Subject input screen is displayed.

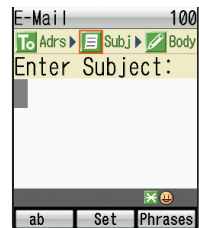
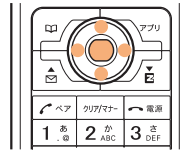


SimpleMode

6

**Enter a subject and press** **[Set].**

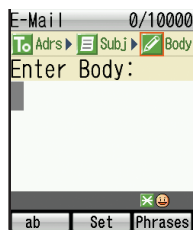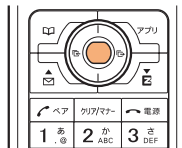

Body text input screen is displayed.





7

**Enter a body text and****press**  **[Set].**

Create Mail screen is displayed.


- To edit a focused item, press  **[Edit].**
- To save the created mail in Outbox, press  **[Save].**

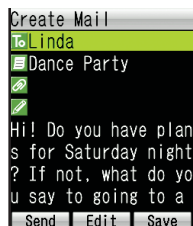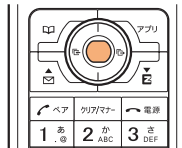



8

**Press**  **[Send].**

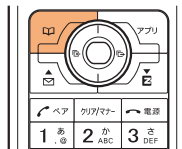

Created mail is sent.

**Information**



- Select mail type screen can also be displayed by pressing  in the standby screen.
- One data of up to 500 KB can be attached.
- In SimpleMode, only one recipient can be selected per one E-mail. However, all pair partners can be selected as recipients by displaying Pair menu, selecting "E-Mail" and pressing  **[SendAll].**




# Taking a Photo

**1** From Simple Menu, use  to select “Camera” and press  [Select].

Camera functions are displayed.

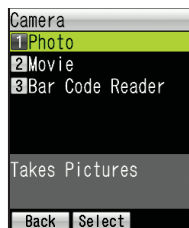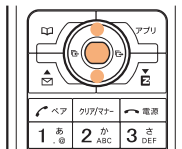



**2** Use  to select “Photo” and press  [Select].

• To change the photo size, press  [Mode].



**3** Press  [Shoot].

Shutter sounds and taken photo is displayed.

• To clear the photo, press .  
• To create an E-mail with the taken photo attached, press  [E-Mail].





**4** Press  [Save].


Taken photo is saved.



# Troubleshooting

Symptom	What to check	Solution	Page
<b>The power cannot be turned on.</b>	Did you press  for more than one second?	Press  for more than one second.	13
	Is the battery pack exhausted?	Charge the battery pack.	12
	Is the battery pack inserted properly?	Insert the battery pack properly.	–
<b>Cannot charge.</b>	Is the cellphone set to the desktop holder properly?	Set the cellphone properly.	12
	Is the connector put in the desktop holder properly?	Put the connector properly.	12
	Is the connector put in the external terminal properly?	Put the connector properly.	12
<b>There is no reaction when pressing a key.</b>	Is the power turned on?	Turn the power on.	13
<b>Calls cannot be made/received.</b>	Is the power turned on?	Turn the power on.	13
	Is “Out” displayed or are you in an area where the reception is bad?	Move to a place where the reception is good.	13
	Did you enter the area code? (when you failed to make calls)	First dial the area code.	24
<b>Ringer for incoming calls does not sound.</b>	Is the ringer volume set to “S(OFF)”?	Adjust the ringer volume.	28
	Is the silent mode set?	Release the silent mode.	31
<b>The caller’s voice cannot be heard/is hard to hear.</b>	Is the earpiece volume set to low?	Adjust the earpiece volume.	27
	Is the reception bad?	Move to a place where the reception is good.	13
<b>Calls are interrupted.</b>	Is the reception bad?	Move to a place where the reception is good.	13
<b>The cellphone answers automatically.</b>	Is the In-Phone Ans Mach set?	Release the In-Phone Ans Mach.	32

For detailed information, visit the website of SANYO Electric Co., Ltd. as below.



- From A5527SA: Press  for more than one second. (SANYO Keitai Planet, in Japanese only)
- From PC: <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

# Before Losing...(Remote Auto Lock)



Set the operating condition of the remote auto lock on the assumption that you might lose the A5527SA. Receiving a specified number of calls from a specified number in a specified time locks your A5527SA automatically, which prevents other person's use.

## ● Setting Remote Auto Lock

1

Press in turn  4 た GH 1 あ a 2 か ABC from the standby screen, enter your Lock No. and press  [Set].

- Lock No. is set to "1234" at the time of purchase.

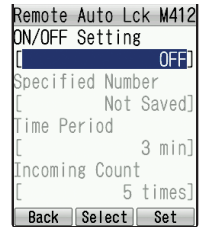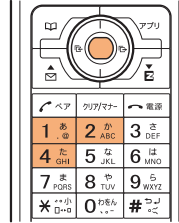




2


Select an item and press  [Select].

### ON/OFF Setting

Use  to select "ON" and press  [Select].

### Specified Number

Press  [New], enter a phone number and press  [Set] →  [Back].

- Up to 3 phone numbers can be specified.
- To enter several phone numbers, select "Specified Number", press  [Submenu] and press "New".

### Time Period

Enter time and press  [Select].

- 1 to 10 minutes can be set.

### Incoming Count

Enter a number of calls and press  [Select].

- 3 to 10 times can be set.

## Erase Data

Use  to select “Valid” or “Invalid” and press  [Select].

- If you select “Valid”, all data in the A5527SA will be deleted when Auto Lock is turned on. Be very careful when you select “Valid” for this setting.

## Unlock Phone

 
Use  to select “Valid” or “Invalid” and press  [Select].

- If you select “Invalid”, you will be unable to release the lock by entering the Lock No. To release the lock in this case, perform the Remote Auto Lock procedure once again.

3

Press  [Set].

Remote auto lock is set.



## ● Locking Automatically by Remote Control

1

Make a call to your A5527SA in accordance with the operating condition you set.

Remote auto lock runs and the guidance is heard.

### Information

- Even if the receiver answers when you make a call to set the remote auto lock, it is also counted as Number of Calls.
- At the time of purchase, “Erase Data” is set to “Invalid” and “Unlock Phone” is set to “Valid”.
- Remote auto lock cannot be launched when your A5527SA is powered off or when it cannot receive radio waves.

# Other Features

## Safety Buzzer

You can sound an alarm at full volume in case of an emergency.

### ● Setting the Safety Buzzer

From the standby screen, press   , use  to select “ON”, and press  [Select].

\* At the time of purchase, the Safety Buzzer is set to “OFF”.

### ● Sounding the Safety Buzzer

From the standby screen, press  for more than one second.

▶ To stop the alarm, press  again for more than one second.

\* No operation on your cellphone is possible while the alarm is sounding except the procedure to turn off that alarm.

←	バック	クワリマナ	→	電源	
1	あ	2	か	3	き
	ABC		ABC		DEF
4	た	5	な	6	は
	GHI		JKL		MNO
7	ま	8	や	9	ら
	PQRS		TUV		WXYZ
*	＊	0	＊	#	＊
	0-9		0-9		0-9

The A5527SA has other useful features which are not presented in this Basic Manual.

### ● microSD™ Memory Card (Commercially Available)

You can keep various data on a microSD™ Memory Card (commercially available).

### ● EZ apps (BREW®)

You can download and use applications such as games and standby screens. Also, you can read QR code or character by Bar Code Reader or Character Reader, which allows you to access information sites or to look up dictionary.

### ● Infrared Communication

You can send data between cellphones that support infrared communication.

### ● Journal

You can create simple journal with images.

### ● Pocket Money Log

You can create pocket money log of the current and previous month.

### ● Dictionary

Dictionaries such as Japanese-English and English-Japanese are included, which may be useful in foreign countries.

# Index

## Number

184+Dial .....	24
186+Dial .....	24

## A

AC Adapter .....	10,12
Address Book	
Editing .....	46
Making a Call .....	45
Saving .....	42,47,79
Area Setting .....	34

## B

Back Function .....	37
Basic Operation .....	14
Battery Level .....	13
Before Use .....	10
Bookmark	
Accessing .....	73
Registering .....	72

## C

C-mail	
C-mail Menu .....	59
Creating .....	59
Reading .....	61
Receiving .....	61
Sending .....	59
Call	
Making .....	24,27,45,49
Receiving .....	26
Camera	
Photo .....	64,83
Sending .....	66
Chaku-Uta® .....	70
Charging .....	12

## D

Desktop Holder .....	10,12
Disaster Message Board Service .....	7

Download .....	70
Drive Mode .....	5

## E

E-mail	
Creating .....	51
E-mail Menu .....	51
Initial Setting .....	20
Reading .....	54
Receiving .....	54
Replying .....	56
Sending .....	51,66,81
E-mail Address	
Changing .....	22
Confirming .....	21
Earpiece Volume .....	27
English Characters .....	39
EZ Navi	
Area Message .....	75
EZ Navi Walk .....	74
Position Search .....	75
EZweb	
Basic Operation .....	69
EZ Password .....	71
EZ Top Menu .....	68
Initial Setting .....	20

## G

Global Functions	
Area Setting .....	34

## I

Incoming Calls Log .....	27,47
In-Phone Ans Mach	
Playing .....	33
Releasing .....	32
Setting .....	32
Initial Setting .....	20
Inputting Characters	
Emoticons .....	41
English .....	39
Input Mode .....	36
Kana/Kanji .....	38
Key Assignment .....	37

Phrases.....	40
Pictograms.....	41
Symbols.....	41

## J

Junk Mail.....	57
----------------	----

## K

Kana/Kanji.....	38
Key Functions.....	14

## L

Language.....	18
Loudset.....	27

## M

Mail	
C-mail.....	58
E-mail.....	50
Mail Filter.....	57
Main Menu.....	17
Main Screen.....	16
microSD™ Memory Card.....	87
Missed Call.....	26
Movie mode.....	63

## N

Names of Parts.....	11
---------------------	----

## O

One-Ring Calls.....	6
Other Features.....	87
Outgoing Calls Log.....	27,47

## P

Pair Function.....	48
Phone Menu.....	24
Photo	
Sending.....	66
Taking.....	64,83
Viewing.....	65
Phrases.....	40

Pictograms.....	41
Playing	
In-Phone Ans Mach.....	33
Photo.....	65
Power.....	13
Profile.....	21

## R

Reception State.....	13
Remote Auto Lock.....	85
Ringer	
Adjusting the Volume.....	28
Changing.....	30

## S

Safety Buzzer.....	87
SANYO Flat-type Stereo	
Earphones 04.....	10
Shoot mode.....	63
Silent Mode	
Releasing.....	31
Setting.....	31
SimpleMode	
Releasing.....	77
Setting.....	76
Simple Menu.....	78
Standby Screen.....	13
Step Down/Step Up.....	29
Submenu.....	17

## T

Toll.....	69
Troubleshooting.....	84

## V

Viewing the Screen.....	16
-------------------------	----

## W

Ways of Dialing.....	24
----------------------	----

# For inquiries, call:

au Customer Service Center (General Information)

## From EZweb:

How to access



EZ ▶ Top Menu

▶ auお客さまサポート (au Customer Support)

▶ お問い合わせ (Inquiry)

\*Menu is subject to change.

## ■ For general information and charges From regular phones:

 **0077-7-111**

(Toll free)

From au cellphones:

**157** area code not required

(Toll free)

## ■ For loss, theft or damage and operation information From regular phones:

 **0077-7-113**

(Toll free)

From au cellphones:

**113** area code not required

(Toll free)

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone.

Sales : KDDI CORPORATION •

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by : SANYO Electric Co., Ltd.

July 2007 Edition

Access the au online  
manual from here.



モバイル・リサイクル・ネットワーク  
携帯電話・PHSのリサイクルにご協力。

Cellphone and PHS operators collect and recycle unused telephones,  
batteries and battery chargers at stores bearing the  logo  
regardless of brand and manufacturer to protect the environment  
and reuse valuable resources.