

SIEMENS

SIEMENS

Siemens Aktiengesellschaft,
issued by Communications,
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2005
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens.com/cl75



Designed for life

CL75

安全注意事項	2	語音信箱／網內廣播	39
手機概覽	4	商務助理	40
顯示幕符號	6	遊樂場	42
使用前的準備	7	鈴聲類型	42
一般使用指示	11	鬧鈴	42
標準功能	13	附加功能	43
安全設定	14	設定	45
文字輸入	16	快速鍵	54
打電話	19	我的資料夾	55
通訊錄	21	客戶服務	56
SIM 卡聯絡人	23	手機保養	58
通話記錄	25	產品規格	59
網際網路	27	SAR- 國際 (ICNIRP)	61
照相機	29	授權協議	62
訊息	31	目錄圖	65
短訊	32	索引	71
多媒體簡訊	34		

安全注意事項

家長須知

在使用前請先仔細閱讀操作指示及安全注意事項。

然後向您的小孩解說本手冊的內容以及使用手機時的相關危險。



在使用手機時請務必記得遵循法律規定及當地法令限制。例如在飛機上、加油站內、醫院內或開車時。



行動電話可能會干擾醫療設備的功能，如助聽器或心律調整器。手機和心律調整器之間必須保持至少 20 公分／9 吋的距離。使用行動電話時，請將電話拿近耳朵旁並遠離心律調整器。相關詳情，請向您的醫生詢問。



像 SIM 卡、密封墊、鏡頭環及鏡頭蓋這些細小的零件可能會被兒童拆解及吞嚥。因此，請將本手機存放在兒童不及之處。



請勿使用一個光學放大鏡來觀看已啓動的紅外線介面 [Class 1 LED 產品（根據 IEC 60825-1 分類）]。



請勿使用超過電源供應器上所指明的電壓（V）。否則可能會損壞充電裝置。

在電池充電時，必須將電源供應器插入一個方便取用的 AC 電源插座。在電池充電完畢後，唯一能關閉充電裝置的方式就是將電源線拔除。



鈴聲（第 45 頁）、服務通告音（第 49 頁）和免持聽筒通話的音量會透過擴音器提高播出。因此當手機發出鈴聲時或當您已啓動免持通話功能時，請勿將手機放在耳朵旁（第 19 頁）。否則，您的聽力有可能遭受嚴重、永久性的傷害。



我們建議您只選用西門子原廠電池（100% 不含汞）及充電器。否則有可能會對您的健康及財產造成嚴重的傷害。譬如說，電池有可能會發生爆炸。



在暴風雨期間，若您處於戶外，請務必關機。



您只能開啓手機來更換電池 (100% 不含汞) 或 SIM 卡。在任何情況下皆不得拆開電池。嚴禁改裝本行動電話，任何改裝將使產品使用資格變成無效。



耗盡的電池及行動電話需依您國內的法令規定予以處理。



行動電話若放置在電視機、收音機及個人電腦附近可能會造成干擾。



請勿將手機放在靠近電磁數據載體之處，例如信用卡和磁片等。否則儲存在這些器具內的資料可能會遺失。



請只選用西門子原廠配件。這將可避免健康或財產可能蒙受損失的風險，並可確保遵循所有相關法規。

不當的使用將會使保固無效！這些安全指示也適用於西門子的原廠配件。

手機概覽

① 擴音器

② 主要顯示幕

顯示時間、日期、系統業者、現有的功能和電池符號及收訊強度。


③ 右／左軟鍵

可用來選擇顯示幕最底行的功能。




④ 開機／關機／結束鍵

- 開機／關機：**按住**此鍵可啟動／關閉手機的電源。
- 通話期間或在一個應用程式內：**按一下**此鍵可返回前一層目錄。**按住**此鍵可返回待機模式。
- 在待機模式下：**按住**此鍵可關機。


⑤ 導覽鍵

 按住導覽鍵可啟動一個應用程式或功能。



在待機模式下：

-  開啓主目錄。
-  開啓快捷鍵。
-  開啓通訊錄。

在清單、訊息和目錄內：

-  上下翻閱。

 
通話時：

-  設定音量。
-  開啓目錄。

⑥ 另一個 WAP 連線鍵

(如有需要，且未設定其它預設值時)。

⑦ 數字鍵

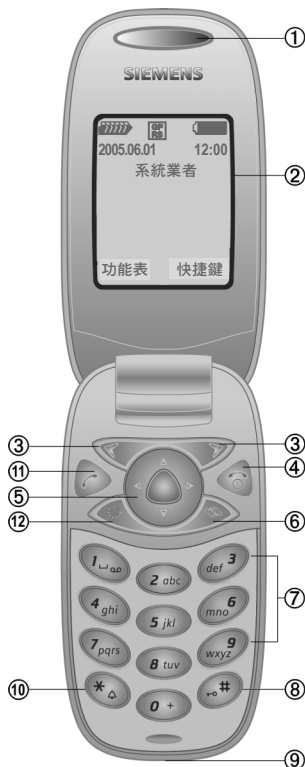

⑧ 鍵盤鎖

在待機模式下按住此鍵：啟動／解開鍵盤鎖。

⑨ 連線插座

連接充電器、耳機、閃光燈等。

⑩ 鈴聲

- 在待機模式下**按住**此鍵：啓動／關閉鈴聲（鬧鈴除外）。
- 接到來電時**按住**此鍵：只關閉這通來電的鈴聲。

⑪ 通話鍵

 
撥打顯示／突出顯示的電話號碼／名字、接聽來電。在待機模式下可顯示前幾通撥出的電話。

⑫ 顯示幕鍵

按此鍵可打開／關閉顯示幕背光以及將它當作鏡子使用。

注意

顯示幕背光關閉後，鍵盤仍可正常操作。

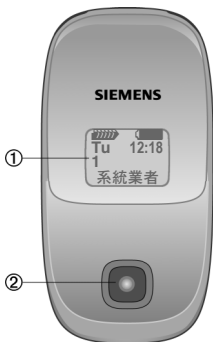

① 第二顯示幕

顯示時間、日期、系統業者、以及電池和收訊強度的圖示。

② 相機鏡頭

③ 擴音器

④ 電池槽

⑤ 音量鍵

 
 
 
上下翻閱

⑥ 紅外線介面 (IrDA)

⑦ 相機鍵

按此鍵可透過迷你顯示幕拍一張自拍照片（請參考第 29 頁）。

⑧ 免持聽筒模式

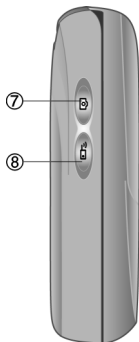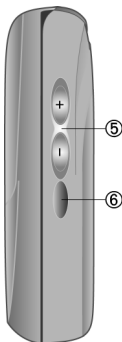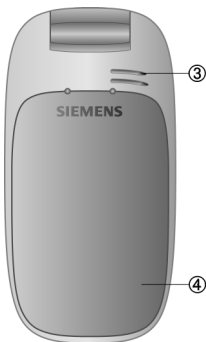

顯示幕符號

顯示幕符號（選擇）



收訊強度



電池的電量，例如 50%



聯絡人



通話記錄



網際網路



相機功能



訊息管理



商務助理



鈴聲類型



鬧鈴



附加功能



我的資料夾



設定



遊樂場



所有來電都會被轉移。



鈴聲關閉。



只發出短鈴聲（嗶音）。



只有當儲存在電話簿內的來電者來電時才會發出鈴聲。



鬧鈴已設定。



自動應答功能已啟動。



已啟動且可用。



鍵盤已鎖住

訊息符號（選擇）



未讀取



已讀取



已傳送



收到多媒體簡訊



包含 DRM 內容的多媒體簡訊

使用前的準備

 
插入 SIM 卡／電池

您的系統業者會提供您一張 SIM 卡，卡內存有關於您這支電話線的所有重要資料。如果所提供的是一張信用卡大小的 SIM 卡，請將較小的部份折取出來並清除任何不平的邊緣。

其它資訊


在取出電池之前請先關機！

本手機僅支援 3V 的 SIM 卡。如果您的 SIM 卡是舊式的，請洽詢您的系統業者。

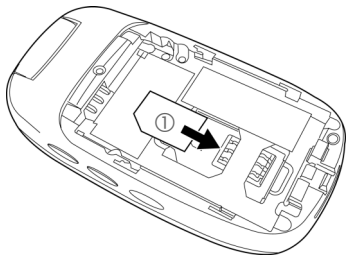


注意 SIM 卡的方向 ①。

 - 將 SIM 卡置入卡槽內，接觸面朝下（請確保切角的位置正確）。
- 將電池重新放回手機內 ②，然後壓下電池，直到它扣緊為止 ③。

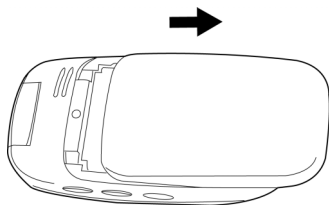


- 向下拉開電池蓋。將電池朝向鉸鏈方向推出，然後將它拿起來。

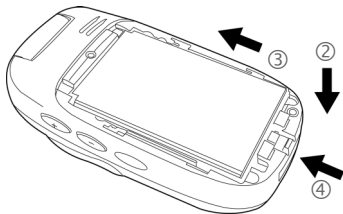 

- 安裝手機吊飾帶：將繫繩環穿過電池底下的鉤 ④。關上電池蓋即可固定吊飾帶（請參考第 8 頁）。

 
- 放上電池蓋，然後推向手機頂端，直到它扣入正確位置為止。

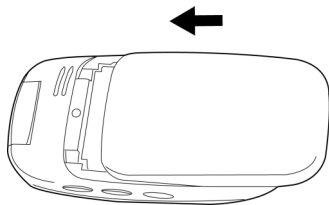

為電池充電

為電池充電

 電池出廠時並未完全充電。請將充電器連接線插入手機底部，然後將電源供應器插入電源插座，請充電至少 3 個小時。

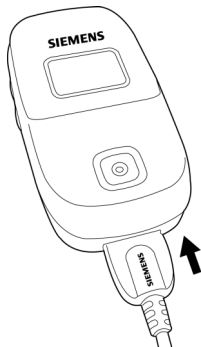

充電期間顯示的圖示。

充電時間

一顆電力耗盡的電池在 2 小時之後即可完全充滿。只有當溫度介於 +5 度至 45 度之間，方可進行充電。若溫度高於／低於此溫度範圍 5 度時，充電符號會閃爍作為警告。請勿超過電源供應器上所指明的電壓。

操作時間

操作時間長短須端視個別的操作狀況而定。手機若曝露在極高或極低的溫度下，待機時間會大幅縮短。請避免將手機直接曝曬在陽光下或放在散熱器上。

通話時間：180 分鐘

待機時間：至少 220 個小時

沒有出現充電符號

如果電池已完全放電，在接上電源時不會立即出現充電符號。此圖示將在兩個小時之內再出現。完全耗盡電力的電池在 3 至 4 小時之後即可完全充滿電力。

您只能使用手機標準配備的電源供應器！

操作期間的充電圖示

在操作期間顯示的充電量（空 - 滿）：



電池電力快用盡時，手機會發出嗶聲警告。電池的電量必須經過不間斷的充電／放電之後才會正確顯示。

在手機未完成充電之前，請勿移除電池。

其它資訊

充電器在長時間使用之後會變熱。這是正常現象，沒有危險性。

若電池被取出超過 30 秒鐘，就必須重新設定時鐘。

開機／關機



按住開機／關機／結束鍵可開機。

輸入 PIN 碼

SIM 卡可由一組 4 至 8 碼數字組成的 PIN 碼保護。



用數字鍵輸入 PIN 碼。

**** 的符號會出現，以確保沒有人能從顯示幕上看出您的 PIN 碼。請用 **清除** 更正 PIN 碼。

確定

確認。登入網路需要幾秒鐘的時間。

其它資訊

變更 PIN 碼..... 第 14 頁

解開 SIM 卡鎖 第 15 頁

緊急電話號碼 (SOS)

此功能僅限於非常緊急的狀況下使用！

即使在沒有 SIM 卡或輸入 PIN 碼的情形下，您也可以按 **SOS** 軟鍵，透過任何一個網路撥打緊急電話（不是所有國家地區皆有提供此功能）。

第一次開機

設定日期時間

請在開始使用手機時就設定時鐘，使它顯示正確的時間。以後就不需要再設定時間了。

編輯

按此鍵可開始設定日期及／或時間。

變更

按此鍵可從月曆選擇一個日期。



首先輸入日期（日／月／年），然後是時間（24 小時格式，包含秒數）。

儲存

按此鍵確認設定。

世界時鐘



選擇一個時區。

選項

選擇所需的時區。或選擇啓動／關閉自動時區。

複製 SIM 的地址

第一次插入 SIM 卡時，可將 SIM 卡上的資料複製至您的手機記憶體。**請勿中斷此步驟。**在此期間，**請勿接聽來電。**請依照顯示幕上的指示。

您也可以稍後再複製 SIM 卡的資料（請參考第 24 頁）。

一般使用指示

待機模式

當手機上顯示您的系統業者名稱時，表示它已處於**待機模式**，並且**可隨時使用**。



按此鍵可從任何狀況中返回待機模式。

收訊強度



接收到強大的訊號。



訊號微弱。撥打及接聽電話的收訊品質不佳。這將可能造成連線中斷。

數位權利管理 (DRM)

請記住，您的手機具備數位權利管理。供應商可限制下載之圖片、聲音或應用程式的使用，例如防拷保護、只限一定時段使用、限定使用次數等等。

主目錄

主目錄是以圖片符號的格式顯示在手機上：



從待機模式叫出主目錄。



選擇應用服務的符號。



啟動一個應用服務。

主目錄選項



開啓目錄。

依應用情況而定，您可使用下列不同的功能：

大字體顯示

您可從兩種字體大小中選擇其一。

用戶手冊

目錄控制

在此手冊中，所有步驟會以簡易的圖形方式顯示，例如：



以上說明代表下列步驟：



開啓主目錄。



或



向上／向下或向右／向左移動至所需的項目。

選項

確認您的選擇（按左軟鍵或右軟鍵）。

目錄快速鍵

所有目錄都內設號碼，讓您在待機模式下輸入一個號碼即可直接選擇一個功能（例如編寫新短訊）。



按此鍵以顯示主目錄。



按此鍵可進入訊息管理。

符號

本手冊使用下列符號來說明操作步驟：



輸入數字／字母



開機／關機／結束鍵



通話鍵



右／左軟鍵



顯示一個軟鍵功能。



按住導覽鍵，例如：可叫出目錄或確認設定值。



依指示的方向按導覽鍵。



此功能須端視系統業者是否可支援，可能需要特別註冊申請。

標準功能

選項目錄

在此將列出選項目錄中重複出現的功能。

選項 開啓目錄。

編輯 開啓資料以編輯此資料。

查看 查看資料的詳情。

刪除／全部刪除 確認後刪除一筆資料／所有資料。

新增資料 新增一筆資料。

傳送 選擇傳送的傳輸服務及媒介。

回覆 寄件人變成收件人。

儲存 儲存資料。

儲存到： 將收件人資料儲存至現用的通訊錄內。

文字輸入法 (第 16 頁) T9 英文輸入：啓動／關閉 T9 輸入法。

T9 輸入

自動顯示通常成對使用的文字選擇。

您可設定最多2種中文輸入法供輸入訊息使用。

容量 顯示記憶體容量。

使用提示 顯示操作指示。

突出顯示模式

將一個或多個資料突出顯示，以對它／它們執行一項功能。

選項 開啓目錄。

標示 啓動模式。

標記 突出顯示一個未突出顯示的資料。

全部解除標記

取消被突出顯示之資料的突出顯示狀態。

其它突出顯示的功能：

全部標記 突出顯示所有的資料。

安全設定

本章節將說明如何防止您的手機受到未經授權的使用。

請務必將這些密碼收藏在一個安全的地方，以便在下次需要時取用。

密碼設定

PIN 碼	保護您的 SIM 卡（個人識別碼）。
PIN2 碼	在設定話費資料顯示以及使用特殊SIM卡之額外功能時須使用此密碼。
PUK PUK2	解鎖碼。可在重複輸入錯誤的PIN碼之後用來解開SIM卡鎖。
手機密碼	保護您的手機。必須輸入作為您手機的第一個安全設定。



安全設定

→ PIN 碼

→ 選擇功能。

PIN 碼控制

在每一次開機時通常會提示您輸入PIN碼。您可取消此功能，但這樣會增加其他人濫用您手機的危險。有些系統業者會不容許您取消密碼控制。



進入 PIN 控制。

變更

選擇此項可變更PIN控制。



輸入 PIN 碼。

變更

確認輸入。

確定

按一下以儲存新的資料。

變更 PIN 碼

您可將PIN碼變更為任何一組您較容易記得的 4- 至 8-碼號碼。



輸入新 PIN 碼。



確認。



輸入新 PIN 碼。



重新輸入新 PIN 碼。



- → 安全設定
- PIN 碼
- 選擇功能。

變更 PIN2 碼

(只有當手機具備一個 PIN2 碼時才會顯示此功能)。

按照變更 PIN 碼的相同步驟進行。

更改手機密碼

您可在第一次叫出由手機密碼保護的功能時設定手機密碼 (4-至 8 碼) (請參考第 14 頁)。此密碼接下來將可適用於所有受手機密碼保護的功能。

在您第三次輸入錯誤的 PIN 碼時，您將無法再輸入手機密碼也無法使用由此密碼保護的功能。發生此情況時，請致電西門子服務中心 (第 55 頁)。

解開 SIM 卡鎖

如果一連三次輸入錯誤的 PIN 碼，SIM 卡會被鎖閉。請根據指示輸入您的系統業者隨 SIM 卡提供給您的 PUK 碼 (MASTER PIN)。

若您忘了 PUK 碼 (MASTER PIN)，請聯絡您的系統業者。

防止意外啟動手機

即使已關閉 PIN 碼控制，在開機時仍需提出確認。

這可防止您意外啟動手機，例如當您將手機帶在皮包內或是當您搭乘飛機時。



按住此鍵。

確定

按 **確定** 開機。

取消

按 **取消**，或不做任何動作。手機將不會開機。

在待機模式下鎖閉鍵盤或解鎖。鎖閉或解鎖：



按住。

文字輸入

不用 T9 輸入文字

重複按數字鍵，直到出現您所要的字元為止。

例子：



按一次可輸入字母 a，按兩次可輸入 b 等等。

清除



按一下此鍵可刪除游標前面的字母，**按住**則可刪除整個字。

移動游標（向前／向後）。



按一下：在 abc、Abc、ABC、T9abc、T9Abc、T9ABC、123、拼音之間切換。



按住：顯示所有輸入模式。

按一下：顯示特殊字元。

按住：開啓編輯 目錄。



按一次／重複按：

.,?!' " 0 + - () @ / : _

按住：輸入 0。



輸入一個空格。

按兩次 = 跳行。

特殊字元



按一下。

	↩	¿	¡	—	;	.	,
?	!	+	-	*	'	:	“
/	()	□	¥	\$	£	€
@	\	&	#	[]	{	}
%	~	<	=	>		^	§
Г	Δ	Θ	Λ	Ξ	Π	Σ	Φ
Ψ	Ω						

↩ 空格



移動至要使用的字元。



選擇字元／清除字元。

選項目錄

傳送、儲存、格式化、插入圖片或音樂、插入、清除內容、傳送

使用 T9 輸入文字

「T9」可從不同按鍵輸入的字母推斷出正確的文字。

 


啓動／關閉文字輸入模式，例如 T9。



移動至要使用的模式，例如 T9abc。選擇。

選擇輸入文字的語言



中文輸入法

 
您可設定最多 2 種中文輸入法供輸入留言使用。

T9 拼音

T9 注音

T9 繁體筆劃


T9 簡體筆劃



使用 T9 輸入法

您最好在輸入整個字時不要看著顯示幕。


 
您只需要分別在各個字母的相關按鍵上按一次即可。




請勿使用 Ä 這類的特殊字元，您只需輸入標準的字元，例如 A，接著 T9 將為您輸入正確的文字。

T9 文字建議

  若在字庫中針對一個字有多個選擇，最常用的字會先被顯示出來。





將一個字新增至字庫：


 


修改一個文字

  使用 T9 編寫的文字：



其它資訊

  

T9® 文字輸入法已獲得以下一項或多項授權許可：

美國專利號：5,818,437、5,953,541、5,187,480、5,945,928 及 6,011,554；

英國專利號：2238414B；

香港標準專利號：HK0940329；

新加坡專利號：51383；

歐盟專利號：0 842 463 (96927260.8)

DE/DK、FI、FR、IT、NL、PT、ES、SE、GB；還有其他國家的專利待批中。

文字範本



訊息範本

您可將預設留言儲存在手機內，以加入您的訊息（短訊、多媒體簡訊）內容中。

打電話



輸入號碼（必須加上區碼／國際撥號碼）。

清除

短按可清除最後一碼；按住則可清除整個電話號碼。



撥打電話號碼。

結束通話



按一下結束鍵。

或

關上手機蓋。

設定音量



在通話期間，按上端或下端以調整音量。或者您也可以按手機右側的音量鍵。

重撥之前的號碼



按兩次重撥最近一次撥過的電話號碼：

叫出重撥號碼表：



按一下。



挑選一個電話號碼。



按此鍵重撥。

接聽來電

手機蓋打開時：



按此鍵可接聽來電。

手機蓋關閉時：打開手機即可接聽來電。

拒接來電



按此鍵可拒接來電。

其它資訊

為避免損害耳朵聽力，請先接聽來電，然後再將行動電話拿近耳朵。



將電話號碼儲存在通訊錄／電話簿內。

免持聽筒

透過擴音器播放（免持聽筒通話）。

請務必先關閉「免持聽筒通話」，然後再將手機拿近您的耳朵！否則，您的聽力可能會受損！



按住此鍵可關閉話筒。

國際撥號碼



按住此鍵直到出現一個「+」。

+ 清單

選擇國家地區。

通話選項

選項

只有在通話期間才可操作的功能。

在2通電話之間切換

撥打第二通電話

保留 保留目前的通話，然後撥發新的電話號碼。

切換 在通話之間切換。

在通話期間接到來電

您將會聽到一個「來電音」，此時您可：

- 接聽等待中的電話，並保留第一通電話

切換 接聽等待中的電話，並保留目前的通話。

- 拒接等待中的來電

拒接 拒接來電。

- 接聽等待中的電話，並結束目前的通話



結束通話。



接聽新的來電。

結束通話



按結束鍵。

電話會議

您可逐一撥電給 5 名與會者。一個電話接通之後：

保留 選擇此項保留目前的通話。



現在，撥發一個新的電話號碼。新的電話接通之後...

選項

... 開啓目錄並選擇電話會議。繼續撥電，直到接通所有與會者爲止。

結束



按結束鍵時，可一起結束電話會議中的所有通話。

音頻 (DTMF)

開啓電話簿選擇一個要以 DTMF 形式傳送的號碼。

選項

開啓目錄並選擇傳送 DTMF 音頻。

通訊錄



→ 選擇功能。

您可將電話號碼或資料存入手機記憶體或 SIM 卡記憶體內。在通訊錄內將顯示所有的資料，而 SIM 卡通訊錄只列出儲存在 SIM 卡上的資料。

顯示資料

顯示幕上將顯示聯絡人內的資料。請注意，當您移動至一筆資料時，手機將發出相關聯絡人的名字。



您可在不同的通訊錄類別之間翻閱：所有聯絡人、群組和 SIM 卡電話簿。



根據第一個字母選擇姓名及／或翻閱選擇。

新增資料

在您的電話簿或 SIM 卡記憶體內新增一筆資料。



→ 新增資料

→ SIM 卡或手機 → 編輯資料

SIM 卡記憶體和手機記憶體內的資料項目有所不同。SIM 卡記憶體通常包含姓名、電話、群組、位置和記錄編號等項目。而手機記憶體包含更多的資料項目：名字、電話號碼、公司號碼、手機號碼、傳真、記事、公司、地址、郵遞區號、國家、城市、網址、生日、日期、時間、群組、手機序號和鈴聲。

名片

建立您自己的名片，以便將名片傳送至另一部 GSM 手機。若您還未建立任何名片，本手機將提示您輸入名片資料。



在各欄位間移動以鍵入您的資料。

儲存

按一下以儲存新的資料。

其它資訊

名片之內容須符合國際標準 (vCard)。從通訊錄／電話簿複製號碼。

預撥號碼

本手機可讓您預設 5 組電話號碼，以加快撥號。



→ 所有聯絡人／SIM 卡通訊錄

→ 預撥號碼 → 編輯

群組

本手機內已預設 9 個群組，可讓您更有條理地區分您的通訊錄資料。您可重新命名 8 個群組。



開啓通訊錄（在待機模式下）。

< 群組 > 選擇（資料數量會列明在群組名稱之後）。



選擇群組。

SIM 卡聯絡人

(SIM 卡上的) 這些資料與手機記憶體內的資料是分開管理的。這些資料將依姓名、電話號碼、群組、位置和記錄編號分類排列。

新增資料

若已選擇電話簿作為標準聯絡簿：



開啓通訊錄（在待機模式下）。



選擇 < 新增資料 >。



顯示輸入欄。



在各個輸入欄之間移動及輸入資料。

電話號碼

輸入電話號碼時請記得加上撥號碼。若未輸入電話號碼，資料將無法儲存。

名字

輸入名字及／或姓氏。

群組

預設為未設定群組

重要的電話號碼可被集成一個群組（VIP）。

位置

預設：SIM 卡

特殊的 SIM 卡可將電話號碼保存在一個受保護區域內（<SIM 卡保護區>）（需要 PIN2 碼）。

記錄編號

會被自動分配給每一筆資料。您可用記錄編號來撥打電話號碼。

儲存

按一下以儲存新的資料。

撥打／整理一筆資料



開啓通訊錄。



根據第一個字母選擇姓名及（或）翻閱。



號碼即被撥出。

變更資料



從 SIM 卡聯絡人選擇一筆資料。

選項

按一下。

編輯

選擇。



選擇所需的輸入欄。



作必要的修改。

儲存

儲存資料。

SIM 卡聯絡人

以下功能可否使用，須視當前狀況而定。

選項 開啓目錄。

查看	顯示細節。
複製至手機	將選擇的資料複製至手機。
搬移到 ...	將突出顯示的資料移至您要加入的群組。
刪除	刪除資料。
標示	標示資料。
傳送	透過短訊、多媒體簡訊或紅外線傳送資料。
排序	依名字或姓氏整理資料。
記憶體狀態	已用及可用記憶體的狀態。

< 標準聯絡簿 >



開啓通訊錄並選擇 < 標準聯絡簿 >。

< 本機號碼 >

輸入「本機」的電話號碼（例如傳真）供您查看之用。

<SIM 電話簿號碼 >

儲存在 SIM 卡電話簿內的資料也可在其它 GSM 手機上使用。

<SIM 卡保護區 >

電話號碼可被儲存至特殊 SIM 卡上的一個受保護區域。要修改時需要輸入 PIN2 碼。

通話記錄

電話號碼儲存在這裡可方便您重撥。



選擇記錄。



開啓通話記錄。



選擇電話號碼。



撥打電話號碼。

每一個通話記錄可容納 50 筆資料：

撥出記錄

可取用您最近撥過的幾通電話號碼。



在待機模式下可快速進入。

未接來電

您已接到但未應答的電話之電話號碼可被記錄下來，以供您日後回電。

來電記錄

將列出所有已接到的來電。

通話選項

選項

開啓選項目錄。功能將依應用情況而異：查看、擷取號碼、儲存、刪除、全部刪除、傳送短訊和傳送多媒體簡訊。

其它通話資訊

其它通話資訊已儲存供您參考。這些資訊包括話時和話費的細節。



向左／向右翻閱至通話記錄。

可查看的資訊有：

前次話時、所有來電、所有撥出電話、所有話時及剩餘單位。



移動至您所要的項目。

選項

開啓下列選項：

重設

刪除項目。

重設所有

從清單中刪除所有項目。

計費設定

開啓下列選項的目錄：

貨幣

修改您的貨幣幣別。

自訂費率

輸入貨幣及每單位及時間的費率。

自動顯示

自動顯示話時及話費資料。

計費限額

特殊的 SIM 卡可讓您或系統業者設定限制手機撥出電話的計費限額／期限。

網際網路

您可從網際網路取得最新的資訊，這是特別配合本手機的顯示選項而設計的。

此外，您可下載遊戲及應用服務至您的手機。您可能需要另外向系統業者申請網際網路連線服務。

網際網路



叫出此功能時，瀏覽器會根據預設的選項啟動（瀏覽器設定可能已由系統業者預先指定／設定）。

主目錄

<URL- 西門子／系統業者 >

開啓預設的西門子網址。

書籤 顯示儲存在手機內的書籤；儲存書籤。

網際網路 網際網路的連結。

WAP 設定

進入此目錄編輯／啟動 WAP。

連接至網際網路，請依照瀏覽器目錄中所顯示的目錄選項。

結束連線



按住此鍵以結束連線並關閉瀏覽器。

在瀏覽器內移動操作



- 選擇一個連結。
- 設定、狀態、開／關。




按一下此鍵可返回上一頁。



- 向前／向後開啓輸入欄／連結。
- 翻閱至下一行。

輸入特殊字元：



/  選擇重要的特殊字元：

您的網際網路瀏覽器已獲得以下授權：



RSA BSAFE Enabled

環境設定

您須為手機的網際網路上網功能所作的準備取決於您目前使用的系統業者：

預設的連線設定檔

通常，您的系統業者會預先在您的手機內建立一個或多個系統業者的連線設定檔。



選擇設定檔。



啟動設定檔。

手動設定連線設定檔

您可向系統業者或透過以下網址的「組態設定」取得所需的資料：

[www.siemens.com/
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)

書籤



書籤

這裡可顯示儲存在手機上的 URL 網址。您可儲存新的書籤。您可用檔案分組處理或管理這些書籤。

照相機

您可立即觀賞儲存在內建照相機中的照片／影片，並可

- 將照片當作背景影像、標誌、開／關機動畫或螢幕保護程式。
- 以多媒體簡訊傳送照片／影片。

啓動



或



按手機側邊的相機鍵。

從選項目錄選擇模式。

畫面上會顯示當前（預覽）的影像。您可在第一行看到下列資訊（從左至右）：



亮度。



變焦係數。



連接的閃光燈。

在預覽影像之下，您可看到一個有關選定之解析度的資料。

拍照

本手機可容許您在翻蓋打開或關閉時都能拍照。當翻蓋打開時，您可透過主顯示幕拍下其他人的照片，而手機蓋關閉時，可透過迷你顯示幕自拍照片。

手機蓋打開時拍照：



拍照。



顯示下一張照片的預覽影像。

手機蓋關閉時拍照：



拍照。

此照片儲存時將附有一個名稱、日期及時間。如要輸入名稱，請參考選項目錄中的設定。

拍照前的設定值：



設定亮度。



設定變焦係數。

影像解析度

無論預覽影像的解析度如何，都可依等級設定影像的品質。

- 最佳解析度：**640 × 480 (VGA)**
 高解析度：**320 × 240 (QVGA)**
 中等解析度：**160 × 120 (QQVGA)**

端視您選擇的數位變焦而定，解析度可能會隨之降低。

錄影

影片模式的解析度與預覽影像的解析度相同。



開始錄影。



結束錄影。

錄影期間，顯示幕的右上角會出現一個紅點。

播放 播放錄下的影片。

閃光燈（配件）

若可啓用閃光燈，顯示幕上會出現一個符號。閃光燈在連接至手機時會保持在備用狀態。這將縮短手機的待機時間。



閃光燈正在準備期間時，此符號會閃爍。有關設定，請參考選項目錄。

照相機選項

以下功能可否使用，須視當前狀況而定。

選項	開啓目錄。
更改模式	在相機或影片模式之間切換。
設定	<ul style="list-style-type: none"> 錄影的檔名 影像解析度和品質
瀏覽相簿	顯示照片的清單。
閃光燈	選擇： 自動、關閉、紅眼。
快門聲	選擇此項可設定預設清單中的一個音效。
微光	選擇此項可啓動／關閉微光效果。
人物	選擇此項可啓動／關閉肖像效果。
其它影片	顯示影片清單。
使用提示	依照指示拍照。
離開	離開目錄。

訊息

收件匣

您的收件匣是一個收件資料夾，內含所有接收到的文字和通話記錄。這些資料將被標示一個代表其類型及狀態的符號。

如要叫出此收件匣，例如若已接收一個新的短訊：



按此符號下方的軟鍵。

當您開啓一個資料時，也可開啓相關的應用程式。在一個預設的時限之後（**選項**），已讀取及開啓的訊息資料只會顯示在該訊息相關的收件清單內。

在收件匣內，您將可看到以下的訊息類型：短訊，多媒體簡訊

系統訊息

關於多媒體簡訊、未接鬧鐘、未接重要記事、未接來電、語音備忘的訊息。

訊息清單

所有短訊和多媒體簡訊將分別顯示在四個清單中。



→ 收件匣

→ 選擇訊息類型。

接收之訊息的清單。



→ 草稿

→ 選擇訊息類型。

儲存之草稿的清單。



→ 未傳送

→ 選擇訊息類型。

尚未成功

送出之訊息的清單。



→ 寄件備份

→ 選擇訊息類型。

送出之訊息的清單。

選項

叫出功能目錄以操作這些訊息。

短訊

您可利用本手機傳送及接收訊息（最長可達 1520/660 個字元，依輸入法而定）。它們會自動分割成幾個「一般」短訊（請注意，其計費較高）。此外，您還可將圖片及聲音插入短訊中。

編寫／傳送短訊



→  → 寫新訊息
→ 短訊內容



輸入文字（亦見第 13 頁）。
選項 編寫文字的功能。



開始傳送的步驟。



從聯絡人選擇一個號碼，或輸入一個號碼。



短訊會先被傳到服務中心以傳送出去。

特殊功能

圖片及聲音

傳送附加文字或未附加文字的圖片及音調。請記住，這些圖片和聲音可能是受保護的（數位權利管理，第 11 頁）。

文字輸入欄開啓之後：

選項



開啓目錄。

選擇插入圖片或音樂。
目錄內包含：內建動畫、內建聲音、自定動畫、自定圖像、自定聲音



選擇類別。



確認。顯示幕上顯示所選清單的第一筆資料。



翻閱至您所要的資料。

若選擇內建動畫／內建聲音：



您選擇的資料會顯示／播放出來。

選項

您選擇的資料會被加入短訊中。

短訊目錄



→  → 短訊檔案夾

顯示幕上會顯示儲存在手機內的短訊清單。短訊會歸入收件匣或送件匣。

群組短訊

您可將短訊以「公告」方式傳送給一個收件人群組內的所有成員。

選項

開啓目錄。

傳送

選擇。

群組

群組清單會出現在顯示幕上。



選擇群組。



開啓群組並反白顯示所有／單筆資料。



安全提示訊息被確認之後便會開始傳送短訊。

閱讀短訊



顯示幕上會通知您已接到一個新短訊。

收件匣已開啓。它可讓您快速瀏覽當前收到的短訊。



要閱讀短訊時，請按導覽鍵。



逐行翻閱整個短訊。



若此符號閃爍，表示 SIM 卡記憶體已滿。刪除或儲存短訊。

回覆短訊

讀取收到的訊息之後，您可立即回信。新加入的文字內容會被置於接到的文字內容上方。



立即回覆。

短訊設定

短訊簽名



→ 留言設定
→ 短訊 → 簽名

您可輸入一個最多 16 個字母的「簽名」。此簽名將會被自動附加至每一個短訊，**回覆** 訊息以及要變更一封現有短訊時則除外。

設定簽名



選擇 **編輯** 將您的簽名個人化。

多媒體簡訊

多媒體簡訊服務可讓您將文字、圖片／影片及聲音附在一個綜合性的訊息內傳送至另一個行動電話。

根據您的手機設定而定，您將會接收到完整的多媒體簡訊或只收到一個包含寄件人資料及訊息容量的通知訊息。過後，您可用手動方式載入實際的多媒體簡訊。

編寫多媒體簡訊

多媒體簡訊包含地址標頭和內容兩部份。它可能包含連續數頁。每一頁可包含一個文字、一個圖片及一個聲音。請記住，這些圖片和聲音可能是受保護的（數位權利管理，第 11 頁）。

編寫標準的多媒體簡訊



→ 寫新訊息
→ 多媒體簡訊

首先，請選擇一個要加入多媒體簡訊第一頁的物件：

圖片

選擇。



顯示圖片／影片功能：
插入項目，圖片

聲音



選擇。

顯示聲音功能：
插入項目，聲音

文字



選擇。

顯示文字的功能（亦可參考第 16 頁）。

選項

選項

開啓目錄。

插入項目

從圖片、影片、聲音、文字、數位相機、攝錄影機、錄音機和多媒體簡訊頁之中選擇。

圖片

例如，在您選擇一個項目之後，目錄會進入我的資料夾，然後您可選擇插入我的資料夾資料夾內的任何一個多媒體項目。

編寫選項

選項 開啓目錄。

傳送	傳送多媒體簡訊。
插入項目	插入圖片、影片、聲音、文字、數位相機、攝錄影機、錄音和多媒體簡訊頁等項目。
預覽 MMS	在顯示幕上播放整個多媒體簡訊。
預覽頁面	預覽頁面。
附件	加入附件： <ul style="list-style-type: none"> • 檔案 • 名片 • 重要記事
頁面目錄	顯示多媒體簡訊頁，以供檢視及（或）修改。
頁面資訊	查看訊息的詳情。
計時	設定時間。
儲存	建立多媒體簡訊之後，將它儲存為一個範本。
刪除	刪除多媒體簡訊。
使用提示	

刪除項目 當您在多媒體簡訊內插入一個項目之後會出現此功能。選擇您可刪除您剛插入的項目。

取代物件 當您在多媒體簡訊內插入一個項目之後會出現此功能。選擇您可更換成其它物件。

MMS 範本



→ MMS 範本

多媒體簡訊的範本是一些儲存時未附地址的多媒體簡訊。他們可當作新的多媒體簡訊傳送，或當作一個新多媒體簡訊之一部份使用。

傳送多媒體簡訊

您已建立新的多媒體簡訊頁。



只開啓地址。

主旨： 輸入一段有關多媒體簡訊的短述。

收件人： 輸入一個或更多電話號碼。

副本： 您可傳送副本給其它的收件人。

寄件人身份顯示：

選擇啓動／關閉您的身份顯示狀態。

優先權： 選項包括一般、高和低。

收發狀況： 選擇您是否要接收情況報告。

 
閱讀通知： 選擇此項可要求情況報告，以了解收件人是否已閱讀訊息。

有效時限： 有效期限包括最長、1 小時、3 小時、6 小時、12 小時、1 天及 1 週。



開始傳送的步驟。

多媒體簡訊會在確認後傳送出去。

接收多媒體簡訊

顯示幕上會通知您接到一個新的多媒體簡訊／通知訊息。



按此鍵可查看收到的訊息的細節。

爲了接收**隨後的**完整多媒體簡訊，必須開啓該通知訊息。

接收

開始傳輸。

閱讀

您已完整接收一個多媒體簡訊。



開始播放。

主要的播放功能：



到下一頁。



按一次可返回目前頁面的頁首。



上下翻閱訊息。



結束。

注意

如要調整音量，請使用側鍵。

下載的訊息包括以下細節內容：

主旨： 一段有關多媒體簡訊的短述。

收件人： 一個或更多收件人的電話號碼。

寄件人： 顯示寄件人的電話號碼。

副本： 您可傳送副本給其它的收件人。

密件副本： 您可傳送密件副本給其它的收件人。

大小： 顯示多媒體簡訊的檔案大小。

訊息等級： 顯示訊息的類型。

寄件人身份顯示：
選擇啟動／關閉您的身份顯示狀態。

優先次序： 選項包括一般、高和低。

情況報告： 選擇您是否要接收情況報告。

讀取報告： 選擇此項可索取情況報告，以了解收件人是否已閱讀訊息。

附 DRM： 顯示訊息是否附有 DRM 限制。

有效期限： 顯示截止時。

日期： 顯示訊息寄出的日期。

留言設定



→ 訊息設定

→ 多媒體短訊 → 選擇功能。

多媒體簡訊設定檔

您可設定 5 個多媒體簡訊設定檔。這些設定檔內已定義傳送簡訊的特性。若未預先設定任何設定值，您可向系統業者或透過以下網址的「組態設定」取得所需的資料：

[www.siemens.com/
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)



選擇設定檔。



開啓設定檔以作修改。

設定選項

選項 開啓目錄。

啓動、編輯、刪除。

用戶設定

您可配合您的需求來設定多媒體簡訊的傳送方式：

寄件人身份顯示：	選擇啓動／關閉寄件人身份顯示。
預設優先權：	傳送優先次序： 中、高、低
收發狀況：	爲送出的訊息要求送達確認。
閱讀通知：	要求確認多媒體簡訊已被讀取。
有效期限：	選擇服務中心嘗試傳送多媒體簡訊的時間期限： 1 小時、3 小時、6 小時、12 小時、1 天、1 週、最長* * 系統業者可容許的最高期限。
傳送時間：	從服務中心傳輸至收件人的時間： 立即、明天

下載方式：接收完整的多媒體簡訊或只接收通知訊息。

自動下載
立即接收完整的多媒體簡訊。

自動開戶網
在開戶網內立即接收完整的多媒體簡訊。

延遲下載
只接收通知訊息。

使用提示

選擇使用提示可查看更多有關訊息設定的詳細說明。

語音信箱／網內廣播

語音信箱



如果您有語音信箱，來電者可在下列情況下留下一個語音留言給您：

- 若您的手機已關機或未準備好要接聽電話，
- 若您不想應答，
- 或者若您正在通話中。

您可能必須另外申請此服務並手動設定。

設定

您的系統業者將提供您兩組電話號碼：

儲存語音信箱號碼

 
撥打此號碼可收聽您的語音留言。



輸入電話號碼，然後用 **確定** 確認。

儲存來電轉移號碼

通話會被轉移至此電話號碼。



輸入電話號碼，並用 **確定** 向網路註冊此號碼。

聽取留言



根據系統業者而定，新語音留言會以下列方式通知：



符號加嗶音。

或



經由短訊通知。

 
或

您會接到一個語音自動通知的來電。撥打您的信箱號碼，並播放留言。



按住（若有必要，您只須輸入一次信箱號碼）。依您的系統業者而定，您可用 **確定** 及 **郵件信箱** 確認。

網內廣播



有些系統業者會提供資訊服務（資訊頻道、網內廣播）。若已啟動接收廣播訊息，您的頻道清單將提供您有關您所啟動之頻道的廣播訊息。

商務助理



→  → 選擇功能。

日曆

您可在日曆內輸入新的重要記事。時間及日期必須正確設定。

日曆內可提供您兩種顯示格式：月曆和週曆。

不同類型的資料會被標示不同的顏色。重要記事會以彩色長條顯示，以小時分段。

移動操作：



/  在各週／日／小時之間翻閱。

日曆設定

選擇每週起始日。

重要記事

重要記事會以一個依時間順序排列的清單顯示。

輸入新的重要記事

< 新資料 >

選擇。

類型：



備忘：輸入說明文字。



語音備忘：輸入語音備忘。



撥號：輸入電話號碼。會與提示符號一起顯示。



會議：輸入說明文字。



假日：輸入開始及結束日期。



生日：輸入姓名及日期。

依類型而定，將顯示不同的輸入／選擇欄。

您可限制欄位的數量，請參考清單末端的標準。

其它資訊



鬧鐘，已設響鬧時間。



日程表，已設響鬧時間。

即使手機已關機，鬧鈴仍會響起（除非是在關機無提示的模式中）。手機沒有進入待機模式。按任何一鍵即可關閉鬧鈴。

工作

工作會像重要記事一樣顯示在選定當日的日程表中。不過，與記事不同的是它不需要一個時間。因此在未輸入時間時，工作會出現在每日的清單最上方，直到它被標記為已完成為止。其資料的建立方式與重要記事相同（請參考「重要記事」一節）。

記事

T9 可讓您在編寫短記事（如購物單）時更加輕鬆簡單。利用手機密碼保護您的機密記事。

未接記事

您未回應其響鬧的記事（重要記事、工作）會列在顯示幕上供您瀏覽。

錄音器

使用此功能可錄下簡短的語音備忘。

新增錄音

< 錄製新 >



選擇。

在一個短促的噪音之後唸出備忘的內容。



切換暫停／錄音。



結束錄音。錄音在儲存時會自動被附上一個時間標記。如要重新命名，請使用
選項。

播放




選擇您要的錄音。



切換播放／暫停。



/  **按住**可倒轉及快轉。

警告！

此功能的使用可能須遵守刑事法的限制。

如果您有意錄製談話內容，請預先通知談話另一方，並將該錄音保密。只有在談話對方同意下，您才可使用這項功能。

世界時鐘

請參考第 50 頁。

遊樂場

您可以從網際網路下載遊戲和應用服務。下載這些遊戲和應用服務之後，它們將透過手機傳送給您。大多數的應用服務都附有操作指示。有些應用服務及遊戲已預先安裝在您手機上。此外，您也可在下列網站找到其它的遊戲和應用服務：

www.siemens.com/fundownloads 和
wap.siemens.com

其它資訊

WAP 可用來下載網際網路上的應用程式（如鈴聲、遊戲、圖像、動畫等）。

西門子拒絕承擔所有與顧客後續安裝的任何應用服務及任何不包含在原裝產品配套內的軟體相關或有關聯之保固及義務要求。對於後續在顧客指示下啟動的功能亦然。購買者須自行承擔本設備或應用服務所產生的任何損失、損害及任何缺陷之風險，以及任何由於使用此些應用服務所造成的任何性質之直接或間接性損害風險。由於技術上的因素，此些應用服務及後續啟動的特定功能會在本手機設備被更換／重新供應的情況下喪失，若本手機設備被維修則有可能會喪失。若發生此情形，購買者必須重新下載或安裝應用服務。請確保您的手機附有數位權利管理（DRM），以保護下載的應用服務免受他人未經授權複製使用。因此，您下載的應用服務僅供您的手機使用，不得為製作備份而轉移到其它裝置。西門子不保證或確保或接受任何有關客戶重新下載或啟動應用服務的能力之義務或提供免費協助。我們建議您利用「行動電話管理員」定期為您的 Windows® 個人電腦上的應用服務進行備份。
(www.siemens.com/cl75)。

鈴聲類型

請參考第 45 頁。

鬧鈴

請參考第 45 頁。

附加功能

 →  → 選擇功能。

計算機

此計算機可發揮基本的計算功能，並具備一些更進階的功能（**選項**）。



輸入數字。



在不同功能之間移動瀏覽。



使用功能。

單位換算

您可將不同的度量單位換算至其它的度量單位。

錄音機

錄音機功能可用來錄製聲音和音調當作鈴聲使用。

新增錄音

< 錄製新 >

選擇。顯示幕上會顯示錄音已用的時間及剩餘的時間。

依下列步驟從另一個應用程式啟動：
錄音畫面會出現：



當錄音開始時會發出一個短促的提示音。



切換暫停／錄音。



結束錄音。

此錄音會附有一個時間標記一起儲存在聲音管理資料夾內。用 **選項** 重新命名。

插入

將錄音轉移至應用程式。

播放



選擇您要的錄音。



切換播放／暫停。



按住可倒轉及快轉。

碼表

 →  → 電子碼表

您可記錄並儲存兩個間隔時間。

開始 開始／停止／歸零。

倒數計時

 →  → 倒數計時

一個預設的時間開始倒數。最後 3 秒會以一個嗶音提示。結束時會發出一個特殊的嗶音。

最愛

 →  → 最愛

設定

環境設定



→  → 環境設定

您可將多項設定值儲存在一個手機環境設定檔內，例如讓手機配合不同的環境吵雜程度。

- 本手機提供五組包含預設值的標準環境設定。不過，這些設定值是可以更改的：一般環境、寧靜環境、嘈雜環境、車裝及耳機模式。
- 您可設定兩個私人環境設定（<名字>）。
- 關機無提示這個特殊的環境設定是固定且不可變更的。

環境設定檔

編輯一個預設的環境設定或建立一個新的私人環境設定：



選擇設定檔。

選項

開啓目錄並選擇變更設定。

顯示幕上會出現一個可用功能的清單。

完成功能設定之後，您會返回環境設定目錄，然後您可繼續變更另一個設定。

車裝

若您使用的是西門子原廠車裝，在手機置入手機架之後，環境設定會立即自動啓動。

耳機模式

只有當您使用原廠的西門子耳機時，此環境設定才會自動啓動。

啓動關機無提示

所有鬧鈴提示（重要記事、鬧鐘）會被關閉。此環境設定是無法變更的。

啓動



翻閱至關機無提示。



確認選擇。

選擇

按左軟鍵啓動環境設定。

 
是

按右軟鍵確認手機已切換至關機無提示的模式。

一般模式

下一次當您開機時，之前設定的環境設定將自動重新啓動。

鈴聲



您可配合您的需求設定手機的提示鈴聲。

音量

為不同的通話類型／功能設定不同的音量。

鈴聲及提示音設定

您可為下列項目設定個人化的鈴聲和提示音（依不同的項目而定：開／關／嗶聲）：通話、留言管理、重要記事和工作、鬧鐘、遊戲、開機、關機、開啓手機蓋和關閉手機蓋。

鬧鈴



設定鬧鐘

鬧鈴會在您設定的時間響起，即使手機已關機。您可設定四個鬧鐘時間。



移動至您要設定的鬧鈴。

按選擇開啓目錄選項：啓動、編輯、刪除及全部刪除。

編輯鬧鐘

包括時間、日期、狀態和內容等細節。

主題



將一個全新的使用者介面載入您的手機。按一下按鍵，便可依主題變更多項不同的功能，例如開機／關機動畫、桌布、螢幕保護程式、開機／關機音樂、其它動畫等。

現有的設定值有可能會被覆寫。

主題檔會被壓縮起來，以節省記憶體空間。在下載主題檔或從我的資料夾叫出主題檔時，便會在啟動時自動解壓縮。

啟動新主題



選擇主題。



啟動新主題。



確認。

顯示盤



→  → 顯示盤
→ 選擇功能。

內屏桌布

設定顯示幕的桌布圖案。

標誌

選擇要取代系統業者標誌顯示的圖片。

螢幕保護

螢幕保護程式會在您設定的時間逾時之後在顯示幕上顯示一幅圖片。任何來電及（或）按任何鍵都可結束此功能，除非已啟動安全功能。

注意

數位時鐘的螢幕保護程式會縮短手機的待機時間。

開機動畫

開機時顯示的圖片。

關機動畫

關機時顯示的圖片。

問候語

當您開機時，顯示幕上會顯示問候語而不是動畫。

大字體顯示

您可從兩種顯示幕字體大小之中選擇。

夜光照明

您可選擇夜光照明的時間長度。

鍵盤背光

啓動／關閉鍵盤背景燈光。

隱藏網路名稱

選擇顯示／隱藏網路名稱。

震動



選擇啓動／關閉振動。

接續狀況



紅外線 (IrDA)

本手機具備一個紅外線介面。兩個裝置之間的距離不得超過 30 公分。兩者的紅外線窗口必須儘可能靠近放置。

啓動之後，手機會在可及範圍內探測尋找其它支援紅外線的裝置。

注意

這可縮短待機時間。

GPRS 資訊

(通用分封無線傳輸服務)

GPRS 是一個可加快傳輸行動網路中的資料的全新技術。顯示連線資訊。顯示總數據傳輸量及總連線時間。

CSD 設定

本手機具備 CSD 功能。在您開始傳輸數據之前，必須輸入使用者名稱和密碼等資訊完成您的 CSD 設定。請洽詢您的系統業者以了解詳情。

GPRS 設定

如果您要使用 GPRS 連線設定，必須輸入使用者名稱和密碼等資訊以完成您的 GPRS 設定。請洽詢您的系統業者以了解詳情。


[www.siemens.com/
mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)

按鍵設定

請參考第 53 頁。

通話設定



→  → 通話設定
→ 選擇功能。

隱藏本機號碼



若已啟動此功能，您的電話號碼不會出現在對方的顯示幕上（依系統業者能否支援而定）。

來電等待



若已註冊此服務，可查看是否已設定此功能，並可啟動或關閉此功能。

通話轉接

您可指定將來電轉移至語音信箱或其它號碼的條件。

所有來電轉接（例子）

無人接聽時



選擇無人接聽時。（包括無法收訊時、無人接聽、忙線時這些轉移條件，見接下來的說明）。

選擇

確認並選擇 **設定**，然後輸入轉移來電的電話號碼。

選擇

確認網路設定。

所有話時



所有來電都會被轉移。



此符號會在待機模式下出現在顯示幕第一行。


其它可設定的轉移條件：無人接聽時、無法收訊時、忙線時、狀態檢查及取消所有轉接。

過濾來電



手機只會對號碼已儲存在聯絡人內或指定至某一組的來電發出訊號。其它來電只出現在顯示幕上。

任意鍵應答


您也可以按任意鍵接聽來電（除了  鍵之外）。

分鐘提示

在通話期間，在每一分鐘之後您（而且只有您！）將會聽到一次嗶音，以提醒您已過了多少時間。

手機設定




→  → 手機設定
→ 選擇功能。

語言

設定顯示幕文字的語言。

若已設定「自動」，手機將使用您的開戶系統業者之語言。

若所設定的語言是您不熟悉的，您可按下列按鍵（在待機模式下）將手機重設回系統業者的語言：

*#0000# 

T9 英文輸入

啓動／關閉 T9 輸入法。

按鍵伴音

設定按鍵伴音的音調類型。

服務通告音

設定服務通告音及鬧鈴音調。

自動關機

手機會在每日的預設時間自動關機。

手機 ID

手機序號（IMEI）會顯示在顯示幕上。此資訊可用於客戶服務。

更多 按數次以顯示有關手機的進一步資訊。

回復原廠設定

將手機恢復至預設值（出廠設定值）。這並不會影響 SIM 卡。

時鐘



 
日期和時間

編輯 先輸入日期，然後輸入時間。

設定時區

世界地圖

顯示世界時區。



日期格式

顯示日期的顯示格式。

日 / 月 / 年

年 . 月 . 日

月 / 日 / 年

日 . 月 . 年

年 - 月 - 日

時間格式

選擇 24 小時制或 12 小時制。

顯示時鐘

啓動／關閉時間顯示功能。

自動顯示

啓動後，網路會自動調整時間的設定。

 


安全設定



直接呼叫

您只能撥打一組電話號碼。所需的手機密碼（4 至 8 碼）是由您在建立第一道安全設定時設定及輸入的。



固定撥號

選擇啓動／關閉固定撥號功能。

PIN 碼

相關說明，請參考第 14 頁：

PIN 鍵控制、更改 PIN 碼、更改 PIN2 碼、更改手機密碼

拒用其它 SIM 卡



這可防止您的手機被他人用另一張 SIM 卡操作。

通話限制



網路限制功能會限制您的 SIM 卡使用。

所有撥出通話

禁撥所有電話（除了緊急號碼之外）。

禁撥國際電話 （禁撥國際長途電話）

只能撥打國內電話。

國際漫游時撥打電話 （禁撥國際電話，撥回本國則除外）

禁撥國際電話，但可撥回本國。

所有來電

禁止手機接聽任何來電。

漫游時拒接

在開戶網路以外時無法接聽電話。

狀態檢查

檢查網路限制的狀態。

取消全部設定

清除所有通話限制。

密碼

輸入限制通話的密碼。

網路設定



→ 網路設定

→ 選擇功能。

網路訊息

顯示目前可使用的 GSM 網路。

選擇網路

重新啟動網路搜尋。

自動選網

若已啟動此功能，將以您的「優先網路」順序來登錄下一個網路。

頻段選擇

設定離開開戶網時優先使用的系統業者。

用戶群組



依系統業者能否支援而定，您可利用此服務建立用戶群組。

例如，一些可獲取內部（公司）資訊或享有特別優惠費率的用戶群組。請向您的系統業者洽詢詳情。

配件



車裝

限搭配西門子原廠免持聽筒車裝使用。在手機插入車用手機架之後，車用模式的環境設定會立即自動啟動。

自動接聽

（出廠預設值：關）

通話會在幾秒鐘之後自動被接聽。旁人可以聽到您的談話！

編輯環境設定

選擇此項可設定個人化的環境設定。

耳機模式

限搭配西門子原廠耳機使用。若您使用的是西門子原廠耳機，在插上耳機之後，此環境設定會立即自動啟動。

自動接聽

（出廠預設值：關）

通話會在幾秒鐘之後自動被接聽（若鈴聲已被關閉或設成嗶聲時則除外）。因此，您應該戴著耳機。

若您未注意到來電，有可能會被來電者聽到您的談話。

編輯環境設定

選擇此項可設定個人化的環境設定。

快速鍵

快速鍵

每一個數字鍵 2 至 9 都可被指定一個電話號碼或功能。數字鍵 1 已保留為語音信箱的快速鍵。在您重新定義數字鍵 2-9 之前，請先啟動／關閉重新定義的功能。

應用

選擇一個已儲存的電話號碼，或 啟動一個已儲存的應用程式（例如 網際網路）。

在待機模式下：



按住。

我的最愛



按一下。

我的最愛 按一下。

建立您自己的目錄。清單中現有的 10 筆資料是預設的，不過您可更改這些資料。

變更目錄

您可用選擇清單中的另一筆資料來取代每一筆預設的資料（1-10）。



選擇資料。

變更

開啟功能清單以選擇功能。



從清單中選擇新的資料。



確認。該資料將被儲存。

重設所有

重設所有 選擇。在一個安全性的詢問訊息被確認之後，此預設值就會被重設。

我的資料夾

檔案管理功能可讓您整理您的檔案，此功能的操作方式與個人電腦上的檔案總管相同。在此功能下已針對不同的資料類型建立數個資料夾。



顯示資料夾和檔案的清單。

移動操作



從清單選擇一個檔案／資料夾。



您可在預覽畫面中自由移動游標。



開啓資料夾或利用相關的程式啓動檔案。

選項

進入操作不同的管理功能。

圖片／聲音

當前選擇的資料夾之相關應用程式將被載入。

下載新的



瀏覽器將會啓動，同時顯示下載的網頁。

資料夾	說明
圖片	圖片
影片	影片
動畫	開機／關機動畫
聲音	聲音管理
主題	載入的主題（壓縮檔） 主題組態（未經壓縮）
遊戲	Java 檔案（Java archive） 下載資訊
其它	預設留言 錄音

依系統業者而定，我的資料夾的結構、內容及功能項目多寡可能會有所差異。

客戶服務

我們將為您提供快捷、個人專屬的技術建議！您有多種支援選擇：

我們在網際網路上的線上支援：

[www.siemens.com/
mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)

我們將隨時隨地為您效勞。您將可享受有關我們所有產品的 24 小時支援。您將可在這個網站上找到一個互動式的故障搜尋系統、一個常見問答集、用戶指南、並有最新的軟體更新程式供您下載。

當您聯絡客戶服務中心時，請務必準備好您的發票及手機序號（按 *#06# 可顯示 IMEI 序號）、軟體版本（按 *#06#，然後按 **更多** 可顯示軟體版本）以及您的西門子服務客戶編號（如有）。

在某些國家地區中無法為非透過西門子授權經銷商售賣的產品提供維修與替換服務。

若您需要維修服務，請和我們的服務中心聯絡：

阿布達比	0 26 42 38 00
阿根廷	0 80 08 88 98 78
澳洲	13 00 66 53 66
奧地利	05 17 07 50 04
巴林	40 42 34
孟加拉	0 17 52 74 47
比利時	0 78 15 22 21
玻利維亞	0 21 21 41 14
波斯尼亞	0 33 27 66 49
汶萊	02 43 08 01
保加利亞	02 73 94 88
柬埔寨	12 80 05 00
加拿大	1 88 87 77 02 11
智利	8 00 53 06 62
中國大陸	021 2301 7188
哥倫比亞	01 80 07 00 66 24
克羅埃西亞共和國	0 16 10 53 81
捷克共和國	2 33 03 27 27

丹麥	35 25 86 00
杜拜	0 43 96 64 33
厄瓜多爾	18 00 10 10 00
埃及	0 23 33 41 11
愛沙尼亞	6 30 47 97
芬蘭	09 22 94 37 00
法國	01 56 38 42 00
德國	0 18 05 33 32 26
希臘	80 11 11 11 16
香港	28 61 11 18
匈牙利	06 14 71 24 44
冰島	5 11 30 00
印度	22 24 98 70 00 Extn: 70 40
印尼	0 21 46 82 60 81
愛爾蘭	18 50 77 72 77
意大利	02 24 36 44 00
象牙海岸	05 02 02 59
約旦	0 64 39 86 42
肯雅	2 72 37 17
科威特	2 45 41 78
拉脫維亞	7 50 11 18
黎巴嫩	01 44 30 43
利比亞	02 13 50 28 82
立陶宛	8 70 07 07 00
盧森堡	43 84 33 99
馬其頓	02 13 14 84
馬來西亞	+ 6 03 77 12 43 04
馬爾他	+ 35 32 14 94 06 32
模里西斯	2 11 62 13
墨西哥	01 80 07 11 00 03
摩洛哥	22 66 92 09
荷蘭	0 90 03 33 31 00
紐西蘭	08 00 27 43 63
奈及利亞	0 14 50 05 00
挪威	22 70 84 00
阿曼	79 10 12
巴基斯坦	02 15 66 22 00
巴拉圭	8 00 10 20 04
秘魯	0 80 05 24 00
菲律賓	0 27 57 11 18
波蘭	08 01 30 00 30
葡萄牙	8 08 20 15 21
卡塔爾	04 32 20 10
羅馬尼亞	02 12 09 99 66
俄國	8 80 02 00 10 10

沙烏地阿拉伯	0 22 26 00 43
塞爾維亞	01 13 07 00 80
新加坡	62 27 11 18
斯洛伐克共和國	02 59 68 22 66
斯洛維尼亞共和國	0 14 74 63 36
南非	08 60 10 11 57
西班牙	9 02 11 50 61
瑞典	0 87 50 99 11
瑞士	08 48 21 20 00
台灣	02 23 96 10 06
泰國	0 27 22 11 18
突尼西亞	71 86 19 02
土耳其	0 21 64 59 98 98
烏克蘭	8 80 05 01 00 00
阿拉伯聯合大公國	0 43 66 03 86
英國	0 87 05 33 44 11
美國	1 88 87 77 02 11
委內瑞拉	0 80 01 00 56 66
越南	84 89 20 24 64
辛巴威	04 36 94 24

手機保養

您的手機是遵循最高標準而設計與研製的產物，因此應小心照料保養。以下建議將有助您持續享用您的手機長達多年。

- 請避免讓手機受潮！降雨、濕氣及含有礦物質的液體將有可能腐蝕電子迴路。若您的手機仍然被弄濕了，請立即切斷電源並取出電池，然後將開啓的手機置於室溫下自然變乾！
- 請勿在充滿灰塵、骯髒的地方使用或存放手機。其活動零件將會被損壞。
- 勿讓手機曝露在烈光直射的地方。高溫會縮短電子設備的壽命、損壞電池及扭曲或融化某些塑膠零件。
- 勿將手機存放在極低溫的地方。當手機溫度漸漸回升（至一般環境溫度）時，機身內部可能會形成濕氣而損壞電路板。
- 請勿掉落、撞擊或搖動您的手機。粗略的操作方式可能會損壞內部電路板！
- 請勿使用性質強烈的化學品、溶劑或清潔劑來清潔手機！

以上提供的建議皆可適用於您的手機、電池、充電器及所有配件。如有任何一個零件無法正常操作，請帶到您附近的合格服務處。那裡的服務人員將會協助您，如有必要，他們將會維修您的設備。

電池品質聲明

您的行動電話的電池容量在您每一次充電／放電時都會稍微減低。在過高或過低的溫度下存放電池也會導致容量逐漸遞減。這最終將有可能大幅縮短行動電話的操作時間，即使將電池重新充滿也會如此。

不過，本電池的設計可讓您在購買行動電話之後重新充電及使用長達6個月。在6個月後，如果電池效能明顯下降，我們建議您更換這顆電池。請堅持購買西門子原廠電池。

顯示幕品質聲明

基於技術因素，有極少數的手機顯示幕上可能會出現幾個顏色不同的小點。

請記住，出現較亮或較暗的小點一般並不表示已出現瑕疵。

產品規格

符合法規聲明

Siemens Information and Communication Mobile 謹在此聲明本用戶手冊中所述之手機符合歐洲 1999/5/EC (R&TTE) 法規的必要條件及其它相關規定。相關的符合法規聲明 (DoC) 已簽署。如您需要一份原版的聲明，請撥打本公司服務熱線或上網取閱：

www.siemens.com/mobilephonescustomercare

CE 0168

使用者須知的其它資訊

經由第三方的統一標準測試已證實本產品可達到 R&TTE 法規的要求。

因此，Quanta Computer Inc. 謹在此聲明此 Siemens CL75 手機符合 1999/5/EC 法規的必要條件及其它相關規定。

技術規格

GSM 等級： 4 (2 瓦)
 頻率範圍： 880... 960 MHz
 GSM 等級： 1 (1 瓦)
 頻率範圍： 1,710... 1,880 MHz
 GSM 等級： 1 (1 瓦)
 頻率範圍： 1,850... 1,990 MHz
 重量： 90 克
 大小： 87 x 44 x 23 mm
 (74 ccm)

鋰電池： 750 mAh
 操作溫度： -10 °C +55 °C
 充電溫度： +5 °C 至 45 °C
 SIM 卡： 3.0 V
 照相機： VGA，包含 4 倍變焦、錄影功能
 錄影： 錄影、播放、封包影片、3GPP；H.263、MPEG4
 聲音： AAC、AMR-NB、SMAF、SP-Midi、WAV ADPCM、40和絃鈴聲 (MA3)

手機序號

若您遺失了手機或 SIM 卡，您將需要以下資料：

SIM 卡的序號 (在卡上)：

.....

15 碼的手機序號
(在電池下)：

.....

系統業者的客戶
服務號碼：

.....

手機遺失

若您的手機或 SIM 卡遺失，請立即通知系統業者以
防止被盜用。

操作時間

操作時間長短須端視個別的操作狀況而定 “

手機若曝露在極高或極低的溫度下，待機時間會大幅縮短。

請避免將手機直接曝曬在陽光下或放在散熱器上。

通話時間：180 分鐘

待機時間：220 個小時（至少）

執 行 的 作 業	時 間 (分 鐘)	減少的待機時間
打電話	1	30-90 分鐘
夜光照明 *	1	40 分鐘
搜尋網路	1	5-10 分鐘
* 按鍵輸入、遊戲、商務助理等等。		

SAR- 國際 (ICNIRP)

無線電頻率外洩／特定吸收率 (SAR) 的相關資訊

本行動電話遵循針對保障大眾健康免受電磁場外洩影響的限制規定

您的行動電話是一種無線電發射器和接收器。其設計與製造以不超出國際非游離輻射防護委員會 (ICNIRP) 所建議的無線電頻率 (RF) 外洩限制為考量。這些限制為眾多法律規範之一部份，主要目的是為了保障大眾安全並建立大眾對 RF 能量的許可級數。而這些規範是由獨立的科學機構經過定期而全面的科學研究評估後發展而成*。這項規定包含了足以保障所有人 -- 不論年齡與健康狀況 -- 的安全限度。

行動電話之電波外洩標準使用的計量單位是特定吸收率，或稱 SAR。國際規定中所載明的 SAR 限定為 2.0 瓦特／千克**。SAR 測試是以標準操作位置、當電話在所有測試頻寬中以鑒定之最高功率發射時進行的。電話運作時的實際 SAR 值其實遠低於最大值。這是因為電話的設計是以多種功率操作，如此一來只須使用所需的功率到達網路即可成功連線。一般而言，您靠基地台天線愈近，電話的輸出功率愈低。

本款手機在耳側所測得的最高 SAR 值為

0.66 瓦特／公斤***。

您也可在以下網站找到 SAR 的相關資訊：

www.siemens.com/mobilephones

雖然以不同姿勢操作不同手機的 SAR 值可能會有所不同，但是全部皆符合國際上對無線電波外洩的規定。

* 世界衛生組織 (WHO, CH-1211 Geneva 27, 瑞士) 聲明目前的科學資訊並未顯示出使用行動電話時需要任何特殊的預防措施。

進一步的資訊：

www.who.int/peh-emf,

www.mmfa.org,

www.siemens.com/mobilephones

** 取 10 公克的人體組織之平均值。

***SAR 值會依各國規定及頻寬而異。有關各個不同地區的資料，請瀏覽：

www.siemens.com/mobilephone

授權協議

本授權協議（簡稱“協議”）是您與 Siemens Aktiengesellschaft（簡稱“西門子”）之間的協議。本協議授權您使用下述第1條內指明的授權軟體，此軟體可以是依照下述條款與細則的規定內附在您的手機上、儲存在光碟片上、透過電子郵件或網路方式傳送給您、從西門子網頁或伺服器下載或來自其它來源的軟體。

在使用您的手機之前，請仔細詳讀本協議。一經使用您的手機或安裝、複製及／或使用授權軟體，即表示您確認您已閱讀並了解本“協議”，並同意接受下述所有條款與細則之約束。您也進一步同意，如果西門子或任何西門子的授權者（簡稱“授權者”）需要參與任何法律或其它的訴訟以執行他們在本協議下的權利，西門子及／或其授權者將有權向您收取合理的律師費、訴訟費用與支出，以及其它任何應付的款項。如果您不同意本協議的所有條款與細則，請勿安裝或使用授權軟體。本協議的支配範圍涵蓋授權軟體的任何更新內容、更新版、修訂版或增補內容。

1. 授權軟體。在本協議下，「授權軟體」此詞在廣義上代表：您手機內的所有軟體、磁片、光碟、電子郵件及其附件檔案上的所有內容、或用於提供本協議的其它媒體，並包括任何相關的西門子或其它廠商軟體，以及任何透過網路傳佈、從西門子網頁或伺服器下載或來自其它來源的授權軟體升級版、修訂版、更新版、增訂版及副本。

2. 著作權。授權軟體及所有相關的權利，包括但不限於其中的私有權利，均由西門子、其授權者或附屬機構持有，並受國際協約條款及所有適用的國家法令所保護。本協議不授予您或容許您取得授權軟體的任何權益或

所有權或其中的權利。授權軟體的結構、系統、資料及程式碼是西門子、其授權者或附屬機構的有價營業秘密及機密資訊。對於您在獲許可下利用授權軟體製作的任何副本，您必須複製著作權聲明並附在該副本中。

3. 授權及使用。西門子授予您一項非獨有、不得傳讓的最終用戶權利，以將授權軟體安裝至手機上或使用已安裝在手機上的授權軟體。授權軟體與手機是以一個單一整合產品獲得授權，因此只能依照此授權條款載明的內容搭配手機一起使用。

4. 授權之限制。您不得將授權軟體複製、散佈或製作衍生著作，除了以下情況之外：

(a) 您可製作一份授權軟體的副本作為原版軟體的備用檔案，不包括使用說明書在內。除此之外製作的任何授權軟體副本，均違反本協議的規定。

(b) 除非在本協議中有明文許可，否則除了搭配附隨硬體使用或複製授權軟體之外，您不得以其它方式使用、變更或轉讓授權軟體的使用權。

(c) 您不得再授權、出租或租賃授權軟體。

(d) 您不得就授權軟體程式進行逆向工程、反編譯、變更或反彙編，除非適用的法律明文規定儘管有此限制仍可准許該些活動，則不在此限。

授權軟體的某些部份可能由其它協力廠商提供，因此可能須受限於其它額外的授權條款。該條款將載明於使用說明書內。

5. 西門子嚴禁濫用授權軟體或授權軟體所產生的資料，此濫用行為可能違反德國、美國及其它法令而使您須承擔重大的責任。對於本協議下表述的任何授權軟體濫用行為以及與您

以違反本協議的方式使用授權軟體所產生的任何相關責任或損害情形，您須擔負全部責任。您也必須自行確保依照本協議的限制規定來使用授權軟體。

6. 協議終止。本協議從您第一次安裝、複製或以其它方式使用授權軟體的日期開始生效。您可隨時藉由刪除或銷毀授權軟體、所有備份及西門子提供予您的所有相關材料來終止此使用授權。如您未能遵循本協議的任何條款，您的使用權利將自動且立即在不告知您的情況下終止。本協議的第2、5、6、7、9、12和12項之下所述權利及義務在本協議終止後仍保持效力。

7. 您同意授權軟體是以「現狀」提供，且西門子或任何其授權者均未作任何明確或默示的表述或保證，包括但不限於保證其可銷售性或針對特定用途的適用性，或保證授權軟體不侵害任何第三者的專利權、著作權、商標或其它權利。西門子或其授權者或其它任何一方均不保證授權軟體所含功能可滿足您的要求，或授權軟體可不受干擾或無錯誤地運作，同時西門子及其授權者謹此拒絕承認任何及所有由此產生的責任義務。西門子代表所提出的任何口頭上或書面的資訊或建議，都不能構成保證或在任何方面影響此免責聲明。您會自行負責達到您的預定結果以及為此應進行的安裝、使用、並對獲得的結果負責。

8. 無其它義務。除了本協議中明確載明的責任義務之外，本協議未對西門子這一方施予其它任何責任義務。

9. 責任限制。西門子、其員工、授權者、附屬機構或代理商在任何情況下皆不負責任何直接損害、利潤、資料或營業損失、或取得替代產品或服務的成本、資產損失、業務中斷，或任何特殊、間接、意外、示範性、經濟、

懲戒性或必然性的損害，不論其起因為何及是否基於契約、侵權、疏失或其它責任理論，或由於使用或不當使用授權軟體而產生的損害，即使西門子已被告知此類損失可能發生。如果西門子的責任在適用法令下是強制執行的，則此責任限制條款將不適用，例如根據產品責任法的規定、或發生蓄意錯誤處置或個人傷亡的情況時。

10. 技術支援。西門子及其授權者無責任向您提供技術性支援，除非您與西門子或適用的授權者之間另有書面協議。

西門子及授權軟體的授權者（適用時）應可將從您那裡獲取的任何針對授權軟體之取得及使用的意見回饋自由使用於任何用途上，包括（但不限於）產品和服務的生產、行銷和維護或支援。

 
11. 出口管制。授權軟體可能包含技術性資料及加密軟體，並且須接受德國、歐盟及美國出口管制措施，還可能必須接受其它國家的進口或出口管制。您同意會嚴格遵循所有現行進口及出口法令和規範。特別是，您同意依照美國出口管理條約之規定限度，不會將依本協議提供的授權軟體或其任何部分出口或轉口到(a)古巴、伊朗、伊拉克、利比亞、北韓、蘇丹、敘利亞或其它任何美國已限制或禁止出口商品或服務的國家（包括這些國家的國民或居民）。

12. 適用的法令及論壇。本協議由德國法律管轄。不適用其它任何的司法權法規定。任何與本協議相關或源自本協議的糾紛將由慕尼黑的法院裁處，前提是您必須是一名商家。

13. 其它。本協議代表您與西門子之間就授權軟體相關事宜的全部協議，並(i)取代雙方先前或同時間針對其相關事宜所為之一切口頭上或書面上的溝通、提案和表述；同時(ii)優於雙方在

本授權期間所為的任何認可或類似溝通之抵觸性或額外的約定。在前述條款之外，部份的西門子產品尚須您透過一個線上「按鍵約束」授權同意其它額外的條款，而這些條款將可補足本協議。本協議的任何條款如經認定為無效，所有其它條款仍保持效力，除非該有效性會妨礙本協議的功用，並且本協議將在適用法令可容許的最大限度下執行其法律效力。本協議的任何修訂除非經雙方正式授權的代表書面修訂並已簽署，否則不具法律約束力。本協議的約束力將延伸至協議雙方的繼承人、繼任者及受讓人並繼續維持其權益。任何一方若無法履行因另一方侵犯本協議任何條款而引致的任何權利，將不得視為放棄後續因該條款或依本協議之任何其它權利的侵權行為所應履行的相關權利。對於任何與本協議抵觸的情形，西門子及／或其授權者將依各國法令履行其權利，包括但不限於著作權、商標或商業名稱的權利。

目錄圖

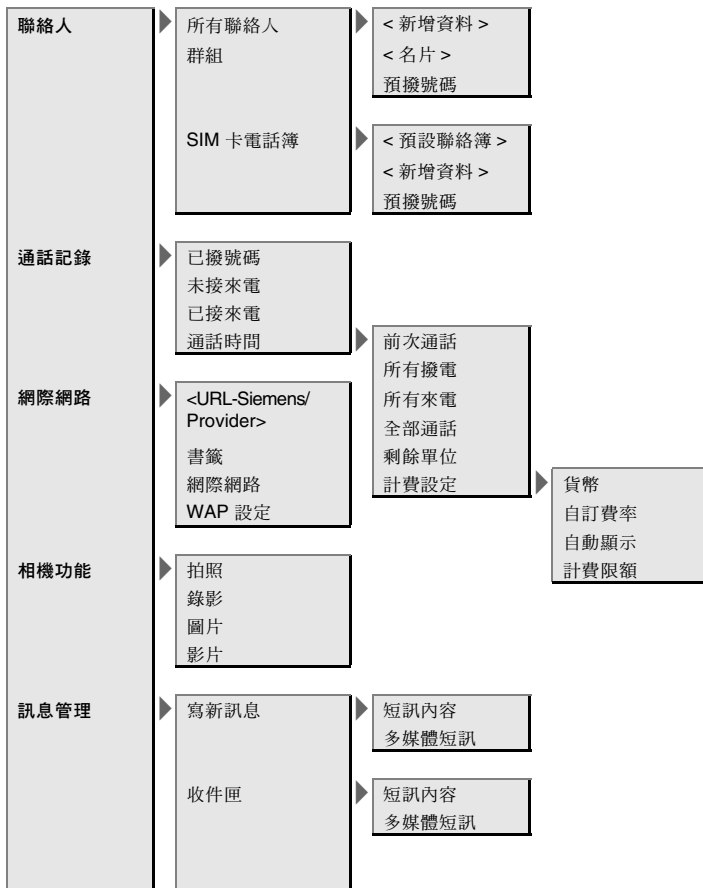

留言管理

草稿

短訊內容
多媒體短訊

未傳送

多媒體短訊

寄件備份
MMS 範本
訊息範本
短訊文件夾
訊息設定短訊內容
多媒體短訊

商務助理

日曆
重要記事
工作
記事
未接記事
錄音器
世界時鐘

短訊內容

訊息設定
簽名多媒體短訊
語音信箱
廣播訊息連線設定檔
用戶設定
使用提示

遊戲場

鈴聲類型

音量
來電
訊息管理
重要記事及工作
鬧鈴
遊戲
開機音樂
關機音樂
開蓋
關蓋

鬧鈴

▶ 啓動
編輯
刪除
全部刪除

附加功能

▶ SIM 卡服務
計算機
單位換算
錄音機
碼表
倒數計時
最愛

我的資料夾

設定

▶ 環境設定
鈴聲類型

▶ 音量
來電
訊息管理
重要記事及工作
鬧鈴
遊戲
開機音樂
關機音樂
掀蓋
關蓋

▶ 來電
重要記事及工作
鬧鈴
訊息管理
廣播訊息
開機音樂
關機音樂
家人
朋友
公司
VIP
娛樂
私人
商務
已接
忽略

設定

主題

顯示盤

內屏桌布

標誌

螢幕保護

開機動畫

關機動畫

問候語

大字體顯示

夜光照明

鍵盤背光

隱藏網路名稱

震動器

連接功能

IrDA

GPRS 資訊

CSD 設定

GPRS 設定

按鍵設定

左軟鍵

右軟鍵

方向鍵

快速撥號

通話設定

隱藏本機號碼

來電等待

通話轉接

來電提示

任何鍵應答

每分鐘警報音

來電轉接

無人接聽時

無人收訊時

無人接聽

忙線時

取消所有轉接

手機設定

語言

T9 英文輸入

按鍵伴音

設定

手機設定

服務通告音
自動關機
檔案系統
手機 ID
回復原廠設定

時鐘

日期時間
設定時區
日期格式
設定時間格式
顯示時鐘
自動顯示

安全設定

直接呼叫
固定撥號
PIN 碼

 
更改手機密碼
PIN 碼控制
更改 PIN 碼
更改 PIN2 碼

拒用其它 SIM 卡
通話限制

所有撥出通話
禁撥國際電話
國際漫游時撥打
所有來電
漫游時拒接
狀態檢查
取消全部設定
密碼

網路設定

網路訊息
選擇網路
自動選網
頻段選擇

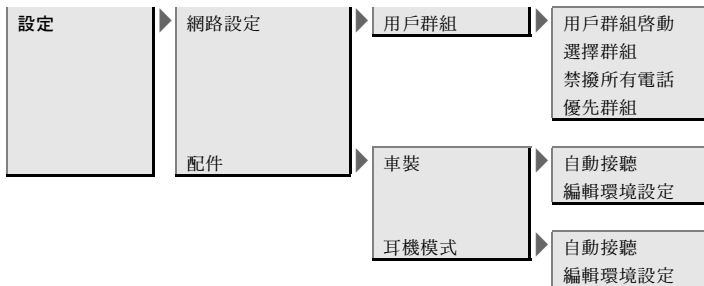

索引

D

DRM	11
DTMF 音 (音頻)	20

G

GPRS	48
------------	----

I

IMEI 序號	50
---------------	----

P

PIN

控制	14
----------	----

PIN 碼

輸入	9
變更	14

PIN2 碼	14
--------------	----

PUK, PUK2	14
-----------------	----

S

SIM 卡

插入	7
解鎖	15

SOS	9
-----------	---

T

T9

文字建議	17
文字輸入	16

三畫

上網娛樂	27
大字體顯示	47
工作	40

四畫

切換	20
手機序號 (IMEI)	50
手機保養	58
手機密碼	15

手機遺失, SIM 卡	59
-------------------	----

日期格式	51
------------	----

日曆	40
----------	----

五畫

打電話	19
-----------	----

本機號碼	24
------------	----

未接來電 (通話記錄)	25
---------------------	----

未應接轉移	49
-------------	----

用戶群組	53
------------	----

目錄

快速鍵	12
-----------	----

我的最愛	54
------------	----

控制	12
----------	----

目錄圖	65
-----------	----

六畫

任何鍵應答	49
-------------	----

名片	21
----------	----

回復出廠設定	50
--------------	----

多媒體簡訊

接收	36
----------	----

傳送	35
----------	----

編寫	34
----------	----

安全注意事項	2
--------------	---

安全設定	14, 51
------------	--------

收件匣	31
-----------	----

收訊強度	11
------------	----

耳機 (設定)	45, 53
-----------------	--------

自動選網	52
------------	----

自動顯示

時鐘	51
----------	----

話時 / 話費	25
---------------	----

七畫

免持聽筒通話	19, 53
--------------	--------

我的資料夾	55
-------------	----

技術規格	59
------------	----

每分鐘警報音	49
--------------	----

系統業者標誌	47
車用（設定）	45
防止意外啓動手機	15

八畫

來電記錄（通話記錄）	25
來電等待	49
所有來電轉移（來電轉移）	49
所有來電（限制）	52
拒用其它 SIM 卡	51
服務通告音	50
服務熱線	56
附加功能	43

九畫

保養訣竅	58
待機時間	8
待機圖案	47
待機模式	11
按鍵伴音	50
為電池充電	8
突出顯示模式	13
紅外線（IrDA）	48
計費限額	26
計算機	43
重要記事	40
重撥	19
音量	
手機音量	19
鈴聲	46
環境設定	45

十畫

倒數計時	44
時區	10, 51
時鐘	51
書籤	28
桌布設定（顯示盤）	47
特殊字元	16
記事	41

訊息

多媒體簡訊	34
清單	31
短訊	32

十一畫

商務助理	40
密碼設定	14
控制碼（DTMF）	20
符號	6
設定	45
設定時間／日期	51
通訊錄	21
通話	

切換（轉換）	20
拒接	19
限制	52
接聽／結束	19
結束	19
電話會議	20
轉移	49
通話記錄	25
通話轉移	49

十二畫

單位換算	43
短訊	

設定	33
短訊目錄	32
群組短訊	33
編寫	32
閱讀短訊	33
短訊（SMS）	32
開機	10
開機動畫	47
開／關話筒	19

十三畫

照相機	29
群組	22
號碼保密	49

解鎖	15
話時／話費	25
資訊服務 (CB)	39
遊戲及應用服務	42
鈴聲	46
電子碼表	44
電池	
充電	8
插入	7
電池品質聲明	58
操作時間	8, 60
電話會議	20
電話簿	
SIM 卡保護區	23
新增資料	23
撥打一筆資料	23
預設留言	18
十四畫	
圖片與聲音 (短訊)	32
緊急號碼	9
網內廣播 (CB)	39
網路	
自動選網	52
限制	52
線路	48
選擇網路	52
網際網路	27
語言選擇	50
語音備忘	41
十五畫	
撥出記錄 (通話記錄)	25
撥號碼	19
標準功能	13
鬧鐘	46

十六畫

操作時間 (電池)	8, 60
螢幕保護程式	47
錄音機	43
頻率範圍	59

十七畫

優先網路	52
環境設定 (手機)	45

十八畫

轉移	49
----------	----

十九畫

關機	
手動方式	9
自動	50
關機動畫	47

二十三畫

顯示盤	
夜光照明	48
符號	6
語言選擇	50

Safety precautions	2	Voice mailbox/CB	39
Phone overview	4	Organiser	40
Display symbols	6	Games & App	42
Getting started	7	Ringtones	42
General instructions	11	Alarm clock	42
Standard functions	13	Extras	43
Security	14	Settings	45
Text entry	16	Fast dial	54
Calling	19	My Stuff	55
Contacts	21	Customer Care	56
SIM contacts	23	Care and maintenance	58
Records	25	Product data	59
Internet	27	SAR – International (ICNIRP)	61
Camera	29	License agreement	62
Messages	31	Menu tree	65
SMS	32	Index	71
MMS	34		

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The ringtones (page 46), info tones (page 50) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (page 19). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Please turn off your phone in open spaces in storms.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

Phone overview

① Loudspeaker

② Main display

Display time, date, service provider, available functions, and symbols of battery and reception.

③ Right/Left soft key

Select functions available on the bottom line of the display.

④ On/Off/End key

- Switched on/off: press and **hold** to switch the phone on/off.
- During a conversation or in an application: press **briefly** to go back a level. Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off the phone.

⑤ Navi key

Press down the navi key to start an application or function.

In standby mode:

- Open main menu.
- Open Shortcut.
- Open Contacts.

In lists, messages and menus:

- Scroll up and down.

 
During a call:

- Set volume.
- Open menu.

⑥ Additional key for WAP access

(if required, and no other default setting is made.)

⑦ Number keys

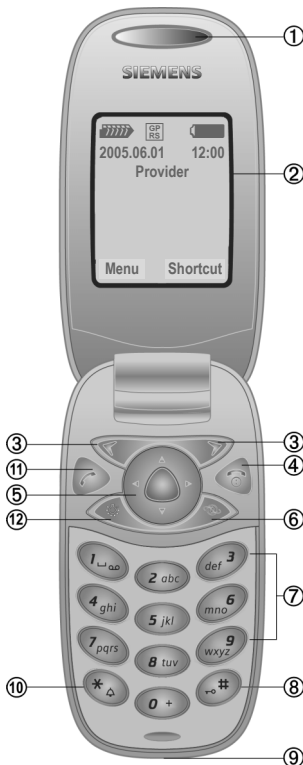

⑧ Key lock

Press and **hold** in standby mode: switch key lock on/off.

⑨ Connection socket

For charger, headset, flash, etc.

⑩ Ringtone

- Press and **hold** in standby mode: switch ringtones on/off (except alarm).
- Press and **hold** on incoming call: switch off ringtone for this call only.

⑪ Call key

 
Dial phone number/name displayed/highlighted, take calls. Show last phone numbers dialled in standby mode.

⑫ Display key

Press to switch the display on/off and to use it as a mirror.

Note

The keypad is still active when the display is turned off.

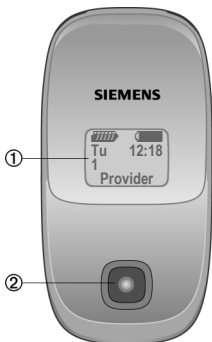**① Second display**




Displays time, date, service provider, and battery and reception icons.

② Camera lens**③ Loudspeaker****④ Battery bay****⑤ Volume keys**

Navigate up/down

⑥ Infrared Interface (IrDA)**⑦ Camera button**

Press to take a self-portrait picture (see page 29) via the mini display.

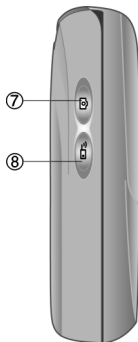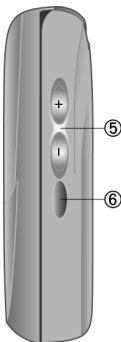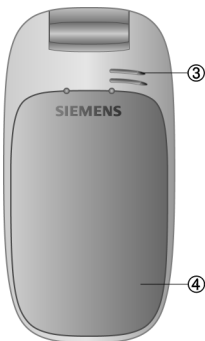   ⑧ Handsfree mode

Display symbols

Display symbols (selection)



Signal strength



Battery charge level, e.g. 50%



Contacts



Records



Internet



Camera



Messages



Organiser



Ringtones



Alarm clock



Extras



My Stuff



Settings



Games



All calls are diverted



Ringer off



Short ring (beep) only



Ringtone only if the caller is stored in the Contacts.



Alarm set



Auto answer features on



Activated and available



Keypad locked

Message symbols (selection)



Unread



Read



Sent



MMS received



MMS with DRM contents

Getting started

 
Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

Additional Information


Please switch your phone off before removing the battery!

Only 3 V SIM cards are supported. Please contact your service provider if you have an older SIM card.

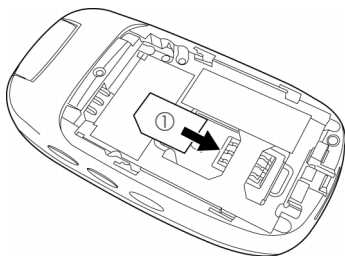


Note the SIM card direction ①.

 - Insert the SIM card into the slot with the contact surface facing **downwards** (ensure that the chamfered corner is in the correct position).
- Reinsert the battery into the phone ②, then press it downwards until it engages ③.

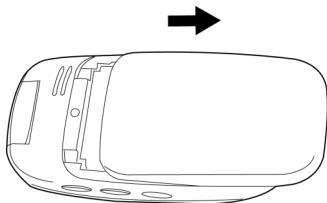


 - Slide backwards to open the battery compartment cover. Push the battery towards the hinge and lift it up.

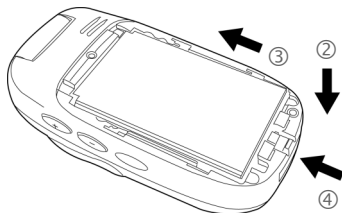

- To fit a lanyard: thread the attachment loop over the hook below the battery ④. Close the battery cover to secure the lanyard (see page 8).

 
- Place the cover in position and push it towards the front until it latches into place.

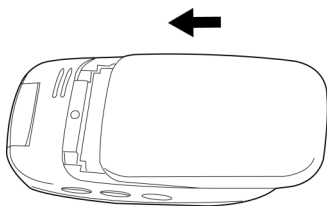

Charging the battery

Charging the battery

 The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **three hours**.

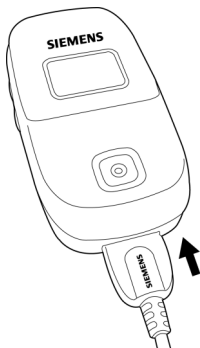

Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5°C to 45°C. If the temperature rises/falls 5°C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends on the respective conditions of use. Extreme temperatures reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 180 minutes

Standby time: 220 hours minimum

Charge symbol not visible

If the battery is fully discharged, the charge symbol is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply included in delivery!

Display while in service

Charge level display during operation (empty – full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle.

Do not remove the battery until the phone has finished charging.

Additional information

The power supply unit heats up when used for a long time. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock will be reset.

Switching phone on/off



Press and **hold** the On/Off/End key to switch on the phone.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct with **Clear**.

OK

Confirm. Logging on to the network will take a few seconds.

Additional information

Change PINpage 14

Clearing SIM card barring.....page 15

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the **SOS** soft key you can make an emergency call on any network without a SIM card and **without** entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

When using the phone for the first time, set the clock so that it displays the correct time. You will not have to make this setting again.

Edit

Press this key to start setting the date and/or time.

Change

Press to select the date from a calendar.



First enter the date (day/month/year), then the time (24 hours, including seconds).

Save

Press this key to confirm the setting.

Time zone



Select the time zone.

Options

Select the desired time zone. Or choose to turn **Auto time** on/off.

Copying SIM addresses

The first time you insert your SIM card, the entries on it can be copied to your phone memory. Please **do not interrupt this procedure**. During this time, do **not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (please see page 24).

General instructions

Standby mode

When the phone displays the name of your service provider, it is in **standby mode** and **ready for use**.



Press to return to standby mode from any situation.

Signal strength



Strong signal received.



Weak signal. The signal quality for making and receiving a call is poor. This may lead to loss of connection.

Digital Rights Mgmt. (DRM)

Remember that your phone has digital rights management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc.

Main menu

The main menu is displayed graphically with symbols:



Call up the main menu from standby mode.



Select the application symbols.



Start an application.

Main menu options



Open menu.

Different functions are available depending on the context:

Big letters

Select between two font sizes.


User guide



Menu controls

In this manual, all the steps are shown graphically and simply as follows:



This comprises the following steps:


 Open main menu.

 or  Navigate up/down or right/left to the desired item.

Select Confirm your choice (by pressing the left or right soft keys).

Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from standby mode by entering a number:

 Press this key to display the main menu.

 Press this key for Messages.

Symbols

The following symbols are used to explain operation:



Enter numbers/letters



On/Off/End key



Call key



Right/left soft keys



Displays a soft key function.



Press down on the navi key, e.g., to call up the menu or to confirm a setting.



Press the navi key in the direction indicated.



Function dependent on service provider, special registration may be required.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options Open menu.

Edit	Open the entry to edit.
View	View entry details.
Delete/ Delete all	Delete one/all entries after confirmation.
New entry	Create a new entry.
Send	Select transmission service and medium for sending.
Reply	The sender becomes the recipient.
Save	Store entry.
Save to:	Save recipients in the current Contacts.
Text input (page 16)	<p>T9 preferred: Activate/deactivate T9 input.</p> <p>T9 input Automatically display choices of characters typically used in pairs.</p> <p>T9 Chinese You may set maximum 2 Chinese in put methods to be used for entering messages.</p>

Capacity Display memory capacity.

Help Display instructions.

Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

Options Open menu.

Mark Activate mode.

Mark Highlight a non-highlighted entry.

Unmark Remove the highlighting from a highlighted entry.

Additional highlighting functions:

Mark All Highlight all entries.

Security

This section explains how to protect your phone against unauthorised use.

Keep these confidential numbers in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



- → **Security**
- **PIN codes**
- **Select function.**

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Go to the PIN Control.

Change

Select to change PIN Control.



Enter PIN.

Change

Confirm input.

OK

Press to store the entry.

Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Enter **current** PIN.



Confirm.



Enter **new** PIN.



Enter **new** PIN again.



-  → Security
- PIN codes
- Select function.

Change PIN2

(Display only if PIN2 is available).

Proceed as with **Change PIN**.

Changing the phone code

You define the phone code (4-8 digits) when you call up a phone-code protected function for the first time (see page 14). It is then valid for all phone-code protected functions.

If you fail to enter the correct PIN number for the third time, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service Center (page 56).

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions.

If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated, confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold** the key.



Press **OK** to switch on the phone.



Press **Cancel** or take no action. The phone does not switch on.

Lock or unlock the keypad in standby mode. In each case:



Press and **hold**.

Text entry

Text entry without T9

Press the number key repeatedly until the required letter appears.

Example:



Press once **briefly** to enter the letter **a**, twice to enter **b** etc.



Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor (forward/back).



Press **briefly**: swap between **abc**, **Abc**, **ABC**, **T9abc**, **T9Abc**, **T9ABC**, **123**, **Pinyin**.

Press and **hold**: all input variants are displayed.



Press **briefly**: special characters are shown.

Press and **hold**: open edit menu.



Press **once/repeatedly**:

., ? ! ' " 0 + - () @ / : _

Press and **hold**: enters 0.



Enters a space.

Press **twice** = line break.

Special characters



Press **briefly**.

	↩	¿	¡	—	;	.	,
?	!	+	-	*	'	:	“
/	()	□	¥	\$	£	€
@	\	&	#	[]	{	}
%	~	<	=	>		^	§
Г	Δ	Θ	Λ	≡	Π	Σ	Φ
Ψ	Ω						



Space



Navigate to the desired characters.



Select the character/Clear the character.

Options Menu

Send, Save, Format, Picture & sound, Insert, Clear text, Send With.....

Text entry with T9

"T9" combines the correct value from the various key inputs.



Activate deactivate text entry mode, e. g. T9.



Navigate to the desired mode such as **T9abc**. Select.

Selecting Input language



T9 preferred

Select.

Change Activate/deactivate T9.

T9 input

Automatically display choices of characters typically used in pairs.

T9 Chinese

 
You may set maximum 2 Chinese input methods to be used for entering messages.

T9 BPMF

T9 PinYin

T9 StrokeS


T9 StrokeT



Writing with T9

It is best if you finish a word without looking at the display.


 
You simply press the keys where the relevant letter is located **once only**.




Do not use special characters such as Å. Instead use the standard characters such as A and T9 will do the rest for you.

T9 word suggestions

  If several options are found in the dictionary for a word, the most probable is displayed first.






To add a new word to the dictionary:


 


Correcting a word

   Words written **with** T9:



Additional information

  

T9® Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;
United Kingdom Pat. No. 2238414B;
Hong Kong Standard Pat. No. HK0940329;
Republic of Singapore Pat. No. 51383;
Euro. Pat. No. 0 842 463 (96927260.8)
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Text Module



→ Text Module

Text modules can be stored in the phone for adding to your messages (SMS, MMS).

Calling



Enter the number (always with area/international dialing code).

Clear

A **short** press clears the last digit; a **long** press clears the entire phone number.



Dial phone number.

Ending a call



Press the End key **briefly**.
Or
Close the clamshell.

Setting the volume



During the call, press up-wards/downwards in order to regulate the volume. Or you may press the volume key on the right side of your phone.

Redialling previous numbers



Press **twice** to redial the phone number **last** called:

Call up the redial list:



Press **once**.



Pick out a phone number.



Press to redial.

Accepting a call

With clamshell open:



Press to receive a call.

With clamshell closed: open phone to answer a call.

Rejecting a call



Press to reject a call.

Additional information

Accept the call before bringing the phone to your ear in order to avoid ear damage caused by the ringing tones.



Store phone number in the Contacts.

Handsfree

Playback via loudspeaker (hands-free calling).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!



Press and **hold** to switch microphone off.

International dialling codes



Press and **hold** until a "+" is displayed.

+List

Select country.

Call options

Options

See functions only available **during** the call.

Swapping between 2 calls



Establishing a second connection

Hold

Hold current call, then dial the new phone number.

Swap

Swap between calls.

Incoming calls during a call

You will hear a "call waiting" tone and you can now:

- **Accept the waiting call in addition to the first**

Swap

Accept the call and put the current call on hold.

- **Reject the waiting call**

Reject

Reject the call.

- **Accept the waiting call and end the current call**



End a call.



Accept a new call.

Ending call(s)



Press the End key.

Conference



You can call up to 5 conference participants one after the other. Once you have established a connection:

Hold

Select to put the current call on hold.



Now dial a new number. When the new connection is established...

Options

...open the menu and select **Conference**. Repeat until all participants are connected.

End



When the End key is pressed, **all** calls in the conference are ended.

Tone sequences (DTMF)

Open Phonebook to select a number to send as a DTMF code.

Options

Open menu and select **Send DTMF**.

Contacts



→ Select function.

You can save phone numbers or information either in the phone's memory or in the SIM card memory. In Contacts all entries are shown, whereas the SIM contacts only list entries saved on the SIM card.

Show entries

The entries in the Contacts are shown.



You may scroll between different categories for contacts: **All contacts**, **Groups**, and **SIM contacts**.



Select a name with the first letter and/or scroll.

New entry

Create a new entry in your phone-book or SIM card memory.



→ **New entry**
→ **SIM or Phone** → Edit

Entry items differ between SIM and phone memory. The SIM memory usually contains items such as Name, Phone, Groups, Location, and Record no. The phone memory contains more entry items: **Name**, **Phone**, **Tel./office**, **Tel./mobile**, **Fax**, **Notes**, **Company**, **Business addr**, **Post code**, **Country**, **City**, **URL**, **Birthday**, **Date**, **Time**, **Groups**, **Caller ID** and **Melodies**.

Business card

Create your own business card to send to a different GSM phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details.

Save

Press to store the entry.

Additional information

The content of the business card meets international standards (vCard). Copy numbers from Contacts.

Predial

The phone allows you to predefine 5 phone numbers so that you can speed up dialling.



→ All contacts/SIM contacts

→ Predial → Edit

Groups

9 groups are specified in your phone, enabling you to arrange your Contacts entries clearly. You can rename 8 groups.



Open **Contacts** (in standby mode).

<Groups> Select (the number of entries is listed after the group name).



Select group.

SIM contacts

Entries (on the SIM card) are managed separately from those in the phone memory. They are arranged according to name, phone, groups, location, and record no.

New entry

If the SIM contacts has been selected as the default book:



Open **Contacts** (in standby mode).



Select **<New entry>**.



Display input fields.



Navigate between and fill in the input fields.

Phone

Always enter phone number with dialling code. An entry cannot be saved without a phone number.

Name

Enter first and/or last names.

Groups

Default **No group**

Important phone numbers may be put into one group (**VIP**).

Location

Default: **SIM**

Special SIM cards can save phone numbers in a protected area (**<Protected SIM>**) (PIN2 required).

Record no.

Is automatically assigned to every entry. The phone number can be dialled with your record number.



Press to store the new entry.

Calling/sorting an entry



Open **Contacts**.



Select a name with the first letter and/or scroll.



Number is dialled.

Editing an entry



Select entry in SIM contacts.



Press.



Select.



Select desired input field.



Make changes.



Store the entry.

SIM contacts

The following functions are available, depending on the current situation.

Options Open menu.

View	See details.
Copy to Phone	Copy the selected entry to the phone.
Move to..	Move the highlighted entry to a desired group.
Delete	Delete the entry
Mark	Mark entry.
Send	Send entry via SMS, MMS or IrDA.
Sort	Sort entries by first or last name.
Capacity	Status of used and free memory.

<Spec. Books>



Open **Contacts** and select **<Spec. Books>**.

<Own numbers>

Enter "own" phone numbers (e.g., fax) for information.

<SIM contacts>

Entries stored in the phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>

On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

Records

Phone numbers are saved to make it easier to redial them.



Select record.



Open call list.



Select phone number.



Dial phone number.

Every record list has a capacity of 50 entries:

Dialled calls

Access to the last numbers dialled.



Fast access in standby mode.

Missed calls

The phone numbers of calls that you have received but not answered are stored for call back purposes.

Received calls

Accepted calls are listed.

Call options

Options

Open the Option menu. Functions may be different depending on the text: **View**, **Extract number**, **Store**, **Delete**, **Delete all**, **Send SMS**, and **Send MMS**.

Other calling information

Other calling information is saved for your reference. Information contains details for call duration and call cost.



Scroll left or right to the call history.

Available information is:

Last call duration, **Total incoming duration**, **Total outgoing duration**, **All calls** and **Remaining units**.



Navigate to the desired item.

Options

Open the following options:

Reset

Delete the item.

Reset all

Delete all items from the list.

Charge setting

Opens menu for the following options:

Currency

Edit your currency.

Personal rate

Enter the currency as well as the charge per unit and time.

Auto display

Call duration and charges are automatically displayed.

Max cost

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

Internet

Get the latest information from the Internet that is specifically adapted to the display options of your phone.

In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (browser settings may be specified/pre-assigned by service provider).

Main menu

<URL-Siemens/Provider>

Open the predefined Siemens URL.

Bookmarks Display bookmarks stored in the phone; save bookmark.

Internet Link to the Internet.

WAP settings

Enter to edit/launch the WAP.

When connecting to the Internet follow the menu options shown in the browser menu.

Ending connection



Press and **hold** to cancel the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status, on/off.



Press briefly to return to the previous page.



- Open the input field/link forward/back.
- Scroll one line.

Entering special characters



Select important special characters.

Your Internet browser is licensed by:



OPENWAVE

©1999-2004



RSA BSAFE Enabled

Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Setting a profile manually

You will receive the necessary data from the service provider or via the "Setting Configurator" at:

**[www.siemens.com/
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)**

Bookmarks



→ **Bookmarks**

URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a start up/shut down animation or a screensaver
- send the photo/video via MMS.

Switching on



Or



Press the camera button on the side of the phone.

Select the mode from the option menu.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness.



Zoom factor.



Flash connected.

Beneath the preview image, you will find a reference to the selected resolution.

Taking a picture

This phone allows you to take a picture with the clamshell open or closed. With the clamshell open, you may take a picture of others via the main display, while the closed clamshell allows you to take a self-portrait via the mini display.

To take a picture with the clamshell open:



Take a picture.



Display the preview image of the next photo.

To take a picture with folded clamshell:



Take a picture.

The picture is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu.

Settings prior to taking a picture:



Sets the brightness.



Sets the zoom factor.

Image resolution

A setting can be made for the quality of the image regardless of the preview image resolution.

Premium:	640 × 480 (VGA)
High:	320 × 240 (QVGA)
Medium:	160 × 120 (QQVGA)

The resolution may decrease depending on the selected digital zoom.

Record Video

The video mode resolution is the same as the preview image resolution.



Start the video recording.



End the video recording.

A red dot appears in the top right of the display while the video recording is being made.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while connected to the phone. This reduces the stand-by time.



This symbol flashes when the flash is being charged. For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Change Mode	Change between viewfinder camera or video.
Setting	<ul style="list-style-type: none"> • File name for recordings • Image resolution & quality
View pictures	Displays list of photos.
Flash	Choose between: Automatic, Off, Red eye.
Shutter Sound	Select to define a sound from the defined list.
Twilight	Select to turn twilight effect on/off.
Portrait	Select to turn portrait effect on/off.
Other videos	Display list of videos.
Help	Follow the instructions to take a picture.
Exit	Exit the menu.

Messages

Inbox

Your inbox is a inbox folder containing all the texts and call records that have been received. The entries are marked with a symbol to indicate their type and status.

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time (**Options**), entries which have already been read and opened are only displayed in the message-related incoming lists.

You will find the following **message types** in the inbox folder: **SMS**, **MMS**

System messages

Message about **MMS**, **Missed alarms**, **Missed appts.**, **Missed calls**, **Dictation machine**.

Message lists

All **SMS**, **MMS** are displayed in four separate lists.



→ **Inbox**

→ Select message type.

List of received messages.



→ **Draft**

→ Select message type.

List of saved drafts.



→ **Unsent**

→ Select message type.

List of messages not yet successfully sent.



→ **Sent**

→ Select message type.

List of sent messages.

Options

Call up the function menu to process the messages.

SMS

You can use your phone to transmit and receive messages (up to 1520/660 characters, depending on entry method) on your phone. They are automatically divided into several "normal" messages (note higher charges). You can also insert pictures and sounds in an SMS.

Writing/sending an SMS



→  → Create new
→ SMS text



Enter text (see also page 13).

Options Text creation functions.



Start sending procedure.



Select phone number from the Contacts or enter it.



The SMS is transmitted to the service centre to be sent.

Special functions

Picture & sound

Send the pictures and tones with or without accompanying text. Remember that these may be protected (DRM, page 11).

With the text input field open:

Options

Open menu.



Select **Picture & sound**. The menu contains: **Fix animations**, **Fix sounds**, **Own animations**, **Own pictures**, **Own sounds**



Select section.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations**/**Fix sounds**:



The selection is displayed/played back.

Select

The selection is added to the SMS.

SMS archive



→  → SMS archive

The list of SMS messages stored in the phone's archive is displayed. They are sorted by Inbox or Outbox.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Send

Select.

Groups

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Sending is started after a security prompt.

Reading an SMS



Arrival of a new SMS announced in the display.

The **Inbox** is opened. It offers you a quick overview of the messages currently received.



To read the SMS, press the navi key.



Scroll through message line by line.



If this symbol flashes, the SIM memory is full. Delete or file messages.

Replying to an SMS

After reading the received message, you may reply right away. The new additional text is placed above the received text.



Reply immediately.

Making SMS settings

SMS signature



→ Message setup
→ SMS text → Signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

Setting a signature



Select **Edit** to personalize your signature.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone.

Depending on your phone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Writing an MMS

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, page 11).

Creating a standard MMS



Create new → MMS

First select an object for processing to be added to the first page of the MMS:

Picture

Select.



Display picture/video functions: **Insert, Camera**

Sound

Select.



Display sound functions: **Insert, Record**

Text

Select.



Display text functions (see also page 16).

Options

Options

Open menu.

Insert item

Select from Picture, Video, Sound, Text, Digital camera, Video camera, Sound recorder, and Page.

Picture

For example, after you select an item, the menu goes to **My Stuff**, and you may opt to insert any multimedia item from the **My Stuff** folder.

Writing options

Options Open menu.

Send	Send MMS.
Insert item	Insert items such as pictures, video, sound, text, digital camera, video camera, sound record, and page.
Preview MMS	Play entire MMS on the display.
Preview page	Preview the page.
Attachment	Add attachment: <ul style="list-style-type: none"> • File • Business card • Appointment
Page list	Display MMS pages for viewing and/or changing.
Msg. details	View the message details.
Timing	Set the time.
Save	After creating MMS, save it as a template.
Delete	Delete the MMS.
Help	

Delete item This function is available after you insert an item into the MMS. Select to delete the item you just inserted.

Replace object This function is available after you insert an item into the MMS. Select to replace with other objects.

Template



→ Template

MMS templates are MMS messages which are saved with no address. They can be sent as new MMS messages or used as part of a new MMS.

Sending an MMS

The page(s) of the new MMS has (have) already been created.



Open address only.

Subject: Enter a brief description of the MMS.

To: Enter one or more phone number(s).

Cc: Send a courtesy copy to other recipients.

Sender visibility:

Select to turn your visibility status on/off.

Default priority:

Options include Normal, High, and Low.

Delivery report:

Select whether you wish to receive a delivery report or not.

Read report:

Select to obtain a report as to whether the receiver has read the message.

Expiry time:

Expiry time includes **Maximum**, **1 hour**, **3 hours**, **6 Hours**, **12 hours**, **1 day** and **1 week**.



Start sending procedure.



The MMS is sent after confirmation.

Receiving an MMS



Arrival of new MMS/notification announced on display.



Press to view details of the received message.

In order to receive the complete MMS **later on**, the message must be opened.



Start transmission.

Read

An MMS has been received in full.



Start playback.

Key functions for playback:



To the next page.



Press **briefly once** to return to the start of the current page.



Scroll the message up or down.



End

Note

To adjust volume, please use the side keys.

The downloaded message includes the following details:

Subject: A brief description of the MMS.

To: One or more recipients' phone number(s).

From: Indication of the sender's phone number.

Cc: Send a courtesy copy to other recipients.

Bcc: Send a blind courtesy copy to other recipient.

Size: Display the MMS size.

Msg class: Indicate the type of message.

Sender visibility:
Select to turn your visibility status on/off.

Default priority: Options include Normal, High, and Low.

Delivery report:
Select whether you wish to receive a delivery report or not.

Read report:
Select to obtain a report as to whether the receiver has read the message.

Contain DRM:

Indicates whether the message has DRM restriction.

Expiry time:

Shows the expiry time and date.

Date:

Shows when the message was sent.

Message settings



→ Message setup

→ MMS → Select function.

MMS profile

Five MMS profiles can be set. The sending properties are specified in these profiles. If the setting has not yet been set, you will receive the necessary data from the service provider or via the "Setting Configuration" at:

www.siemens.com/mobilephonescustomercare



Select profile



Open to edit the profile.

Setting options

Options Open menu.

Activate, Edit, Delete.

User settings

Set the MMS dispatch to suit your requirements:

Sender visibility:	Select to turn your send visibility on or off.
Default priority:	Send priority: Normal, High, Low
Delivery report:	Request delivery confirmation for sent messages.
Read report:	Request confirmation that the MMS has been read.
Expiry time:	Select the period in which the service centre is to try to deliver the message: 1 hour, 3 hours, 6 Hours, 12 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Delivery time:	Transmission from the service centre to the recipient: Immediate, Tomorrow

Retrieval: Receive complete MMS or only notification of arrival.

Automatic

Receive complete MMS immediately.

Auto. homenet

Receive complete MMS immediately in home network

Deferred

Only the notification is received.

Help

Select help to see more details about message setting.

Voice mailbox/CB

Voice mailbox



→ → Message setup
→ Voice mailbox

If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and set it manually.

Setup

The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.



→ → Message setup
→ Voice mailbox

Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.



→ → Call setup
→ Call Diverts
→ Unanswered → Set

Enter phone number and register it with the network with **OK**.

Listening to a message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

Cell Broadcast



→ → Message setup
→ CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

Organiser



→  → Select function.

Calendar


You can enter new appointments in the calendar. The time and date must be set correctly.

The calendar offers you two views: monthly view and weekly view.

The various entries are colour-coded. Appointments are shown as a coloured bar on the hour division.

Navigation:



/  Scroll between weeks/days/hours.

Calendar setup

Select the start of the week.

Appointments

Appointments are displayed in chronological order in a list.

Entering a new appointment

<New entry>

Select.

Type:



Memo: text input for description.



Voice memo: enter voice memos.



Call: enter phone number. Shown with alarm.



Meeting: text input for description.



Holiday: enter start and end date.



Birthday: enter name and date.

Different input/selection fields are displayed depending on the type.

The number of fields can be restricted, see **Standard** at the end of the list.

Additional information



Alarm clock, alarm set.



Scheduler, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**). The phone does not go to standby mode. To deactivate it press any key.

Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are made in the same way as **Appointment** (see "Appointments").

Notes

T9 makes it easier to write short notes such as shopping lists. Save confidential notes with the phone code.

Missed appts.

Events with an alarm (**Appointments, Tasks**) to which you have not reacted are listed for reading.

Dictation machine

Use this function to record short voice memos.

New recording

<Record new>

Select.



After a brief beep, dictate the memo text.



Switch between pause/record.



End recording. The recording is automatically saved with a timestamp. Rename with **Options**.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential. You may only use this feature if the other party to the conversation agrees.

World clock

See page 51.

Games & App

You may download games and applications from the Internet. Once you download them, they are sent via your phone. Most applications include instructions. Some games and applications are pre-installed on your phone. Also, you may find others here:

www.siemens.com/fundownloads and
wap.siemens.com

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC using the "Mobile Phone Manager" (www.siemens.com/cl75).



Ringtones

See page 46.

Alarm clock

See page 46.

Extras

 →  → Select function.

Calculator

The calculator can be used in a basic version or with an extended range of functions (**Options**).



Enter digit(s).



Navigate to functions.



Use function.

Unit converter

You can convert various measurement units into other measurement units.

Sound recorder

Use the sound recorder to record noises and tones for use as ringtones.

New recording

Record new

Select. The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows

The recording display appears:



A brief beep sounds when the recording starts.



Switch between pause/record.



End recording.

The recording is saved with a timestamp in the folder **Sounds**. Rename with **Options**.

Insert

Transfer the recording into the application.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

Stopwatch



Stopwatch

Two intermediate times can be recorded and saved.

Start

Start/stop/reset to zero.

Countdown



Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Favourites



Favourites

Settings

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

 
- Five standard profiles are provided with default settings. They can be changed however: **Normal**, **Quiet**, **Outdoors**, **Car Kit**, and **Headset**.
- You can set two personal profiles (<Name>).
- The special profile **Aircraft Mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.



The list of available functions is displayed.

When you have finished setting a function, return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle.

Headset

The profile is only switched on automatically if an original Siemens headset is used.

Aircraft Mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

Switching aircraft mode on



Scroll to **Aircraft mode**.



Confirm selection.



Press left soft key to activate profile.



Press right soft key to confirm that the phone switches to aircraft mode.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Ringtones



Set the tones on the phone to suit your requirements.

 
Volume

Set different volumes for types of call/functions.

Melody & Tone Setting

You may customize the melody and tones (depending on different items: On/Off/Beep) for the following items: Calls, Messages, Appointments& Tasks, Alarm clock, Games, Startup, Shutdown, Open clamshell, and Close clamshell.

Alarm Clock



Setting the alarm clock

The alarm will ring at the time you set, even when the phone is switched off. You can set four alarm clocks.



Navigate to the desired alarm clock.



Press Select to open the menu options: Activate, Edit, Delete, and Delete all.

Editing the Alarm clock

Details include Time, Weekday, Status and Description.

Themes



Load a completely new user interface in your phone. At the press of a button, various functions are re-arranged thematically, e.g. start up/shutdown animation, wallpaper, screensaver, start-up/shutdown melody, additional animations.

It is possible that the existing settings could be overwritten.

Theme files are compressed to save memory space. After being downloaded or called up from **My Stuff**, these are automatically unzipped when activated.

Activating a new theme



Select theme.



Activate new theme.



Confirm.

Display



→  → Display
→ Select function.

Wallpaper

Set wallpaper graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

Note

The **Digital clock** screensaver reduces the phone standby time.

Start up anim.

Shown when the phone is switched on.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

You can select the illumination duration.

Keypad backlight

Turn keypad light on/off.

Hide network name

Select to make network visible/invisible.

Vibrator



Select to turn the vibration on/off.

Connectivity



IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

When activated the phone will scan for other reachable devices supporting IrDA.

Note

This will decrease the standby time.

GPRS info

(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. Display connection information. Displays the total amount of data transferred and time connected.

CSD settings

CSD function is available for your cell phone. Before you start transmitting data, you need to complete your CSD settings with information such as user name and password. Please contact your service provider for detailed information.

GPRS settings

If you are using a GPRS connectivity setting, you need to complete your GPRS setting with information such as user name and password. Please contact your service provider for detailed information.


www.siemens.com/mobilephonescustomercare

Key setup

See page 54.

Call setup



→  → Call setup
→ Select function.

Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other numbers.

Setting up call divert (example)

Unanswered



Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)

Select

Confirm and select **Set**, then enter the phone number to which the call will be diverted.

Select

Confirm the network setting.

All calls



All calls are diverted.



Symbol in the top line of the display when in stand-by mode.


Other possibilities for divert: **Not reachable**, **No reply**, **Busy**, **Status check** and **Clear all**.

Call screening



Only calls from phone numbers that are in the Contacts or in a group are signalled. Other calls are only displayed.

Any key answer


Incoming calls can be accepted by pressing any key (except for .

Minute beep

During the call, you (and only you!) will hear a beep after each minute as a reminder of the time elapsed.

Phone setup




-  → Phone setup
→ Select function.

Language

Set the language of the display text.

When "automatic" is set, the language chosen by your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

*#0000# 

T9 preferred

Activate / deactivate T9 input method.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Auto off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

More Press several times to display additional information about the device.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card.

Clock



Time/date

Change First enter the date, then the time.

Time Zones

World map

Displays world time zones.



Date format

Select the display format for the date.

DD.MM.YYYY, MM/DD/YYYY,
DD/MM/YYYY, YYYY.MM.DD,
YYYY-MM-DD

Time format

Select 24h or 12h.

Show clock

Activate/deactivate time display.

Auto time



 
When activated the time setting will be adjusted automatically by the network.

Security



Direct call

Only **one** phone number can be dialled. The required phone code (4 to 8 digits) is set by you and entered at the first security setting.



Fixed dial

Select to turn on/off the fixed dial function.

PIN codes

Description, see page 14:

PIN control, Change PIN, Change PIN2,
Chg.phonecode

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl.

(International outgoing)

Only national calls can be made.

Out. int'l x home

(International outgoing without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring

Clear all

Clear all barring.

Password

Enter password for barring.

Network



→ Network
→ Select function.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Preferred network

Set the service providers you prefer when you leave your home network.

User Group




Depending on the service provider, you can create groups with this service.

These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

Accessories



→  Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit. The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Edit profile

Select to personalize the profile.

Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Edit profile

Select to personalize the profile.

Fast dial

Speed keys

Assign one phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox. Before you redefine the number keys 2-9, enable/disable the redefine function.

Apply

Select a stored phone number or start a stored application (e. g. **Internet**).

In standby mode:



Press and **hold**.

My menu



Press.

Shortcuts Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Changing the menu

You can replace each entry (1-10) with another entry from the selection list.



Change

Select entry.

Open the function list for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

Reset all

Reset all

Select. After a security query, the default setting is reset.

My Stuff

This file management function allows you to organize your file, which is very similar to the function on your PC. Folders have already been created for different data types.



Display the list of folders and files.

Navigation



Select a file/folder from the list.



Move the cursor freely in the preview.



Open folder or start file with related application.

Options

Access to various administration functions.

Pictures/Sounds

The application for the folder currently selected is loaded.

Download



The browser is started and the download page displayed.

Folder	Description
Pictures	Pictures
Videos	Videos
Animations	Start up/shut down animations
Sounds	Sounds
Themes	Loaded theme (zipped) Theme configuration (unzipped)
Games	Java archive Download info
Misc	Text modules Voice recordings

Depending on the service provider, the structure, content and range of functions in **My Stuff** may vary.

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **More**) and if available, your Siemens Service customer number.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
Chile	8 00 53 06 62
China	021 2301 7188
Colombia	01 80 07 00 66 24
Croatia	0 16 10 53 81

Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Ecuador	18 00 10 10 00
Egypt	0 23 33 41 11
Estonia	6 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 70 07 07 00
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 09 99 66

Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradually capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1995/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens.com/mobiledocs

CE 0168

Additional information to users

The product was shown to meet the requirements of the R&TTE Directive through third party tests to harmonise standards.

Quanta Computer Inc. hereby declares that this Siemens CL75 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Technical Data

GSM class:	4 (2 watt)
Frequency range:	880 ... 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 ... 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 ... 1,990 MHz
Weight:	90g
Size:	87 x 44 x 23 mm (74 ccm)

Li-Ion battery:	750 mAh
Operating temperature:	-10°C ... +55°C
Charging temperature:	+5°C to 45°C
SIM card:	3.0 V
Camera:	VGA incl. 4x zoom, Video recording
Video:	Recording, playback, Packet video, 3GPP; H.263, MPEG4
Sounds:	AAC, AMR-NB, SMAF, SP-Midi, WAV ADPCM, 40 chords polyphonic ringtones (MA3)

Phone ID

You will need the following details if you lose your phone or SIM card:

The number of the SIM card (on the card):

.....
15-digit serial number of the phone
(under the battery):
.....

.....
The customer service number of the
service provider:
.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating Time

The operating time depends on the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 180 minutes

Standby time: 220 hours (minimum)

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes
* Key input, games, organiser etc.		

SAR – International (ICNIRP)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.66 W/kg***.

SAR information can also be found at **www.siemens.com/mobilephones**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

-
- * The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf,

www.mmfa.org,

www.siemens.com/mobilephones

- ** averaged over 10 g of tissue.

- *** SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at **www.siemens.com/mobilephones**

License agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. LICENSED SOFTWARE. As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded

from Siemens Web pages or servers or from other sources.

2. COPYRIGHT. The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. LICENSE AND USE. Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. LIMITATIONS ON LICENSE. You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date you install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LI-

CENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER

CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. Siemens has and its Licensors have no obligation to furnish you with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.

Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

 
11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a

 
national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

13. MISCELLANEOUS. This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an online "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

Menu tree

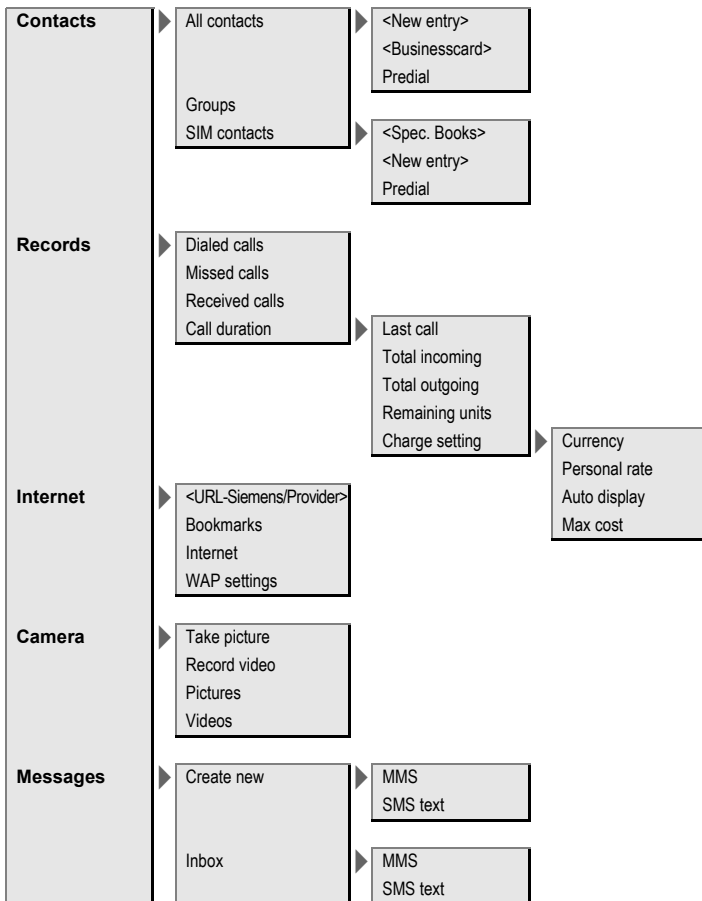

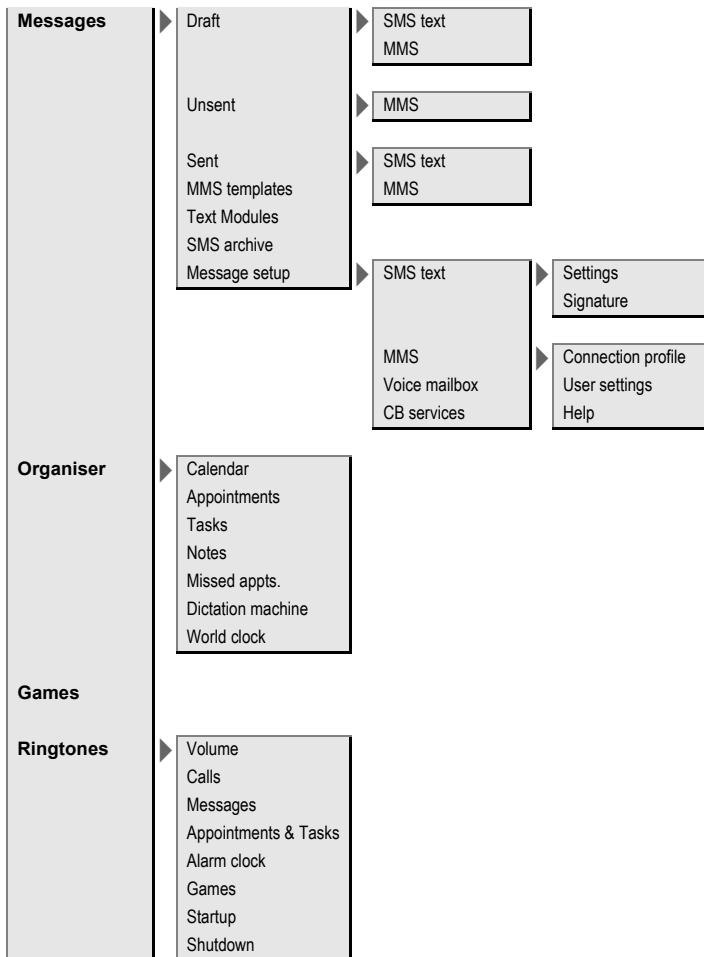

Ringtones

▶ Open clamshell
Close clamshell

Alarm clock

▶ Activate
Edit
Delete
Delete all

Extras

▶ SIM services
Calculator
Unit converter
Sound recorder
Stopwatch
Countdown
Favourites

My Stuff**Settings**

▶ Profiles
Ringtones

▶ Volume
Calls
Messages
Appointments & Tasks
Alarm clock
Games
Startup
Shutdown
Open clamshell
Close clamshell

▶ Calls
Appointments & Tasks
Alarm clock
Messages
CB services
Startup
Shutdown
Family
Friends
Office
VIP
Leisure
Private
Business
Received

Settings

Themes

Display

Wallpaper

Logo

Screensaver

Start up anim.

Shutdn anim.

Own greeting

Big letters

Illumination

Keypad backlight

Hide network name

Ignore

Vibrator

Connectivity

IrDA

GPRS info

CSD settings

GPRS settings

Key setup

Left Soft Key

Right Soft Key

Navigation Key

Speed dial

Call setup

Hide ID

Call waiting

Divert

Call screening

Any key answer

Minute beep

All calls

Unanswered

Not reachable

No reply

Busy

Status check

Clear all

Phone setup

Language

T9 preferred

Key tones

Settings

▶ Phone setup

▶ Info tones
Auto off
File system
Phone identity
Master reset

Clock

▶ Time / date
Time zone
Date format
Time format
Show clock
Auto time

Security

▶ Direct call
Fixed dial
PIN codes

 
▶ Change phonecode
PIN control
Change PIN
Change PIN2

This SIM only
Barrings

▶ All outgoing
Outgoing intl.
Out. int'l x home
All incoming
When roaming
Status check
Clear all
Password

Network

▶ Network info
Choose network
Auto network
Preferred network
Band Selection

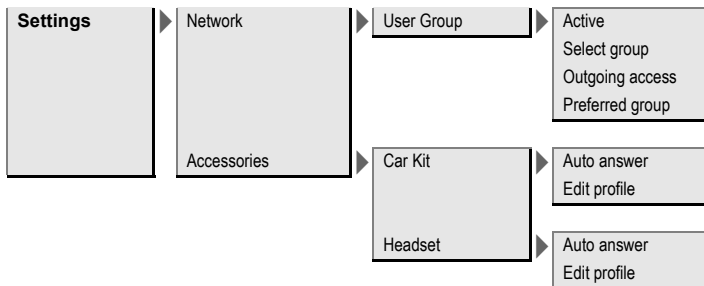

Index

A

Aircraft mode	45
Alarm clock	46
All calls (diversion)	49
All incoming (barrings)	52
Any key ans.	49
Appointments	40
Auto display	
Clock	51
Duration/charges	25
Auto. Network	52

B

Battery	
Charge	8
Insert	7
Operating time	8, 60
Quality declaration	58
Big letters	47
Bookmarks	28
Business card	21

C

Calculator	43
Calendar	40
Call	
Accept/end	19
Barring	52
Conference	20
Divert	49
End	19
Reject	19
Swapping between calls (change)	20
Call divert	49
Call waiting	49
Calling	19
Calls dialled (call list)	25
Calls received (call list)	25

Camera	29
Car kit (setting)	45
Care and maintenance	58
Cell Broadcast (CB)	39
Charging the battery	8
Clear barring	15
Clock	51
Codes	14
Conference	20
Contacts	21
Control code (DTMF)	20
Converter	43
Countdown	44

D

Date format	51
Dialling code	19
Display	
Illumination	48
Language	50
Symbols	6
Divert	49
DRM	11
DTMF codes (tone sequences)	20
Duration/charges	25

E

Emergency number	9
Extras	43

F

Factory settings	50
Frequency range	59

G

Games and applications	42
GPRS	48
Groups	22

H

Handsfree talking	19, 53
Headset (setting)	45, 53

Hide ID	49
Highlighting mode	13
Hotline	56
I	
Identity number (IMEI)	50
IMEI number	50
Inbox	31
Info tones	50
Information services (CB)	39
Infrared (IrDA)	48
Input language (T9)	16
Internet	27
K	
Key tones	50
L	
Language	50
Logo	47
Loss of phone, SIM card	59
M	
Maintenance of phone	58
Max. cost	26
Menu	
Controls	12
My menu	54
Speed dialling	12
Menu tree	65
Message	
Lists	31
MMS	34
SMS	32
Microphone on/off	19
Minute beep	49
Missed calls (call list)	25
MMS	
Receiving	36
Sending	35
Writing	34
My stuff	55

N

Network

Auto network	52
Barring	52
Choose network	52
Connection	48

Notes	41
-------------	----

O

Operating times (battery)	8, 60
Organiser	40
Own (phone) numbers	24

P

Phone code	15
Phone identity number (IMEI)	50
Phonebook	
Calling an entry	23
New entry	23
Protected SIM	23
VIP numbers	23

Pictures & sounds (SMS)	32
-------------------------------	----

PIN

Change	14
Control	14
Enter	9

PIN2	14
------------	----

Preferred network	52
-------------------------	----

Preventing accidental activation	15
--	----

Profiles (phone)	45
------------------------	----

Provider logo	47
---------------------	----

PUK, PUK2	14
-----------------	----

R

Records	25
---------------	----

Redial	19
--------------	----

Ringtones	46
-----------------	----

S

Safety precautions	2
--------------------------	---

Screensaver	47
-------------------	----

Security	14, 51
----------------	--------

Set time/date	51
---------------------	----

Settings	45
Short message (SMS)	32
Shut down animation	47
Signal strength	11
SIM card	
Clear barring	15
Insert	7
SMS	
Archive	32
Reading	33
Settings	33
To group	33
Writing	32
SOS	9
Sound recorder	43
Special characters	16
Standard functions	13
Standby mode	11
Standby time	8
Start up animation	47
Stopwatch	44
Swap	20
Switching off the phone	
Automatic	50
Manually	9
Switching on the phone	10
Symbols	6
T	
T9	
Text entry	16
Word suggestions	17
Tasks	40
Technical data	59
Text module	18
This SIM only	51
Time zones	10, 51

U

Unanswered	49
Upper and lowercase letters (T9)	16, 17
User group	53

V

Voice memo	41
Volume	
Handset volume	19
Profiles	45
Ringtone	46

W

Wallpaper (display)	47
---------------------------	----