РоскетСам 5200







Dear user, thanks for purchasing this product. Much investment in time and effort has gone into its development. and it is our hope that it will give you many years of trouble-free service

SAFETY NOTICE

WELCOME

- 1. Do not drop, puncture or disassemble the camera; otherwise the warranty will be voided.
- 2. Avoid all contact with water, and dry hands before using.
- 3. Do not expose the camera to high temperature or leave it in direct sunlight. Doing so may damage the camera
- 4. Use the camera with care. Avoid pressing hard on the camera body.
- 5. For your own safety, avoid using the camera when there is a storm or lightning.
- 6. Avoid using batteries of different brands or types at the same time. This may lead to the potential for serious damage.
- 7. Remove batteries during long periods between usage, as deteriorated batteries may affect the functionality of the camera.
- 8. Remove batteries if they show signs of leaking or distortion.
- 9. Use only the accessories supplied by the manufacturer.



















TABLE OF CONTENTS

Nelcome	
Safety notice	1
Table of contents	2
Camera parts	
Getting started	
► Loading the battery	5
► Charging the battery	
Inserting the SD/MMC card (optional)	7
Attaching the carrying strap (optional)	8
Using the tripod (optional)	8
How to hold your camera	9
Basic operation	10
► Turning on your camera	10
Turning off your camera	10
Mode selection	11
Taking a still picture	12
► Zooming	13
Setting focus	13
Recording a video clip	14
► Zooming	15
Setting focus	15
Recording a voice clip	16
Playing back your recordings	17
Playing back your recordings - thumbnails	19
Connecting the camera to your TV	20
Advanced operations	
Digital Camera - Recording voice memo	21
Digital Camera - Setting picture resolution	22
Digital Camera - Setting flash strobe	23
Digital Camera - Setting selftimer	24
Digital Camera - Setting picture effect	25
Digital Camera - Setting white balance	26
Digital Camera - Setting exposure method	27
Digital Camera - Setting exposure value	28
Digital Camcorder - Setting video resolution	29
Digital Camcorder - Setting video effect	30
Setting voice memo	31
Deleting files	32
► Sorting files	33
Setting file info	34

Camera settings	35
Camera settings mode	35
Setting date and time	35
Setting beep sound	36
Setting date stamp	36
Setting panel brightness	37
Setting flicker	37
Setting language	38
Setting TV system	38
Setting TV-out	39
Restoring default settings	4 0
Formatting media	41
Copying files to your pc	4 2
Installing the driver to your PC	4 2
Connecting the camera to your PC	4 5
Copying files to the PC	4 6
Viewing/Playing files on your PC	48
► File Location	4 9
Using MP3 player	50
Copying MP3 files to the camera	5 0
Setting the output device	51
Playing MP3 music	52
Play list mode	54
Repeating playing	54
Deleting MP3 files	56
Using PC camera	58
Installing the PC Camera software	58
Starting the application	58
The application interface	6 0
Recording a movie	6 1
Taking a snapshot	61
Format options	61
Properties options	6 2
Flicker options	6 2
Troubleshooting	63
Addenda	66



1 Power/Mode Button (🕁)	11 Display Toggle Button (□)		
2 Shutter/Record Button	Menu/OK Button (Menu/OK)		
3 Mode Indicator	13 Strap Holes		
4 Mode Switch	14 Zoom (Left/Right) Buttons (◀►)		
5 Flash Strobe	15 Battery/Card Cover		
6 TV-out Connector/ Earphone Connector	16 Speaker		
	17 SD/MMC Card Slot		
7 Focus Switch	18 Battery Compartment		
8 USB Port	19 Tripod Port		
9 Lens			
10 LCD Panel			



Loading the battery

Li-Ion rechargeable battery is recommended for high performance.

1. Slide open the battery/card cover in the direction of indication.



2. Place the Li-Ion rechargeable battery into the compartment (with the label side facing up).



3. After the battery is properly installed, replace the battery/card cover.



Charging the battery

The battery attached is not fully charged. Please charge the battery at least $4.5 \sim 5$ hours for first time use.

- Connect one end of the supplied AC adapter to the charger stand and the other end to a wall outlet.
- 2. Place the depleted battery pack into the charger.



3. The charging indicator turns red and the charge starts.

4. When the charging indicator turns green, the battery pack is fully charged.

This charger can only be used to charge the accessory battery pack. Do not use it to charge other unknown batteries.

When in use, do not place the charger near fire or in an enclosed area that retains heat.

Inserting the SD/MMC card (optional)

In addition to 16MB (128Mbits) builtin flash memory, your camera can store data on a Secure Digital (SD) card or a MultiMedia card (MMC). The supported memory size ranges from 8MB to 512MB.

To insert a SD/MMC card, gently push the card as indicated until the card reaches the end of the slot. Note that once a SD/MMC card is inserted, the camera will use the card as the main storage media. Files stored in the camera's built-in memory will become inaccessible until the SD/MMC card is removed.



The SD card comes with a write-protect switch. When the write-protect switch is set to the Lock position, the card will become non-writable. To ensure that the camera can operate normally, you should set the write-protect switch to the Unlock position before inserting the SD card.



To remove the SD/MMC card, gently push the card until it pops up, and then slide the card out of the slot.

Attaching the carrying strap (optional)

Using the strap to carry the camera with ease. To attach the carrying strap, thread the strap as illustrated on the right.



Using the tripod (optional)

The tripod can be attached to your camera to minimize camera movement and ensure optimal image quality, particularly while taking selfportraits, longer movies or in a macro mode.



How to hold your camera

When using the camera for shooting or filming, hold the camera firmly as the illustration indicates. You should also avoid blocking the lens to retain the best image.



- Tips for best shooting:
 - Keep the focus set to A except for close-ups.
 - Make sure your subject is well lit from the front.
 - Keep the camera level and steady when releasing the shutter.
 - Make sure the lighting is sufficient when taking stills or recording movies.
 - For stable and smooth image quality, move the camera slowly while filming.



${f B}$ asic operation

Turning on your camera

1. Press and hold down the Power Button (也) for 2 seconds to turn on the camera.



 $\sqrt{2}$ If the camera is not turned on after pressing the Power Button (b), please check:

- 1. There is Li-Ion rechargeable battery installed in the camera.
- 2. The battery has enough power left.
- 3. The direction of the installed battery is correct.

Turning off your camera

Press and hold down the **Power Button** (**b**) for 2 seconds to turn off the camera.

Mode selection

After the camera is turned on, you can use the **Mode Switch**, together with the **Power Button** ($\mathbf{\psi}$), to shift between six modes. Every stage of the **Mode Switch** provides two modes, which can be alternated by pressing the **Power Button** ($\mathbf{\psi}$).



The Power Button () serves as the mode-change button only after power-on. When the camera is turned on, you can press and quick-release the Power Button () to alternate between two available modes. To turn off the camera, press and hold down the Power Button () for a longer period of time.

You may check the current mode by the LED light beside the Mode Switch.

Yellow	Digital Camera/ Playback/ Digital Camcorder
Red	Voice Recording/ MP3 Player/ Camera Settings

► Taking a still picture

Digital camera mode LCD illustration



 Turn on the camera, and set the Mode Switch to Digital Camera () mode.



2. Press the Shutter/Record Button to take a still picture.



► Zooming

Before taking a still picture, you can use the **Zoom Buttons** (◀►) to zoom in or zoom out the screen, thus retaining the best result.



Setting focus

Before taking a still picture, you can use the **Focus Switch** to set focus as appropriate. The available settings are:

۲	Macro: 20" ~ 24" (50cm ~ 60cm)
44	Normal: 24" ~ ∞ (60cm ~ ∞)



The normal focus setting is recommended for most filming environments.

Recording a video clip

Digital camcorder mode LCD illustration



1. Turn on the camera, and set the Mode Switch to Digital Camcorder () mode.





3. Press the Shutter/Record

Button again to stop recording.

► Zooming

While recording a video clip, you can use the **Zoom Buttons** (**>**) to zoom in or zoom out the screen, thus retaining the best result.



Setting focus

In Digital Camcorder mode or during recording, you can use the **Focus Switch** to set focus as appropriate. The available settings are:

۲	Macro: 20" ~ 24" (50cm ~ 60cm)
-	Normal: 24" ~ ∞ (60cm ~ ∞)



The normal focus setting is recommended for most filming environments.

Recording a voice clip

Voice recording mode LCD illustration



 Turn on the camera, and set the Mode Switch to Voice Recording ([●]) mode.





3. Press the Shutter/Record

Button again to stop recording.

Playing back your recordings

Playback mode LCD illustration



 Turn on the camera, and set the Mode Switch to Playback () mode.



2. The last recorded file will display in full-screen. Press the Left/ Right Buttons (◄ ►) to shift between files.

F If you review a picture with memo recording (page 21) and the voice memo option is toggled ON (page 31), the voice memo will be automatically played back.

Playing back your recordings (continued)

3. ASF and WAV files:

Press the **Shutter/Record Button** to play the file.

JPEG files:

Pressing the **Shutter/Record Button** will enable you to use the **Zoom Buttons** (◀►) to zoom in or zoom out the picture. If you zoom in the picture, and then press the **Shutter/Record Button**, you will be able to browse the picture.



4. Press the Shutter/Record

Button to stop playing or restore default display.

Playing back your recordings - thumbnails

 While in Playback mode, press the Display Toggle Button

 (IDI) will switch the screen to thumbnail view. In the thumbnail view you can quickly search the file you want to play.



2. While in the thumbnail screen, you can use the Menu/OK Button (Menu/OK) and the Display Toggle Button (□□) to scroll up and scroll down pages. The Left/Right Buttons (◀►) can move the cursor to left or right.



 Once the desired file is highlighted, press the Shutter/ Record Button to return to the full-screen view.

Connecting the camera to your TV



- **1.** Turn on your TV and switch to AV mode.
- $\ensuremath{\textbf{2.}}$ Connect the audio and video ends of the AV cable to your TV.
- **3.** Connect the other end of the video cable to your camera.
- **4.** Turn on the camera.

Fefore connecting the camera to TV, you need to enable the TV-out setting. Please see page 39 for more information on how to enable the setting.

${f A}$ dvanced operations

Digital Camera - Recording voice memo

Recording voice memo lets you add voice memos to your pictures. Here are some notes on using this feature:

- 1. Each voice memo lasts for 10 seconds.
- This function is available after taking a picture. If you want to add a memo to every picture you take, you must use this function immediately after every shot.
- For one picture, only one voice memo can be recorded. Once the voice memo is recorded, it cannot be modified or remade.
- 4. For playing back the voice memo, please see page 31.
- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Memo Record item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀►) to select the Record item, and press the Menu/OK Button (Menu/OK) to start recording.



Digital Camera - Setting picture resolution

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Size item, and press the Menu/ OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀ ►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

	1280x1024: suitable for viewing on PC.	
200	1600x1200: suitable for developing 3"x5" pictures.	
St	2048x1536(*): suitable for developing 4"x6" pictures.	
50	2560x1920: suitable for developing 5"x7" pictures.	
* default setting		



Digital Camera - Setting flash strobe

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Strobe item, and press the Menu/OK Button (Menu/OK) to confirm.



3. Use the Left/Right Buttons (< ►) to select the desired item, and then press the Menu/OK Button (Menu/OK) to confirm. The available items are:



Auto(*): the flash strobe will automatically fire if the lighting is insufficient.

Off: the flash strobe is disabled.

* default setting



Digital Camera - Setting selftimer

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Selftimer item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◄►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



Digital Camera - Setting picture effect

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Effect item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

	Normal(*): the picture will display in natural color.	
(10)	Classic: the picture will be tinted with an antique touch.	
	Black&White: the picture will be in black and white.	
S	Solarize: the picture will display an over-exposed tone.	
* default setting		



Digital Camera - Setting white balance

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, select the Advanced item and press the Menu/OK Button (Menu/OK). In the next menu, select the WB item and press the Menu/OK Button (Menu/OK) to confirm.



White Balance

3. In the subsequent menu, use the Left/Right Buttons (◀ ►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

74	Auto(*): the white balance		Auto
*	is automatically adjusted.		
	Sunny: suitable for shoot- ing under sun light.		Fluorescent: suitable for indoor shooting with fluorescent light source.
8	Tungsten: suitable for indoor shooting with incandescent lamp source.	Ø	Cloudy: suitable for shooting in cloudy weather.
* default setting			

Digital Camera - Setting exposure method

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, select the Advanced item and press the Menu/OK Button (Menu/OK). In the next menu, select the Scene item and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

	Auto(*): the exposure method is automatically measured.	
	Backlight: suitable for shooting subject facing against light source.	
* default setting		





Digital Camera - Setting exposure value

- While in Digital Camera mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, select the Advanced item and press the Menu/OK Button (Menu/OK). In the next menu, select the Exposure item and press the Menu/OK Button (Menu/OK) to confirm.



Exposure

3. In the subsequent menu, use the Left/Right Buttons (◀►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

3 1	+3: the exposure is dra- matically increased.		0
<mark>₹ ₹¥+2</mark>	+2: the exposure is mod- erately increased.		+1: the exposure is slightly increased.
	0(*): the exposure is not changed.	₹	-1: the exposure is slightly decreased.
∼ ∔ № -2	-2: the exposure is moder- ately decreased.	₹	-3: the exposure is dra- matically decreased.
* default setting			

Digital Camcorder - Setting video resolution

- 1. While in Digital Camcorder mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Size item, and press the Menu/ OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀ ►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:





Digital Camcorder - Setting video effect

- 1. While in Digital Camcorder mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Effect item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

	Normal(*): the video clip will be recorded in natural color.	
کار ا	Black&White: the video clip will be recorded in black and white.	
* stafe states at the se		

* default setting



Setting voice memo

Enabling this function will let you hear voice memos (see page 21) while reviewing your pictures. The voice memo is automatically played back after this item is enabled. You can press the Shutter/Record Button to interrupt the playback.

- 1. While in Playback mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Voice Memo item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◄►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



Deleting files

- 1. While in Playback mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Delete One or Delete All item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◄►) to select Yes or No, and press the Menu/OK Button (Menu/OK) to confirm.





E Deleted files are gone forever and cannot be restored.

Sorting files

The File Sort option allows you to specify a particular file type to display.

- 1. While in Playback mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄►) to highlight the File Sort item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◀►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

	All(*): all sorts of files are displayed.	
	JPEG: only pictures are displayed.	
	ASF: only video clips are displayed.	
WAV: only voice clips are displayed.		
* default setting		



Setting file info

- 1. While in Playback mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄►) to highlight the File Infor. (File information) item, and press the Menu/OK Button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◄ ►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



Camera settings mode

Set the **Mode Switch** to Camera Settings mode, and the following screen will appear. For detailed information on each setting, please refer to the corresponding page.





Setting date and time

1. Select the Time item and press the Menu/OK Button (Menu/OK).

2. Use the Left/Right Buttons (<►) to adjust the value. Press the Menu/OK Button (Menu/OK) to confirm the setting and move to next field. Repeat the setting until all fields are done. Pressing the Shutter/Record Button can quick-exit the menu.

Time		
		4 2004 ►
Month		03
Day		20
Hour		12
Minute		01

Setting beep sound

- Select the Beep item and press the Menu/OK Button (Menu/OK).
- 2. Use the Left/Right Buttons (<►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



Setting date stamp

- Select the Date Stamp item and press the Menu/OK Button (Menu/OK).
- 2. Use the Left/Right Buttons (<►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



36

Setting panel brightness

- Select the Brightness item and press the Menu/OK Button (Menu/OK).
- 2. Use the Left/Right Buttons (< ►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm.



Setting flicker

- Select the Flicker item and press the Menu/OK Button (Menu/OK).
- 2. Use the Left/Right Buttons (< ►) to select 50HZ or 60HZ according to the standard of your country, and press the Menu/OK Button (Menu/OK) to confirm.



Setting language

- Select the Language item and press the Menu/OK Button (Menu/OK).
- 2. Use the Left/Right Buttons (◀►) to select your preferred language, and press the Menu/ OK Button (Menu/OK) to confirm. Pressing the Shutter/Record Button can quick-exit the menu.



Setting TV system

 Select the TV Set item and press the Menu/OK Button

 (Menu/OK). In the next menu, select the TV System item and press the Menu/OK Button
 (Menu/OK) to continue.



2. Use the Left/Right Buttons (< ►) to select NTSC or PAL, and press the Menu/OK Button (Menu/OK) to confirm.



Setting TV-out

 Select the TV Set item and press the Menu/OK Button

 (Menu/OK). In the next menu, select the TV Out item and press the Menu/OK Button
 (Menu/OK) to continue.



2. Use the Left/Right Buttons (<►) to select On or Off, and press the Menu/OK Button (Menu/OK) to confirm.



To take advantage of this setting, you need to connect the camera to your TV. Please see page 20 for more information.

If your camera is not connected to TV yet, after the camera's TV-out setting is toggled On, you can still switch the display back to the camera LCD by doing the following: Press the Shutter/Record button to reactivate the camera LCD.

Restoring default settings

 Select the Advanced item and press the Menu/OK Button (Menu/OK). In the next menu, select the Default item and press the Menu/OK Button (Menu/OK) to continue.





F Restoring default settings will override your current settings.

Formatting media

 Select the Advanced item and press the Menu/OK Button (Menu/OK). In the next menu, select the Format item and press the Menu/OK Button (Menu/OK) to continue.



2. Use the Left/Right Buttons (<►) to select Yes or No, and press the Menu/OK Button (Menu/OK) to confirm.



Formatting the media will erase all files stored on the media.

 \mathbb{C} opying files to your PC

Installing the driver to your PC

You need to install the driver included in the accessory CD to ensure that video clips can be played back on your PC.

 Turn on your computer. Then place the accessory CD into the CD-ROM drive. The setup screen will automatically display.

2. Upon seeing the setup screen, click on the corresponding item to launch the installation of the driver.

Constant Const

1. Do not connect your camera and the computer by the USB cable until the driver installation is completed.

- 2. Shut down all other applications running on your computer.
- If the title screen does not appear automatically, please double-click on "My Computer" shortcut on the desktop and then the CD-ROM drive. Then start the Setup.exe program manually.

Installing the driver to your PC (continued)

3. The **Install Shield Wizard** will then appear and automatically install the program. Please click on **Next** and follow the on-screen instructions to continue.

NocketCam 5200		×
2	Welcome to the InstallShield Wizerd for PocketCom \$200	
	The localized of House will hand if Polas Can 1200 on your computer. To continue, click Risel.	
	Cancel	

4. Select **Complete** if you want to install the driver and the PC Camera application. Select **Custom** if you want to customize the installation options.



5. If you select **Custom** in the previous step, you will see this window. Check the items you want to install and click on **Next** to continue.

elect Peelares	
Eelect the textures setup will instell.	V.
Select the features you want to install, and decele	ct the features you do not want to install.
Diver	Description
- PockeCan 320 PC Canves	Camera Divar (Sill Image/Video)
2.18 MB of space required on the E drive 11062-48 MB of space evolable on the E drive	

Installing the driver to your PC (continued)

6. Upon seeing this window, click on Install to continue. Follow the on-screen instructions to complete the installation.



7. If the program prompts you to install Windows Media Player Codecs, please click on Yes and follow the on-screen instructions to complete the installation.

0	
O . If the program prompts you to	Microsoft DirectX 8.1
install Direct X 8.1, please clic	k 🕐 This will install f
on Yes and follow the on-scree	en 🎽 👝
instructions to complete the	

Microsof	it DirectX 8.1 Setup 🛛 📓
2	This will install Microsoft Directit 8.1. Do you wish to continue?
	Yes No

 $\dot{\phi}^{-}$ "Windows Media Player Codecs" and "Direct X 8.1" or above are necessary for viewing the video clips recorded by the camera.

9. After the installation is completed, you may need to restart your computer for the driver to take effect.

installation.



Connecting the camera to your PC

 Turn on your computer, and then connect the USB cable to the USB port of your computer. Make sure the cable and the port are correctly aligned.



2. Connect the other end of the USB cable to your camera.



Notice for Windows 2000/XP/ME users:

When you want to disconnect the camera from the computer, please follow these steps:

- 1. Double-click on 🏀 on the system tray.
- 2. Click on 😩 (USB Disk), and then click Stop.
- 3. When the confirmation screen appears, select the camera and click on OK.
- Follow the on-screen instructions to safely disconnect the camera from your computer.

Copying files to the PC

1. This step varies depending on your operation system:

For Windows XP users: After the camera is connected to your computer, a dialogue window will appear automatically. Please select the item **Open** folder to view files using Windows Explorer and click on OK.



For Windows 2000/ME/98SE users:

Double-click on **My Computer**. Then double-click on the icon of the removable disk that has just appeared.



Some users may find two removable disks appear under "**My Computer**", that is because the OS detects two storage media in the camera (the internal memory and the SD/MMC card). If you can not find your files in one of the disks, please try to find them in the other disk.

2. Double-click on the **DCIM** file folder.



3. Double-click on the **100MEDIA** file folder.



4. Drag the target file into **My Documents** or the destination folder.



1. Double-click on **My Documents** or any other folder that stores your files.

My Documents		
	Windows XP	
My Documents With Documents Big Do	Proventier Proventi	کار ہے۔ 1999ء کا 1999ء کا 19
	windows 2000/WE/98 SE	

2. Double-click on the desired file, and the file will be opened by the program matching the file's type.



File Location

After connecting the camera to your computer, a removable disk will appear in your computer. Under the disk you can find all files stored in your camera. Refer to the figure on the right to see where the files are stored.



Using mp3 player

Copying MP3 files to the camera

Sefore playing MP3 music, you need to copy MP3 files to the camera.

1. Connect the camera to your computer by the USB cable.



 You will find a Removable Disk in My Computer. Browse to the MP3 folder and copy MP3 files to this folder.



⁶ Be sure to copy MP3 files into the MP3 folder, or the camera will be unable to locate the MP3 files.

Setting the output device

 Turn on the camera, and set the Mode Switch to Playback (□) mode. Press the Power Button () to switch to MP3 Player () mode.



2. Press the Menu/OK Button (Menu/OK) to switch to the menu screen. In the menu, use the Left/Right Buttons (◀►) to highlight the AudioOut item, and press the Menu/OK button (Menu/OK) to confirm.



3. In the subsequent menu, use the Left/Right Buttons (◄►) to select your desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:





Playing MP3 music

MP3 player mode LCD illustration



Sefore going to the following steps, please insert the earphone to the earphone connector on your camera first if you set output setting as headphone.

- While in MP3 Player (∫) mode, press the Left/Right Buttons (◄►) to select your desired song.
- 2. Press the Shutter/Record Button to play or stop the music. To pause or resume the music, you can press the Display Toggle Button (□□). To adjust the volume, you can press the

Left/Right Buttons (◀►).



Playing MP3 music (continued)

3. While playing MP3 music, pressing the Menu/OK Button (Menu/OK) will lock the current status. Once you enable the lock function, the Hold icon () will display on the LCD panel, indicating all button functions are disabled. To unlock and enable all button functions, press the Menu/OK Button (Menu/OK) again.



All buttons will be disabled if no actions are executed for 30 seconds. Then the LCD panel will enter suspend status to save the power. To resume the LCD panel display, press the Menu/OK Button (Menu/OK). To enable button functions, press the Menu/OK Button (Menu/OK) again.

Play list mode

While in MP3 Player (↑) mode under the status that MP3 is not being played, pressing the **Display Toggle Button** (|□|) will switch to the Play List mode. To quickly search for your desired MP3 file, you can use the **Left/Right Buttons** (◀►) to select. Then press the **Display Toggle Button** (|□|) to confirm.



Repeating playing

- While in MP3 Player () mode, press the Menu/OK Button (Menu/OK) to switch to the menu screen.
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Repeat Mode item. Then press the Menu/OK Button (Menu/OK) to confirm.



Repeating playing (continued)

3. In the subsequent menu, use the Left/Right Buttons (◀►) to select the desired item, and press the Menu/OK Button (Menu/OK) to confirm. The available items are:

Repeat All: repeat all songs.	Ø	Repeat One: repeat th selected song.
		Repeat All: repeat all songs.



Winder the Repeat One mode after you exit the menu window, use the Left/Right Buttons (◄►) to select the song you want to repeat. Then press the Shutter/Record Button to start playing.

Deleting MP3 files

- While in MP3 Player (∫) mode, press the Menu/OK Button (Menu/OK).
- 2. In the menu, use the Left/Right Buttons (◄ ►) to highlight the Delete One or Delete All item, and press the Menu/OK Button (Menu/OK) to confirm.



 If you select Delete One, use the Left/Right Buttons (◄►) to select the song you want to delete, then press the Menu/OK Button (Menu/OK).

> In the subsequent setting screen, press the **Display Toggle Button** (|**□**|) for Yes or the Menu/OK Button (Menu/OK) for No.





Deleting MP3 files (continued)

4. If you select Delete All, use the Left/Right Buttons (◄►) to select Yes or No in the subsequent menu. Then press the Menu/OK Button (Menu/OK) to confirm.



E Deleted files are gone forever and cannot be restored.

► Installing the PC Camera software

You need to install PC Camera software to take advantage of the PC camera function. If you have not yet installed the software, please refer to page 42 for details on installing the package.

Starting the application

1. Turn off the camera.

2. Press and hold down the Shutter/Record Button fully and connect the camera to your PC.



F If you want to use the Video Conferencing function, please install programs such as "Netmeeting" to serve the purpose.



Starting the application (continued)

Notice for Windows 98SE users:

1. Click on Next when the following screen appears.



When the following screen appears, please select Search for the best driver for your device and click on Next to continue.

Add Rev Handware W	What do you work Windows to do? What do you work Windows to do? " Search for the best of which for you device. [Providence and the dotwer in a specific location: royou can refer the diver you wark.
_	

- During the installation process, some users might be asked to insert a licensed 98SE CD into the CD-ROM drive to copy the needed files.
- 4. Follow the on-screen instructions to finish the installation.

Notice for Windows 2000 users:

When using the PC Camera function for the first time, the "Digital signature" warning message may appear twice or more. Please click on **Yes** to continue. The camera is fully compatible with Windows 2000 operation system.



Fi lf you cannot find the program shortcut on the desktop, you can start the program from the Programs menu.

► The application interface



To view pictures taken by PC Camera, please click on to open the photo album. Or, as an alternate option, go to the "Work Temp" folder to find files taken by the program. The full path is as following: C:\Program Files\PocketCam 5200\Work Temp

Recording a movie

- 1. Click on the 🗐 icon.
- 2. Press ____ to specify the path and name of the ASF file.
- 3. Set the frame rate and recording time according to your needs.
- 4. Press the Start Record button to begin recording.
- 5. To stop recording, click on the icon.

	X
etCam 5200\WorkTemp\VIDEO	DI ASF
7 fps, 142 ms/1	30
ime	
C Limited to 15	seconds
	ICam 500 Work Temp VIDEC 7 fps. 142 msf me C Limited to

Taking a snapshot

Click on the 🛅 icon to take a snapshot.

Format options

Color Space:

Select one of the following functions according to your needs.

RGB 24: This item is for retaining better quality.

1420: This item indicates the ASF movie will be more compressed to gain the advantage of faster processing speed.

Output Size:

Set output size to change the size of the preview window. The default size is 320x240. Select larger pixels when you need a larger preview window.

Video Format	
Video Stream Setting	
Color Space / Compression:	
RGB 24	•
Output Size:	
320 × 240	•
	OK Cancel

Properties options

Video setting:

- Banding Filter: If the screen of your computer flickers when using PC Camera function, change this setting to avoid noise.
 - Bandwidth: If the network bandwidth is congested when using PC Camera, select a smaller value in the "Bandwidth" item to avoid this problem.

Custom setting:

You can use the default settings, or change the settings (such as brightness, contrast, saturation, and sharpness) on your own.



Properties
Vides Seting [Dutom Setting] BigHees [22 Subjects 0 Hue 22 Default
OK Cancel Apply

Flicker options

If you take your camera abroad, and find the screen of your computer flickers when using PC Camera function, please check the **Cancel Flicker** box to prevent noises from appearing on the screen. Or, you can refer to the **Flicker Settings Table** (see Addenda) for proper flicker value that suits the country you are staying.

Setting Dialog	
Flicker Setting	
Flicker options	
Cancel Flicker	
	OK Cancel

TROUBLESHOOTING

When using the camera:

- Q1: The camera cannot be turned on normally.
- A: 1) The battery may be out of power. Please change the battery.
 - 2) Make sure the battery is correctly installed.
- Q2: Can not take pictures or video clips when pressing the Record/Shutter button.
- A: 1) The storage media may be full. Please free some space from the SD/ MMC card or the internal memory.
 - 2) Check if the camera is recharging the flash strobe.
 - 3) If you are using a SD card, check if the card is set to "protected".
 - If the LCD screen displays "MEMORY ERROR" or "CARD ERROR" message, please set the camera to Settings mode and format the storage media. (p. 41)
- Q3: I did not delete the pictures and video clips, but can not find them in the memory.
- A: 1) Check if you take pictures and video clips and then insert a SD/MMC card. The camera will use the card as the main storage media and files previously stored in the internal memory will be inaccessible until the card is removed.
 - Check if the "File Sort" option is set to displaying a particular file type. If yes, you can set the option to "All" or restart the camera to access other files. (p. 33)
- Q4: I cannot use the flash strobe.
- A: If the battery life icon indicates (, the flash strobe may be disabled due to insufficient voltage. Please change the battery immediately.
- Q5: The pictures taken appear too blurred.
- A: Please adjust the focus as appropriate.

Q6: The pictures or video clips taken appear too dark.

A: Make sure the environment of shooting or recording has adequate light. Or you may consider using flash strobe when taking pictures.

TROUBLESHOOTING

- Q7: Noises occur when viewing images on the LCD screen or on the computer.
- A: Check if the flicker setting matches the place you are staying. For more information, please refer to the Addendum section - "Flicker Settings Table". (p.67)

When connecting the camera to the computer or TV:

- Q1: I can not view the video clips on my computer.
- A: Please install Direct X 8.1 or above and Windows Media 9.0 Codecs to solve this problem. See page 42 for details on installing the driver, or go to http://www.microsoft.com to download the required files.
- Q2: The driver installation failed.
- A: 1) Please remove the driver and other related programs. Follow the installation steps in the manual to reinstall the driver.
 - 2) Make sure you install the driver before plugging in the USB cable.
- Q3 The TV screen does not display after connecting the camera to the TV.
- A: 1) Please use the accessory cable. If you use your own cable, make sure the cable has three connectors. If you use a 3-connector cable and still cannot see display on TV, please try connecting the connector in different order (not by its color).
 - 2) Check if the camera is correctly connected to the TV.
 - 3) Make sure the TV Out is correctly set in the camera settings. Please see page 39 for more details.
- Q4 A conflict with other installed camera or capture device occurred.
- A: If you have any other camera or capture device installed in your computer, please completely remove the camera and its driver from the computer to avoid the conflict.

Q5 Noises occur on my computer screen when using Video Conferencing.

A: Please set the flicker filter to match the place you are staying. See "Flicker options" for more details. (p. 62)

TROUBLESHOOTING

- Q6: If the TV Out is set to On in the camera settings, the camera LCD will become blank. I want the display back to the camera LCD.
- A: 1) If your camera has been connected to TV, the display will be shown by TV screen. Please set the TV Out to Off (p. 39) by TV screen, then unplug the AV cable.
 - 2) If your camera is not connected to TV yet, press the Shutter/Record button to reactivate the camera LCD.
- Q7: After restarting the camera, the settings I changed are not present.
- A: 1) If the camera is shut down abnormally (such as opening the battery cover while power-on), the revised settings will not be recorded.
 - Certain settings will automatically switch back to default value after the camera is turned off.

When using the MP3 player:

- Q1: I cannot play the song. I cannot hear the sound of music.
- A: 1) Check if the output setting is properly set according to your desired output system (speaker or headphone.)
 - 2) Check if the volume is properly adjusted.
- Q2: I cannot play MP3 files and the title of the song displays strange characters.
- A: This problem is probably caused by double-byte characters (such as Chinese, Korean, etc.). Rename these files before uploading them to the camera.



Storage Capacity Table

Mamaan	Still picture (pic.)			Video (mm:ss)		Audio	
Memory	2560x1920	2048x1536	1600x1200	1280x1024	640x480	320x240	(mm:ss)
Flash memory (12MB)	9	15	24	139	0:30	1:55	48:39
SD/MMC card (32MB)	25	41	68	320	1:15	4:47	121:37
SD/MMC card (64MB)	48	80	136	640	2:30	9:34	243:14
SD/MMC card (128MB)	97	160	272	1280	5:00	19:08	486:28
SD/MMC card (256MB)	194	320	544	2560	10:00	38:16	972:56
SD/MMC card (512MB)	389	640	1088	5120	20:00	76:32	1945:52
Size/picture (average)	1200K	730K	400K	102K			

★ This chart is for your reference. The actual capacity may be slightly different depending on the complexity of your subject and environment.

AV System Settings Table

System	Applicable areas
NTSC	America, Taiwan, Japan, and Koreaetc.
PAL	Germany, England, Italy, Netherlands, China, Japan, and Hongkongetc.



System Message Table

Message	Description
No Files	When the camera is set to Playback mode without any existing file to play, this message will show up.
Please Change Batteries	The camera is under the status of low power. You should change the batteries immediately.
Memory Full	The storage memory is full and can not store any more files. Please change the SD/MMC card or delete some files to free some memory space.
Card Error	The inserted card is not compatible with the camera. Please change the card or try formatting the card.
Memory Error	The camera can not access data in the internal memory. Please format the media to solve this problem.
Deleting	The camera is performing file deletion.
Formatting	The camera is formatting the storage media.

Flicker Settings Table

Flicker	Country
50Hz	China, England, Germany, Italy, Japan, Netherlands, Portugal, Spain, etc.
60Hz	America, France, Japan, Korea, Taiwan, etc.

* The flicker setting is based on the frequency standard of your local power supply.



Specifications

Sensor effective resolution	3 Mega (2048x1536) pixels
Interpolated resolution	5 Mega (2560x1920) pixels
Internal memory	16MB flash memory (12MB storage)
External memory	Built-in SD/MMC card slot (maximum: 512MB)
Digital still camera	JPEG (JPG) format 2560x1920 (5 Mega) pixels 2048x1536 (3 Mega) pixels 1600x1200 (2 Mega) pixels 1280x1024 (1.3 Mega) pixels
Digital video camcorder	ASF (640x480 pixels) / up to 20 fps ASF (320x240 pixels) / up to 30 fps
Digital voice recorder	WAVE (.WAV) format with 12MB memory Recording time: approximately 50 minutes
PC Camera	VGA (640x480 pixels) / up to 30 fps QVGA (320x240 pixels) / up to 30 fps
LCD display	2" Color LTPS LCD
Digital zoom	4X (real-time)
A/V output	Yes (NTSC/PAL system)
Built-in microphone	Yes
Built-in speakers	Yes
Built-in flash strobe	Yes
Built-in earphone connector	Yes
Self Timer	10 seconds
Interface	USB 1.1 (USB 2.0 compatible)
Battery	8210 Series Li-Ion Battery

* Specifications are subject to change without notification.