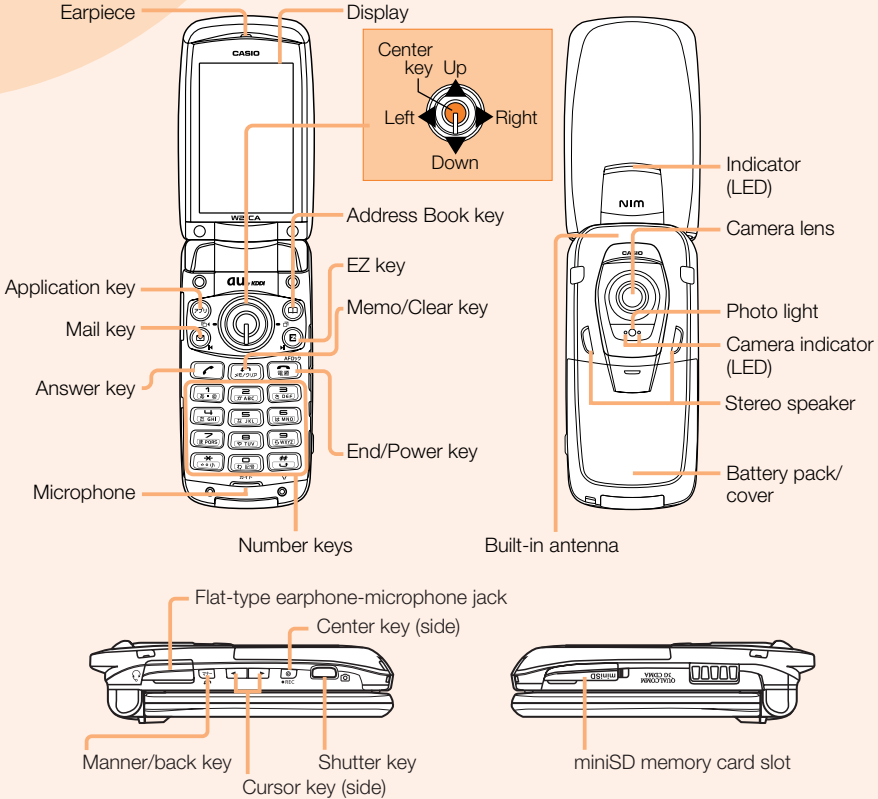


# English Simple Manual (簡易英語版)




## Turning Power On and Off


 
### ●Turning power on

Hold down  for a few seconds.

### ●Turning power off

Hold down  for at least one second.

## Applying the Phone's Default Settings

From the stand-by screen: Press  ▶ Press .

## Checking Your Own Phone Number and E-mail Address


From the stand-by screen: Press  ▶ Press .

## Making and Answering a Call

### ●Making a Call

From the stand-by screen: Enter the phone number you want to call.

▶ Press .

To end a call: Press .

 
### ●Answering a Call



 
When the phone starts ringing, press .

To adjust the earpiece volume during a call: Use .


## Storing and Recalling an Address Book Data


 

### ● Storing Data

From the stand-by screen: Hold down  for at least one second.

- ▶ Use  to select the Address Book record you want to edit. ▶ Press  [編集](Edit).
- ▶ Enter the data. ▶ Press  [登録](Store).



### ● Recalling Data



 
 
From the stand-by screen: Press  to display the Hiragana Row Search screen.

- ▶ Use  to select the hiragana row for the record you want.
- ▶ Use  to select the name of the record.
- ▶ Press  [表示](Display) to display the Address Book record screen.


## Using the Camera (Movie and Snapshot)

### ● Recording a Movie Clip

 
From the stand-by screen: Hold down  for at least one second and then press  [ムービー](Movie).



 
- ▶ Press  [録画](Record) or  to start recording. ▶ Press  [終了](End).
- ▶ Press  [保存](Store) to store the movie.

Pressing  [||](Pause) during recording pauses recording.

Pressing  [フोट](Photo) in the Movie mode changes to the Photo mode.

### ● Taking a Snapshot

From the stand-by screen: Hold down  for at least one second.

- ▶ Press  [シャッター](Shutter) or  (Shutter) to record a snapshot.
- ▶ Press  [保存](Store) to store the photo.

Pressing  [ムービー](Movie) in the Photo mode changes to the Movie mode.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA



 
## English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

From the stand-by screen: Press  . ▶ Press  . ▶ Press  . ▶ Press  . ▶ Press  .

## Other Handy Features

### ● Manner Mode

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Manner mode.

### ● Take A Message Feature (Voice Recording)

From the stand-by screen: Hold down  for at least one second.

Repeat the above operation to disable the Take A Message feature.

### For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)