




# W31T

## English Simple Manual

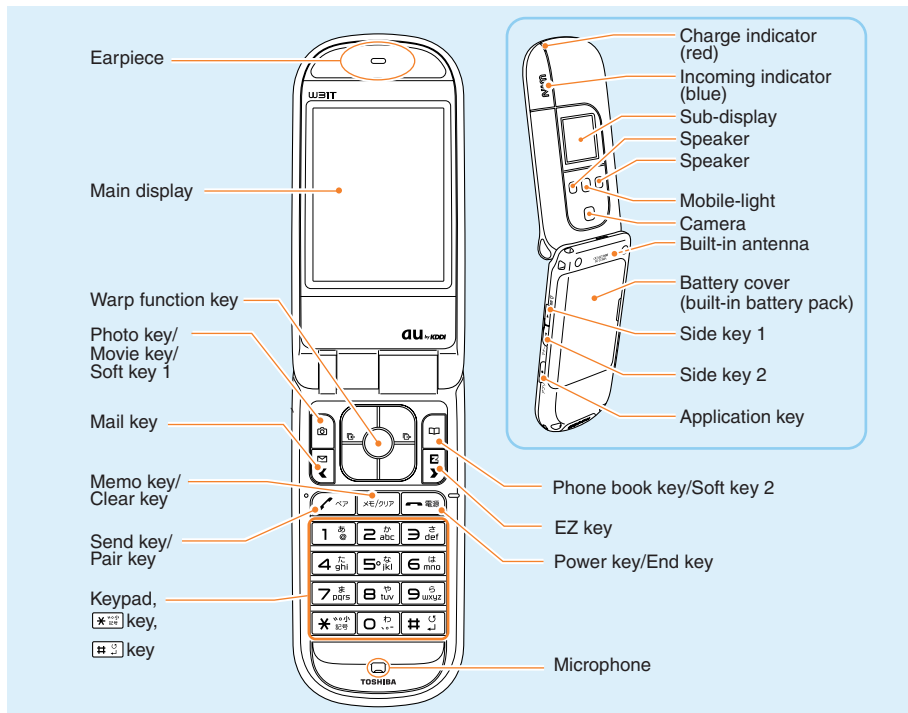

### Turning the Power On and Off

- Turning the power On  
Press and hold  for more than one second.
- Turning the power Off  
Press and hold  for more than one second.

### Setting the Date and Time

You can set the phone to display the date and time on the stand-by screen. When this setting is enabled, the W31T will receive current date and time information for the local service area, and the date and time will be updated accordingly.

From the stand-by screen : press  ➡ press  ➡ press  ➡ press  to select [ON] ➡ press  [決定] (OK).

## Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press ➡ press .

## Making/Answering a Call

### ● Making a Call

From the stand-by screen: enter the phone number ➡ press .

To end the call: press .

### ● Answering a Call

Press while the phone is ringing.

To adjust the earpiece volume during a call: press ➡ press [OK].

## Storing an Entry in the Phone Book/Searching for a Phone Book Entry

### ● Storing an Entry

From the stand-by screen: press and hold for more than one second ➡ press to select the item ➡ press [選択] (Select) to enter the data ➡ press [登録] (Add) ➡ press [登録] (Add).

### ● Searching for an Entry

From the stand-by screen: press to display the different rows (hiragana row: あ, か, さ, た, な, は, ま, や, ら, わ, A, 他 others) Search screen ➡ press to select the hiragana row in which the entry is stored ➡ press to select the name ➡ press [選択] (Select) ➡ press to open [サブメニュー] (Option) ➡ press [編集] (Edit) to display the Phone Book Entry details screen.

## Configuring E-mail and EZweb Default Settings

Before using the E-mail and EZweb services, you must configure the default settings.

When you configure the default settings, your E-mail address will be registered, allowing you to send and receive E-mail as well as to access the Internet.

From the stand-by screen: press , , or ➡ configure default settings ➡ press [OK].

## Using E-mail and C-mail

### ● E-mail






If you subscribed to the EZweb service when you purchased the W31T, you will be able to use the E-mail service immediately. If you did not subscribe to the EZweb service, please contact the au shop for further information. Make sure that you configure the default settings before using the E-mail and EZweb services for the first time. (See "Configuring E-mail and EZweb Default Settings" above.)

#### • Sending an E-mail Message

From the stand-by screen: press ➡ press [新規作成] (New Mail) ➡ press [選択] (Select) to select [宛先] (To) ➡ press [選択] (Select) ➡ press [直接入力] (Input address) to enter the recipient's address ➡ press [確定] (Decide) ➡ press [確定] (Decide) ➡ press to select [件名] (Subject) ➡ press [選択] (Select) to enter the subject ➡ press [確定] (Decide) ➡ press to select [本文] (Body) ➡ press [選択] (Select) to enter your message ➡ press [確定] (Decide) ➡ press [送信] (Send) ➡ press to select the item ➡ press [選択] (Select).

### • Reading a Received E-mail Message

When you receive E-mail messages, [Eメールあり x件] (x New E-mail) will be displayed on the stand-by screen. "x" represents the number of messages.

**From the stand-by screen:** press  to select [Eメールあり x件] (x New E-mail) ➡ press  ➡ press  [選択] (Select) to select [メインフォルダ] (Main Folder) ➡ press  to select the E-mail message ➡ press  [選択] (Select).

### ● C-mail

#### • Sending a C-mail Message

**From the stand-by screen:** press and hold  for more than one second ➡ press  [新規作成] (New Mail) to enter your message ➡ press  [確定] (Decide) ➡ press  to select [電話番号入力] (Input phone number) ➡ press  [選択] (Select) to enter the recipient's phone number ➡ press  [確定] (Decide) ➡ press  [送信] (Send).

 


#### • Reading a Received C-mail Message

When you receive C-mail messages, [Cメールあり x件] (x New C-mail) will be displayed on the stand-by screen. "x" represents the number of messages.

**From the stand-by screen:** press  to select [Cメールあり x件] (x New C-mail) ➡ press  ➡ press  to select the C-mail message ➡ press  [選択] (Select).

## Using EZweb

EZweb is an information service that allows you to enjoy easy Internet access from your au mobile phone. You can enjoy this service wherever the signal reaches. To use the EZweb service, separate subscription is required. (Additional charge is needed.) If you did not subscribe to the EZweb service when you purchased the W31T, please contact the au shop or contact the customer service by phone. If you subscribed to the EZweb service when you purchased your phone, you will be able to use the EZweb service immediately. Make sure that you configure the default settings before using the E-mail and EZweb services for the first time. (See "Configuring E-mail and EZweb Default Settings.")

**From the stand-by screen:** press  ➡ press  to select [トップメニュー] (Top Menu) ➡ press  (OK) ➡ select the website.

## Using the Camera (Movie Clips/Photos)











### ● Recording a Movie Clip

**From the stand-by screen:** press and hold  for more than one second ➡ press  [録画] (Record) or press  to start recording ➡ press  [保存] (Save) to save the movie.

To stop recording: press  [停止] (Stop) during recording.

To switch from Movie mode to Photo mode: press  [写真] (Photo) .

#### If the W31T is folded

**From the stand-by screen:** press  or  to select the PHOTO & MOVIE screen ➡ press  ➡ press  to select [ムービー] (Movie) ➡ press  ➡ press  [録画] (Record) to start recording ➡ press  ➡ press  or  to select [保存] (Save) ➡ press  to save the movie.

To stop recording: press  [停止] (Stop) during recording.

## ●Taking a Photo

From the stand-by screen: press  ➡ press  [撮影] (Shoot) to take a photo ➡ press  [保存] (Save) to save the photo.

To switch from Photo mode to Movie mode: press  .

**If the W31T is folded**

From the stand-by screen: press  or  select the PHOTO & MOVIE screen  press  press  or  to select [フォト](Photo)  press   press  to take a photo  press   press  or  to select [保存](Save)  press  to save the photo.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA

0 0 5 3 4 5 1 2 1 2 1 2 3 Press

↑ International access code      ↑ Country code (USA)      ↑ Phone number

Area code

## English Announcement Function


This function allows you to play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press  ➡ press  ➡ press  ➡ press  ➡ press  [発信] (Call).

## Other Handy Features

● Manner Mode

From the stand-by screen: press  ➡ press  to select [通常マナーモード] (Normal Manner mode) ➡ press  [選択] (Select).

To cancel Manner mode: press and hold  for more than one second from the stand-by screen.

## ●Setting the Voice Record Function

From the stand-by screen: press and hold  for more than one second.

To cancel the Voice Record function: press and hold  for more than one second from the stand-by screen.

**For inquiries, please contact**

### au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)