# Basic Manual



W41CA



Contents/Ready

Phone Call

Inputting Characters

Address Book/ Pair Function

Mail/ Hello Messenger

Camera

**EZweb** 

EZ Navi

EZ FeliCa

EZ · FM

PC site viewer

Smart Mode/ Teens Mode

Other Functions

Troubleshooting/ Remote Auto Lock

Index


#### Introduction


Thank you for purchasing the W41CA.

Before using it for the first time, be sure to read the W41CA Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

#### Printed Manuals for the W41CA (Japanese) -

The W41CA comes with a Basic Manual and an Instruction Manual.

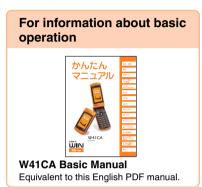

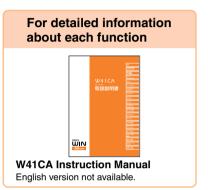

The following information is also available on the au website.

- To download the Basic Manual or Instruction Manual (http://au-pro.kddi.com/phone/torisetu/index.html)
- To access a keyword searchable au online manual (http://www.au.kddi.com/manual/index.html)

You can also access the au online manual using EZweb.

#### **EZweb Access**

EZトップメニュー(EZ Top Menu)

- →料金・申込・インフォ(Charges, Applications, and Info)
- →auオンラインマニュアル(au Online Manual)

If you have any trouble with your W41CA, please visit the CASIO COMPUTER CO., Ltd. website and find out your problem before calling for professional repairs.

- From your W41CA → http://ez.casio.jp/faq/
- From your PC → http://www.casio.co.jp/k-tai/fag/



The typeface, fonts, and colors of the texts on the screens shown in this manual may differ from the actual contents. Also, certain icons and the scroll bars may be omitted.

## **Cellphone Etiquette**

### Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

## Some locations do not allow the use of cellphones.

- Using a cellphone while driving is both dangerous and prohibited by Japanese law.
- Using a cellphone inside of an aircraft is prohibited by law. Be sure to turn off your cellphone before takeoff.



## Watch out where you use your cellphone, and keep your voice down.

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain permissions first.

## Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities concerning the use or possession of cellphones.



## **Cellphone Basics**

#### **Features**

#### **Camera**

Shoot photos and record movies, and send them by e-mail.

Page **62** 



#### PC site viewer

View WEB sites created for viewing on PCs.

Page **92** 



#### **EZ Navi**

EZ Navi Walk, Position Search, and Area Message allow you to get various kinds of location information. They are all built-in functions.

Page **80** 

#### EZ FeliCa

Use the cellphone for shopping by using e-money, or use it as member's cards, point cards, and so on.

Page **84** 

#### **Hello Messenger**

Enjoy meeting with the members using our original cartoon-like characters.

Page 58

#### **Hot Key**

Select either
"Hot Dial" or "Hot
Buzzer" as the Hot
Key function.

Page 110

#### Mail

Send mail messages to other cellphones or to PCs.

Page 48



#### PC document viewer

Display Word files, Excel files or PDF files, and so on.

#### **EZweb**

Download "Chaku-Uta®", wallpaper, and other data.

## **Manner Mode and Easy Voice Memo**

#### **Manner Mode**

Use Manner Mode to turn off the ring tone so as not to bother others around you.



While the standby screen is displayed, hold down [37-] for about one second.

Page **33** 

#### **Easy Voice Memo**

If you cannot answer a call, Easy Voice Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down for about one second.

Page **34** 

# **Checking Power, Signal Strength, and Battery Level**

#### Normally leave the phone turned on.



The phone needs to be turned on to make and receive calls.

Hold down for at least 1.5 seconds to turn on the phone.

Page **14** 

## You cannot talk on the phone if it is unable to receive a signal.



Signal strength is low in some areas, even if they are within the service area.

indicates the current signal strength. Page 14

#### Keep an eye on the battery level.



The phone may not function properly if battery power is low.

indicates the current battery level.

Page **14** 

# Never use your cellphone while driving!

Holding a cellphone in your hand, talking on a cellphone, or looking at a cellphone display to send mail or to perform any other operation while driving is prohibited by Japanese law. (Revised Traffic Control Law, effective November 1, 2004)



X Reading mail or looking at the display.



X Holding a cellphone in your hand to talk.

Turn off your cellphone or use Drive Mode while driving.

#### **Drive Mode**

In Drive Mode, the phone will play the message "ただいま車を運転しています。・・・" (I am driving right now...), and then ask the caller to leave a message using Easy Voice Memo.

While the standby screen is displayed, press  $\boxed{2^{\frac{r}{L}}}$ , and then press  $\boxed{1^{\frac{s}{L}}}$  (ON). Next, press  $\boxed{2^{\frac{r}{L}}}$  (Drive Mode) to enter Drive Mode.

# Beware of spam and one-ring calls!

#### **How to Combat Spam**

You can set up mail filters to block specific mail or mail identified as "未承諾広告※" (unsolicited advertisement), which often includes spam.

Your cellphone has the following filters to block spam.

- ・未承諾広告フィルター (unsolicited advertisement filter)
- ・アドレスフィルター (address filters)
  - -指定拒否設定 (blocks specific mail)
  - -指定受信設定 (receives specific mail)





### Beware of one-ring calls!

A "one-ring call" (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

The icon at the head of an incoming record indicates that the call



indicates that the call rang for only four seconds or less.

This indicates a possible "one-ring call."

Page **29** 



## **Disaster Message Board Service**

#### **Disaster Message Board**

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the "災害用伝言板" (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking the safety information

- Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.\*\*
  - Disaster Message Board information can be accessed from another type of cellphone (except for TU-KA), PHS, or PC at <a href="http://dengon.ezweb.ne.jp/">http://dengon.ezweb.ne.jp/</a>.


Access method

**Image: Top Menu ▶▶▶ 災害用伝言板** 

(Disaster Message Board) 🔪

http://dengon.ezweb.ne.jp/



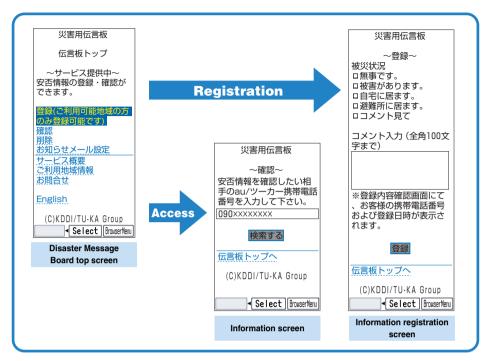

- \*Registration contents are retained for up to 72 hours.
- ※You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered entries, automatically overwrites the oldest entry.
- \*You can view a Disaster Message Board demonstration at:

□ → Top Menu → 料金・申込・インフォ
 → 災害用伝言板 (デモ版)

(Charges, Applications, and Info) (Disaster Message Board (Demo))

\*\*To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

## Contents

Cellphone Etiquette	1
Mind your manners!	1
Cellphone Basics	2
Features	2
Manner Mode and Easy Voice Memo	
Checking Power, Signal Strength, and Battery Level	
Beware of spam and one-ring calls!	
Disaster Message Board Service	6
Contents	8
Ready	10
Checking the Contents of the Package	10
Names of Parts	11
Charging the Battery Pack Turning On Power	
Initial Values	
Personal Identification Numbers and Passwords	
Selecting English as the Display Language  Operation Basics	
Display Indicators	
Main Menu	20
Viewfinder Position and Self-portrait Position	
Basic Operations in Viewfinder Position	
Looking Up Your Current Phone Number and E-mail Address	24
Changing Your E-mail Address	26
Phone Call	28
Making a Call	
Answering a Call	
Redialing(Outgoing Records/Incoming Records) One-ring Calls	
Changing the Ring Tone	
Adjusting the Ring Tone Volume	32
Adjusting the Earpiece Volume during a Call	
Turning On Manner Mode Turning On Easy Voice Memo	
Playing an Easy Voice Memo	
Inputting Characters	36
Inputting an E-mail Address	
Inputting Pictographs and Useful Sentences	38
Address Book	40
Registering an Address Book	40
Editing an Address Book Record	
Adding Outgoing or Incoming Record Data to the Address Book	
Pair Function	
Registering a Pair Partner	
Making a Phone Call, Sending Mail, Invite a Pair Partner to a Hello Messenger Meeting	
Mail	48
Using E-mail	
Using C-mail	
Creating and Sending E-mail Messages	
Reading an E-mail Message with an Attached Photo or Movie	53
Replying to a Received E-mail Message	54
Avoiding Spam Creating and Sending C-mail Messages	
Reading Received C-mail Messages	
U	

Hello Messenger58
Displays the Hello Messenger Menu 59 Invite the Members to the Meeting 60 When You Get an Invitation Message to Join 61
Camera Features62
Camera64
Shooting a Photo
EZweb72
Using EZweb       72         Displaying the EZ Top Menu       73         Bookmarking Sites You Frequently Access       74         Viewing a Bookmarked Site       75         Downloading Chaku-Uta®       76         Downloading Chaku-Uta-Full®       77         Checking Charges       78         EZ Channel       79
Security Navi Features82
EZ FeliCa84
Communicating with Reader/Writer 85 Setting FeliCa Lock 86 Using FeliCa-supported EZ apps 87
EZ•FM88
Before using EZ•FM
PC site viewer93
Mastering Operation Basics
Mastering Operation Basics
Mastering Operation Basics 93 Using Standby Assignment 94  Smart Mode 96
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108         Using Teens Mode       108         Turning on Teens Mode       109
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108         Using Teens Mode       108
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108         Using Teens Mode       108         Turning on Teens Mode       109
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108         Using Teens Mode       109         Other Functions       110         Hot Key Features       110
Mastering Operation Basics       93         Using Standby Assignment       94         Smart Mode       96         Entering Smart Mode       97         Using the Smart Mode Main Menu       98         Adding Data to the Address Book in Smart Mode       99         Using the Address Book in Smart Mode       101         Creating and Sending E-mail Messages in Smart Mode       102         Shooting a Photo in Smart Mode       105         Viewing Photos in Smart Mode       106         Teens Mode       108         Using Teens Mode       109         Other Functions       110         Hot Key Features       110         Extension Mode       111

 
## Ready

Before using the W41CA, check the contents of the package comes with your W41CA. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn the power on, etc.



## **Checking the Contents of the Package**


W41CA



Battery pack (41CAUAA)



 Casio flat-type stereo earphones 03 (03CAQPA)



- CD-ROM
- Warranty (Japanese)
- EZ FeliCa Introduction Guide (Japanese)
- Basic Manual (Japanese)



Desktop holder (41CAPUA)



Casio USB cable 01 (01CAHUA)




- Operating Precautions (Japanese)
- Global Expert User's Guide (Japanese)
- Instruction Manual (Japanese)




#### @@@D

- © The miniSD memory card is not included.
- An AC adaptor is not included. It is up to you to purchase a common AC adaptor 01 (option).

#### **Names of Parts**

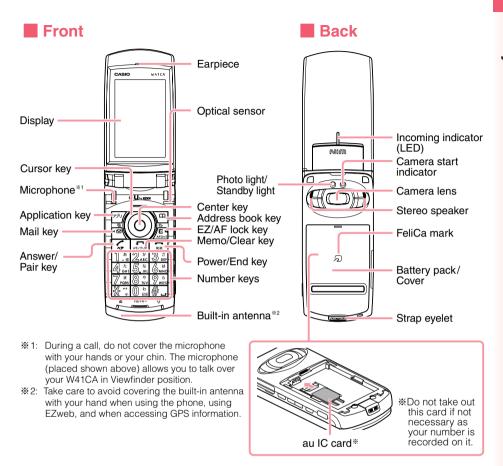


#### Side

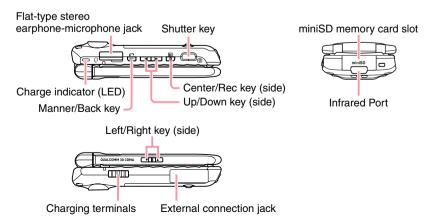

### **Charging the Battery Pack**

The battery pack that comes with the phone is not fully charged when you purchase it. Be sure to charge the battery pack before using the W41CA for the first time. Charging takes about 120 minutes. You should recharge the battery pack whenever the battery level icon shows  $\P$  or  $\P$ .

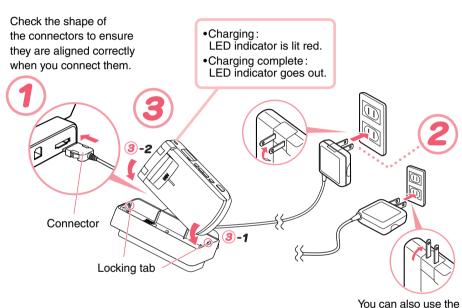

plug by extending the prongs like this.

### ! CAUTION

- You must purchase a common AC adaptor 01 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- Pull out the connector of the common AC adaptor 01 (option) straight so as to be parallel to the W41CA or the desktop holder connector terminal when you connect them.

## 1

## Connect the common AC adaptor 01 (option) to the desktop holder.

Check the shape of the connectors to ensure they are aligned correctly before you connect.

Trying to force a connection may damage the connectors.

## 2

Fold out the power plug of the common AC adaptor 01 (option), and then plug it into a 100V AC power outlet.

Attach the corner of the W41CA (as shown on the left page) into (3-1), then place the other corner of the W41CA into (3-2) of the desktop holder.


This will make the W41CA charge LED indicator light red, and the battery level icon to change according to the following pattern: 

When charging is completed, the battery level icon will show 
and the LED indicator will go out.

When charging the battery with your W41CA in Viewfinder position, check the battery level icon shown on the screen. When charging in Viewfinder position, the screen keeps illuminating with lowered brightness. If you set "Func in Charge" to "MEDIA STAND," the screen keeps illuminating with the normal brightness.

To remove the W41CA from the desktop holder, lift it straight up.

※ You can connect the common AC adaptor 01 (option) to the W41CA to charge the battery pack.

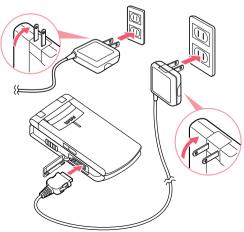

Check the shape of the connectors to ensure they are aligned correctly when you connect.


### **Turning On Power**

1

## Hold down for at least 1.5 seconds.



The standby screen appears.

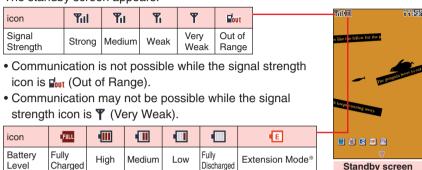

- - **\* Using Extension Mode**

Using the Extension Mode, W41CA automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function that you can still check Outgoing/Incoming Records, Content of e-mail, Address Book, Schedule and so on when necessary. In this case, you can only use the functions which needs no radio wave.

Page 111

#### ■ Turning off power

Hold down for about one second.

### **Initial Values**

The initial values are as follows.

Lock No.	1234	Font Size	Add Book Char	Middle
Teens Lock No.	1234		Input	Middle
Caller ID	On		Mail Char	Middle
Incoming Display	On		EZweb Char	Small
Profile	Blank		Data Folder Char	Middle
			Text Memo Char	Middle

# Personal Identification Numbers and Passwords

The W41CA lets you use the numbers and passwords described below. Be sure to take steps so you do not to forget your numbers and passwords. You will need them to perform various operations and to access subscription services.

#### **Personal Identification Number (PIN)**

	① For remote operation of the Voice Mail and Call Transfer from a standard phone
Usage Examples  ② For inquiries, applications, and service modifications using Customer Service Center voice guidance, au website, and	
	③ For changing e-mail settings
Initial Values	4-digit number you entered on your subscription contract

#### Lock No.

Usage Examples	For modifying various phone settings
Initial Values	1234 (4-digit number)

#### Teens Lock No.

Usage Examples	For modifying various phone settings in Teens Mode
Initial Values	1234 (4-digit number)

#### **EZ Password**

Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Values	4-digit number you registered for your first fee-based content subscription

#### **Premium EZ Password**

Usage Examples	① For entering and canceling subscriptions for EZweb fee-based content paid for using "まとめてau支払い" (combined au payment service)
Coage _nampion	② For purchasing products from EZweb sites that use "まとめてau支払い" (combined au payment service)
Initial Values	4 to 8-digit number you registered for your first "まとめてau支払い" (combined au payment service) payment

# **Selecting English as the Display Language**

While the standby screen is displayed, press .





Use ❖ to select "機能設定" (SETTINGS), and then press ◉ (OK).





Press 3 (画面表示/照明) (ScreenSetup/DisplayLighting).







#### 4 chil (Set Language).

ベア	<b>↓</b> ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	4.8
1 .s	2 h	3 to
4 tc GHI	5 な JKL	6 H
7 # PQRS	8 <sup>*</sup>	9 5 WXYZ
X **	d 0	#





#### 2<sup>h</sup> (English).


This selects English as the display language.

1	pt.	£	_	-	-
^	P	メモ/	クリア	電	源
1	あ	7	か	2	さ
	. @	_	ABC	J	DEF
1	ħ	E	な	Z	は
4	GHI	C	JKL	0	MNO
7	ŧ	0	10	0	6
/	PQRS	0	TUV	7	WXYZ
V	W 0	$\cap$	b	#	
$\overline{\Lambda}$	ds	w	108	1 #	. +

! CAUTION

Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day format.

## **Operation Basics**

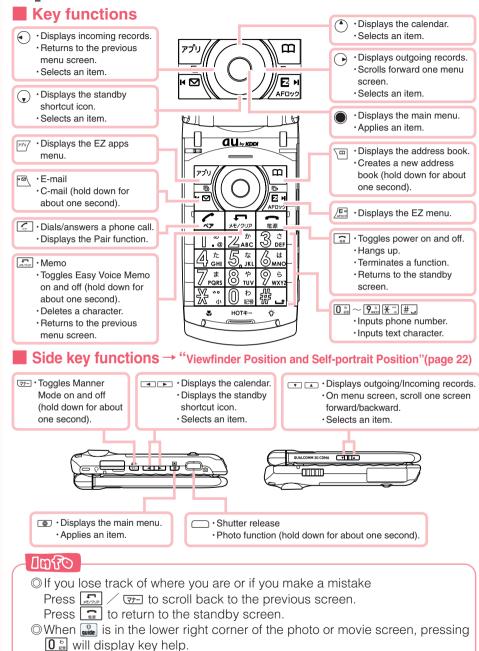

○ Holding down ○ / ⑤ for about one second toggles side key's disabling feature on and off while the cellphone is folded. To cancel the side key's disabling feature, follow the above procedure with the phone unfolded.


## **Display Indicators**

 The following explains the main icons that appear on the standby screen.




0	Yıl	Signal strength
2	•	Battery level
3	so	The miniSD memory card (commercial item) is inserted into the cellphone.
4	4	During a call
6	A/@	EZ apps (BREW®)/Hello Messenger on
6	CE ≝	Unread mail
7	<b>◎</b> / ♣	au Music Player/SD-Audio Player on
8	ĒŃ	EZ·FM on
9	4/12@30 11:23	Current time The date and time are set automatically.
•	2	FeliCa Lock on
•		Selects the user defined icons such as calculator, Emission Off Mode, Mode Settings, Extension Mode, "Note Pad 01 (The guide for CASIO mobile site "CA'zCAFE")", by pressing  and
<b>P</b>	<b>=</b>	Easy Voice Memo on
13	<b>P</b>	Manner Mode on
1	×	Ring tone off
<b>1</b>	<b>}</b>	Vibrator on
16	©N ON	EZ Channel is in use.

#### Key symbols used in this manual




 The cursor key described in this manual using the key symbols shown below.




### **Main Menu**

Pressing while the standby screen is displayed displays the main menu. Use to select the icon, and then press (OK) to access the function associated with the icon.

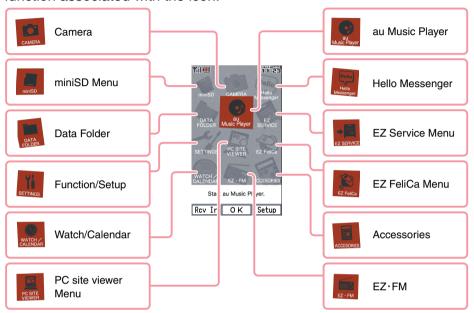

#### Using the Main Menu


Example: To display the setting screen from the main menu.

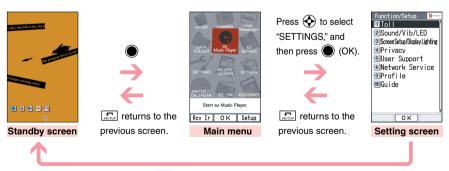

returns to the standby screen.

#### Using Soft Keys

 Soft keys are the keys you use to execute the functions along with the bottom of the screen. The table below explains how to assign the soft keys to the on-screen functions. Note that the function of each soft key depends on the currently displayed screen.




Left soft key 279/	Executes the function on the left.
Center soft key	Executes the function in the center.
Right soft key 🖽	Executes the function on the right.

#### Using Menus

Pressing the soft key that corresponds to the "Menu" at the bottom of the display will display a menu of various operations related to the function you are currently using.

Example: To open the photo monitor menu screen from photo monitor screen.

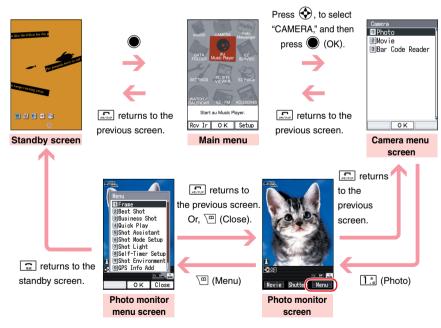


# Viewfinder Position and Self-portrait Position

You can execute the operations with your W41CA open, set in Viewfinder position or Self-portrait position.

- CAUTION -
- ©Rotate your W41CA display in the direction as illustrated below (within 180 degrees from the normal position). Gently rotate your W41CA display. Otherwise, you may damage your W41CA.
- ODuring rotating (motion 2-1), do not use your W41CA or force to give open-close motion. It may also cause damage.
- Open your cellphone display.
- Gently rotate the display 180 degrees clockwise.



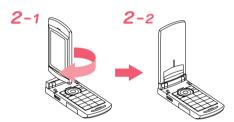


- ■When you set your W41CA in Viewfinder position
- Close your W41CA so as to make your W41CA display facing toward you.



Viewfinder position

). You can also take photos using W41CA as a large Viewfinder (digital camera-like).

 - When you set your W41CA in Self-portrait position
- Turn over your W41CA so as to make camera lens (equipped on the back of your W41CA) facing toward you.



Self-portrait position

You can take your self-portrait photo easily with this position.

# **Basic Operations in Viewfinder Position**

In Viewfinder position, you can view received mails or EZweb, and play
the songs listed with au Music Player function (by pressing side keys).
Instead of the � / ●, five kinds of side keys (☲-, ◉, ▾ ▴,
चि−ा returns to the previous screen

#### Key operations in Viewfinder position

Key	Description
₹7-	<ul> <li>Displays the Manner menu.</li> <li>Toggles Manner Mode on and off (hold down for about one second).</li> <li>Set the ring tone mute and stop the vibrator when there is an incoming call.</li> <li>Returns to previous screen.</li> <li>Returns to the standby screen (hold down for about one second).</li> <li>Hangs up (hold down for about one second).</li> </ul>
Y A	<ul> <li>Pressing  displays outgoing/incoming records.</li> <li>Pressing  bisplays Calendar/the standby shortcut icon.</li> <li>Moves the cursor on the screen (instead of  (Up/Down/Left/Right key).</li> </ul>
0	<ul> <li>Displays the Main menu</li> <li>Executes the function in the center part of the bottom of the screen (instead of  (Center key).</li> <li>Answers the call when there is an incoming call (hold down for about one second).</li> </ul>
	<ul> <li>Uses as shutter key when you shoot photos</li> <li>Uses as recording key when you record movies</li> <li>Saves photos or movies</li> <li>Activates photo function (hold down for about one second).</li> </ul>

#### Organ

- ©During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly. During a call or recording a call, the image you see on the screen is upside down.
- During a call, it is recommended to use your cellphone opened.
- On this manual, operation procedures are usually for the normal position (with display facing inward toward the keypad). For operations in Viewfinder or self-portrait position (with display facing outward), which position you can use is clearly mentioned.
  - The � is always equivalent to Also, The is always equivalent to •.

### **Initializing E-mail and EZweb**

An EZweb subscription is required to use e-mail and EZweb. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

\*You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.

1

While the standby screen is displayed, press <sup>▶</sup>.





2

#### Press (OK).

Wait until the phone connects to the server for initialization.





3

After your automatically assigned e-mail address appears, press (OK).



Odal)

Pressing ( also allows you to make initial settings.

## Looking Up Your Current Phone Number and E-mail Address



While the standby screen is displayed, press .





Use to select "SETTINGS," and then press (OK).





Press 0 to (Profile).

Your current phone number and e-mail address appear.





You can also look up your phone number and e-mail address by pressing and then  $\boxed{0}$  while the standby screen is displayed.

### **Changing Your E-mail Address**

E-mail address

\[ \triangle \triang

While the standby screen is displayed, press <sup>™</sup>.





Press 8 to (E-Mail Setup).





Press 7. (Other Setup).


When the EZweb connection confirmation screen appears, press  $1^{\frac{5}{8}}$  (Yes).





 Press 1. (Eメールアドレスの変更) (Change E-mail Address).





Enter your PIN, press (OK), use to select "送信" (Send), and then press (Select). Use to select "承諾する" (Accept), and then press (Select).





Use to select the text box, and then press (Edit). Enter the e-mail address you want, and then press (OK).





To input an e-mail address

→ "Inputting an E-mail Address" (page 37)

Use 🗘 to select "送信" (Send), and then press (Select).

The e-mail address confirmation screen appears.





Press to select "OK," and then press (Select).



The message "正常に変更されました。" (Update is complete.) appears to indicate that your e-mail address has been changed.

#### Ovail

- Your PIN is the 4-digit number you entered on your subscription contract. If the wrong PIN is entered three times a day, the setting operation will be disabled until the following day.
- If your e-mail address won't change in step 7:
  The new e-mail address you entered may be registered by someone else already. Try entering a different address.

## **Phone Call**

## **Making a Call**

While the standby screen is displayed, use the number keys ( $0 \frac{1}{8}$  to  $9 \frac{1}{4}$ ) of the keypad to enter the phone number you want to call.

RP.	√ √ √ √ √ √ √ √ √ √ √ √ √ √ √ √ √ √ √	
1 .e	2 m	3 to the
4 t GHI	5 な JKL	6 MNO
7 B PQRS	8 tuv	9 S
X	0 <sup>₺</sup>	# _

When calling a standard phone, you also need to enter the area code.

2

#### Press 🛴.

After you finish a call, press to hang up.

The caller always hears your voice even when you cover the microphone with your hands.

-	^	£		-	-
R	P	メモ/	クリア	100	æ
1	あ	2	か	3	ż
ш	. @	$\angle$	ABC	2	DEF
1	た	5	な	7	は
+	GHI	J	JKL	0	MNO

#### Send Methods

Call : Your phone number is provided to the party you are calling in

accordance with the caller ID setting of your phone.

184 Add: Your phone number is not provided to the party you are calling.

186 Add: Your phone number is provided to the party you are calling.

## **Answering a Call**

1

Press to answer an incoming call.

After you finish a call, press 😨 to hang up.

₹7	メモ/クリア	-	
1.0	2 m	3 to DEF	
4 to GHI	5 ts	6 MNO	

#### @@@@

#### **Display for Incoming Calls**

0900007XXXX

If the caller's name is in your address book, it appears on the display. If not, only the caller's phone number is displayed.

ID Unsent

A message like this appears when the phone number of the caller is not provided for some reason.

ID Unsent : The caller's phone refused to send its phone number

Pay Phone : The call is from a pay phone.

Not Support: The call is from a phone that does not support caller ID.

#### **Missed Call Notification**



The message "■ Call X" will be on the display if you did not answer one or more calls. Press (OK) to check incoming records (caller phone number, etc.).

To redial a number

→ "Redialing (Outgoing Records/Incoming Records)" (page 29)

## Redialing (Outgoing Records/ Incoming Records)



While the standby screen is displayed, press ().

: Displays outgoing records.

: Displays incoming records.





Use to select the record whose number you want to dial, and then press .



#### ाण दिल

The phone stores up to 50 records each for the outgoing records and incoming records. When a record is created while there are already 50 records in memory, the oldest current record is deleted automatically to make room for the new one.

## **One-ring Calls**

#### ■ What is a "one-ring call"?

A "one-ring call" is an incoming call that rings your phone only once, which aims it to be stored in your incoming records. If you redial the number shown in your incoming records, often you are connected to a dating service or some other service that may bills you very high charges. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.

#### One-ring call indicator



The icon indicates an incoming call you did not answer.
 The icon indicates an incoming call that rang for four seconds or less.

These calls may be one-ring call with high possibility.

## Changing the Ring Tone &



While the standby screen is displayed, press .





Use � to select "SETTINGS," and then press (OK).





Press 2<sup>h</sup>/<sub>ABC</sub> (Sound/Vib/LED).






 Press 1.\* (Incoming Call).











Press 1.\* (Fixed Sound).

To hear the currently selected ring tone, press [759] (Check).





Use to select the ring tone you want, and then press (OK).



The ring tone is set.

#### **⊙**}@□

- You can also download a "Chaku-Uta®" from the Internet and use it for your ring tone.
  - → "Downloading Chaku-Uta®" (page 76)

## **Adjusting the Ring Tone** Volume

To adjust the ring tone volume, perform steps 1 through 3 under "Changing the Ring Tone" (page 30), and then continue with the following steps.



Press 1.5 (Incoming Call).

N.P.	メモ/クリア	8.8
1 . @	2 h	3 to DEF
4 to GHI	5 ts	6 st
7 # PQRS	8 <sup>†</sup>	9 5 WXYZ
¥	0 b	# 🗔



Press 1. (Volume).

To hear the ring tone at the current volume setting, press [75]/ (Play).





Use ( to adjust the ring tone volume, and then press (OK).



( : Increases volume.

Decreases volume.

#### 000al

Step-up: Ring tone volume gradually increases. Step-down: Ring tone volume gradually decreases.

: Ring tone does not sound.

To display the "Step-up" and "Step-down" settings, select volume level 5,

and then press (1).

To display the "Mute" setting, select volume level 1, and then press .

# Adjusting the Earpiece Volume during a Call



During a call, use 🗘 to adjust the volume.



(\*): Increases volume.

Decreases volume.



You can adjust the earpiece volume (level 1-6).

When you set the maximum volume (level 6),  $\ll$  is displayed on the screen.

## **Turning On Manner Mode**

While Manner Mode is set to on, the phone alerts you to incoming calls by vibrating.



While the standby screen is displayed, hold down one second.



This turns on Manner Mode, the Picon appears on the display while Manner Mode is turned on.



Turning on Manner Mode also turns on Easy Voice Memo, which is indicated by 
on the display.

While Manner Mode is set to on, the phone vibrates without sounding its ring tone.

To turn off Manner Mode, hold down 😎 for about one second again.

# **Turning On Easy Voice Memo**



1

While the standby screen is displayed, hold down for about one second.

₹7	<b>テ</b> メモ/クリア	
1 .e	2 h	3 to DEF
4 th	5 tk	6 MNO
7 #	8 tuv	9 5 WXYZ
X	0 p	#



This turns on Easy Voice Memo, the icon appears on the display while Easy Voice Memo is turned on.

You can use Easy Voice Memos (up to 4 memos), and each memo can contain up to 20 seconds recording time.

If a new Easy Voice Memo is recorded when there are already four memos in memory, the oldest, unprotected memo that has already been played back is deleted automatically to make room for the new one. Protected Easy Voice Memos are not deleted.

To turn off Easy Voice Memo, hold down for about one second again.

**∂∂a**0

#### **Using the Voice Mail**

The Voice Mail can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.

#### Playing an Easy Voice Memo

 


#### When there is a recorded Easy Voice Memos

The message " Call" and " EasyVoiceMemo" appear on the standby screen.



Select " Call," and then press (OK).










 Use (\*) to select the record with the 🖪 icon. and then press (Disp).







Use (\*) to select "EasyVoiceMemo," and then press (Play).



The easy voice memo plays back.

#### 0000 I

To delete an Easy Voice Memo, press 4 to 2 while the standby screen is displayed. Select the Easy Voice Memo you want to delete, press (Menu), and then 1. (Delete). Next press 1. (Delete One), and then press 1.® (Yes).

### **Inputting Characters**

Input characters using keypad keys  $0_{\text{ES}}^{\text{b}}$  through  $9_{\text{wxr}}^{\text{b}}$ .

The table below shows the characters each key cycles through when you press it.



	Number of Presses								
Key	1	2	3	4	5	6	7	8	9
1.8		@	-	-	/	:	~	1	
2 **	а	b	С	А	В	С	2		
3 to DEF	d	е	f	D	Е	F	3		
4 <sup>2</sup> GHI	g	h	i	G	Ι	- 1	4		
5 ts	j	k	I	J	K	L	5		
6 <sub>MNO</sub>	m	n	0	М	Z	0	6		
7 s	р	q	r	S	Р	Q	R	S	7
8 **	t	u	V	Т	C	V	8		
9 <sub>wxvz</sub>	w	х	У	z	W	X	Υ	Z	0)
0 to	O . @ / : ! ? ~ ( ) * # + , ^ ; < = > \$ $\times$ % & [ ] ' ` {   } " (Space)								
X **	Toggles between upper case and lower case (Example: $a \Leftrightarrow A$ ).								
# 🚅	Returns to the previous character.								

• In order to input consecutive characters that are assigned to the same key, press 🕑 to move the cursor, and then press input the next character.

#### (I) CAUTION -

#### Allowable Characters in Your E-mail Address

Your e-mail address (the part at the left of "@") can contain up to 20 characters, including single-byte English lower case letters, hyphens (-) and periods (.). Two periods (.) in succession are not allowed, and a period cannot be used as the first/end character of an address. Also, a zero (0) cannot be used as the first character.

**⊙**}@□

You can input a period (.) or "at" symbol (@) by pressing 1.\*

### Inputting an E-mail Address

Inputting "mark@ezweb.ne.jp"

In this example, we will input "mark@ezweb.ne.jp" for "<E-Mail Add1>." To input "<E-Mail Add1>," perform steps 1 through 6 under "Registering an Address Book" (page 40), and then perform the following steps.



1

#### Input "mark."

To input "m": Press 6 conce.

To input "a": Press  $2^{\frac{\dot{n}}{ABC}}$  once.

To input "r": Press  $7^*$  three times.

To input "k": Press 5 twice.

ペア	メモ/クリア	10.00	
1.0	2 m	3 to DEF	
4 tc GHI	5 لله	6 HA	
7 #	8 <sup>*</sup>	9 5 WXYZ	
V	U p	#	



2

Press (Menu).





3

Press 2<sup>th</sup>/<sub>ABC</sub> (Useful Sentence).

ペア	<b>レ</b> フメモ/クリア	4.8	
1.8	2 h ABC	3 to DEF	
4 th	<b>5</b> な以上	6 MNO	
7 #	8 <sup>*</sup>	9 5 WXYZ	
X	0 %	# 🗔	



4

Use 🗘 to select "@ezweb.ne.jp," and then press 🔘 (OK).

"mark@ezweb.ne.jp" is inputted. You could also input "@ezweb.ne.jp" by pressing  $0 \stackrel{\text{\tiny by}}{\text{\tiny beg}} 2 \stackrel{\text{\tiny th}}{\text{\tiny acc}}$ .





### **Inputting Pictographs and Useful Sentences**

The following procedure shows how to input pictographs and useful sentences on the text input screen.



1

Press (Char), and then 6 (Pictograph).

You can also select a pictograph by pressing #\_\_.





2

Use � to select the pictograph you want, and then press (Select).

Use and and let to scroll through the various categories of pictographs.

To input consecutive pictographs, press (Serial).





3

Press (Menu), and then 3 continuous (Useful Sentence).







## Use $^{\bullet}$ to select the useful sentence you want, and then press $^{\bullet}$ (OK).





Here we will select "Happy birthday!." You can also input "Happy birthday!" by pressing 1.5 | 7.5 |

#### ी प्राचित

The following shows the input screens for symbols (double-byte) and emoticons.

#### Symbol (Double-byte) Input



In step 1 of the above procedure, press (Char), and then (5) (&@) to display the "FullSym" (double-byte symbol menu).

#### **Emoticon Input**



In step 3 of the above procedure, press  $2^{\frac{b}{D}}$  (Emoticon) in place of  $3^{\frac{c}{D}}$  (Useful Sentence) to display the emoticon menu.

You can also display the emoticon menu by pressing X in place of  $\square$  (Menu) in step 3.

#### **Address Book**

### Registering an Address Book



While the standby screen is displayed, hold down for about one second.





Select " < Name >," and then press (Edit).





Enter the name, and then press (OK).

The <a></a> <a>Reading</a> is generated automatically when you enter a name. To input text

→ "Inputting Characters" (page 36)





Use to select
"S < Phone Number 1>,"
and then press (Edit).





### Enter the phone number, and then press (OK).

When entering the number of a standard phone, be sure to include the area code.







Use ♣ to select
"■ <E-Mail Add1>," and
then press ● (Edit).

If you do not want to enter an e-mail address, jump to step 8.





7

### Enter the e-mail address, and then press (OK).

To input an e-mail address

→ "Inputting an E-mail Address" (page 37)





8

Press (Reg).



#### @@@@

- The Address Book can contain up to 700 records.
- Address Book Records are numbered from 000 through 699. A new record is automatically assigned to the lowest available unused record number.
- An Address Book Record can also contain a website URL, street address, birthday, and other personal information.

### Editing an Address Book Record

Address...
Birthday...
Group...

**Example: To edit the phone number of "Tom Carter"** 

While the standby screen is displayed, press .





Use ♦ to select the record you want to edit, and then press (Menu).





Press 3 to (Modify).





Press 1. (Overwrite).











6

Make the changes you want, and then press 

(OK).

To delete characters, press 🚂.





7

Press 🖫 (Reg).



# Adding Outgoing or Incoming Record Data to the Address Book



While the standby screen is displayed, press, use to select the phone number you want to save, and then press (Menu).





: Displays outgoing records.

: Displays incoming records.

Press 4 th (Reg Add Book).





Press 1. (Reg New).

To enter the name, use the procedure starting from step 2 under "Registering an Address Book" (page 40).





### Dialing from the Address Book



While the standby screen is displayed, press , and then use to select the record whose phone number you want to dial.





Press (Disp).

The details screen of the record appears.





Use ( to select the phone number, and then press .



#### **Pair Function**

You can save up to five phone numbers (like frequently used ones from the address book). You can make calls, send mails to or use Hello Messenger with these saved numbers (called Pair Partners) more easily.



#### Registering a Pair Partner

While the standby screen is displayed, press .

If the Pair partner is not registered, the confirmation screen appears. Press (OK). Use • to select the 1 through 5 tab where you want to register the Pair partner.

	メモ/クリア	
1 . e	2 h	3 ±
4 /t GHI	5 ts	6 lt
7 #	8 <sup>†</sup>	9 s
<del>X</del> ",	0 b	#



Use ( to select "Register Check," and then press (OK).





Press 1. (Register).

NP.	大モ/クリア	E.E.	
1 .e	2 h	3 to DEF	
4 to GHI	<b>5</b> な以上	6 MNO	
7 # PQRS	8 <sup>†</sup>	9 B	
X	0 b	#	



Use to select the address book record for the person you want to register as a Pair partner, and then press (Select).





**5** Press (Reg).



#### Making a Phone Call, Sending Mail, Invite a Pair Partner to a Hello Messenger Meeting



1

While the standby screen is displayed, press .

√7	メモ/クリア	10.00
1.0	2 h	3 to DEF
4 to GHI	5 ts	6 MNO
7 # PQRS	8 <sup>*</sup>	9 5 WXYZ
X	0 b	#



2

Use to select the Pair partner.





3

Use ♠ to select "Call," and then press ♠ (OK).



Selecting "Send E-Mail", "Send C-Mail," and then pressing (OK) will display a screen for composing and sending an e-mail/a C-mail message. Next, continue from step 5 of the procedure under "Creating and Sending E-mail Messages" (page 50)/"Creating and Sending C-mail Messages" (page 56). After selecting "Hello Messenger," pressing (OK) will display the screen for inviting a Pair partner to a Hello Messenger meeting. Next, continue from step 4 of the procedure under "Invite the Members to the Meeting" (page 60).

#### **□**10000

In order to register a person as a Pair partner, that person's name, phone number, and other information need to be in the address book beforehand. Use the procedure under "Registering an Address Book" (page 40) to create the required record before trying to register a person as a Pair partner.



Your W41CA supports two types of mail: e-mail and C-mail.

#### **Using E-mail**


To use e-mail, you need to subscribe to an EZweb service. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 24).

E-mail makes you possible to exchange mails with a PC and with another cellphone that supports e-mail function.

You can send mail messages that contain up to 5,000 double-byte characters (10,000 single-byte characters), and you can attach photos and movies to e-mail messages.


- % You can send an e-mail up to five addressees at a time.
- ※ You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- % The sending and receiving operations may take longer when a mail message has data attached.

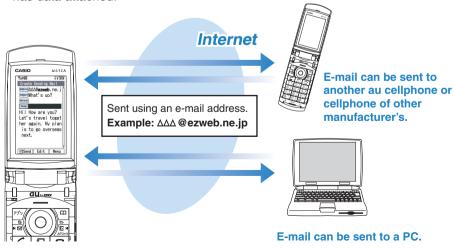

#### **Using C-mail**

C-mail lets you exchange text messages that contain up to 50 double-byte characters (100 single-byte characters) with another au cellphone that supports C-mails.



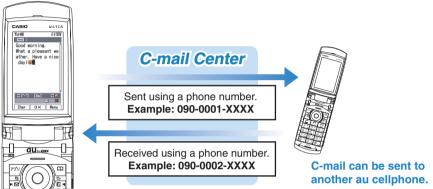

#### **About C-mail safe block function**

C-mail safe block function blocks C-mails that contain accessing URLs (http://△△△, https://△△△) or phone numbers in its body text.
 C-mail safe block function is set to on by default. If you want to receive C-mails that contain accessing URLs or phone numbers in their body texts, you can disable this function to receive such C-mails.

### **Creating and Sending E-mail Messages**



 
While the standby screen is displayed, press ♣♥, and then press 1.8 (Create New).

 




Select (Edit).

be sent.









Press 1. (Address Book), use to select an addressee, and then press (Select).

You can select an addressee from sending records, receiving records, or My Address, or you can enter an address.





Use to select the e-mail address you want to enter, and then press (OK).





Use ( to select ( subject), and then press (Edit).



Subject of the e-mail message.

Enter the subject, and then press (OK). Use (♣) to select □ , and then press (Edit).

Body of the e-mail message.





Enter the body text, and then press (OK).





Press [79] (Send) or .

"Photo Mail," "My Pictograph," "Easy Pictograph" are the auto address converter (a part of the e-mail address will be converted automatically). To use "Easy Pictograph" (free) or "My Pictograph" (paid) services, you need to subscribe to the EZweb contents, "絵文 字め~る" (Pictographs Mail).





Press 1. (Send).

The message "Sent." appears on the display after the e-mail message is sent.




## Reading Received E-mail Messages



#### When you receive an e-mail

The message " E-Mail" and appear on the standby screen.

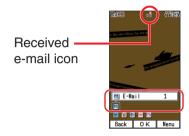

Select "E E-Mail," and then press (OK).





Press (OK).

☐: Indicates an unread message.

: Indicates an already read message.





Use to select the unread e-mail you want to view, and then press (Disp).



■ 4/11 lm:15:10
■ Tom Carter
■ I found a nice s
hop.

Hey, I found a nic
e shop.
I found it when in
the middle of wal
king. Also the per
son of the store

Reply

The received e-mail message appears. If all of the message cannot be

displayed, press to scroll.

Use and and to scroll between messages.

Press to return to the e-mail message list.

# Reading an E-mail Message with an Attached Photo or Movie



Example: To see a photo attached to an e-mail.

Use to select the e-mail message, and then press (Disp).





Use 🗘 to select a file name, and then press 🔘 (Rcv).





#### 

- © Photos or movies may be displayed within mails or may require the recipients of the mails to select file names and press (Play) to display those files, depending on the file sizes of the attached photos or movies.
- © The sending and receiving operations may take longer when a mail message has data attached.
- © Certain signal conditions may also cause e-mail sending and receiving to take longer than normal.

#### Replying to a Received E-mail Message

To reply to an e-mail message, perform steps 1 through 3 under "Reading Received E-mail Messages" (page 52), and then perform the following steps.



1

#### Press [7]/ (Reply).

You can also display the e-mail composition screen by pressing (Menu), and then 1 \* (Reply).





2

### Press (Edit), and then enter the body text.

is prefixed with "Re:," and the body text of the e-mail is quoted.

For the remainder of this procedure

→ Perform the procedure starting from step 7 under "Creating and Sending E-mail Messages" (page 50).



#### **Avoiding Spam**

It is recommended that you use our mail filter function to block spam.

KDDI Corporation provides a new service, "サポート設定" (Supportive settings) which allows you to choose filtering options by answering our questions shown on the screen.



#### Configuring Mail Filter Settings

 
Example: To access the "サポート設定" (Supportive settings)

- 1 While the standby screen is displayed, press ...
- 2 Press  $8^*_{\text{\tiny NU}}$  (E-Mail Setup)  $\rightarrow 6^{\text{\tiny LB}}_{\text{\tiny MNO}}$  (Mail Filter)  $\rightarrow 1^*_{\text{\tiny LB}}$  (Yes).
- 3 Enter your PIN, press (OK), follow the instructions displayed on the screen.

#### ■ "カンタン設定" (Simple Settings)

" サポート設定 "	(You can choose filtering options by			
(Supportive settings)	answering our questions			
	It is recommendable for those who want to			
	check the filtering conditions one by one.			
	,			
"フィルターレベル(高)"	You can block the all incoming mails from			
(Filter level (Strict))	PC.			
, , , , , , , , , , , , , , , , , , , ,	It is recommendable for those who use			
	only cellphones to send e-mails.			
"フィルターレベル(中)"	You can block the incoming e-mails from			
(Filter level (Medium))	specified senders.			
, , , , , , , , , , , , , , , , , , , ,	It is recommendable for those who are			
	bothered by specified spam senders.			
"フィルターレベル(低)"	You can block the incoming e-mails			
(Filter level (Normal))	containing "未承諾広告※" (Unsolicited			
(	advertisement) in their titles, and "なりす			
	ましメール" (Spoof e-mail)			
	It is recommendable for all e-mail users.			







#### **①如**②

You can prevent spam by changing your e-mail address. See "Changing Your E-mail Address" (page 26) for information about how to change your e-mail address.

### **Creating and Sending C-mail Messages**



While the standby screen is displayed, hold down for about one second, and then press 1. (Create New).





Select edits, and then press (Edit).





Press 1.5 (Address Book), use to select an addressee, and then press (Select).

You can also select a phone number from sending records or receiving records, or you can enter an address.





Use to select the phone number you want to enter, and then press (OK).





Use to select, and then press (Edit).
Enter the body text, and then press (OK).





6

#### Press [75] (Send) or \_\_\_\_.


When the C-mail reaches the other party, the message "Completed." appears, and the message is stored in your sending records.



#### **Reading Received C-mail Messages**

#### When you receive a C-mail.

The message " C-Mail" and appear on the standby screen.

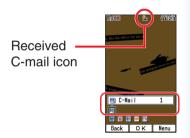


1

Select "☐ C-Mail," and then press (OK).

 : Indicates an unread message.





2

Use + to select the unread C-mail you want to view, and then press - (Disp).



The received C-mail message appears.

Use and to scroll between messages.


Press to return to the C-mail message list.



### Hello Messenger

"Hello Messenger" is like a portable chat room which allows you to send text, sound and photo in real time to all the chatters (using au cellphone supporting this service).

All chatters are represented by cartoon-style characters they selected. The host can invite up to 4 people from the address book entries.

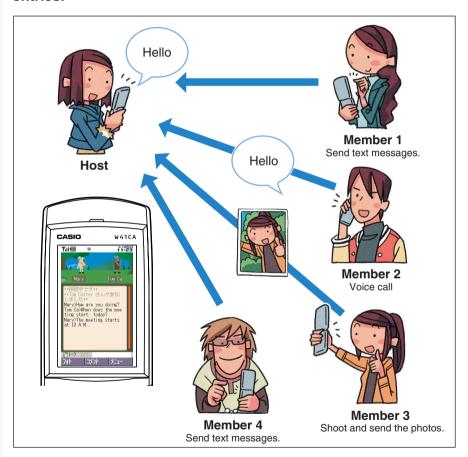

#### (B) CAUTION

- Due to the conditions like frequent use, location, or signal conditions, the time you can use for meeting may become shorter than usual.
- Two to five people can use this service at the same time.

#### **Displays the Hello Messenger Menu**

While the standby screen is displayed, press .





2

Use � to select "Hello Messenger," and then press (OK).

P7"U

| □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ □ | □ | □ □ | □ | □ □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ | □ |



Hello Messenger menu

When you start Hello Messenger for the first time, press (OK) and select your own cartoon-style character, then press (設定)(Setting).

Item	Outline		
スタート (Start)	Select the members to invite to the meeting		
コメントログ (Comment log)	Displays Comment log (meeting records)		
ヒント(Hint)	Displays operations basics		
オプション (Option)	Makes various settings		

#### Character list

From these 12 original characters, you can select the one as your own character.



#### **Invite the Members to the Meeting**

You can invite the members to start the meeting. To start the meeting, perform steps 1 through 2 under "Displays the Hello Messenger Menu" (page 59), and then continue with the following steps.

Use (♣) to select "スター ト " (Start), and then press ) (選択)(Select).





Use ( to select "アドレス帳" (Address Book), and then press ● (選択)(Select). Use **(** to select the members.



 


名前

**小大**指

To select the members from the address book entries, perform steps 1 through 2 under "Dialing from the Address Book" (page 45).

#### Press (選択)(Select).



The member list appears.

Your name is shown on the top of the list (or "私" (Me) is shown when your name is not registered in the profile). Your name or "私" (Me) cannot be changed or deleted.

"私"(Me) is shown on the list when your name is not registered in the profile.

To add members, select the blank column and press

(選択)(Select), and perform steps 2 through 3.



#### Press (お誘い)(Invite).

The member registered in your list gets an invitation message.

When you see "○○さんが参加しまし た" (XX joined) appears on the display, you can start meeting with the member.









You can register the member from "ハローランキング" (Hello Ranking) or "グループ" (Group).

#### When You Get an Invitation Message to Join

When you get an invitation message to join, ring tones sounds or your cellphone vibrates. The invitation screen (inviting you to join the meeting) appears. When you set "着信モード" (Incoming Mode) to "自動応答モード" (Auto Response), no ring tone sounds, and you can start meeting without any operation.

#### When you get an invitation message to join

The message (inviting you to join the meeting) appears on the display.



1

#### Use (中) to select "参加" (Join), and then press (OK).

On the incoming screen, you can see the host's name, total number of the members, and the time of acceptance.





#### **ी**चिरि

- With Manner Mode set, no ring tone sounds from speaker or Casio flattype stereo earphones 03.
- ◎ Even with Manner Mode set, vibrator setting for "八□一着信音" (The Ring Tone for Hello Messenger) has the priority over the Manner Mode.

#### **Camera Features**

Your W41CA comes with a built-in 2.1-megapixel, 2.07-million effective pixel camera to shoot photos and record movies. You can attach the photos and movies that you shot/recorded to e-mail messages.

#### **Using the Camera**



#### **Tips for Better Photos**

#### Shooting with the cellphone open

Do not cover the lens or optical sensor with your hands. Hold the camera securely with both hands. Use your thumb to press

(Shutter) to release the shutter.



#### **Shooting in the Viewfinder position**

Do not cover the lens or optical sensor with your hands. Hold the camera securely with both hands.

Use the index finger of your right hand to press \_\_\_\_ to release the shutter.



#### **Tips for Avoiding Hand Movement**

- Remain steady by keeping your arms lightly against your sides and standing with your feet about shoulder width apart. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is
  especially important when shooting where lighting is dim.
- A self-timer is also provided for shooting photos. With the self-timer, you do not need to press the shutter button to shoot a photo, so there is less chance of a blurred image caused by accidental movement of the phone.

#### **Auto focus**

W41CA has built-in auto focus function. You can shot photos with the subject properly focused simply by pressing the shutter key.

#### **Photo and Movie Sizes**

 
The following shows the sizes of the photos and movies that can be recorded with your W41CA.

 
#### **Photo Sizes**

	Phone	120 × 160	1
	Wallpaper		
Phone Mode	Coupling Photo	240 × 320	(2)
Friorie Wode	Updown Photo	240 / 320	
	Serial Shot		
	WideWallpaper	240 × 400	3
	VGA	640 × 480	4
PC Mode	SXGA	1280 × 960	(5)
r c wode	WIDE	1600 × 960	6
	UXGA	1600 × 1200	7

#### **Movie Sizes**

	Standard S	96 × 80	1
Mail Mode	Standard M	128 × 96	2
Iviali ivioue	High Quality M	120 × 90	
	High Quality L	176 × 144	3
Video Mode	QVGA	320 × 240	4





#### Camera

#### **Shooting a Photo**



While the standby screen is displayed, press .





Use � to select "CAMERA," and then press (OK).





Press 1.® (Photo).

N.P.	大モ/クリア	8.8	
1 s	2 h	3 to DEF	
4 to GHI	5 ts	6 ANNO	
7 # PQRS	8 <sup>†</sup>	9 s	
¥	0 b	# 🗓	



Point the lens at the subject, and then press (Shutter).



The phone emits a shutter sound.

Note that the phone emits the shutter sound even if it is in Manner Mode.

You can also press / e in place of .

Check the subject through the monitor screen (within the area indicated as []), and release the shutter.





The display shows the message "Saved to data folder (Phone).," and then returns to the photo monitor screen. Photos you shot are saved to the "Photo Folder." which is in the Data Folder.

#### OT CI

The initial photo mode setting when you purchase your W41CA is "Phone Mode (Wallpaper  $240\times320$ )".

Meanings of the Photo Titles in the "Photo Folder," which is in the Data Folder.

Example of a Photo Title 060412\_1123~0001

Date: April 12, 2006 Time: 11:23 a.m. Serial Number

Shooting Techniques

The following useful functions can be used when shooting photos.

		is operated in two		•	Press ( to zoom in.
		ways (half-press and	Zoom/Wide		Press v to zoom
		full-press).			out.
		First, half-press			Press   to make the
		(Focus lock is	Brightness	••	image darker.
		enabled).			Press • to make the
Focus Lock		Then, without			image brighter.
(Auto focus		releasing your fingers			Use this light when
lock)		off , full-press the	Shot Light Photo Size	#	shooting photos in
		key and shutter			dark place. (Auto →
		releases.			ON → OFF)
	AFOyo	Press En (Focus lock			Press 1.* to cycle
		is enabled).		1 .8	through the photo
		Press 🖳 to toggle			sizes.
	* <b>Ø</b>	auto focus function	Self-timer	5 ½	Press 5 to toggle the
		(set/release).	Och-milei	JKI.	self-timer on and off.

#### When You Shot Photos Mistakenly

If the photo is not what you want, press 💬 or • in place of (Save) in step 5 of the above procedure. Next, repeat step 4 to reshoot.

#### **Displaying Key Help**

While (key help icon) is displayed in the lower right corner of the screen, press (b) to display key help.

Press 0 b again to exit key help.

#### **Recording a Movie**



While the standby screen is displayed, press . Use to select "CAMERA," and then press (OK).



 


Press 2<sup>th</sup> (Movie).





Point the lens at the subject, and then press (Rec).







To stop recording, press (End).

Even if you do not press (End), recording will stop automatically after about 15 seconds.

The phone emits a shutter sound when recording stops.









The display shows the message "Saved to data folder (Phone).," and then returns to the movie monitor screen.

Movies you recorded are saved to the "Movie Folder." which is in the Data Folder.

#### 000a

The initial movie mode setting when you purchase your W41CA is "Mail Mode (High Quality L 176×144)". The maximum recording time in "Mail Mode" is 15 seconds.

#### Meanings of the Movie Titles in the "Movie Folder," which is in the Data Folder.

"S\_" is added to the beginning of the movie title when the movie size is
"Standard S."

#### **Recording Techniques**

The following useful functions can be used when recording movies.

Zoom	<b>③</b>	Press ( to zoom in.	Movie Size	1.8	Press 1.5 to cycle through the movie sizes.
200111		Press 👽 to zoom out.			
Prightness	••	Press • to make the image darker.	Self-timer	5 <sup>½</sup> R	Press $[\underline{5}_{\text{rs}}^{\underline{x}}]$ to toggle the self-timer on and off.
Brightness		Press • to make the image brighter.			
Pause	/m	Press to pause recording.			
Shot Light	# ,	Use this light when recording movies in dark place. (Auto→ON→OFF)			

#### When You Recorded Movies Mistakenly

 
If the movie is not what you want, press  $\boxed{1}$ ,  $\boxed{2}$  or  $\boxed{4}$ , and then  $\boxed{1}$  (Cancel) in step 5 of the above procedure. Next, repeat step 3 to rerecord.

#### **Displaying Key Help**

While (key help icon) is displayed in the lower right corner of the screen, press  $(0)^{b}$  to display key help.

Press 0 again to exit key help.

# **Shooting Photos and Recording Movies in Viewfinder Position**





**Example: Recording movies in Viewfinder position** 

1

Press .





Use and to select "CAMERA," and then press (OK).





Use to select "Movie," and then press (OK).





To shoot the photo, use to select "Photo," and then press (OK).



#### Point the lens at the subject, and then press (Rec).



 


The phone emits a shutter sound to signal the start of recording. To shoot the photo, jump to step 6.

Display	Side key operation	Display	Side key operation
■ End Camera	マナー	Menu	0
M End Camera	(hold down for about one second)	Quick Play	(hold down for about one second)
▼ Mide/Zoom	▼ ▲	Shot/Rec	
■ Dark/Light			



#### To stop the recording press (End).



The phone emits a shutter sound when recording stops.





#### Press (Save).

The display shows the message "Saved to data folder (Phone).," and then returns to the movie monitor screen. Movies you recorded are saved to the "Movie Folder," which is in the Data Folder.

If the movie is not what you want, press 💬, use 💌 🔺 to select "Cancel," and then press . Next, repeat step 4 to rerecord.

#### 

- ©To shoot the photo, hold down \_\_\_\_ for about one second in step 1. OCheck the subject through the monitor screen (within the area indicated as ; ;), and release the shutter. First, half-press (Focus lock is enabled). Then, without releasing your fingers off \_\_\_\_\_, full-press the key and shutter releases.
- To shoot the photo, press in step 6. The display shows the message "Saved to data folder (Phone).," and then returns to the photo monitor screen. Photos you shot are saved to the "Photo Folder," which is in the Data Folder.
- Off the photo is not what you want, press \(\overline{77-}\) in step 6.

#### Viewing Photos and **Movies**



While the standby screen is displayed, press and, use 🔷 to select "DATA FOLDER," and then press (OK).





2 Use 🗘 to select "Photo Folder," or "Movie Folder," and then press



Selecting "All Data" displays a list of all photos and movies in the "Photo folder" or "Movie Folder."





Use ( to select the dated (by recording date) folder, and then press



A list of all movies that were recorded on that day are displayed.





Use � to select the photo or movie you want to play, and then press (Disp/Play).





The photo or movie displays/plays.

\* To pause movie playback, press (1).

Playback will stop automatically when the movie ends.

## **Attaching a Photo or Movie** to an E-mail Message

Perform the procedure from step 1 to 4 under "Shooting a Photo" (page 64) or "Recording a Movie" (page 66), and then perform the following steps.

Press [75]/ (E-Mail), and then press 1. (Attach).

Photos you shot are stored in the "Photo Folder" and movies are stored in the "Movie Folder." (those folders are in the Data Folder).





Send Photo Mail My Pictograph

Easy Pictograph

Perform the procedure starting from step 2 under "Creating and Sending E-mail Messages" (page 50) to create an e-mail message.

※ A movie attached to an e-mail can be played only on the cellphone that supports movie playback or on a PC.

## **Using Photo Mail**

Photo Mail automatically converts images so as you can view them properly on a non-au cellphone. In order to use Photo Mail, you need to change the receiver's e-mail ado

ddress to a special Photo Mail address.		
hen you send an e-mail using the auto address	Send as it is.	
onverter, the e-mail address will be converted		
utomatically as shown below.	OK	
o use the auto address converter, press $2 \frac{h}{2 \cdot 100}$ (Send		
hoto Mail) on the e-mail select sending method screen.		

Addressee Service	E-mail Address	Converted Address
DoCoMo	△△△ @ docomo.ne.jp	△△△ @d.nepm.jp
Vodafone	$\triangle\triangle\triangle$ @ $\square$ .vodafone.ne.jp	$\triangle\triangle\triangle$ @ $\square$ .vodafone.nepm.jp
TU-KA and au phone without movie mail support	△△△ @ ezweb.ne.jp	△△△ @ ezweb.nepm.jp

varies depending on subscription region.

#### 

To use "Easy Pictograph" (free) or "My Pictograph" (paid) services, you need to subscribe to the EZweb contents, "絵文字め~る" (Pictographs Mail).



EZweb subscription required




### **Using EZweb**

To use EZweb, you need to subscribe to an EZweb beforehand. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use EZweb. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 24).

EZweb allows you to access to Chaku-Uta®, the latest news, and other web-based contents.

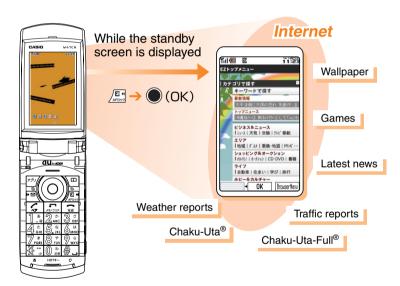

## **Displaying the EZ Top Menu**

1

While the standby screen is displayed, press (E), and then press (Top Menu).





0	カテゴリで探す(Search by category)
•	Searches for a site by category
2	キーワードで探す(Search by keyword)
9	Searches for a site by keyword
_	最新情報(Latest Information)
3	Introduces the list of new special features or
	contents started at EZweb
4	トップニュース(Top News)
	Provides the automatically-updated latest top news
	ビジネス&ニュース(Business & News)
6	Provides the latest information such as news, weather,
	share prices, and other information beneficial for business
6	エリア(Area) Provides district information such as weather or map
	ショッピング&オークション(Shopping & Auctions)
	Provides information about shopping malls where
7	you can purchase goods with your cellphone and
•	the information about the net auction where you
	can sell or buy easily
	ライフ(Daily life)
8	Provides useful information for daily life
	ホビー&カルチャー(Hobbies & Culture)
	Provides the latest information about games,
9	fortune-telling, music, e-books, and information
	about hobby and entertainment trends
10	au style
w	Introduces au-recommended information and sites
	とくする情報(Valuable Information)
•	Provides gifts and useful information exclusively for
	EZweb service subscribers for free
	EZサービスで探す(Search by useful EZ services)
<b>P</b>	Introduces useful, amusing and recommended
	services special to EZweb
•	料金・申込・インフォ(Charges, Applications, and Info)
13	Provides phone bills, procedures, au information,
	and au on-line manuals
•	災害用伝言板(Disaster Message Board)
	Registers/checks the safety information in disasters
<b>1</b> 5	ENGLISH
	Introduces English sites

#### ! CAUTION

- The layout and contents of the EZweb screens are example. These are subject to change.
- Some sites may charge you for the content in addition to call charges.

# **Bookmarking Sites You Frequently Access**



Display the site you want to bookmark, and press

(BrowserMenu).





Press 1. (New bookmark).

You may not be able to bookmark some sites.





Press 🖫 (Reg).





4

Use 🛟 to select a folder, and then press 🔘 (OK).



The message "Registered" appears when completed.



You can have up to 100 sites bookmarked in the Favorite Site list.

# Viewing a Bookmarked Site



While the standby screen is displayed, press (Ex).





Press 2<sup>b</sup>/<sub>ABC</sub> (Favorite Site).





Use to select a site or folder, and then press (OK).



If you selected a folder, use 🗘 to select a site, and then press 🔘 (OK).

## **Downloading Chaku-Uta®**

To download a Chaku-Uta®, perform step 1 under "Displaying the EZ Top Menu" (page 73), and then perform the following steps.



1

Use 🗘 to select "カテゴリで探す" (Search by Category), and then press 🔘 (OK).





2

Use ( to select "着うた・ 着ムービー" (Chaku-Uta®/ Chaku-Movie), and then press (Select).





3

#### Select the content (desired information site), and download it.

In order to use fee-based contents, you need to enter your EZ password or premium EZ password.

EZ Password:

This is the 4-digit number you specified when you first subscribed to the feebased contents.

Premium EZ Password:

This is the 4 to 8-digit number you registered for your first "まとめて au 支払い" (combined au payment service) payment.

Input the required password according to the instructions that appear on the display. The first time you use a site, register the password you want to use. To download information, follow the instructions that appear on the display. Downloaded data is stored in the Data Folder.

! CAUTION

In addition to call charges, you will be charged according to the pricing policy of each site to download Chaku-Uta® and other contents from a fee-based site.

#### ी विशेष

Perform the same procedure to download wallpaper and use it for the standby screen background.

# Downloading Chaku-Uta-Full®



While the standby screen is displayed, press , use to select "EZ SERVICE," and then press (OK).





Use to select "au Music," and then press (OK).





Use to select "Jump to EZ Music!," and then press (OK).



This operation connects the phone to "EZ Music!." For the operations after connecting, follow the instructions displayed on the screen.

#### Organ L

You can also download Chaku-Uta-Full® by selecting "着うたフル" (Chaku-Uta-Full®) performing step 2 under "Downloading Chaku-Uta®" (page 76).

## **Checking Charges**

You can check call and transmission charges.



1

While the standby screen is displayed, press



When the EZweb connection confirmation screen appears, press  $1^{*}$  (Yes).





2

Use  $^{\bullet}$  to select the item you want to check, and then press  $^{\bullet}$  (Select).



#### **EZ Channel**

 
EZweb subscription required

EZ Channel allows you to automatically download the programs (the ones you selected and preregistered) to your W41CA. Every updated program will be delivered to your W41CA since late at night to early morning (2:00 a.m. - 8:00 a.m.).

#### Displaying EZ Channel Menu



Standby screen









**EZ Service Menu** 

EZChannel Menu

#### Enjoying EZ Channel

#### ① Register the programs you are interested in.

You can register up to 3 programs from "Program Guide."

They are downloaded automatically since late at night to early morning, and then saved in "Reg Program."

#### ② Playback the program.

You can watch the program saved to "Reg Program" whenever you want.



◎ ナノ・メディア◎ ジェイ・スポーツ・ブロード キャスティング◎ 伊藤忠商事



◎ レーベルモバイル株式会社◎ 時事通信/アクセス・パブリッシング





#### ③ Save the program.

When a registered program is updated, the program is overwritten with new one. You should save the programs you do not want to delete in "Multi Folder" etc. 

In some cases, you may not be able to save a program because of copyright protection.



#### 013ml


- With EZ Channel service, you may get a large data by each program (maximum of approximately 3MB). To cost less, you may want to subscribe to Packet Communication Discount Service before use.
- When the scheduled delivery time comes, the programs are automatically downloaded. Turn on the cellphone with its battery pack full, and put it in the area with good reception.
- The display layout and contents are examples. These are subject to change.

## **EZ Navi Features**

EZweb subscription required

EZ Navi uses global positioning system (GPS) information to provide you with useful information.


You can use "EZ Navi Walk" that navigates you to your destination, "Position Search" that allows you to check where your child is, and "Area Message" that lets you know when your child is coming close to the destination.

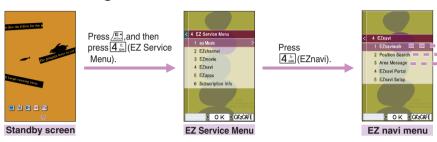

## When you check where your child is: "安心ナビ位置確認" (Position Search)




 This is a service that you can check the location of an au cellphone supporting "Position Search" by operating W41CA. There are two kinds of services: "位置確認メール" (Position Search Mail) (free) that sets a specified cellphone to let you know where it is, and "いつでも位置確認" (Auto Position Search) (paid) that allows you to search the location of a specified au cellphone without operating W41CA.



## When you want to be notified of a specified period of time or area: "安心ナビエリア通知"(Area Message)

 You can set other au cellphones as specified number and specified area to let you know when his/her arrival/leaving information. You can also set this information automatically send to another au cellphone.



#### "EZnaviwalk"

 
A menu of useful options you can use while you are out.



	オススメ (New)	The latest news and featured information
		※ "おためしナビ"(Navi Demo) provides the demonstration
		of voice navigation or "Voice input" function.
	乗換検索*	Searchable source of train transfer and timetable
-	(Transfer Search)	information
	ナビ* (Navigation)	Voice navigation to a specific destination, and "My Spot"
		registration
	現在地	Searchable source of maps, shops, and other information
	(Current Location)	about your current location
	道路情報	Searchable source of real-time nationwide traffic
	(Traffic Information)	information
	設定登録	Setups, membership registration, etc.
	(Setups and Registrations)	Setups, membership registration, etc.

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

#### "Return to Home"



Search result screen

Simply preset the location of your home for easy navigation back there from any other location. Useful information includes train transfers and estimated time of arrival.

#### "View My Position"



Your initial location is indicated by  $\stackrel{*}{\nearrow}$ . Changes in your location are indicated in real time by  $\stackrel{*}{\clubsuit}$ .

Map screen

When you are in an area that is unfamiliar or if you lose your way, simply select "View My Map." This will display a map showing your current location in real time.

#### "My Spot"



Just register destinations you often visit, your home location, and your favorite destinations (place of work, friend's house, shops, etc.) for quick and simple navigation when you need it.

#### "Mail My Position"



You can e-mail a map of your current location to another phone, which can then use the map to navigate to your location.

Navigation engine by NAVITIME JAPAN/地図:昭文社/住友電工

#### 

- In addition to packet communication fee, you may be charged some other fees for using EZ Navi.
- The display layout and contents are examples. These are subject to change.

## **Security Navi Features**

EZweb subscription required

#### **Position Search Features**

When your child does not come home early and you are worried if your child may be lost, you can check the current location of your child by a map with a simple operation. There are two kinds of services of "Position Search": "Position Search Mail" and "Auto Position Search."



#### "位置確認メール" (Position Search Mail)



#### **Features**

- •The mother can send a mail with a message to her child.
- •The child can check the message from his/her mother and inform her where he/she is.

Example: When the mother sent a mail to her child:

2

#### "いつでも位置確認" (Auto Position Search)



Example: When the mother sent a mail to her child:

#### **Features**

 When the mother searches where her child is, she can be notified where her child is, although her child does not make any operation. This service is recommended to little children who are not accustomed to cellphone operations.

Notice: The monthly fee is charged separately.

#### **Area Message Features**

For the mother who wants to know her child's location, W41CA provides following service. When the child enters or goes out of the specified area during the specified time flame, the his/her mother will be notified by an alarm sound, and will also get a message from child's cellphone automatically.

#### "安心ナビエリア通知" (Area Message)



Example: When the mother checks the area her child is in:

#### **Features**

·When your child goes to Juku (cram school) or culture lesson and you are worried about of your child's way home, the child's cellphone automatically informs the mother's cellphone that the child has passed the usual route.

#### Oval

- © Security Navi services are available only among the cellphones supporting these feature.
- The packet communication fee is charged for obtaining information or displaying map separately.
- Confirm the terms of service and agree to it before you use Security Navi. \*The other party also needs to agree to the terms of service before using the service.
- When the other party is out of range, set to "reject," no application, operating, or using a cellphone not supporting this service, you cannot check the location.
- © The screen is an example, and may differ from the actual display.
- Olf you disable C-mail, you cannot use Security Navi features.
- © Free calling time provided by your service plans can be applied to EZ Navi transmission charges. However, Family C-mail Service or Packet Communication Discount Service does not apply to EZ Navi transmission charges.



EZ FeliCa is a service available for the cellphones loading the technology of contact-free IC cards called FeliCa. Simply by holding W41CA over reader/writer (external device)\*, you can use W41CA for shopping by using e-money or use it as member's cards, point cards, and so on.

When you use EZ FeliCa, you need to download the applications from the provider of the service you want to use.

"電子マネー「Edy」" ("Edy," the e-money) is prepared at the time of purchasing.

→ "Using FeliCa-supported EZ apps" (page 87).

\* Devices on the electronic cash registers at stores, etc, that exchange data between FeliCa chips.



#### Notes on Using EZ FeliCa

- Keep your W41CA cellphone safe. In case your cellphone is lost, please contact the service company for details about EZ FeliCa-supported service.
- We recommend that you set FeliCa Lock or Remote Auto Lock in case of loss or theft.
- We accept no responsibility for loss or damage of your data caused by theft, loss or malfunction of your W41CA cellphone.
- Your security codes and passwords needs to be highly confidential and protected.
- Contact the service company for further details about FeliCa-supported EZ apps.
- Even when your cellphone supports EZ FeliCa service itself, some of the services can be unavailable. For details, contact your nearest au shop or the au Customer Service Center.
- Some of the EZ FeliCa service are subscription dependant.
- For details about each service, contact the EZ FeliCa service provider.
- Contents provided by each service are subject to change without notice.
- Cellphones supporting each service are subject to change without notice.
- Each service described above (as of November, 2005) are subject to change without notice.


# Communicating with Reader/Writer

You can use EZ FeliCa simply by holding the FeliCa mark over reader/writer.



1

#### Hold the FeliCa mark of W41CA over reader/writer.

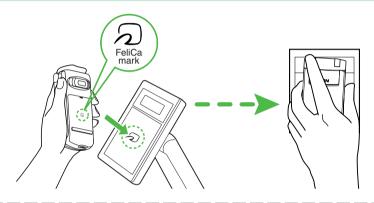

#### OTO [

- © EZ FeliCa is available even when the power is turned off. However, when the battery level is very low, you may not be able to use EZ FeliCa.
- Be careful not to bump the FeliCa mark against reader/writer when holding it.

## **Setting FeliCa Lock**

You can restrict the use of EZ FeliCa by setting FeliCa Lock on. Incidentally, you can temporarily release the FeliCa Lock and use EZ FeliCa for a certain period of time by holding down for about one second while the standby screen is displayed and entering the lock number (quick release).

1

While the standby screen is displayed, press \( \bigcap \) \( \frac{1}{5} \) \( \fra





2

Press 1. (ON), and then enter the lock number.

The FeliCa Lock is set.



(I) CAUTION

If the battery discharges while the FeliCa Lock is on, you will be unable to release the FeliCa Lock. Be careful of the battery level. When your battery is discharged, recharge the battery then release the FeliCa Lock to use EZ FeliCa.

#### 01010

- In case you lost W41CA, you can set the FeliCa Lock by setting Remote Auto Lock. Remote Auto Lock requires the initial setup beforehand.



- © Even if you set Auto Lock, the FeliCa Lock will not be set.
- Releasing FeliCa Lock temporarily (quick release)

When the FeliCa Lock is on, hold down of for about one second while the standby screen is displayed, and then enter the lock number.

The vibrator works, "FeliCa Lock Quick Releasing" is displayed and the FeliCa Lock is temporarily released.

#### **⊙**\$@□

- You cannot start FeliCa-supported EZ apps while FeliCa Lock is temporarily released.

## **Using FeliCa-supported EZ apps**

"電子マネー「Edy」" ("Edy," the e-money) is prepared as FeliCa-supported EZ apps in W41CA at the time of purchasing.

#### Starting FeliCa-supported EZ apps

While the standby screen is displayed, press .





Use � to select "EZ FeliCa," and then press (OK).

EZ FeliCa menu appears.





EZ FeliCa menu

**3** Press 1.\* (アプリ一覧) (EZ apps List).

The list of the FeliCa-supported EZ apps saved in W41CA is displayed. Select the EZ apps you want to start.





The W41CA allows you to listen to the FM radio.

### **Before using EZ·FM**

#### Connecting Casio flat-type stereo earphones 03

Open the cover of the flat-type earphone-microphone jack of your W41CA, and connect Casio flat-type stereo earphones 03 to your W41CA.



#### ■ To listen to the EZ•FM clearly

In places like a indoor room where reception condition is not good, you may not be able to listen to the EZ•FM. In such case, try the measures below.

- The cable of Casio flat-type stereo earphones 03 works as an antenna. Connect Casio flat-type stereo earphones 03 to W41CA, extend the cable as long as possible, and try to find the best direction for listening to the EZ•FM.
- Radio wave comes from outside, so try to listen to the EZ•FM as close as possible to the window.

## Listening to the EZ·FM



While the standby screen is displayed, press .





Use ♦ to select "EZ·FM," and then press (OK).

> The precautions will be displayed. Read the precautions, and then select "承諾する" (Accept). If you select "承 諾(次回から非表示)(Not display hereafter)," they will not be displayed after the next time.



Press F.

You can switch between Frequency area and Radio station/Song title area.

N.P.	<b>上</b> メモ/クリア	## F
1 .e	2 m	3 to DEF
4 to GHI	5 な JKL	6 MNO
7 # PQRS	8 <sup>†</sup>	9 5 WXYZ
X	0 b	#

#### 000m

- When you use EZ•FM for the first time, area selection screen appears. Select an area where you use the EZ•FM.
- ONo packet communication fees are charged for listening EZ•FM. However, you will be charged for using Display the song title service provided by EZ·FM application.
- The specification is subject to change without notice.

#### Adjusting the volume

## Press (\*) on the EZ•FM screen to adjust the volume.



•	Decreases volume.
•	Increases volume.

There are 20 levels for the volume.

#### ■ Tuning the radio frequency

## Press on the EZ•FM screen, and then select the frequency area.

$\odot$	Tuning (by 0.1MHz)
• (hold down for about one second)	Automatic tuning

When you select the song title area, using key allows you to select the radio station.

RP.	<b>↓</b> メモ/クリア	
1 .e	2 m	3 to DEF
4 t GHI	5 な JKL	6 ANO
7 # PQRS	8 tuv	9 5 WXYZ
X ::	0 %	#

#### **■** Displaying the song title

You can obtain the information such as the name of the tune, the artist and the broadcasting station of the currently air-played tune.

## Press (曲名表示)(Display the Song Title) on the EZ•FM screen.



The name of the tune, the artist, etc, will be scroll-displayed. This information may not be displayed depending on the program.

#### Switching the speakers

Press 四4編4編 on the EZ•FM screen, and then press 1 編 (スピーカー/イヤホン切替)(Speaker/Earphone).

You can set to "イヤホン" (Earphone) or "スピーカー" (Speaker).

P7'11 □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □		
KP.	↓□ メモ/クリア	- T.E
1 .e	2 m	3 to DEF
4 t GHI	5 ts	6 ANNO
7 #	8 <sup>†</sup>	9 6 WXYZ
X	0 %	# _

## Suspending/Stopping the EZ•FM

Suspends/stops the EZ·FM apps. Even after suspending the EZ·FM apps, you can listen to the EZ·FM as a BGM.

Press on the EZ•FM screen.





Press 1. (Suspend) or 2. (Stop).

Suspend Suspends the EZ•FM apps	
	However, you can continue
	listening to the EZ•FM.
Stop	Stops the EZ•FM.



## PC site viewer Features

EZweb subscription required

7

#### You can view WEB sites for PC with W41CA

#### A WEB site for PC





The content displayed is an example, and it may differ from the contents that actually appear on the display of your phone.

#### Viewing a site with PC site viewer



If you set the "表示モード" (Display Mode) to "スモールスクリーン" (Small Screen), a WEB site is displayed adjusted to the size of W41CA screen, and you can view the site with simple (\*) operations.



If you set the "表示モード" (Display Mode) to "PCスクリーン" (PC Screen), the portion of the page laid out by PC screen is displayed, and you can view the site with �� operations.

## You can display/automatically-update a portion of WEB site information. "Using Standby Assignment" (page 94)

#### Registering to "待受指定" (Standby Assignment)



Select a portion of a WEB site page beforehand, and then register it to "待受指定" (Standby Assignment).

#### Displaying as "Standby screen"



Display a portion of a WEB site page, and you can automatically-update it at specified intervals.

#### ी विश्व

If you press 回 (接続) (Connect) while "待受指定" (Standby Assignment) is displayed, you can display from the top of the page with a full-screen and operate the PC site viewer in the same way as the usual browsing.

## PC site viewer

To use the PC site viewer, an EZ WIN course subscription is required. If you did not subscribe when you purchased your cellphone, contact your nearest au shop or the au Customer Service Center.

Using the PC site viewer, you can comfortably view the WEB sites just like those you usually view with your PC, by high speed packet communication of 2.4 Mbps down at maximum.



## **Mastering Operation Basics**

 
While the standby screen is displayed, press .






Use to select "PC SITE VIEWER," press (OK), and then press (OK).





 Warning message on packet communication appears.



The initial setting is "Duogate" (http://duogate.jp/).

The contents displayed on the right is an example, and it may differ from the contents that actually appear on the display of your phone.





The display scrolls.

Use 🗘 to select the links on the screen.

If you select a link and press (選択) (Select), the linked page appears.

## **Using Standby Assignment**

You can set a portion of a WEB site as the standby screen. You can set it to be automatically-updated at specified intervals.

When a specified time elapses on the standby screen, the WEB site selected by "待受指定" (Standby Assignment) is displayed.

To use "待受指定" (Standby Assignment), perform steps 1 through 4 under "Mastering Operation Basics" (page 93), and then perform the following steps.

Display your favorite page, and then press (メニュー) (Menu).





Press 5 (待受指定) (Standby Assignment).





Press ™ (オプション) (Option), and then press 1. (新規作成) (Create New).





Press (OK) twice.

If you press �, you can shrink the area displayed by "待受指定" (Standby Assignment).

※ If you press (縮小) (Narrow) again, you can shrink the display area.



Press (編集) (Edit), enter the title, and then press (OK).





Press (登録) (Register), and then press (設定) (Setting).





Use (\*) to select the interval to update the standby screen.



Press (OK), and then press (OK) to complete the setting.

#### () CAUTION

Precautions for using packet communication for PC site viewer We recommend that you subscribe to Packet Communication Discount Service as the communication fee may be quite high by performing a large-size communication such as viewing homepages that include large images.

Also, be careful that packet communication fee will be charged for each updating if you set automatic-update by "待受指定" (Standby Assignment).

© Checking your packet communication fee You can use Charge Reference Service (This service estimates this month's packet communication fee with no discount. It shows the rough number that was billed 1 or 2 days ago.).

PC ⇒ au Online Customer Service (https://au-cs0.kddi.com/AuHome) au phone ⇒ 煌 → "Top Menu" → "料金・申込・インフォ" (Charges, Applications, and Info)

## **Smart Mode**

Smart Mode lets you limit operations to the telephone function, address book, camera, e-mail, C-mail, EZweb, and other frequently used functions, which simplifies operations.



## **Entering Smart Mode**

While the standby screen is displayed, press ●, use to select "SETTINGS," and then press ● (OK).





Press 5 to (User Support),

2 to (Operation Support),

and then 3 to (Mode Setup).





Press 2<sup>th</sup> (Smart Mode).

N.P.	メモ/クリア	
1 .e	2 abc	3 to DEF
4 tc GHI	5 ts	6 ANO
7 # PQRS	8 ** TUV	9 5 WXYZ
*	0 %	# _

#### Orall\_

- The lock number is required when changing from Teens Mode to Smart Mode.
- When you enter Smart Mode, settings configured in Usual Mode are automatically changed to those configured in Smart Mode.

# **Smart Mode**

## **Exiting Smart Mode**

While the standby screen is displayed, press .





Use 🗘 to select "SETTINGS," and then press 🔘 (Select).





Press 0 % (SmartModeOFF).





Press 1. (Yes).

This returns to Usual Mode.



# **Using the Smart Mode Main Menu**

Smart Mode has its own main menu.

You can switch between the two available Smart Mode main menu styles by pressing  $\sqrt{m}$  (Switch).







Menu	Description	
CAMERA	For selecting the photo or movie recording, and the correction method	
CALL	For using the address book, outgoing records and incoming records, and for registering data in the address book	
MAIL	For composing and reading E-mail and C-mail messages, and for changing E-mail addresses	
EZ SERVICE	EZ SERVICE For using EZ services	
MUSIC	For using au Music Player and SD-Audio Player	
DATA FOLDER	For viewing and deleting data in the Data Folder or miniSD memory card	
TOOLS	For using the calendar, calculator, and other tools	
SETTINGS	For changing the incoming tone, wallpaper, and character size, for turning Manner Mode on and off, and for turning Smart Mode off	
MY NUMBER	For displaying your current phone number and e-mail address	

# Smart Mode

## **Adding Data to the** Address Book in **Smart Mode**



While the standby screen is displayed, press \m . press 2<sup>h</sup>/<sub>ABC</sub> (Register), and then press (Fix).

77'U	0	© H AFDy2
NP.	メモ/クリア	8.0
1 . e	2 h	3 to DEF
4 ft GH	5 ts	6 ANO



Enter the name, and then press (OK).

To input text

→ "Inputting Characters" (page 36)





Check the reading of the name you inputted, press (OK), and then press 3 ੈ (Input by Myself).

> You can also select data in incoming records or outgoing records. To go without saving the telephone number, press 4 to (Not Input) and perform step 5.





Enter the phone number, and then press (OK).

> When entering the number of a standard phone, be sure to start with the area code.







#### Press 3 to (Input by Myself).

You can also select data in sending records or receiving records.

To go without saving E-mail address, press  $\boxed{4\frac{\pi}{cm}}$  (Not Input) and perform step 7







## Enter the e-mail address, and then press (OK).

To input an e-mail address

→ "Inputting an E-mail Address" (page 37)







#### Press 2<sup>½</sup> (Not Register).

The confirmation screen appears. Press (OK).







#### Press (Reg).



#### Orgall |

## Using the Address Book in Smart Mode



#### Example: To view a record in address book

While the standby screen is displayed, press (1), and then press (1.) (Look).





Use � to select the address book record you want to view, and then press (Select).





Press 3 c (Read Data).

The address book record appears. Use 🗘 to select the phone number, and then press 🔘 (Call).

To send an e-mail message, use 🗘 to select the e-mail address, and then press 
(E-Mail). This will display the e-mail composition screen.





- 1.8 (Call): Dials the number of the selected record.
- 2.\* (Send Mail): Selects to compose an e-mail message and send it to the address of the selected record.

To create an e-mail message

- → Perform the procedure starting from step 7 under "Creating and Sending E-mail Messages in Smart Mode" (page 102).
- $\boxed{4^{\frac{\hbar}{6m}}}$  (Delete Data): Deletes the selected address book record.
- 5 kg (Edit Data): Selects to edit the selected address book record.
- (Send via Ir): Sends the selected address book record via infrared.

## Creating and Sending E-mail Messages in Smart Mode



While the standby screen is displayed, press <sup>™</sup>.





Press 1.® (E-Mail).





Press 1. (Create Mail).





Press 1. (Address Book).

You can select an addresses from sending/receiving records, or you can manually enter an address.





Use to select an addressee, and then press (Select).



 


6

#### Press (Select).

When you have already registered two or more e-mail addresses in the address book (in Usual Mode/Teens Mode), Setting to Smart Mode displays only the e-mail address you usually use.





7

Press (Fix).





8

## Enter the subject, and then press (OK).

To input text

→ "Inputting Characters" (page 36)





9

Press (Fix).





## Enter the body text, and then press (OK).

To input text

→ "Inputting Characters" (page 36)





11

#### Press 3 to (Not Attach).

The confirmation screen appears.

Press (OK).

1.\* (Data Folder):

You can select a photo saved in the Data Folder and attach it to the e-mail message.



millom Carter
millom Carter
millom Carter
properties of the control of the contro

 $2^{\frac{h}{2}}$  (miniSD):

You can select a photo saved in the miniSD memory card and attach it to the e-mail message.

In Smart Mode, an e-mail message can have only one attachment.

12

## After checking the content of the e-mail, press (Send).

"Photo Mail," "My Pictograph," "Easy Pictograph" are the auto address converter (a part of the e-mail address will be converted automatically).
To use "Easy Pictograph" (free) or "My Pictograph" (paid) services, you need to subscribe to the EZweb contents, "絵文字め~る" (Pictographs Mail).





13 PI

Press 1.® (Send).



් විය

Pressing (Reedit) instead of (Send) in step 12 returns to step 4, from which you can edit the contents of the e-mail message.

# **Shooting a Photo in Smart Mode**



While the standby screen is displayed, press , use to select "CAMERA," and then press (Select).





Press 1. (Photo), and then press 1. (Photo1).

Photo 1	Wallpaper 240×320
Photo 2	WideWallpaper 240×400
Photo 3	VGA 640×480





Point the lens at the subject, and then press (Shutter).

The phone will emit a shutter sound. You can also press  $\bigcap$  in place of  $\bigcirc$ .







Press (Save).



#### OT CO

Pressing (Menu) in step 4, and then pressing (Send Mail) will display a screen for composing an e-mail message with attached photo. To create an e-mail message

→ Perform the procedure starting from step 4 under "Creating and Sending E-mail Messages in Smart Mode" (page 102).

## Viewing Photos in Smart Mode



While the standby screen is displayed, press , use to select "DATA FOLDER," and then press (Select).





Press 1.® (Data Folder).





Use to select "Photo Folder," and then press (Select).

that day are displayed.

 






 
4

Use to select the dated (by shooting date) folder, and then press (Select).















## Press 1. (Play).

The photo appears.

2 (Delete): Deletes data.

3 t (Attach E-Mail):

Displays a screen for composing an e-mail message with an attachment.

To create an e-mail message

- → Perform the procedure starting from step 4 under "Creating and Sending E-mail Messages in Smart Mode" (page 102).
- $\boxed{4 \frac{k}{GH}}$  (MoveTo miniSD): Moves the data to miniSD memory card.
- 5 c (Send via Ir): Sends your data via infrared.





# **Teens Mode**

Teens Mode can be used to block spam, and to block inadvertent access to phone numbers and URLs included inside mail messages. Teens Mode can also be used to restrict call time and the number of mail (sended).



# **Using Teens Mode**

■ Teens Mode can be used to restrict mail reception and display contents.

When the sender is a Pair partner	Receipt is allowed.
When the sender is included in the address book	Receipt is allowed. However, the phone numbers, e-mail addresses or URLs contained in the body of the mail message can not be used.
When the sender is not either of the above	E-mail: Only the sender's name and subject are received.  Body text and attached data are not received.  C-mail: Not received.

Turning on "Teens Restrict (M43\*)" and Teens Mode makes it possible to restrict call time and the number of mail (sended).

#### Making a Call

To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	Call time is restricted. Further calling is not possible if the call time exceeds the "Teens Restrict (M43*)" setting.

#### Sending a Mail

To someone who is a Pair partner	No restriction
To someone who is	The number of sendings is restricted. Further mailing is not possible if
not a Pair partner	the number of sendings exceeds the "Teens Restrict (M43★)" setting.

# **Teens Mode**

# **Turning on Teens Mode**

While the standby screen is displayed, press , use to select "SETTINGS," and then press (OK).





Press  $5_{\text{is.}}^{\frac{1}{1}}$  (User Support), and then  $2_{\text{ABC}}^{\frac{1}{2}}$  (OperationSupport).





Press 3 (Mode Setup), and then 3 (Teens Mode).





4

Enter the lock number.



<u>\_</u>□m370

The lock number is required when changing from Teens Mode to Usual Mode or Smart Mode.

# Other Functions

# **Hot Key Features**

When you have Hot Key turned on, holding down  $\boxed{0}_{s=1}^{b}$  for about one second while the standby screen is displayed will dial a preset phone number or sound the Hot Buzzer.

#### **Hot Dial**

With Hot Dial, holding down  $\boxed{0}_{\mbox{\tiny EB}}^{\mbox{\tiny 5}}$  for about one second will dial a preset phone number.

#### To turn on Hot Dial

While the standby screen is displayed, press  $\bigcirc$   $\boxed{5}^{\frac{*}{3}}$   $\boxed{2}^{\frac{*}{4}}$   $\boxed{5}^{\frac{*}{3}}$   $\boxed{1}^{\frac{*}{6}}$ , and then input the lock number.

Next, input the phone number you want to preset, and then press (Reg).

#### **Hot Buzzer**

With Hot Buzzer, holding down  $\boxed{0}_{em}^{b}$  for about one second will sound a loud-volume buzzer.



#### ■ To turn on Hot Buzzer

While the standby screen is displayed, press

#### ■ To stop the Hot Buzzer

To stop the Hot Buzzer after it starts to sound, input the lock number.

※You cannot turn off the phone or perform any other operation while the Hot Buzzer is sounding. The Hot Buzzer will continue to sound until you input the lock number or the battery fully discharges.

EXTENSION MODE II +



The Hot Buzzer sounds from the speaker of W41CA even when you have Casio flat-type stereo earphones 03/flat-type switched earphone microphone (option)/flat-type stereo earphone-microphone (option) attached to your W41CA.

## **Extension Mode**

Using the extension mode, W41CA automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function that you can still check Outgoing/Incoming Records, Content of e-mail, Address Book, Schedule and so on when necessary. In this case, you can only use the functions which needs no radio wave.

#### ■ To turn on Extension Mode

While the standby screen is displayed, press  $\bigcirc$   $\boxed{5}^{\frac{1}{15}}$   $\boxed{2}^{\frac{1}{15}}$   $\boxed{4}^{\frac{1}{15}}$   $\boxed{1}^{\frac{1}{15}}$ .

Display example when you switch to Extension Mode

In addition to the functions covered in this Basic Manual, your W41CA also has the following features.

#### **Global Expert**

W41CA supports Global Expert based on au IC card.

Global Expert is an international roaming service for the customers to use the phone replacing its au IC card with GSM cellphone for overseas use. No special application procedure or daily/monthly fee are needed, and the call charge is added up to domestic call, so the pay procedure is simple.

#### au Music

You can use au Music Player to enjoy a Chaku-Uta Full® or your favorite CD tracks. Also, you can download a Chaku-Uta Full® or purchase CD tracks by accessing our site ("EZ Music!" or "au Records").

#### **PC Document Viewer**

You can display such data created with PC as Microsoft Word®, Microsoft Excel®, Microsoft® PowerPoint®,PDF, HTML or mHTML. With this feature, you can display such data in full-screen, enlarged or reduced, landscape or portrait switch, or fitting.

#### **Barcode Reader & Maker**

You can use the camera to read QR codes and barcodes. Also, you can create your own barcodes directly from your address book entries.

#### Infrared communication

You can exchange the data saved in your address book, Schedule, or Data Folder between au cellphones supporting infrared communication.

#### EZ apps (BREW®)

Enjoy downloaded games and other software.

#### Macro Mode (Photo and Movie)

Pressing \*\* allows you to take close-up photos of food, flowers, and other subjects (closest focusing distance: 10 cm).

#### Serial Shot (Photo)

You can shoot up to nine consecutive images and store all of them or only selected images in memory.

#### Post Recording/ Telop (Movie)

After recording a movie, you can add audio or text. You can select from among 24 colors for the text and 169 colors for the background.

#### Mail Recipe (E-mail)

Simply follow the steps provided for quick and easy composing of Basic Mail without attachments, Photo Mail, Doodle Mail, Movie Mail, and Exciting Mail.

# **Troubleshooting**

Symptom	What to check	What to do	Page
The phone does not turn on.	Is the battery pack installed correctly ?	Correctly install the battery pack.	_
22	Is the battery pack charged ?	Charge the battery pack.	P.12
	Are you holding down for at least 1.5 seconds?	Hold down for at least 1.5 seconds to turn on the phone.	P.14
I can't make calls.	Is <b>□</b> out (Out of Range) on the display?  Wait until you are in a location where <b>□</b> out is not displayed before trying to make a call.		P.14
(S) (1) (2) (3) (3) (3) (3) (3) (3) (3) (3) (3) (3	Are you including the area code?	When making a call to a standard phone, you need to input the area code, and then the phone number.	P.28
And S	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
03	Did you press 💪 ?	After inputting the phone number, press  to dial it.	P.28
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	_
I can't receive calls.	2001 (2 20 20 1 20 20 20 20 20 20 20 20 20 20 20 20 20		P.14
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	_
Nothing happens when I press the keys.	Is the phone turned on?	Hold down for at least 1.5 seconds to turn on the phone.	P.14
The phone emits a warning tone, and then turns off.	Is battery pack power low?	Charge the battery pack.	P.12
The phone answers	Is Easy Voice Memo turned on?	Hold down for about one second to turn off Easy Voice Memo.	P.34
calls automatically.	Is Drive Mode turned on?	Hold down 💬 for about one second to turn off Drive Mode.	P.4
I can't hear the caller.	Is the earpiece volume level too low?	During a call, press (*) to increase earpiece volume.	P.33

For details, please visit the CASIO COMPUTER Co., Ltd. web site.

From your W41CA→ http://ez.casio.jp/faq/

<sup>•</sup> From your PC→ http://www.casio.co.jp/k-tai/faq/

# If you lose your W41CA

Turning on Remote Auto Lock makes it possible for you to set Auto Lock and FeliCa Lock on from a remote location. These lock function keeps others from using your W41CA.



#### Configuring Remote Auto Lock Settings

You can set Auto Lock and FeliCa Lock on by making calls several times from the registered phone number to your W41CA within the specified period of time.

While the standby screen is displayed, press





Press 1.\* (ON/OFF Setup), input the lock number, and then press 1.\* (ON).





Press 2.5 (Specified Time), input the lock number, input the period you want to specify, and then press (OK).

You can set the time period (the time intervals from the first call to the last call you should make to activate Remote Auto Lock).

You can set the time period between 1 to 10 minutes.





Press 3 (Num of Incoming), input the lock number, input the number of calls you want to specify, and then press (OK).



You can set how many times you should repeat making a call to activate Remote Auto Lock. You can set it from 3 to 10 calls.

Press 4 cm (Caller ID List), and then input the lock number.





Use to select a registration number, press (Edit), input the phone number, and then press (Reg).



You can also press (Menu) before inputting a phone number, and select the number from the address book, outgoing records, or incoming records, or you can specify a pay phone. You can register up to three different phone numbers.

#### Setting Auto Lock and FeliCa Lock on

Make a call to your W41CA from the registered phone number within the period of time which has been specified in "Configuring Remote Auto Lock Settings" (page 114).

After repeating a call (3 to 10 calls you have specified), Remote Auto Lock turns active, and you hear an announcement letting you know Auto Lock and FeliCa Lock has been set.

After Remote Auto Lock turns active, your W41CA is automatically turned off, and turned on again.

! CAUTION

Remote Auto Lock cannot be activated while your W41CA is turned off or outside of the service area.

# Index

	A	Turning on <b>E-mail</b>
	Address Book	Create New Creating and se E-mail addres E-Mail Setup Initial settings Reading an e- an attached Reading receiv Replying to a re Subject
	В	То
	Basic operations in Viewfinder position	Extension Mod EZ Channel EZ FeliCa Communicatir FeliCa mark
	C	Setting FeliCa
	Camera62Recording a movie66Recording movies in Viewfinder position68Shooting a photo64Shooting photos in Viewfinder position68Viewing movies70Viewing photos70Casio flat-type stereo68earphones 0310, 88Chaku-Uta®10Downloading76	Listening to the Suspending/s EZ Navi EZweb Bookmarking Downloading EZ Password EZ top menu Viewing a bookstands.
	Chaku-Uta-Full®	Н
	Downloading         77           Changing the ring tone         30           Charging the battery pack         12           Checking charges         78           C-mail         49           C-mail safe block function         49           Create New         56           Creating and sending C-mail messages         56           Reading received C-mail messages         57	Hello Messeng Invite the men When you get message to Hot key Hot Buzzer Hot Dial
ì	D	Included items
	Desktop holder	Incoming recordinitial settings E-mail and E2 Initial values Inputting chara Inputting an e Inputting pictor
	E	Inputting usef
5	Earpiece volume       33         Easy Voice Memo       35         Playback       35	Key functions .

Turning on  E-mail  Create New  Creating and sending e-mail messages	34 <b>48</b> 50 50
E-mail address	26 55 24
an attached photo or movie  Reading received e-mail messages  Replying to a received e-mail message  Subject  To	53 52 54 51 50
Extension Mode1	
	79
EZ FeliCa  Communicating with reader/writer	<b>84</b> 85
FeliCa mark	85
Setting FeliCa Lock	86
EZ•FM Listening to the EZ•FM	<b>88</b>
Suspending/stopping the EZ•FM	91
EZ Navi	80
EZweb	72
Bookmarking sites	74 77 76 73 75
Н	
Hello Messenger	
message to join	61
Hot key1  Hot Buzzer1	10
Hot Dial1	
Included items	10
Incoming recordsInitial settings	29
E-mail and EZwebInitial values	24 <b>14</b>
Inputting characters	36
Inputting an e-mail address	37
Inputting pictographsInputting useful sentences	38 38
K	
Key functions	18

M	Sending a ph Shooting a ph
<b>Mail</b> C-mail49	Shooting a pi
E-mail	Viewing photo Playback Easy Voice M Movie Photo
Vibrator	R
Movie11, 19Movie Folder70Recording a movie66Recording movies in Viewfinder68	Ready Redial From incomir From outgoin Remote Auto L
Rerecording a movie	Security Navi . Signal strengtl
N Names of parts11 Notify caller ID28	Site Smart Mode Adding data t Creating and
One-ring calls       5, 29         Operation basics       18         Other functions       110         Outgoing records       29         Own e-mail address       26         Changing       26         Viewing       25	messages Entering Smart Exiting Smart Shooting a ph Using the add Using the Ma Viewing shot Soft keys Spam
P	Standby scree
Pair Function	Teens Mode Troubleshootii Turning on poor Turning off poor
Mastering operation basics	U Unsolicited ad Using Menus . Using Photo M
Answering a call	V Viewfinder pos position Viewing your p
Photo Folder	

Sending a photo by e-mail       71         Shooting a photo       64         Shooting photos in Viewfinder position       68         Viewing photos       70         Playback       Easy Voice Memo       35         Movie       70         Photo       70
R
Ready
Remote Auto Lock114
S
Security Navi       82         Signal strength       14         Site       73, 74, 75         Smart Mode       96         Adding data to the address book       99         Creating and sending e-mail       102         Entering Smart Mode       96         Exiting Smart Mode       97         Shooting a photo       105         Using the address book       101         Using the Main Menu       98         Viewing shot photos       106         Soft keys       21         Spam       5, 55         Standby screen       14
Т
Teens Mode
U
Unsolicited advertisements 5, 55 Using Menus 21 Using Photo Mail 71
V
Viewfinder position and self-portrait position

## For inquiries, call:

au Customer Service Center (General Information)

#### From EZweb site:





EZ→Top Menu→料金・申込・インフォ (Charges,

Applications, Info)→お問い合わせ(Inquiries) \*Menu structure is subject to change without notice.

#### From regular phones:

0077-7-11 (toll free)

#### From au cellphones:

157 area code not required

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.







Sales: KDDI Corporation

Okinawa Cellular Telephone Company Manufactured by CASIO COMPUTER CO., Ltd.

MN6100YAA-1 January 2006, 1st Edition



