

Basic Manual



W53SA
by SANYO

CDMA 1X
WIN

au by KDDI

Contents/
Before Use

Phone Call

Inputting Text

Address Book/
Pair Function

Mail

Camera

EZweb

EZ Navi

EZ Television
(1Seg)

Remote Ctrl Lock

Other Features/
Troubleshooting

Index

Preface

Thank you for choosing W53SA.

Before using your W53SA, be sure to read the W53SA "Basic Manual (this PDF manual)" to ensure proper use of your W53SA. After you have finished reading, keep this PDF manual and the printed manuals (Japanese) in a safe place for your reference whenever you need.

Contact the au shop or the au Customer Service Center for replacements if you lose either of these manuals.

Printed Manuals for W53SA (Japanese)

The W53SA comes with Basic Manual and a Manual.

W53SA Basic Manual



Equivalent to this English PDF manual.

W53SA Manual





English version is not available.


The following manuals are available in the au website:

- Download site for "Basic Manual" (Japanese and English) and "Manual" (Japanese only)
(<http://www.au.kddi.com/torisetsu/index.html>)
- The au online manual (Japanese) for searching by keyword
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from EZweb:

<How to access>  →  (EZweb) → "Top Menu" → "auお客さまサポート (au Customer Support)"
→ "調べる (Information)" → "オンラインマニュアル (Online Manual)".

Check the website of SANYO Electric Co., Ltd. below, for the troubles on your W53SA.

- From W53SA → Press  for more than one second. (SANYO Keitai Planet, in Japanese only)
- From PC → <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

Note that the shape and typeface used in the screens of this manual may differ from those used in the actual screens, and some screens are partly omitted.

Manners for Using Cellphones

A cellphone always generates weak electric waves while its power is ON. Be considerate of others around you to use your cellphone enjoyably and safely.

In some places, the use of cellphones is prohibited.

- Using cellphones while driving is dangerous and also forbidden by the law.
- Be sure to turn your cellphone OFF before you board airplanes. The use of cellphones onboard airplanes is forbidden by the law.



Consider where to use your cellphone and be careful of the volume of your voice.

- Do not make calls in cinemas, theaters, museums, libraries and other similar places. Turn your cellphone OFF or set it to the manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mails.
- When on a crowded street, use your cellphone in places where you do not prevent others from passing.
- When on a train or in a hotel lobby, move to an area where you will not bother others around you.
- Take care not to talk too loudly during conversations.
- When you shoot photos or movies of others with your cellphone, get permission from them.



 
Electric waves from cellphones may adversely influence medical devices and equipment.

- There may be someone with a pacemaker around you in crowded places such as trains. Turn your cellphone OFF in such places.
- Follow the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.



What You Can Do with W53SA


Pair Function

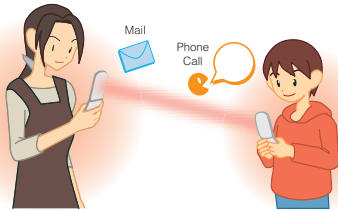

You can easily call and send mail to your registered Popular Contact.

Page 38

 
Mail

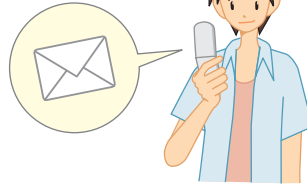

You can send mails to other cellphones or personal computers.

Page 40

 Camera

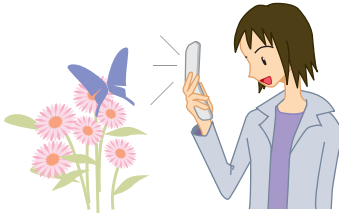

You can shoot photos or movies and easily send them by E-mail.

Page 52


EZ Navi



You can search various location information with the functions of "EZ Navi Walk", "Passenger Seat Navi", "Evacuate Navi" or "Security Navi".

Page 62

 
EZweb

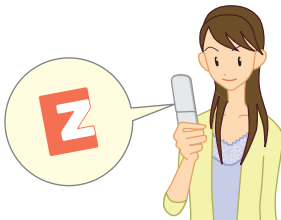

You can download Chaku-Uta®, Chaku-Uta-Full®, and wallpapers, etc.

Page 57

 EZ Television (1Seg)

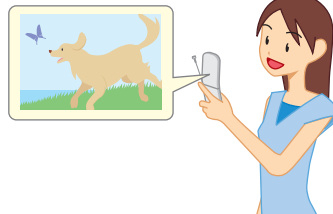


You can watch the Digital Terrestrial Broadcasting for Mobile Television Service (1Seg).

Page 64

Manner Mode and Answer Phone

Manner Mode

 With Manner Mode, you can set the ringer not to sound so as not to bother the people around you.


Press  for more than one second while the standby screen is displayed.



Page 27

Answer Phone

 The caller can leave a message when you cannot answer the phone.


Press  for more than one second while the standby screen is displayed.



Page 23

Check the Power, Reception and Battery!

Keep the "power" ON for normal use.


Keep the power ON to make or answer calls.
Press  for more than one second.



Page 12

You cannot talk on the phone if the "radio wave" is too weak.




It is sometimes difficult to receive the radio wave in some places even within a service area.
"" indicates the reception condition.

Page 12

Be careful of the remaining "battery" power.



If the remaining battery power is too low, you may not be able to use the cellphone properly.
"" indicates the remaining battery power.

Page 12

Do Not Use the Cellphone While Driving

Using cellphone while driving is subject to penalties.

Holding a cellphone in your hand to make phone calls or watching the screen to view E-mails etc., while driving shall be subject to penalties. (The implementation of the revised Road Traffic Law on November 1, 2004)






Calling with a cellphone in your hand

 
Viewing E-mails and watching the screen

Turn the Power OFF or Set Drive Mode While Driving.

Drive Mode

By setting Drive Mode, you will enable the caller to hear a response message such as "Now driving. I cannot answer the phone right now...(Japanese)", and to store a message in Answer Phone.

Press  while the standby screen is displayed, and use  and  to select "Drive" → "Continuous Mode".

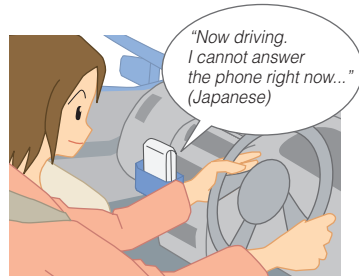

Beware of Junk Mails and One-ring Calls!

If you receive junk mails...

●Mail Filter

Using the mail filter function, you can select to reject E-mails sent from specified addresses and to reject Spoof E-mails.

The following mail functions are available for preventing arrival of junk mails.

- Reject E-mails with "未承諾広告※(Unsolicited advertisement)" in the subject.
- Reject E-mails from specified addresses.
- Reject Spoof E-mails .

Page 47

●Change E-mail Address

You can prevent arrival of junk mail by changing E-mail address.

Page 18

 


If you receive calls from unknown numbers...

It may be "One-ring Calls" intended to trick you into calling back and accessing unwanted pay programs.Be careful to a call from unknown number.

●Icon for One-Ring Calls

In case of a missed incoming call with a length of 3 seconds orless, **Mis sed** will appear on the incoming call history list, so that you can classify it as a "One-ring Call".

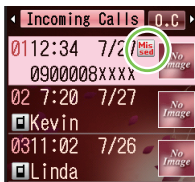

Disaster Message Board Service

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet.

Registering Safety Information

- When a big scale disaster occurs, you can register your safety information such as your condition or comments, from a cellphone, to "災害用伝言板 (Disaster Message Board)" created on EZweb.
- After the registration of your safety information, you can notify by E-mail your family or acquaintances you have previously designated that you registered your safety information on "災害用伝言板 (Disaster Message Board)".

Referring to Safety Information

- You can check the safety information of the person you desire to know about, by entering his/her phone number from EZweb or Internet*1.

*1The safety information can be accessed at <http://dengon.ezweb.ne.jp/> from cellphones of other carriers, PHS or personal computer.

災害用伝言板
伝言板トップ

～サービス提供中～
安否情報の登録・確認ができます。

登録(登録可能地域は右下の地図参照)
確認
削除
お知らせメール設定
サービス概要
ご利用地域情報
お問合せ
災害対策への取り組み

English

How to Access	☎ → EZ (EZweb) → "Top Menu" → "災害用伝言板 (Disaster Message Board)"
	http://dengon.ezweb.ne.jp/

- * The maximum preservation period of the registered information is 72 hours.
- * The maximum number available for each registration is 10. When the number of registration exceeds 10, the information will be overwritten from the oldest one.
- * The demonstration of this service can be referred to anytime by pressing ☎ → EZ (EZweb) → "Top Menu" → "auお客様サポート (au Customer Support)" → "災害用伝言板(デモ版)" (The demonstration of Disaster Message Board)".
- * Select "English" to use the English mode.



Contents

Manners for Using Cellphones.....	1
What You Can Do with W53SA	2
Manner Mode and Answer Phone.....	3
Check the Power, Reception and Battery !	3
Do Not Use the Cellphone While Driving	4
Beware of Junk Mails and One-ring Calls !	5
Disaster Message Board Service	6
Contents	7

Before Use

Confirming the Package Contents	9
Name of Parts	10
How to Charge the Battery Pack.....	11
Turning the Power ON	12
Switching Screen Display to English	12
Basic Operation.....	13
Viewing the Screen.....	15
Displaying the Menu.....	16
Initializing E-mail and EZweb Settings	17
Displaying Your Phone Number and E-mail Address.....	17
Changing Your E-mail Address	18

Phone Call

Making a Call.....	20
Making an International Call.....	20
Answering a Call.....	21
Calling Back (Outgoing Calls/Incoming Calls).....	22
Adjusting the Other Party's Voice Volume.....	22
Using Answer Phone	23
Changing Ringer Volume and Type	25
Setting Manner Mode.....	27

Inputting Text

How to Input Characters	28
-------------------------------	----

Address Book /Pair Function

Registering Data in Address Book	33
Making a Call from Address Book.....	35
Editing Address Book Data	36
Registering Data from Outgoing/Incoming Calls.....	37
Registering Data as Popular Contact.....	38
Making a Call to the Popular Contact	39

Mail


About E-mail.....	40
Creating and Sending E-mail	41
Reading Received E-mail	44
Replying to Received E-mail	46
Blocking Junk Mails	47
About C-mail	48
Creating and Sending C-mail	49
Reading Received C-mail.....	51

Camera	What You Can Do with Camera.....	52
	Shooting Photo	54
	Viewing Photos.....	55
	Attaching Photo to E-mail Message.....	56
EZweb	About EZweb.....	57
	Displaying EZ Top Menu.....	58
	Bookmarking Frequently-Accessed Site.....	59
	Accessing Bookmarked Site	60
	Viewing Charge	60
	Downloading Chaku-Uta [®] /Chaku-Uta-Full [®]	61
EZ Navi	What You Can Do with EZ Navi.....	62
EZ Television (1Seg)	What You Can Do with EZ Television (1Seg)	64
	Watching EZ Television (1Seg)	66
	Ending EZ Television (1Seg)	67
Remote Ctrl Lock	In Case You Lose Your W53SA	68
Other Features/ Troubleshooting	Other Features.....	70
	Troubleshooting.....	71
Index	Index.....	72


Before Use

Confirming the Package Contents

 
- W53SA Main Unit

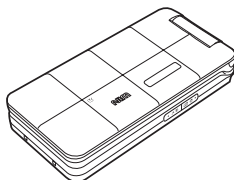

- Battery Pack

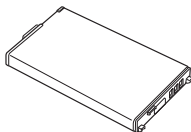 


- Desktop Holder

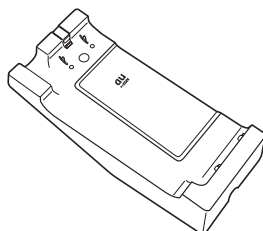 

- SANYO Round-type Earphone Jack Conversion Adapter (Sample)




 - Stereo Earphones (Sample)

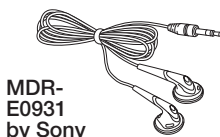

MDR-E0931
by Sony

 - USB Cable (Sample)




- Battery Cover Tightening Device (Sample)



- Basic Manual (Japanese)



 - Manual (Japanese)

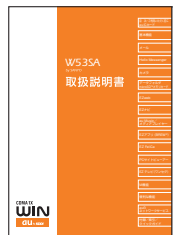

- CD-ROM (Japanese)



- Warranty (Japanese)

- Precautions in Use (Japanese)

- Global Expert Owner's Guide (Japanese)

- LISMO Installation Guide (Japanese)

- Osaifu-Keitai[®] Basic Manual (Japanese)

 
- Promotional Fliers (Japanese)

Information

- AC Adapter and microSD[™] Memory Card are not included in the package. Please purchase the Common AC Adapter 01. microSD[™] Memory Cards are also available separately.

Name of Parts

Before Use

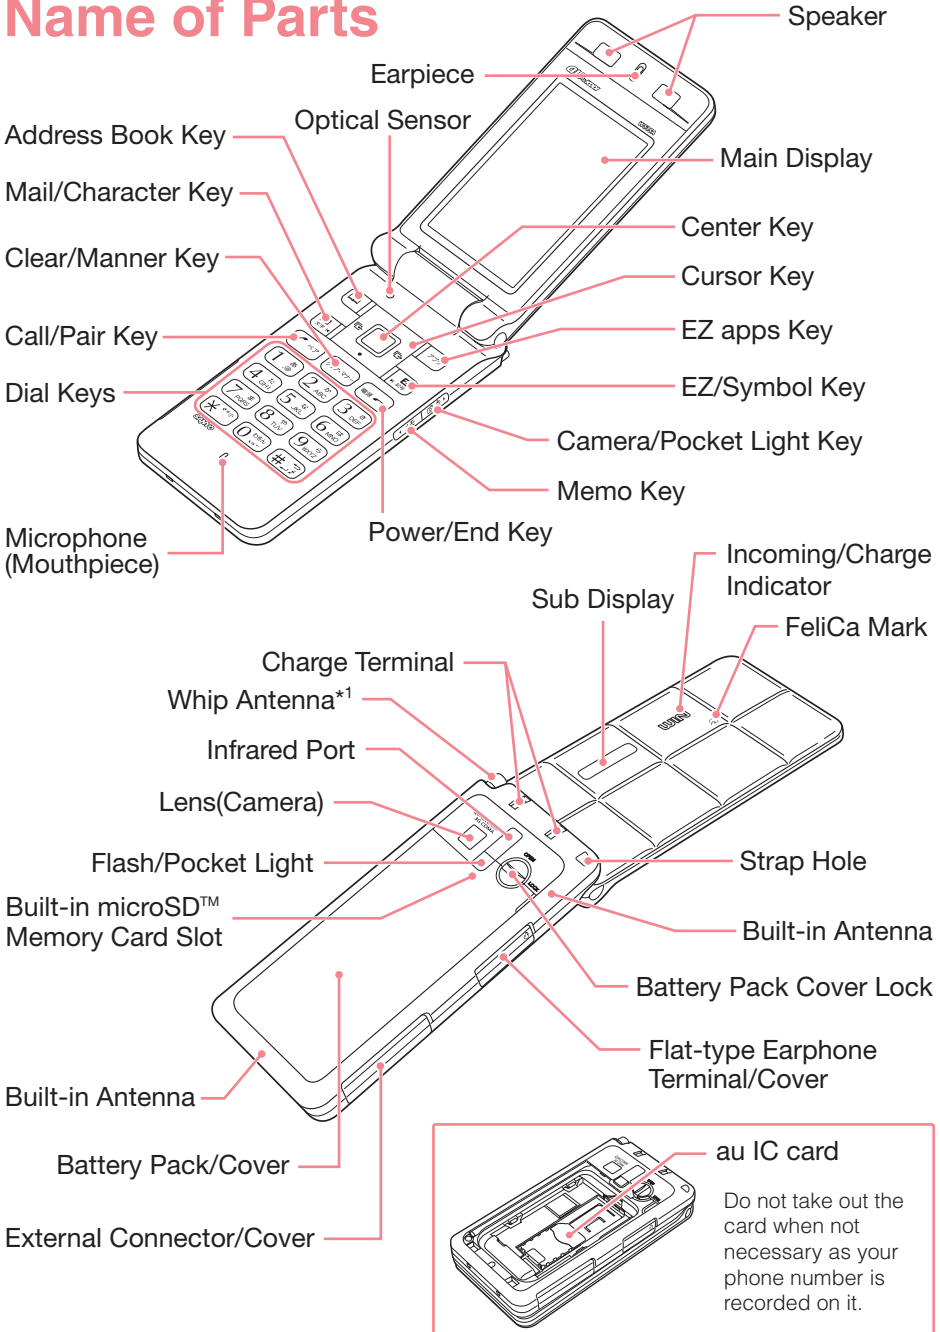


*1 Extend the whip antenna when you use EZ Television (1Seg). It does not improve the quality of voice calls or EZweb communication.

How to Charge the Battery Pack


The battery pack is not fully charged at the time of purchase. Charge the battery pack before using your W53SA for the first time.

 Connect the Common AC Adapter 01 (not included in the package), plug the power plug into a power outlet, and insert the W53SA to the desktop holder. If you charge the battery pack while the W53SA is turned on, it beeps when charging starts or ends.

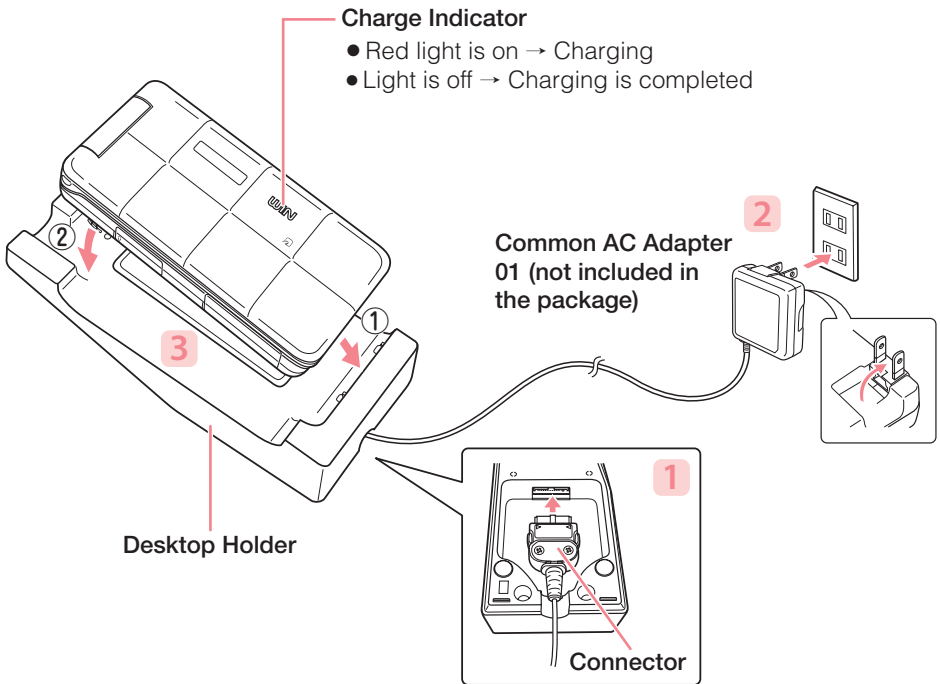


Information

 
- The battery pack can also be charged by directly inserting the Common AC Adapter 01 connector (not included in the package) into the external connector on the W53SA.

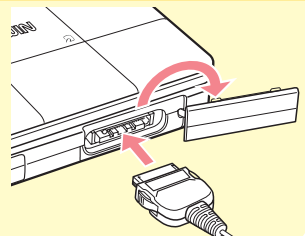

Turning the Power ON


Press  for more than one second.

 The standby screen appears.

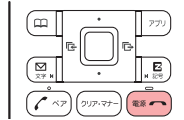


Standby Screen

 Check the battery level.




*  is displayed while charging.

 Check the radio wave reception.



* When  appears, you cannot make or receive calls.

* When  appears, you may not be able to make or receive calls.




Turning the Power OFF

Press  for more than one second.

 
Switching Screen Display to English

Menus, messages and other screen display language can be switched between Japanese and English.


1

Press   while the standby screen is displayed.


The Set Language screen appears.

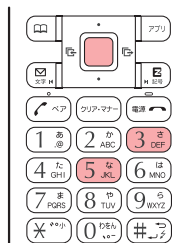

2



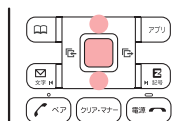 

Use  to select "English" and press  [Set].

The screen display is set to English.











 
 

Basic Operation


Key Functions






-  ● Moving the cursor up
● Increasing the volume
-  ● Moving the cursor down
● Decreasing the volume
-  ● Moving the cursor left
● Viewing Incoming Calls
-  ● Moving the cursor right
● Viewing Outgoing Calls

 
Cursor keys are indicated in this manual as follows:

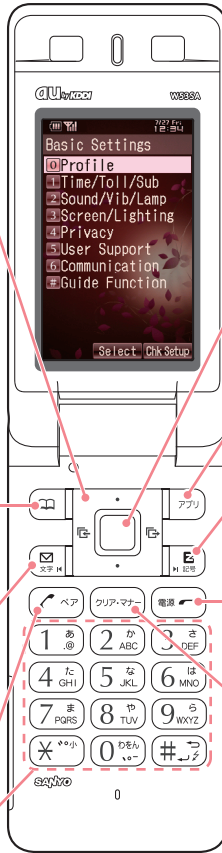Up	Down	Left	Right
			

-  ● Viewing Address Book
-  ● Accessing E-mail/C-mail Menu
● Switching character type
-  ● Making/answering a call
● Accessing Popular Menu
-  ~    ● Entering phone numbers or characters



 -  ● Viewing Main Menu
● Selecting an item where the cursor is placed
-  ● Accessing EZ apps (BREW®) Menu
-  ● Accessing EZ Service Menu
● Entering symbols and others
-  ● Turning the power ON/OFF
● Ending calls or operations
-  ● Setting/releasing Manner Mode
● Erasing characters
● Returning to the previous screen




-  ● Setting/releasing Answer Phone
● Playing recorded message
-  ● Activating camera (for shooting photos)
● Turning ON the pocket light

Items in the Underpart of the Display and the Operation

Use the assigned key to operate the item indicated in the underpart of the display. The displayed items may differ depending on the screen.

Before Use

 Pressing the key executes the function displayed at the lower left

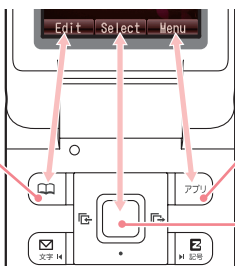

Pressing the key executes the function displayed at the lower right

Pressing the key executes the function displayed at the lower center

Selecting items/Returning

 
To select an item, use to move the cursor and press . In some cases, numbered items can also be selected by pressing the corresponding dial key. Press to return to the previous screen if you get confused or make a wrong operation. Press to return to the standby screen.

<Example>

Standby Screen




Press .

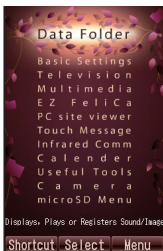

Use to select an item and press .

 Press .

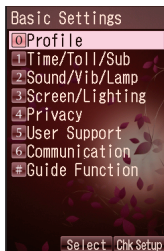

Press dial key.

Use to select an item and press .

 
Press .



Press .

Viewing the Screen


The main icons are listed below.

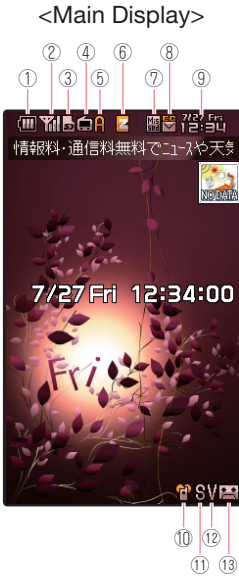

①		Battery level
②		Reception condition
③		microSD™ Memory Card inserted
④		During a call
		Running EZ Television (1Seg)
⑤		Running EZ apps (BREW®)
⑥		Using EZweb
⑦		Unchecked missed call
⑧		Unread E-mail
		Unread C-mail
⑨		Current date and time
⑩		Manner Mode ON
⑪		Ringer volume OFF
⑫		Vibrator ON
⑬		Answer Phone ON

<Sub Display>

 When closing W53SA and pressing / in this condition, the sub display will be lit.



* While in Standby mode, repeated pressing of will successively take you to the Standby Screen 1 and 2, the full-screen clock, and the EZ News Flash Telop Screen.

Displaying the Menu

About Main Menu

Before Use

Each one of the W53SA functions can be accessed.

 
Standby Screen





Press .

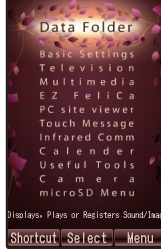


Main Menu



Use  to select an item and press .



 
Ex.) Camera Function Screen

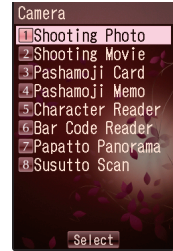

About EZ Service Menu

You can enjoy all kinds of services, such as connecting to the EZweb information site, EZ Navi, EZ Channel-Plus and so on.

 
Standby Screen

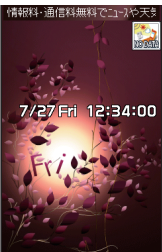


Press .



 EZ Service Menu

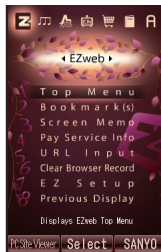

Use  to select service.




 
Ex.) EZnavi Screen



Initializing E-mail and EZweb Settings

 
 
Application to the EZweb service is required in advance to use the E-mail and EZweb services. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase. Perform the EZweb initialization before using this service.

1

Press  while the standby screen is displayed, and press  [OK].

Initialization automatically provides your E-mail address.

- For choosing an e-mail address of your own choice, refer to pages 18 to 19.

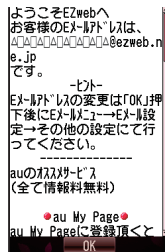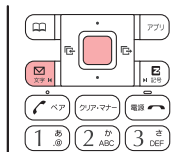



2

Press  [OK].


 


Information

 
 
- Initialization can also be performed by pressing  or  while the standby screen is displayed.

Displaying Your Phone Number and E-mail Address

1

Press  while the standby screen is displayed, and press .



Your phone number and E-mail address are displayed.

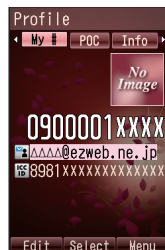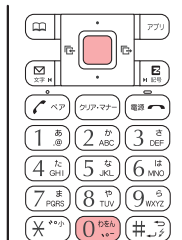


Changing Your E-mail Address



  
1 Press while the standby screen is displayed.

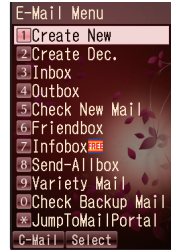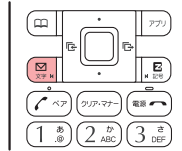


 
2 Use to select "E-Mail Setup" and press [Select].

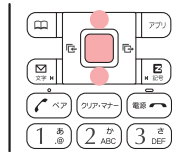

   
3 Use to select "Other" and press [Select].

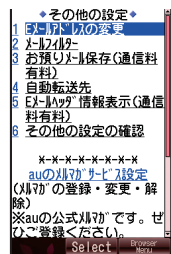

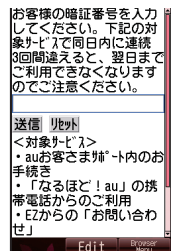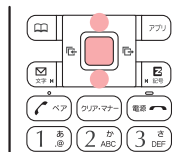

4 Use to select "Eメールアドレスの変更 (Change E-mail Address)" and press [Select].

 
 


5


 
Enter your Security Code and press  [OK].



Use  to select "送信 (Send)" and press  [Select].

- Security Code is a 4-digit number you have filled in the application form at the time of purchase.
- If you enter a wrong Security Code 3 times in a row within the same day, you will not be allowed to perform setup operations until the following day.

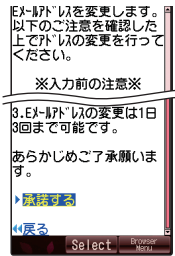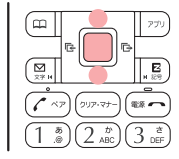



  
6

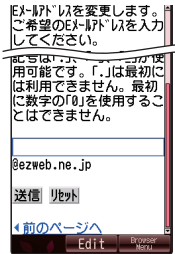
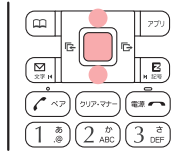
Use  to select "承諾する(Agree)" and press  [Select].





7

  Use  to select the entry area and press  [Edit]. Enter an E-mail address and press  [OK].

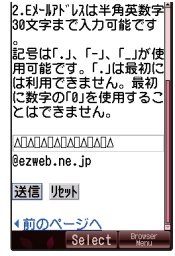
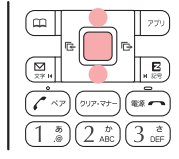
- For details about entry of E-mail addresses, refer to page 30.





8

  
Use  to select "送信 (Send)" and press  [Select].

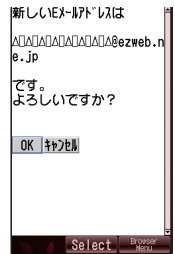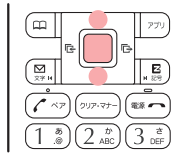- When the E-mail address you enter is already being used, enter a different one.



9

 
Use  to select "OK (Send)" and press  [Select].

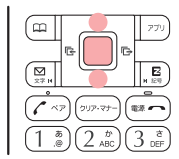


Phone Call

Making a Call

1

 Enter a phone number while the standby screen is displayed and press .

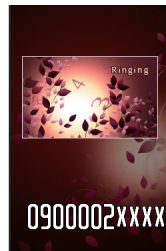


Press  to hang up.



- To make a call to a regular telephone, enter the phone number starting with the area code.

How to make a call:

Adding "184" before the phone number	Your phone number is not displayed on the receiver's display.
Adding "186" before the phone number	Your phone number is displayed on the receiver's display.
Adding nothing	The call is made in accordance with the Caller ID Notice setting.

 
* Enter a phone number and press  [Select]. Use  to select "Add Extra No." and press  [OK] to add "184" or "186".

Making an International Call

● au International Call Service

Available without any additional application.

Example: To call 212-123-XXXX in the USA

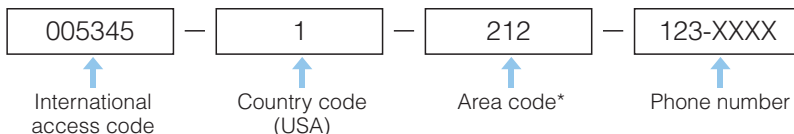


* When an area code begins with "0", dial excluding "0".

- Calling charges for this service are added to monthly au calling charges and billed together.
- Check the Country code at au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact au Customer Service Center.

001 KOKUSAI MOBILE TALK

Application required.

 For inquiries, contact KDDI Customer Service Center at 0077-7160 (Toll-free; open 9:00 to 20:00 every day including weekends and national holidays).

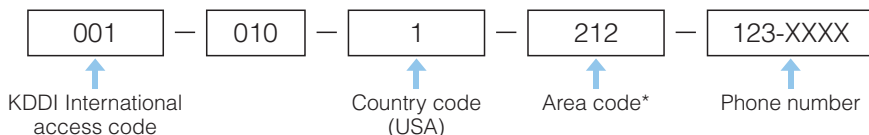

* When an area code begins with "0", dial excluding "0".

 
- Calling charges for 001KOKUSAI MOBILE TALK are charged separately from monthly au calling charges.
- Check the Country code at au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact au Customer Service Center.

Answering a Call

1

Press  to answer
an incoming call.

Press  to hang up.

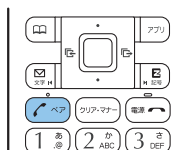




Screen displays for incoming phone calls:

Caller's phone number Example: "0900001XXXX"	The caller has set it so as to display his/her phone number. The caller's name is also displayed if the caller's information is registered in your address book.
"ID Unsent"	The caller has set it so as not to display his/her phone number.
"Payphone"	The call is made from a payphone.
"Not Support"	The call is made from the phone that does not support ID notification.

Screen displays for incoming phone calls:


The message shows that there were incoming calls unanswered (Missed Calls).

 Select  "Missed Calls" and press  [Check] to confirm Incoming Calls (caller phone number, etc.).

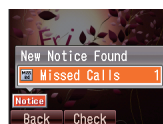


Calling Back (Outgoing Calls/Incoming Calls)

1



Press  while the standby screen is displayed.

 
 : displays the Outgoing Calls screen.

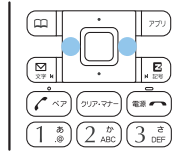 : displays the Incoming Calls screen.



2

 Use  to select the person to call and press .

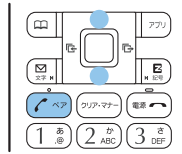

Information

- The latest 20 phone numbers you dialed (Outgoing Calls) and received (Incoming Calls) are saved in each history.

Adjusting the Other Party's Voice Volume

 
 
1

Press  during a call.

 : turns the volume up.

 : turns the volume down.

The voice volume can be adjusted in 9 levels.

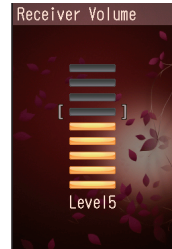
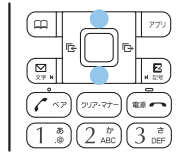


Using Answer Phone

Setting Answer Phone

- 1 Press **☎** for more than one second while the standby screen is displayed.

  Answer Phone is turned ON and "☎" appears on the standby screen.

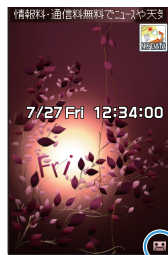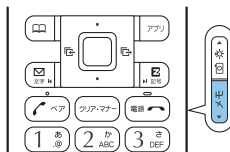

● To Turn Answer Phone OFF


Press **☎** for more than one second while the standby screen is displayed.

Information

- You can record each message for approximately 20 seconds maximum in Answer Phone, and up to 3 messages can be recorded including Phone Memo.
- Use "Answering Service (Voice Mail)" when you have turned the power off or where the radio wave is blocked.



Playing Back Messages on Answer Phone

When a message is recorded on Answer Phone:



" Answer Phone" and the number of messages appear on the standby screen.

 


1



Use  to select "Answer Phone" and press  [Check].


● Icons

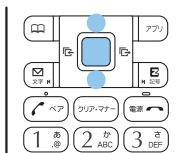-  : Unchecked Answer Phone message
-  : Checked Answer Phone message





 
2

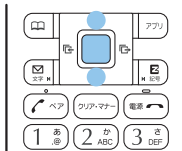Use  to select the recorded message to play back and press  [Play].







Information

 
 
- You can play back messages on Answer Phone by using the following procedure. Press  while the standby screen is displayed, select "Ans Ph/Ph Memo"→"Play A. Ph/Ph Memo", and then press  [Play].
- During or after message playback, upon pressing  [Menu] you can select "Erase" in order to delete the recorded message.





Changing Ringer Volume and Type



- 1** Press  while the standby screen is displayed.

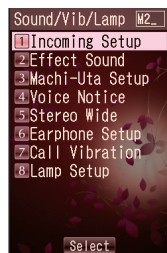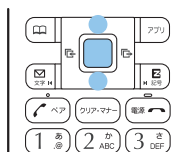





 
 
- 2** Use  to select "Basic Settings" and press  [Select].
- Use  to select "Sound/Vib/Lamp" and press  [Select].

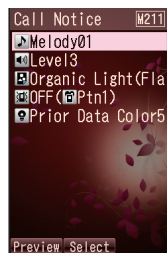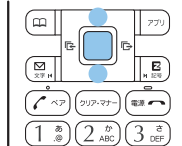


  - 3** Use  to select "Incoming Setup" and press  [Select].
- Use  to select "Call Notice" and press  [Select].



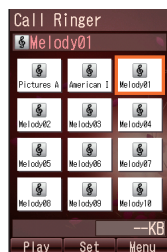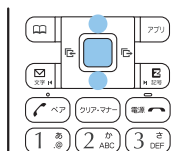

 
- 4** Use  to select "Melody" and press  [Select].
- Use  to select "Original" and press  [Select].





● Pressing  [Play] plays back the selected ringer.


 
5

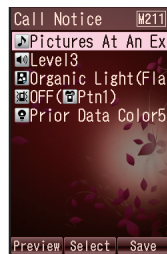Use  to select a melody and press  [Set].



6

  Use  to select " " and press  [Select].

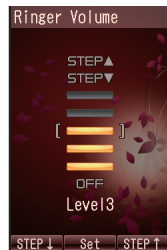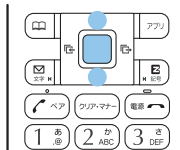


7

Use  to adjust the volume and press  [Set].


 : turns the volume up.


 : turns the volume down.

 The ringer volume can be adjusted in 5 levels.

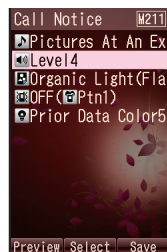

- Set the volume to "OFF" to mute the ringer.

- Press  [STEP ↑] to gradually increase the volume from Level1.

Press  [STEP ↓] to gradually decrease the volume from Level5.

8

Press  [Save].



 
Information



- The default ringer is "Melody01".
- The latest Chaku-Uta® (ringer) can be downloaded and set as the ringer. Refer to page 61.


Setting Manner Mode

The vibrator of the W53SA notifies you of the incoming call.

1


Press  for more than one second while the standby screen is displayed.

 Manner Mode is set, and "SV" and  appear on the standby screen. Answer Phone is turned ON at the same time and  appears on the standby screen.

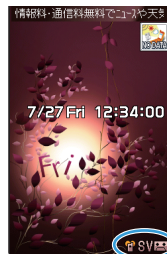

Phone Call

● To Turn Manner Mode OFF




Press  for more than one second while the standby screen is displayed.

Inputting Text

How to Input Characters


 
Switching Character Type


Enter characters while switching between character sets.

 For switching between character sets, press  on the character input screen, choose the desired character set from the character set switching screen by pressing , and then press  [OK].




 
 
 

 
 
 

 


Entering Single-byte Alphanumeric Characters

You can use the key  to  to enter characters. The characters appear as shown in the following table each time the indicated key is pressed.

Example: Each time you press the  key, the characters appear in the order of "a", "b", "c", "2", "a", "b"...

Press the key of the character to enter next, after the desired character is displayed.

Key	Lowercase character input mode								Uppercase character input mode							
	Number of presses								Number of presses							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
	.	@	-	_	/	:	~	1	.	@	-	_	/	:	~	1
	a	b	c	2				A	B	C	2					
	d	e	f	3				D	E	F	3					
	g	h	i	4				G	H	I	4					
	j	k	l	5				J	K	L	5					
	m	n	o	6				M	N	O	6					
	p	q	r	s	7			P	Q	R	S	7				
	t	u	v	8				T	U	V	8					
	w	x	y	z	9			W	X	Y	Z	9				
	0							0								
	Switches between uppercase and lowercase characters.															
	Shifts to the previous character assigned to the same key, when the entered character has not yet settled (Back Space function). Inputs a line break if possible after the entered character has been settled.															

Information

- Up to 30 lowercase characters including "-" (hyphen), "." (dot) or "_" (underbar) can be used for your E-mail address.
"." (dot) or "0" (numeric) cannot be used at the beginning of an address.
The characters and symbols in the gray cells () cannot be used before the "@" as in "@ezweb.ne.jp".

 



● Consecutively Entering Characters Assigned to the Same Key

After entering the first character, press  to move the cursor and enter the next character.

Example: Entering "ab"



● Erasing Characters

 
Move the cursor to the character you want to delete and press  .
Press  for more than one second to erase all characters after the cursor (). All characters are erased when the cursor () is at the end of the text.

Entering E-mail Address


Example: To enter "taro@sanyo.ne.jp" using Phrase

1 Enter "taro@sanyo".


- t : Press **8** once.
- a : Press **2** once.
- r : Press **7** 3 times.
- o : Press **6** 3 times.
- @ : Press **1** twice.
- s : Press **7** 4 times.
- a : Press **2** once.
- n : Press **6** twice.
- y : Press **9** 3 times.
- o : Press **6** 3 times.

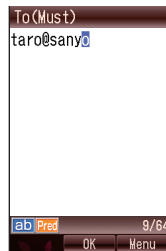

2 Press **アプリ** [Menu].

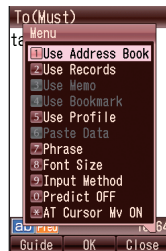 

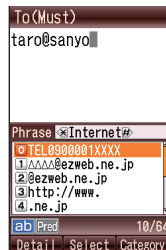 


3 Use **☐** to select "Phrase" and press **☐** [OK].
Use **アプリ** [Category] to select "Internet".




● Press **☐** / **(*)** / **(#)** to switch between the phrase lists by category.


 
4

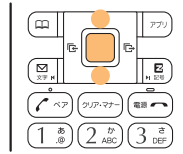

  
Use  to select ".ne.jp" and press  [Select].




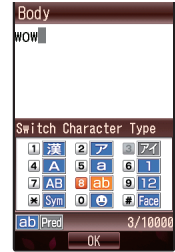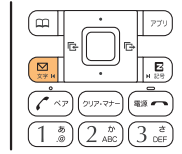


Entering Pictograph

 - 1 Press  on the character input screen.





- 2 Use  to select "  " and press  [OK].




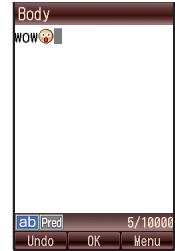 
- Press  [Category] /  /  to switch between the pictograph lists by category.




- 3 Use  to select a pictograph and press  [Select].



- Select a pictograph and press  [Continue] to enter consecutive pictographs.




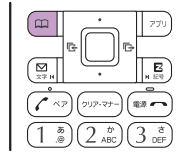 
Information



- You can also enter a pictograph by pressing  on the character input screen.

 
 
Address Book


Registering Data in Address Book

- 1 Press  for more than one second while the standby screen is displayed.



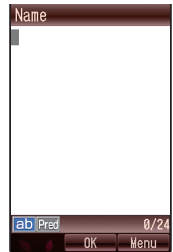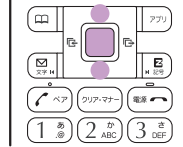

- 2 Use  to select "Name" and press  [Select].

 
 


- 3 Enter a name and press  [OK].

● The reading is automatically entered when you enter a name. You can edit the reading.



- 4 Use  to select "Phone No.1" and press  [Select].

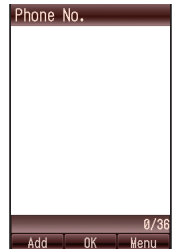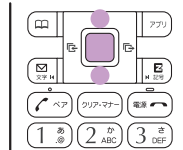


5

Enter a phone number and press



[OK].

 Use to select a type of phone number and press [Select].


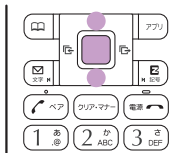


- Enter the area code when registering a regular telephone number.
- When you want to register a second phone number, select " (Phone No.2)", and enter the phone number.
- When you do not enter an E-mail address, go to step 8.

6

Use to select

  " (E-Mail Address 1)" and press [Select].

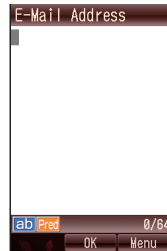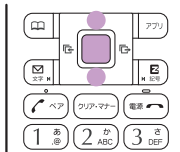


7

Enter an E-mail address and press



[OK].

 
Use to select a type of E-mail address and press [Select].

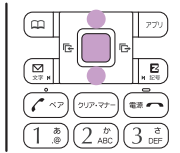

- When you want to register a second E-mail address, select " (E-mail address2)", and enter the E-mail address.

8

 
Press [Reg].

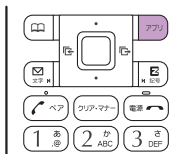




Information

 
- Entries are automatically registered in the lowest available memory number between 000 and 999.
- You can register data up to 1000 in the address book. In addition, groups, images or other items can be registered.

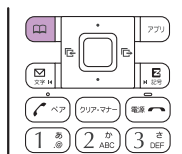

Making a Call from Address Book

 
- 1 Press  while the standby screen is displayed.



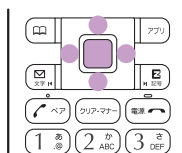

 
- 2 Use  to select the person to call and press  [Detail].


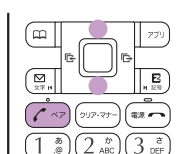


- 3 Use  to select a phone number and press .





Editing Address Book Data

  
 
- 1 Press  while the standby screen is displayed.
Use  to select the data to edit and press  [Detail].

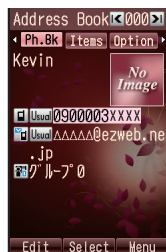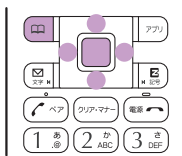

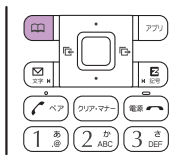


- 2 Press  [Edit].

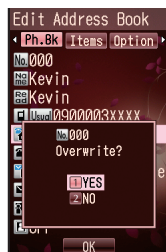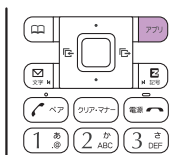  


- 3 Edit data and press  [Reg].



 - 4 Use  to select "YES" and press  [OK].

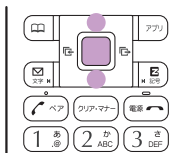




Information

 
- In case you want to delete the address book, after completing step 1, press  [Menu], and select "Erase" → "YES".

Registering Data from Outgoing/Incoming Calls



1



Press  while the standby screen is displayed.

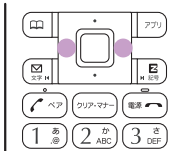-  : displays the Outgoing Calls screen.
-  : displays the Incoming Calls screen.



2

  
Use  to select the phone number to register and press  [Menu].

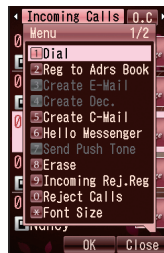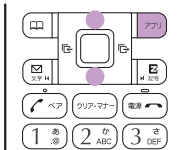



Address Book

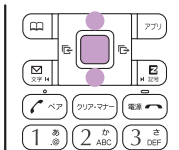 

3

 
Use  to select "Reg to Adrs Book" and press  [OK].



4

Use  to select "Register New" and press  [OK].

Use  to select a type of phone number and press  [Select].

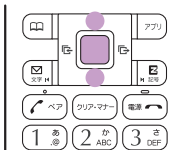



● For details about register data, refer to pages 33 to 34.

 
 
Pair Function



You can register the frequent contacts (up to 5 entries) as Popular Contacts to make calls, send mails or use Hello Messenger easily.



Registering Data as Popular Contact

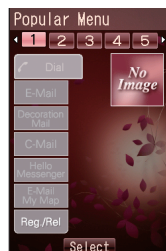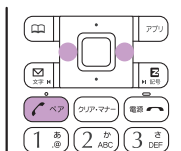

1 Press  while the standby screen is displayed.

  
Use  to select a tab of the number to register.



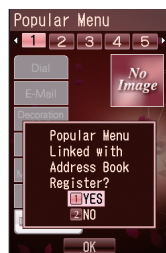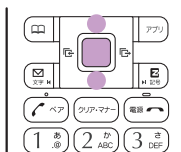

 
2 Use  to select "Reg./Rel" and press  [Select].

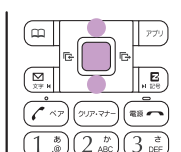

3 Use  to select "YES" and press  [OK].



 4 Use  to select the person to register and press  [Select].





Information

 
 
- Select an entry from the address book to register as Popular Contact. Before registration, refer to pages 33 to 34, and register the data of the Popular Contact in the address book.
- In case you selected an address book containing multiple phone numbers or e-mail addresses, the phone number and e-mail address as registered under **Usual** in the address book will be recorded.

Making a Call to the Popular Contact



1


Press  while the standby screen is displayed.

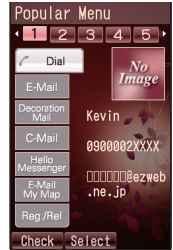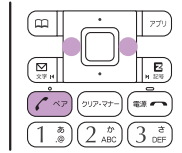Use  to select the person to call.



2

 Use  to select "Dial" and press  [Select].

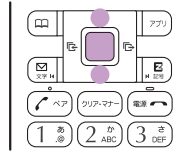

- To send a mail to the popular contact, select "E-mail" or "C-mail". Refer to pages 41 to 43 to create/send an E-mail, or pages 49 to 50 to create/send a C-mail.

Mail

About E-mail (EZweb subscription required)

 
Application to the EZweb service is required to use E-mail. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase.

Perform the EZweb initialization before using this service. If you have not performed initialization yet, see page 17.

E-mail is a service for sending/receiving mails to/from E-mail compatible cellphones and personal computers via Internet E-mail addresses. Up to 5000 two-byte (10000 one-byte) characters can be sent in an E-mail message. Still images (photos) and moving images (movies) can also be sent via E-mail.

* For sending and receiving E-mails, a packet communication fee is charged depending upon the amount of data transmitted.

Mail

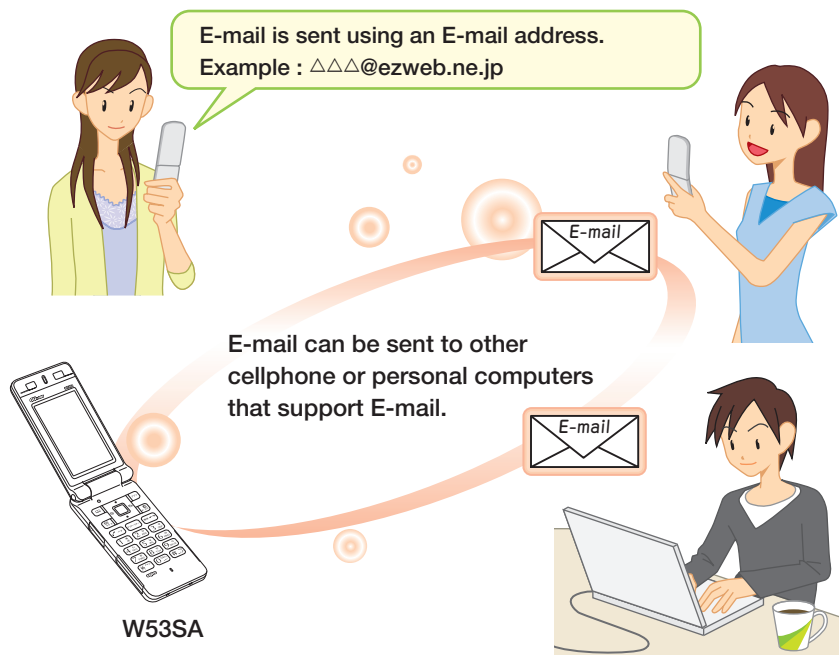



Information

 
- You can send an E-mail (including Cc and Bcc) to up to 5 E-mail addresses at a time.
- Up to 1000 E-mails (including the number of addresses) can be sent a day.
- Transfer of E-mail with attached data may take time.


Creating and Sending E-mail



1 Press  while the standby screen is displayed.



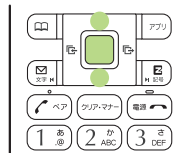

  2 Use  to select "Create New" and press  [Select].

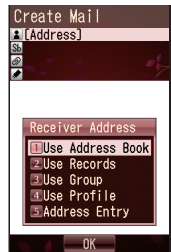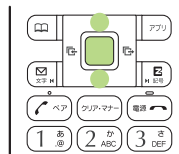

3 Use  to select "(Address)" and press  [Select].



4 Use  to select "Use Address Book" and press  [OK].




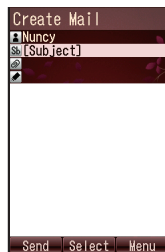 
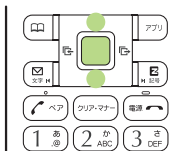 
● You can also select the address from "Use Records", or enter the address directly from "Address Entry".



Mail

 
- 5 Use  to select a recipient and press  [Detail].




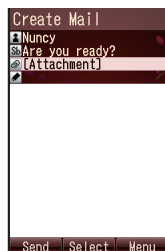 
- 6 Use  to select an E-mail address and press  [select].



- 7 Use  to select "Sb (Subject)" and press  [Select].

 
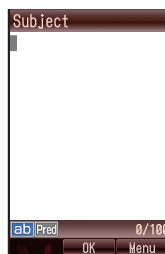 


- 8 Enter the subject and press  [OK].




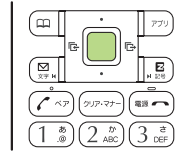 
9

Use  to select "(Body)" and press  [Select].

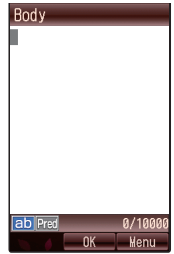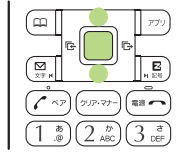

10

Enter the body and press  [OK].



11


Press  [Send].

 
After your E-mail has been sent, the message "Sent" appears on the display.



Reading Received E-mail


When you receive an E-mail:

" New E-Mail" and the number of messages appear on the standby screen.







1

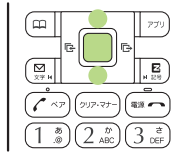 Use  to select " New E-Mail" and press  [Check].



  2

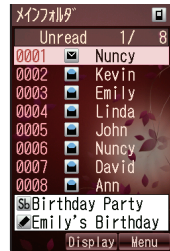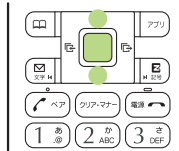

Use  to select "メインフォルダ (Main folder)" and press  [Select].

 
 


● Icons

-  : Unread mail
-  : Read mail

3

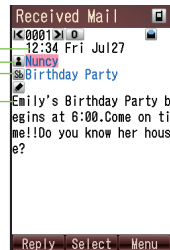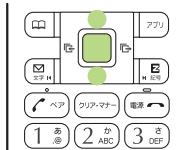

Use  to select the unread E-mail and press  [Display].



How to view received E-mail:

- Received date and time _____
- Sender _____
- Subject _____
- Body text _____

Information

 
- You can read received E-mail by using the following procedure.
Press  while the standby screen is displayed, select "Inbox"→"メインフォルダ(Main folder)", and then press  [Display].

● Viewing Received Photos

1

Display the received E-mail (page 44) .


Attached data

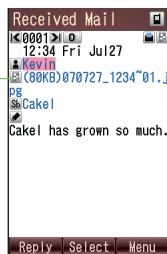



2


 
Use  to select the attached data and press  [Select].

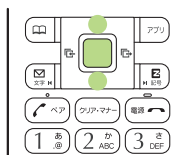Attachment List screen is displayed.



3

  Use  to select the attached data to receive and press  [Receive].

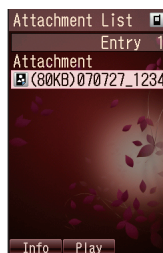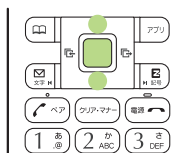


4

Press  [Play].



 
Information

- Depending on the size of the attached data, it can be displayed in the text or played back when you press  [Play] in step 3.
- It may take a short while to send/receive mails depending on the data attached to them or the condition of the radio wave in area you are in.

Replying to Received E-mail

1



Display the received E-mail (page 44) .

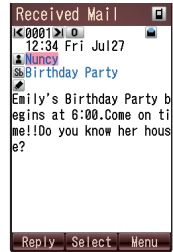

2

Press  [Reply].

  
"Re:" is attached to the beginning of the subject and the body of the original E-mail is quoted.

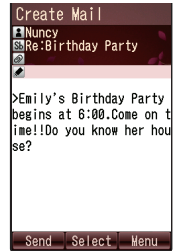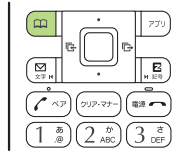

3

Use  to select "  (Body)" and press  [Select].

 ● For the subsequent procedure, see steps 10 and later on page 43.

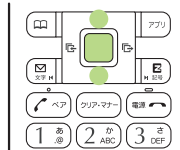












Blocking Junk Mails

To block junk mails, it is recommended to set メールフィルター (Mail Filter). By selecting "サポート設定 (supportive settings)", you can set メールフィルター (Mail Filter) easily by answering the Inquiry on the screen.

● Setting メールフィルター (Mail Filter)

Example: To access "サポート設定 (supportive settings)"

 - ① Press  while the standby screen is displayed.
- ② Use  to select "E-Mail Setup" and press  [Select].
- ③ Use  to select "Mail Filter" and press  [Select].
Use  to select "次へ (Next)" and press  [Select].
- ④ Enter your Security Code, press  [OK] and
Select "送信 (Send)" and press  [Select]
- ⑤ Select an item and press  [Select]

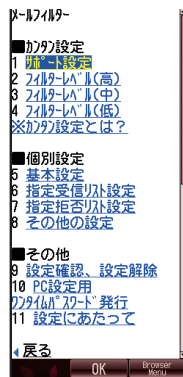

Mail

● カンタン設定 (Easy Setup)



サポート設定 (supportive settings)

Sets the filter by answering the inquiry. For the users who would like to check each setting condition.

フィルターレベル (高) (Filter level (Strict))

 
Rejects mails from PC. For the users who send/receive the mails only between cellphones.

フィルターレベル (中) (Filter level (Medium))

Selects and blocks the persisting senders. For the users who are annoyed by a stalker or a specific junk mailer.

フィルターレベル (低) (Filter level (Normal))

Blocks the Unsolicited Ad Mails or the Spoof E-mails. The filter minimally required.

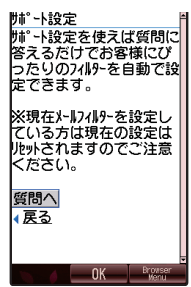


Information

● You can also block junk mails by changing your E-mail address. Refer to pages 18 to 19 to change the E-mail address.

About C-mail

C-mail is a service using phone numbers for sending/receiving mails to/from "C-mail" compatible au cellphones. Each message of C-mail can include up to 50 two-byte (100 one-byte) characters.

 * For sending C-mails, a C-mail transmission fee will be charged.

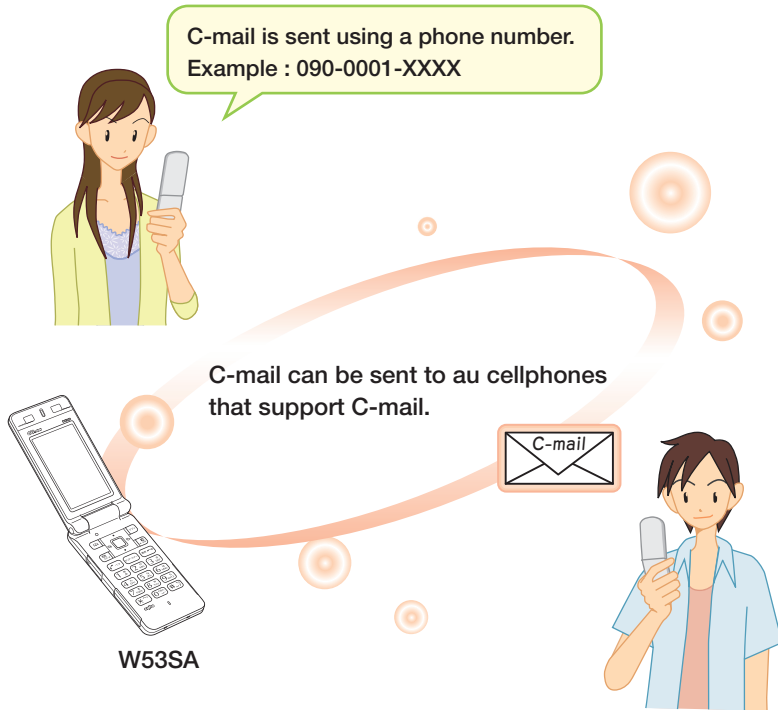

● C-mail Safe Block Function


C-mail safe block is a function to reject C-mails that include a URL (http:// □□□, https:// □□□) or a phone number in the C-mail message text.

 
This function is turned ON at the time of purchase.

However, the C-mail safe block function can be turned OFF in order to receive C-mails that include a URL or phone number.



Creating and Sending C-mail



1

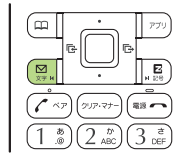Press  for more than one second while the standby screen is displayed.




2

 
 
Use  to select "Create New" and press  [Select].

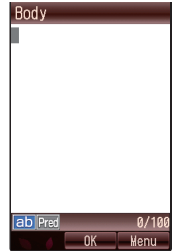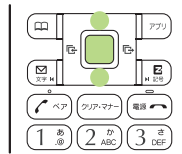


Mail



3

  Enter the body and press  [OK].

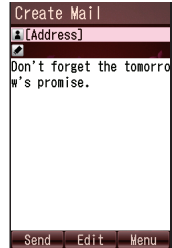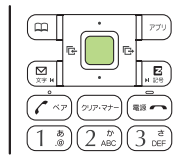



4

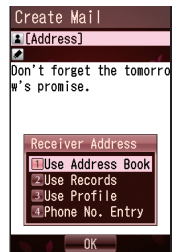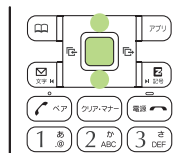  
Use  to select " (Address)" and press  [Edit].



5


Use  to select
"Use Address Book" and
press  [OK].

 - You can also select the phone number from "Use Records", or enter the phone number directly from "Phone No. Entry".

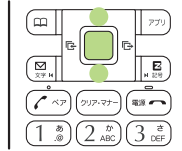





6

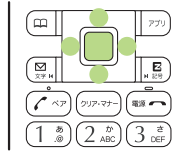 Use  to select a recipient
and press  [Detail].



7

  
Use  to select a phone number
and press  [Select].

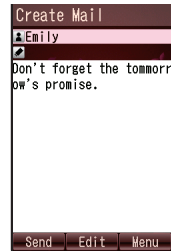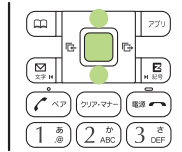

8


Press  [Send].

 
When your C-mail reaches the recipient,
the message "Mail Deliverd" appears
on the display.

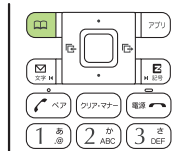


Reading Received C-mail

When you receive a C-mail:

 " New C-Mail" and the number of messages appear on the standby screen.





1

Use  to select "  New C-Mail" and press  [Check].





2



Use  to select "メインフォルダ (Main folder)" and press  [Select].

 


● Icons



- : Unread mail
- : Read mail

3

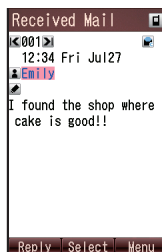Use  to select the unread C-mail and press  [Display].



Information

- You can read received C-mail by using the following procedure.
Press  for more than one second while the standby screen is displayed, select "Inbox" → "メインフォルダ(Main folder)", and then press  [Display].

Mail

Camera

What You Can Do with Camera

W53SA has 1.97-megapixel camera that allows you to shoot photos or movies. The camera has built-in auto focus function. The auto focus function works when you press the shutter key. Photos and movies which you shot can be sent by E-mail.

Use Shot Photos with W53SA

You can set the photos which you shot as the standby screen or the screen for incoming calls or register them in the address book.

Send Photos/Movies by E-mail (Page 56)

Photos or movies of maximum size 500KB* can be sent by E-mail.

* Mail transfer may take time depending on the condition of the radio wave in the area you are in.

Use The Character Reader (OCR)

Phone numbers, E-mail addresses, URL and Japanese words can be scanned with the camera. You can register the scanned data to the address book, etc.

W53SA has Japanese-English/English-Japanese dictionaries. Translation of the scanned text is available using these dictionaries.

Use Pashamoji® Function

Pashamoji® Memo allows you to transform handwritten messages in a notebook into a photo to attach to an E-mail. Pashamoji® Card is the function that you can create items such as a postcard by combining photos and handwritten messages.

Print Photos You Shot

You can save the photos you shot in microSD™ Memory Card (commercially available) and print them at photo service shops in the same way as the film developing.

How to Hold W53SA

Do not cover the lens with your fingers. Hold W53SA steady with both hands.


■ Upright

Photo : Mobile/Wallpaper/WideWallpaper Size

Movie : Standard (S/M Size)

High Quality (M/L Size)

 Long-Time (M/L Size,QVGA Size(Vert))

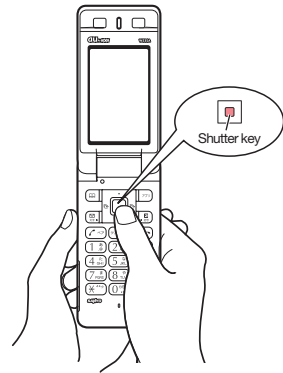

■ Landscape-Oriented

Photo : 0.3M/1M/2M Size

Movie : Long-time (QVGA Size(Horz),
VGA Size)

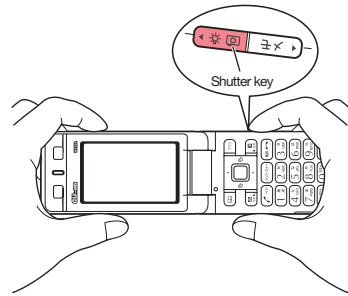 


Image-Shooting Posture


Open your feet to the breadth of your shoulders and maintain your back and sides firm to avoid jiggling.

To Prevent Jiggling

 
 
- Hold W53SA firmly with both hands. Do not move your W53SA after pressing the shutter key until you hear the shutter sound and the preview screen appears.
- Using the Self-Timer allows you to shoot photos without pressing the shutter key, which prevents jiggling.

Shooting Photo


1

Press  for more than one second while the standby screen is displayed.


The view seen through the lens appears.

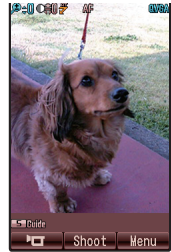
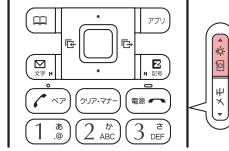


2

Point the lens at the subject and press  [Shoot].


The auto focus works and you will hear the shutter sound, then a photo is shot.

  ● Press  to re-shoot the photo.

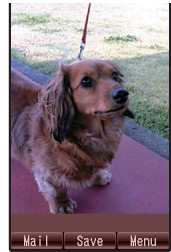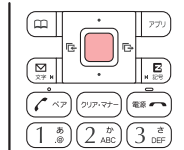

3

 Press  [Save].

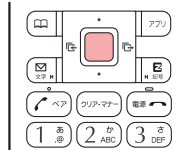


● Title of Photo You Shot

The Photo Size is set to "Wallpaper Size" at the time of purchase.

Photo Size*1	Title of a photo	Where to save
Mobile / Wallpaper / Wide Wallpaper Size	year + month + date + time + minute + serial number	"Photo Folder" of W53SA
0.3M / 1M / 2M Size	ST32 + serial number	"DSC Folder" in microSD™ Memory Card*2


Example: The first photo shot at 12:30 on July 27, 2007
 Mobile/Wallpaper/Wide Wallpaper Size: 070727_1230'01
 0.3M/1M/2M Size: ST320001

 
 
*1: Press  while the live image is on the display to change the Photo Size.

*2: Photos are saved in "Photo Folder" when a microSD™ Memory Card (commercially available) is not inserted, or there is not enough space available in the microSD™ Memory Card.


 
Viewing Photos


1

 Press  while the standby screen is displayed.

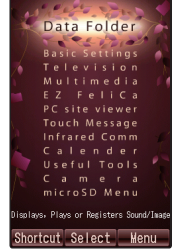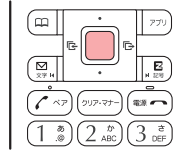



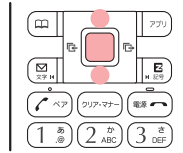


2

Use  to select "Data Folder" and press  [Select].






 
3

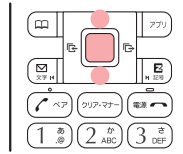Use  to select "Photo Folder" and press  [Select].
Use  to select a folder containing your desired image and press  [Select].



4

  
Use  to select an image and press  [Select].

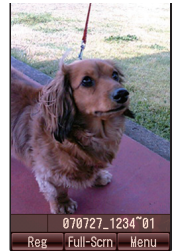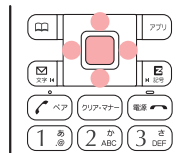

Camera


Attaching Photo to E-mail Message

 1 Shoot a photo (page 54) .

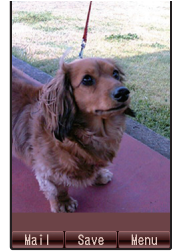

2 Press [Mail].
Use [Attach] to select "Attach to E-Mail"
and press [OK].

 The Create Mail screen appears
with a taken photo attached.

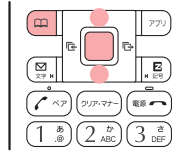

- For the subsequent procedure, see steps 3 to 11 of on pages 41 to 43.

 
About EZweb

Application to the EZweb service is required to use the service. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase. Perform the EZweb initialization before using this service. If you have not performed initialization yet, see page 17.

EZweb is a service that provides you with information to enjoy the Internet via cellphones.

You can obtain Chaku-Uta-Full®, the latest news and other contents from information sites.

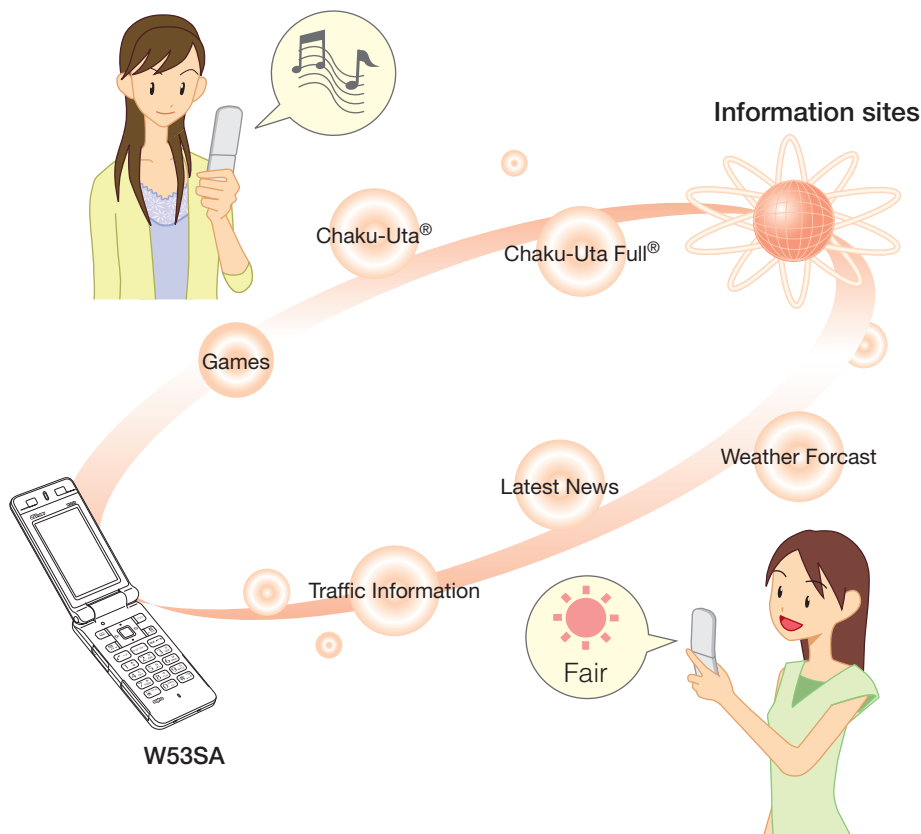


* When connected to EZweb, a packet communication fee will be charged for data sent or received, corresponding to the amount of data transmitted, regardless of connection time.

 


Displaying EZ Top Menu


1

Press  while the standby screen is displayed.

Use  to select "EZweb" and use  to select "Top Menu" and press  [Select].



EZトップメニュー (EZ Top Menu)

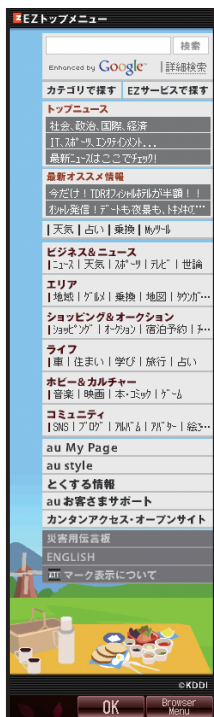 

キーワード検索機能 (Keyword search function)

Provides a search engine for information available by the keyword entry.

カテゴリで探す (Search by category)

Searches for a site by category.

EZサービスで探す (Search by useful EZ services)

Accesses recommended fun and convenient sites.

トップニュース (Top news)

The latest top news topics are delivered by an automatic update.

最新オススメ情報 (Latest recommended information)

Introduces featured topics or contents information of various categories.

デイリーツール (Daily tool)

Provides weather news, fortune-telling, or the useful function of train connection search.

ビジネス&ニュース (Business & News information)

Provides the latest information such as news, weather, or useful information for business.

エリア (Regional information)

You can search the connection of train, map or other local information.

ショッピング&オークション (Shopping & Auction information)

Provides information about shops where you can purchase goods with your cellphone, and the information about the auction where you can sell or buy easily.

ライフ (Useful daily life information)

Provides useful information for daily life.

ホビー&カルチャー (Hobby & Culture information)

Provides the latest information about games, music, books, and information on hobby or entertainment trends.

コミュニティ (Community information)

Provides interesting, convenient and fun information on SNS and blogs, etc.

au My Page

Provides the various information, useful tools, or large storage spaces, which are appropriate for your selection of the services.

au style

Introduces au-recommended information and sites.

とくする情報 (Valuable information)

Offers gifts and free valuable information to EZweb service subscribers.

auお客さまサポート (au Customer Support)

Provides phone bills, application forms, au online manuals, and au announcement.

カンタンアクセス・オープンサイト (Simple Access & Open Site)

Introduces カンタンアクセス・オープンサイト (Simple Access & Open Site).

災害用伝言板 (Disaster Message Board)

Registers/checks the safety information in disasters.

ENGLISH

Introduces English sites.

 
 
Information

- It may take some time to display the top menu.
- The layout and contents of the screens in this manual are examples and are subject to change.



Bookmarking Frequently-Accessed Site


1

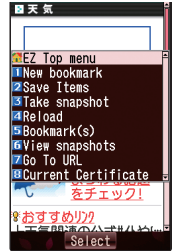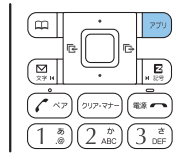Display the site to bookmark and press  [Browser Menu].



2

 
Use  to select "New bookmark" and press  [Select].

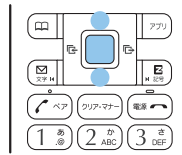

3

Press  [Reg].

 
● Some sites cannot be bookmarked.

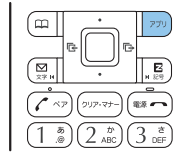



Information

● Up to 100 sites can be bookmarked.



Accessing Bookmarked Site



  1 Press  while the standby screen is displayed.

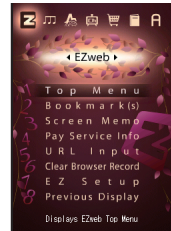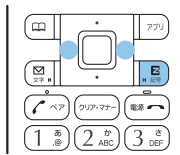
Use  to select "EZweb".

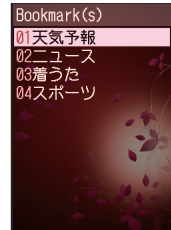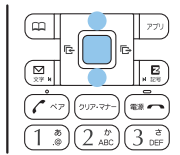  

 2 Use  to select "Bookmark(s)" and press  [Select].


 



3 Use  to select a site and press  [Jump].



Viewing Charge



Approximate charges for your calls and transmission can be viewed.

 1 Press  while the standby screen is displayed and press  twice.

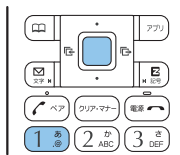

  
2 Use  to select "Execute" and press  [Select].

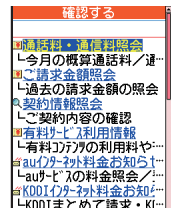

Select the item you want to confirm.





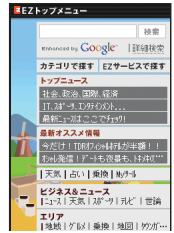 

Downloading Chaku-Uta®/Chaku-Uta-Full®

  
1 Display the EZ Top Menu (page 58).

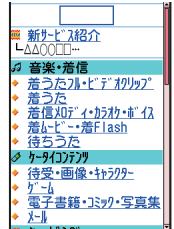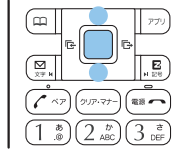

2 Use  to select "カテゴリで探す (Search by category)" and press  [OK].



 3 Use  to select "着うた (Chaku-Uta)" or "着うたフル・ビデオクリップ (Chaku-Uta-Full / Video Crip)" and press  [Select].

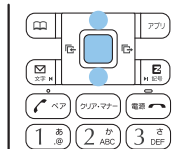

4 Select the content (information site) to use and download data.

- When you access a site requiring additional information fee, input your EZ Password or Premium EZ Password.
EZ Password/Premium EZ Password is the 4-digit number that you have filled in the application form at the time of purchase.

Information

 
- The communication fee and information fee are charged for downloading Chaku-Uta® or Chaku-Uta-Full® from the paid contents.
- The layout and contents of the screens in this manual are examples and are subject to change.

EZ Navi (EZweb subscription required)


What You Can Do with EZ Navi

EZ Navi offers convenient location information services (GPS).

* When using EZ Navi service, a packet communication fee will be charged.
Some service will require extra charging of communication fee.

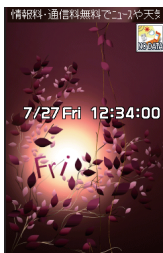

Standby Screen

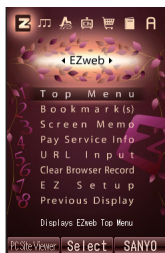 

EZ Service Menu

 
Use to select "EZnavi".



EZnavi Menu

"Passenger Seat Navi" for drive route confirmation by front passenger

"Passenger Seat Navi" provides the person on the passenger seat with the way to the destination by voice directions and maps.

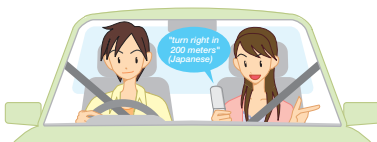

"Security Navi" to check where your child is

The "Security Navi (安心ナビ)" application is composed of 3 functions: "いつでも位置確認 (Auto Position Search)" (monthly charge), "位置確認メール (Position Search Mail)" (free of charge) and "エリア通知 (Area Message)" (free of charge).

With these functions, you can check the location of an au cellphone that supports Position Search and/or have a message automatically sent to a specified au cellphone when you enter (or are in) or leave (or are out of) a pre-determined area during a preregistered time period.



"EZ Navi Walk" for when you go out

Displays various menus that are useful when you are out.




ナビをする*1 (Navigation)	Provides the navigation (voice directions) to the destination, or you can search for shops or facilities around your present location.
地図を見る*1 (無料) (View Map (free))	You can view a map of your present location or any other location.
乗換検索する*1 (無料)*2 (Search Connection*1 (free)*2)	You can search the connection of train, timetable and railway information.
道路情報を見る (View Traffic Info)	Check real-time traffic information on the major roads all over Japan.
もっとナビウォーク (EZ Navi Walk)	Provides explanations about each setting or search on PC.
インフォメーション (Information)	You can register for memberships or make inquiries.

*1: You can also select the service using your voice ("声de入力 (Voice input)").

*2: A portion of these menus are charged services.

View My Position



The first positioning result is indicated by ★.
After that, your present location will be shown as  in real-time by continuous positioning.

3D Navi



The display is switched to the 3D image at the guidance point or a point near the destination.

Navigation engine by NAVITIME JAPAN
Map : 昭文社 / 住友電工
3D data : ゼンリン / ジオ技術研究所
Z06A-2137

"Evacuate Navi" for information about escape routes and way home



Evacuate Area Map



Route Home Map

When map data prepared beforehand are stored in the W53SA, it is possible to use those data in order to find an escape route and the way home in the wider surroundings ("Evacuate Area Map"). *1
Furthermore, on the "Evacuate Navi" EZweb Site, you can choose two points, for example "from work to home", in order to create a "Route Home Map", which will advise you on the route to be followed. Various kinds of contents can be downloaded. *2

*1: As for itinerary indications towards your home, you should first store some GPS information about your home location in the au phone address book; this is required in order to set the target location.

*2: A fee is charged for some contents.

Map: Shobunsha Publications, Inc./Preparation: Asia Air Survey Co.,Ltd.

Information

 
- As notifications appearing on the screen are standard, please do obey any orders given by police, firemen or local community officials.
- When using "Evacuate Navi", it may take some time before your exact location is acknowledged, among other depending on GPS satellite conditions.
- The layout and contents of the screens in this manual are examples and are subject to change.

EZ Television (1Seg) (EZweb subscription required)



You can watch the Digital Terrestrial Broadcasting for Mobile Television Service "1Seg" with W53SA. (Broadcasting within Japan is only available.) In addition to the television programs, you can enjoy data broadcasting programs.

What You Can Do with EZ Television (1Seg)


Watching television programs/data broadcasting programs

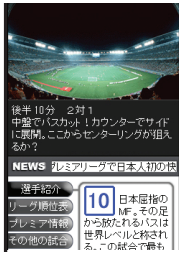

Data Broadcast Operation display

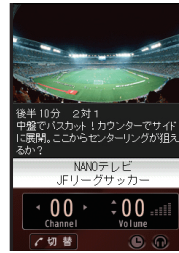  

 

TV Operation display





Recording programs/capturing programs as still images



Use  to select "録画／キャプチャ (Record/Capture)" and press  [選択 (Select)].




● Before Using EZ Television (1Seg)

 
- Perform initialization before using the service. If you have not performed initialization yet, refer to page 17.
- Any fee for packet or other transmission is not charged when watching EZ Television (1Seg). However, you are charged for packet communication if you access the services such as Program Information or Information Window.
- Any fee for packet or other transmission is not charged when watching data broadcasting programs. However, you are charged for packet communication if you use the interactive service provided on data broadcasting programs or access the information sites of EZweb.
- EZ Television (1Seg) is not available after you terminate the use of your W53SA.
- When the battery level is "  ", EZ Television (1Seg) cannot be activated. If the battery level changes to "  " during use of EZ Television (1Seg), EZ Television ends automatically.
- Deteriorated image, poor image or sound quality or reception failure may occur in mountainous areas, near buildings, in underpasses, in tunnels, or indoors because of poor TV reception. Try the following to improve the reception of the radio wave:
 - Extend the W53SA Antenna (for EZ Television (1Seg)/EZ · FM) to locate the direction for the best reception.
 - When you are indoors, take your W53SA as close to a window as possible.
- For details about 1Seg, see the web sites below.





The Association for Promotion of Digital Broadcasting
<http://www.dpa.or.jp/> (For PC)
<http://www.dpa.or.jp/1seg/k/> (For Cellphones)
- The layout and contents of the screens in this manual are subject to change. Screen images are examples.



Watching EZ Television (1Seg)

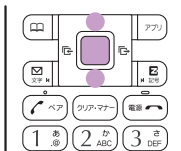When you use EZ Television (1Seg) for the first time, make the necessary settings as follows.



  - 1** Press  while the standby screen is displayed. Use  to select "Television" and press  [Select].

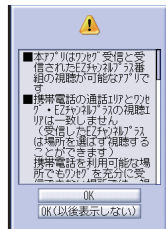
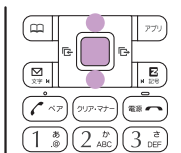


- 2** Use  to select "EZ Television" and press  [Select].
Use  to select "EZ TV(1Seg)" and press  [Select].



Precautions screen appears.

 
 
- 3** Use  to confirm precautions. Use  to select "OK" and press  [選択 (Select)].

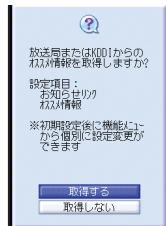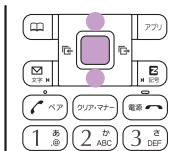

The initial setting screen for EZ Television (1Seg) appears. Follow the on-screen instructions for each setting, and the screen to set channels appears.

  
- If you select "OK (以後表示しない(No further indication))", the precaution screen does not appear any more.

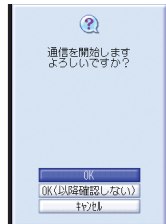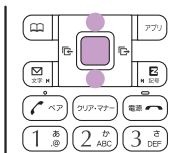

- 4** Use  to select "オート設定 (Auto-setting)" and press  [選択 (Select)].



 
- Select "マニュアル設定 (Set manually)" to set the area manually.

5

Use  to select "OK".

Press  [選択 (Select)] and
press  [選択 (Select)].

The data reception area and channels are automatically set and one of the broadcast programs appears on the screen.

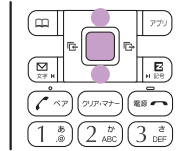

- If you select "OK (以降確認しない (No further confirmation))", a confirmation screen for data communication does not appear any more.
- In regions where the Digital Terrestrial Broadcasting for Mobile Television Service "1Seg" is only recently available for portable devices the channel setup may sometimes show some difficulties.

Information

- When starting up EZ Television (1Seg), a characteristic of Digital Broadcasts in which it can take some time to receive images, and especially Data Broadcast data, may appear.
- After starting up EZ Television (1Seg) the first time, the channel last selected during the previous use will be displayed. If you have moved to a different area or are in an area with poor reception, you will need to reset the channel(s).



● To Switch イヤホン (Earphone) and スピーカー (Speaker)

 
This setting is set to "オート (Auto)" (switch sound output automatically to either the earphones or speaker depending upon whether earphones are attached or not) at the time of purchase.

Ending EZ Television (1Seg)

1

Press  .

Use  to select "Exit"
and press  [OK].

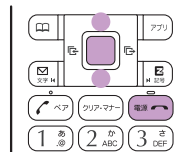


Remote Ctrl Lock

In Case You Lose Your W53SA


The Remote Ctrl Lock function enables you to turn ON the Auto Lock, FeliCa Lock and Address Book Restriction functions through remote operation so that no one else can use your W53SA.

● Setting Remote Ctrl Lock Activation Conditions

 The Auto Lock, FeliCa Lock and Address Book Restriction functions are activated when your W53SA receives the specified number of calls from the registered phone number within the specified period of time.

① Press     while the standby screen is displayed.

② Use  to select "ON" and press  [Set].

Enter your Lock No. and press  [OK].

* Lock No. is set to "1234" at the time of purchase.

③ Use  to select "Valid No. List" and press  [Select].



Use  to select "Register New" and press  [Select].

④ Use  to select "Direct Entry" and press  [OK].

Enter a phone number and press  [OK].

* You can also select "Use Address Book" to enter a phone number. Up to 3 phone numbers can be registered.

⑤ Press  [Comp].

⑥ Use  to select "Duration(min)" and press  [Select].

Enter Duration and press  [Set].

 
* Duration(min) : Sets the time limit to receive the specified number of incoming calls.
The time can be set between 1 and 10 minutes.

⑦ Use  to select "Incm Call Ct" and press  [Select].

Enter Incoming Call Count and press  [Set].

* Incm Call Ct : Sets the number of incoming calls required for activating Remote Auto Lock.
The count can be set between 3 and 10 times.

⑧ Press  [Save].

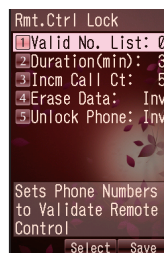

● Remotely Activating the Auto Lock, FeliCa Lock and Address Book Restriction Functions on the W53SA

1

Call your W53SA in the conditions set for Remote Ctrl Lock.

Remote Ctrl Lock is activated and an announcement to that effect will be played once the specified number of calls is received from the registered phone number within the specified period of time.

● Activating the Lock through the Security Lock Service

Even if you have not set the Remote Ctrl Lock in advance, the Security Lock Service gives you the ability to turn ON the Auto Lock, FeliCa Lock and Address Book Restriction functions remotely by calling the au Customer Center or performing a specified procedure from a PC. This service is available free of charge.

Turning Remote Ctrl Lock ON/OFF by calling the au Customer Center

From au cellphones: 113 area code not required (Toll-Free)

From cellphones except au, or regular phones: ☎ 0077-7-113 (Toll-Free)

(Hours: 24 hours a day)

* Follow the voice guidance instructions.

Turning Remote Ctrl Lock ON/OFF using a PC

Login to MyKDDI (<http://my.kddi.com/>) and perform the procedure indicated on-screen.

* It is necessary to apply for this service before using it for the first time.

(Application is possible even after you may have lost your phone.)

Information

- Remote Ctrl Lock cannot be activated if your W53SA is not powered on or under an area with bad reception, or Emission OFF is set to "Valid".
- "Erase Data" and "Unlock Phone" are both set to "Invalid" at the time of purchase.

Other Features

W53SA is provided with other useful features.

Global Expert

The W53SA supports Global Expert function using an au IC card.

Global Expert is an international roaming service that allows you to connect to the world by simply inserting your au IC card into a GSM mobile phone for overseas use. No special application or daily/monthly charges are needed.

Charges for overseas calls are billed together with monthly domestic calling charges.

Water resistance

The W53SA complies with the IPX5 and IPX7 (JIS Protection Class) water resistance standards. (According to tests conducted by the manufacturer) the W53SA can be used in rainy weather conditions or in humid locations, such as bathrooms and so on.

au My Page

This service saves the data that is on your W53SA, enabling you to backup the contents of your address book, your E-mail, and your Data folder.

EZ News Flash

This information delivery service enables you to check the news and weather, etc., on the standby screen.

Hello Messenger

Hello Messenger is a service that allows you to communicate text, voice and photo freely with au cellphones that support this service using your preferred character.

EZ FeliCa

Just by passing the W53SA over a reader/writer (external devices), you can perform shopping using credit card or electronic money; this way, you can also obtain information about Members' Cards, Point Cards and Coupons.

Decoration Mail

You can create or send e-mails decorated with various font colors, character sizes and flashing characters; you can also insert images and so on.



PC Site Viewer

This feature enables you to view Internet Web Sites created for display on PCs.


au Music Port

Music data downloaded from au Music Port or purchased at LISMO Music Store can be transferred to your W53SA. You can also edit the address book or schedule in your W53SA, or keep and manage the photo or movie data in your PC, which were shot with your W53SA.

Troubleshooting

Symptom	Item to Check	Solution	Page
Cannot turn the power ON.	Did you press  for more than one second?	Press  for more than one second.	12
	Is the battery pack exhausted?	Charge the battery pack.	11
	Is the battery pack inserted properly?	Insert the battery pack properly.	—
Cannot charge.	Is the cellphone set to the desktop holder properly?	Set the cellphone properly.	11
	Is the connector put in the desktop holder properly?	Put the connector properly.	11
	Is the connector put in the external terminal properly?	Put the connector properly.	11
Keys do not respond.	Is the power turned ON?	Turn the power ON.	12
Calls cannot be made/ received.	Is the power turned ON?	Turn the power ON.	12
	Is "Out" displayed or are you in an area where the reception is bad?	Move to a place where the reception is good.	12
	Did you enter the area code? (when you cannot make calls)	First dial the area code.	20
Ringer for incoming calls received.	Is the ringer volume set to "OFF"?	Adjust the ringer volume.	25
	Is the Manner Mode set?	Turn Manner Mode OFF.	27
The caller's voice cannot be heard/is hard to hear.	Is the earpiece volume set to low?	Adjust the earpiece volume.	22
	Is the reception bad?	Move to a place where the reception is good.	12
Calls are interrupted.	Is the reception bad?	Move to a place where the reception is good.	12
The cellphone answers automatically.	Is Answer Phone set?	Turn Answer Phone OFF.	23

For detailed information, visit the website of SANYO Electric Co., Ltd. as below.

- From W53SA : Press  for more than one second. (SANYO Keitai Planet, in Japanese only)
- From PC : <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

Index

A

Accessories	9
Address Book	33
Edit	36
Make a Call	35
Register	33
Register Data from Outgoing Calls/Incoming Calls	37
Adjust the Other Party's Voice Volume	22
Answer Phone	23
Erase	24
Play Back	24
au IC card	10

B

Basic Operation	13
Battery Level	12
Battery Pack	9, 10, 11
Bookmark(s)	60

C

Call Notice	25
Caller ID Notice	20
Camera	52
How to Hold	53
Photo	54
Chaku-Uta®/Chaku-Uta-Full®	61
Charge Indicator	10, 11
Charge the Battery Pack	11
C-mail	48
C-mail Safety Block	48
Create and Send	49
Read	51

D

Desktop Holder	9, 11
Disaster Message Board Service	6
Download	61

Drive Mode	4
------------------	---

E

E-mail	40
Attach a Photo	56
Create and Send	41
Initialization	17
Read	44
Reply	46
View Received Photos	45
E-mail Address	17, 18
Change	18
Display	17
Enter	30
Evacuate Navi	63
EZ Service Menu	16
EZ Navi Walk	63
EZ Television (1Seg)	64
End	67
Watch	66
EZweb	57
EZ Password	61
EZ Top Menu	58
Initialization	17
Premium EZ Password	61

I

Icons	15
ID Unsent	21
Incoming Calls	22, 37
Incoming Indicator	10
Initialization	17
Input Text	28
Back Space Function	28
Consecutively Enter Characters of the Same Key	29
E-mail Address	30
Erase	29
Pictograph	32
Switch Character Type	28

J

Junk Mail 47

L

Lock No. 68

M

Mail
 C-mail 48
 E-mail 40
Mail Filter 47
Main Menu 16
Make an International Call 20
Manner Mode 27
Manners for Using Cellphones 1
Missed Calls 21

N

Name of Parts 10
New Bookmark 59

O

One-Ring Calls 5
Outgoing Calls 22, 37

P

Pair Function 38
 Make a Call 39
 Register 38
 Send a Mail 39
Passenger Seat Navi 62
Phone Call
 Answer a Call 21
 Call Back 22
 Make a Call 20, 35, 39
 Phone Number 20
Phone Number 17
Photo
 Attach to E-mail 56

 Photo Size 54
 Shoot 54
 View 55
Phrase 30
Play Back
 Answer Phone 24
 Photo 55
Power 12

R

Radio Wave Reception 12
Remote Ctrl Lock 68
Ringer 25

S

Security Code 19
Security Lock Service 69
Security Navi 62
Set Language 12
Site
 Access Bookmarked Sites 60
 Bookmark Sites 59
Standby Screen 12, 15

T

Top Menu 58
Troubleshooting 71

V

View Charge 60

For inquiries, call:

au Customer Service Center

From EZweb:

How to access



EZ ▶ Top Menu

▶ auお客さまサポート (au Customer Support)

▶ お問い合わせ (Inquiry)

*Menu is subject to change without prior notice.

■ For general information and charges

From regular phones:



0077-7-111

(Toll free)

From au cellphones:

157 area code not required

(Toll free)

■ For loss, theft or damage and operation information

From regular phones:



0077-7-113

(Toll free)

From au cellphones:

113 area code not required

(Toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

Sales : KDDI CORPORATION •

OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by : SANYO Electric Co., Ltd.

July 2007 Edition

Access the au online
manual from here.



モバイル・リサイクルネットワーク
携帯電話・PHSのリサイクルにご協力ください。

Cellphone and PHS operators collect and recycle unused telephones,
batteries and battery chargers at stores bearing the ♻️ logo
regardless of brand and manufacturer to protect the environment
and reuse valuable resources.