

This pictured model is KX-FLB811.

Panasonic®

Operating Instructions

All in One Flatbed Laser Fax
with Document Separator

Model No. **KX-FLB811**

All in One Flatbed Laser Fax

Model No. **KX-FLB801**



FOR FAX ADVANTAGE ASSISTANCE:

— REFER TO

www.panasonic.com

for customers in the U.S.A. or Puerto Rico

— E-MAIL TO

consumer_fax@us.panasonic.com

for customers in the U.S.A. or Puerto Rico

— PHONE CALL


1-800-HELP-FAX (1-800-435-7329)

Please read these operating instructions before using the unit and save for future reference.

These units are compatible with Caller ID. To use this feature, you must subscribe to the appropriate service of your service provider.

These models are designed to be used only in the U.S.A.

How to use the operating instructions

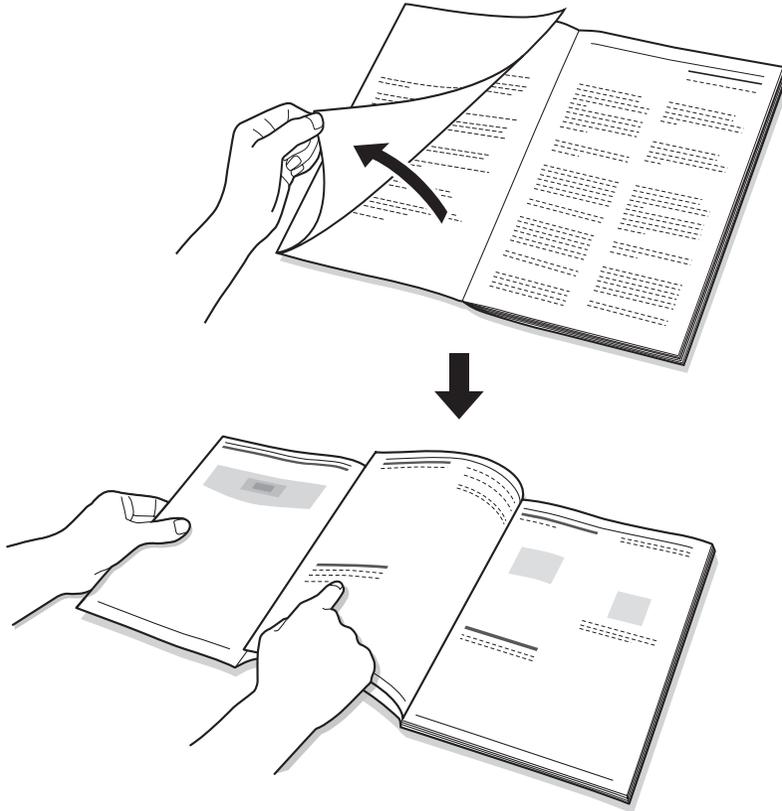


When following operating instructions, always keep the front cover page (next page) open for easy reference to the buttons.



Location of controls

Please keep this page open when following operating instructions.
For a description of each button, see page 10.

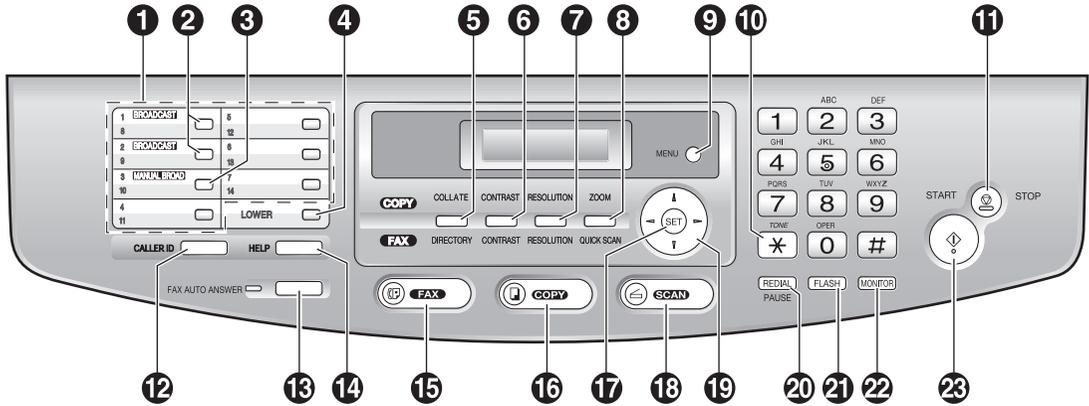

Buttons (Listed in alphabetical order)

BROADCAST **2**

CALLER ID **12**

COLLATE **5**

CONTRAST **6**

COPY **16**

DIRECTORY **5**

FAX **15**

FAX AUTO ANSWER **13**

FLASH **21**

HELP **14**

LOWER **4**

MANUAL BROAD **3**

MENU **9**

MONITOR **22**

Navigator key **19**

PAUSE **20**

QUICK SCAN **8**

REDIAL **20**

RESOLUTION **7**

SCAN **18**

SET **17**

START **23**

Station keys **1**

STOP **11**

TONE **10**

ZOOM **8**

Thank you for purchasing a Panasonic fax machine.

Caution:

- The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)
In order to program this information into your fax machine, you should complete the instructions on page 24 to page 27.
- Do not rub or use an eraser on the printed side of recording paper, as the print may smear.

Note:

- Most figures shown in these operating instructions are based on a KX-FLB811.

Energy Star:

- As an ENERGY STAR® Partner, Panasonic has determined that this product meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.



Trademarks:

- Microsoft, Windows and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Pentium is a registered trademark or trademark of Intel Corporation in the United States and/or other countries.
- Screen shots reprinted with permission from Microsoft Corporation.
- 3M is a trademark or registered trademark of Minnesota Mining and Manufacturing Company.
- Avery is a registered trademark of Avery Dennison Corporation.
- XEROX is a registered trademark of Xerox Corporation.
- All other trademarks identified herein are the property of their respective owners.

Copyright:

- This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.

Important safety instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from power outlets before cleaning. Do not use liquid or aerosol cleaners.
4. Do not use this unit near water, for example near a bathtub, wash bowl, kitchen sink, etc.
5. Place the unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. For safety purposes this unit is equipped with a grounded plug. If you do not have this type of outlet, please have one installed. Do not defeat this safety feature by tampering with the plug.
9. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
10. Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
11. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
12. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized service center when service is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
13. Unplug this unit from power outlets and refer servicing to an authorized service center when the following conditions occur:
 - A. If the power cord is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized service center.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
14. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
15. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

CAUTION:

Installation

- After moving the unit from cold areas to warmer areas, let the unit adjust to the warmer temperature and do not connect the unit for about 30 minutes. If the unit is connected too soon after a sudden climate change, condensation may form inside the unit causing malfunction.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Do not touch the plug with wet hands.

Important Information

Laser radiation


- The printer of this unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Fuser unit


- The fuser unit (①) gets hot. Do not touch it.
- During or immediately after printing, the area near the recording paper exit (②) also gets warm. This is normal.



KX-FLB811

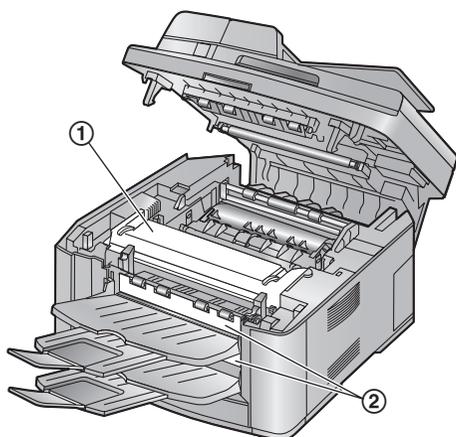

KX-FLB801

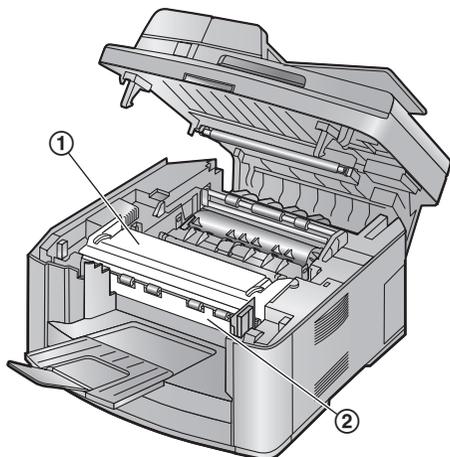

Toner cartridge

- Be careful of the following when you handle the toner cartridge:
 - Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.
 - If you ingest any toner, drink several glasses of water to dilute your stomach

contents, and seek immediate medical treatment.

- If any toner comes into contact with your eyes, flush them thoroughly with water, and seek medical treatment.
- If any toner comes into contact with your skin, wash the area thoroughly with soap and water.
- If you inhale any toner, move to an area with fresh air and consult local medical personnel.

Drum unit

- Read the instructions on page 13 before you begin installation of the drum unit. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the black drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.

WARNING:

- To prevent the risk of fire or electrical shock, do not expose this product to rain or any type of moisture.
- Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorized service center.
- Make sure that the unit is installed in a well ventilated room so as not to increase density of ozone in the air. Since ozone is heavier than air, it is recommended that air at floor level be ventilated.

Illegal copies

- **It is unlawful to make copies of certain documents.** Copying certain documents may be illegal in your country. Penalties of fines and/or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy in your country.
 - Currency
 - Bank notes and checks

- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.


Notice:

- Install your machine near a supervised area to prevent illegal copies from being made.

For best performance

Toner cartridge and drum unit

- In the printing process, heat is used to fuse toner onto the page. As a result, it is normal for the machine to produce an odor during and shortly after printing. Be sure to use this unit in an area with proper ventilation.
- To extend the life of the drum unit, the unit should never be turned OFF immediately after printing. Leave the power turned ON for a minimum of 30 minutes after printing.
- Do not cover slots or openings on the unit. Inspect the air circulation vents regularly and remove any dust build-up with a vacuum cleaner (①).
- When replacing the toner cartridge or drum unit, do not allow dust, water, or liquids to come in contact with the drum. This may affect print quality.
- For optimal performance, genuine Panasonic toner cartridges and drum units are recommended. We cannot be responsible for problems that may be caused by a non-Panasonic toner cartridge or drum unit:
 - Damage to the unit
 - Poor print quality
 - Improper Operation

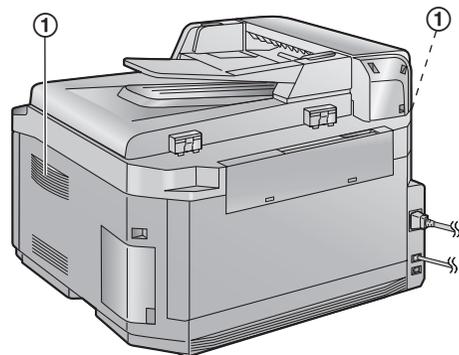

Static electricity

- To prevent static electricity damage to the interface connectors or other electrical components inside the unit, touch a grounded metal surface before touching the components.

Environment

- Keep the unit away from electrical noise generating devices, such as fluorescent lamps and motors.
- The unit should be kept free from dust, high temperature and vibration.

Important Information

- The unit should not be exposed to direct sunlight.
- Do not place heavy objects on top of the unit.
- When you leave the unit unused for a long period of time, unplug this unit from the power outlet.
- The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. It should not be placed in rooms where the temperature is less than 10 °C (50 °F) or greater than 32.5 °C (90.5 °F). Damp basements should also be avoided.

Recording paper


- Store unused paper in the original packaging, in a cool and dry place. Not doing so may affect print quality.

Routine care

- Wipe the outer surface of the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.

Moving the unit

- The unit weights approximately 16 kg (35.3 lb.). It is highly recommended that two people handle this unit.
- When moving the unit, hold the both side grips (①).

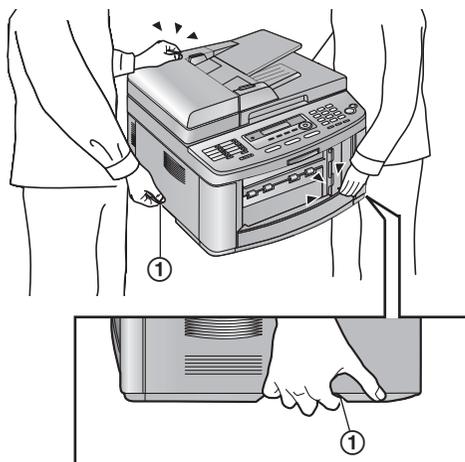

Approx. 16 kg (35.3 lb.)

1. Introduction and Installation

Accessories
 1.1 Included accessories.....9
 1.2 Accessory information..... 10
Finding the Controls
 1.3 Description of buttons..... 10
 1.4 Overview 11
Installation
 1.5 Toner cartridge and drum unit 13
 1.6 Document tray 15
 1.7 Output tray..... 15
 1.8 Recording paper..... 18

2. Preparation

Connections and Setup
 2.1 Connections21
 2.2 Dialing mode22
 2.3 Selecting the operation mode (Fax/Copy/Scan).....22
Help Button
 2.4 Help function 23
Volume
 2.5 Adjusting volume 23
Initial Programming
 2.6 Date and time24
 2.7 Your logo.....25
 2.8 Your fax number 27

3. Fax

Sending Faxes
 3.1 Using the unit as a fax machine 28
 3.2 Sending a fax manually 28
 3.3 Document requirements 30
 3.4 Storing items for the one-touch dial feature and navigator directory..... 31
 3.5 Sending a fax using one-touch dial feature and navigator directory..... 33
 3.6 Broadcast transmission 34
Receiving Faxes
 3.7 Receiving a fax automatically – Auto answer ON..... 36
 3.8 Receiving a fax manually – Auto answer OFF 36
 3.9 Using the unit with an answering machine..... 37
 3.10 Junk fax prohibitor (preventing fax reception from undesired callers) 38

4. Caller ID

4.1 Caller ID service..... 40
 4.2 Viewing and calling back using caller

information..... 40
 4.3 Storing caller information..... 41

5. Distinctive Ring

5.1 Distinctive Ring service from your phone company 42
 5.2 Using two or more phone numbers on a single telephone line..... 42
 5.3 Using three or more phone numbers on a single telephone line..... 42
 5.4 Programming the ring pattern assigned for fax..... 43

6. Copy

6.1 Using the unit as a copy machine..... 44
 6.2 Making a copy 44
 6.3 More copying features 46

7. Multi-Function Station software

Setup
 7.1 Connecting to a computer 48
 7.2 Installing Multi-Function Station 48
 7.3 Starting Multi-Function Station 50
Printing
 7.4 Using the unit as a printer 50
Scanning
 7.5 Using the unit as a scanner..... 53
Remote Control
 7.6 Operating the unit from your computer 54
PC Fax
 7.7 Fax sending/receiving using Multi-Function Station 55
 7.8 Confirming the status of the unit..... 56
 7.9 Other information (KX-FLB811 only)..... 56

8. Programmable Features

Features Summary
 8.1 Programming..... 58
 8.2 Basic features..... 59
 8.3 Fax features..... 61
 8.4 Copy features 65

9. Help

Error Messages
 9.1 Error messages – Reports 66
 9.2 Error messages – Display 67
Troubleshooting
 9.3 When a function does not work, check here 70

Table of Contents

Replacement

- 9.4 Replacing the toner cartridge and the drum unit **76**

Jams

- 9.5 Recording paper jam **79**
- 9.6 Document jams (Auto document feeder) **83**

Cleaning

- 9.7 Cleaning the white plate and glasses **84**
- 9.8 Cleaning the document feeder rollers..... **87**

10. General Information

- 10.1 Reference lists and reports **89**
- 10.2 Specifications **90**
- 10.3 FCC and Other Information **93**
- 10.4 Limited Warranty **95**
- 10.5 Customer Services directory **97**
- 10.6 User record..... **98**


11. Index

- 11.1 Index..... **99**

1.1 Included accessories

No.	Item	Part number* ¹	Quantity	Notes
①	Power cord	PFJA1030Z	1	-----
②	Telephone line cord	PQJA10075Z	1	-----
③	Output tray	PFZXFLB811M	2	KX-FLB811 only
④	Document tray	PFKS1117Y1	1	-----
⑤	Drum unit	KX-FA86	1	See page 92.
⑥	Toner cartridge (starter toner cartridge)	-----	1	prints about 800 letter-sized pages with a 5% image area (page 91).
⑦	Operating instructions	PFQX2307Z	1	-----
⑧	Quick installation guide	PFQW2365Z	1	KX-FLB811
		PFQW2383Z	1	KX-FLB801
⑨	CD-ROM	PFJKFLB851Z	1	See page 48.

*1 Part numbers are subject to change without notice.

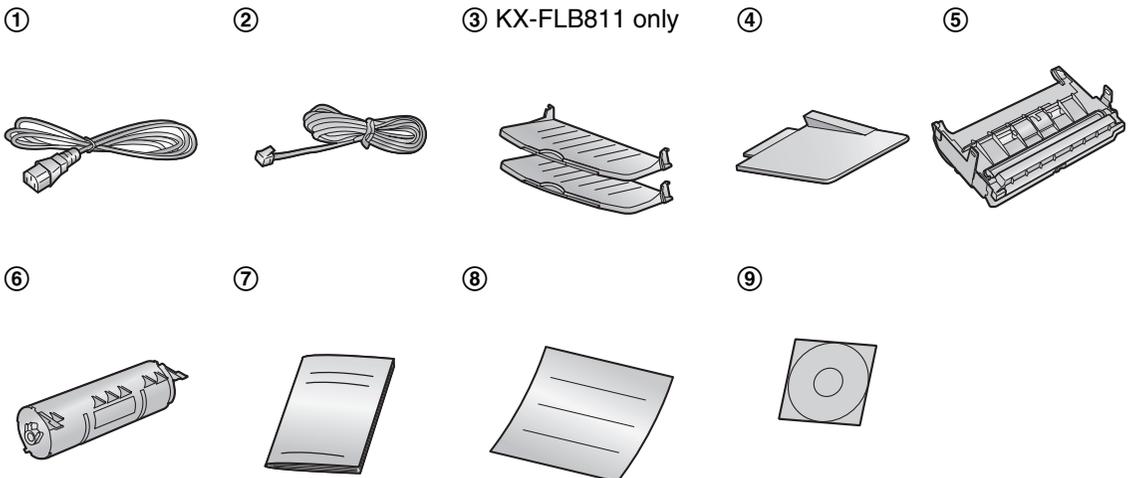

Note:

- If any items are missing or damaged, contact the place of purchase.
- Save the original carton and packing materials for future shipping and transportation of the unit.

1.2 Accessory information

Accessories for this unit can be ordered online, by fax, or by telephone.

- **Replacement toner cartridge*¹ (KX-FA87/KX-FA85)**
- **Replacement drum unit*¹ (KX-FA86)**
- **Optional handset unit (KX-FA103)**

*¹ Approx. 2,500 sheets of letter size paper can be printed with KX-FA87 and approx. 5,000 sheets with KX-FA85. To ensure that the unit operates properly, we recommend the use of Panasonic toner cartridge and drum unit.

To place an order online (for customers in the U.S.A. ONLY)

Visit our web site:

<http://www.panasonic.com/faxsupplies>

- For questions regarding online orders:
E-mail: direct@us.panasonic.com
Telephone: 1-866-888-2929

To place an order by fax

Fax: 1-800-237-9080

Include:

- your name, shipping address and telephone number
- credit card type, number, expiration date and your signature
- part number and quantity

To place an order by telephone

Telephone: 1-800-332-5368

(Monday - Friday 9 am to 8 pm, EST.)

1.3 Description of buttons

- Keep the front cover page open for button locations.
- 1 [Station keys]**
 - To use the one-touch dial feature (page 31, 33).
 - 2 [BROADCAST]**
 - To send a document to multiple parties (page 34, 35).
 - 3 [MANUAL BROAD]**
 - To send a document to multiple parties manually (page 34, 35).
 - 4 [LOWER]**
 - To select stations 8–14 for the one-touch dial feature (page 31, 33).
 - 5 [COLLATE][DIRECTORY]**
 - To make a collated copy (page 46).
 - To initiate the navigator directory (page 32, 34).
 - 6 [CONTRAST]**
 - To select a contrast (page 28, 45).
 - 7 [RESOLUTION]**
 - To select a resolution (page 28, 45).
 - 8 [ZOOM][QUICK SCAN]**
 - To enlarge or reduce a document when copying (page 46).
 - To store a scanned document into memory, and then send it (page 29).
 - 9 [MENU]**
 - To initiate or exit programming.
 - 10 [TONE]**
 - To change from pulse to tone temporarily during dialing when your line has rotary pulse service.
 - 11 [STOP]**
 - To stop an operation or programming session.
 - To delete a character from names and telephone numbers (page 26, 32).
 - To return to a previous step during operation.
 - 12 [CALLER ID]**
 - To use Caller ID service (page 40, 41).
 - To change the display of the caller information (page 40).
 - 13 [FAX AUTO ANSWER]**
 - To turn the auto answer setting ON/OFF (page 36).

14 [HELP]

- To print helpful information for quick reference (page 23).

15 [FAX]

- To switch to a fax mode (page 22, 28).

16 [COPY]

- To switch to a copy mode (page 22, 44).

17 [SET]

- To store a setting during programming.

18 [SCAN]

- To switch to a scan mode (page 22, 54).

19 Navigator key

- To adjust volume (page 23).
- To search for a stored item (page 33).
- To select features or feature settings during programming (page 58).

20 [REDIAL][PAUSE]

- To redial the last number dialed.
- To insert a pause during dialing.

21 [FLASH]

- To access special telephone services or to transfer extension calls.

22 [MONITOR]

- To initiate dialing.
When you press **[MONITOR]** during receiving a call, you will be able to hear the other party, but the other party will not be able to hear you.


23 [START]

- To start sending or receiving a fax.
- To copy a document (page 44).
- To scan a document (page 54).


1.4 Overview

1.4.1 Front view

KX-FLB811

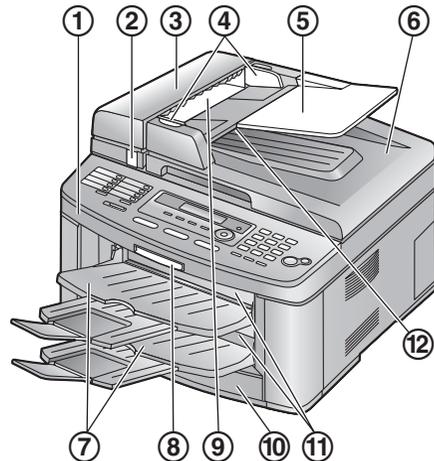


KX-FLB801

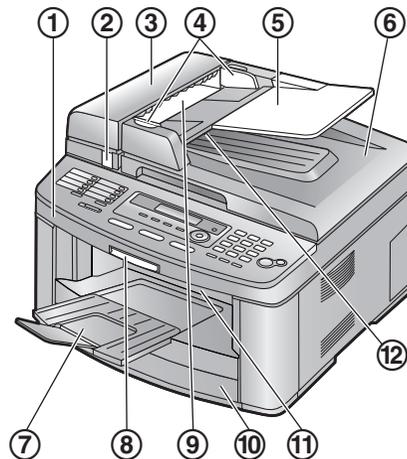

- ① Top cover
- ② ADF (Auto Document Feeder) cover release button
- ③ ADF cover
- ④ Document guides
- ⑤ Document tray
- ⑥ Document cover
- ⑦ Output tray
- ⑧ Top cover release lever
- ⑨ Document entrance
- ⑩ Paper input tray
- ⑪ Recording paper exit
- ⑫ Document exit

1. Introduction and Installation


1.4.2 Rear view

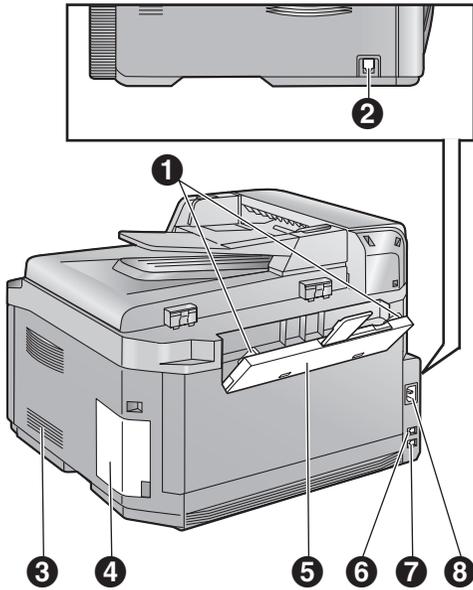

- ❶ Recording paper guides
- ❷ Handset unit (Optional) connection jack
- ❸ Speaker
- ❹ USB interface cover
- ❺ Manual input tray
- ❻ Telephone line jack
- ❼ External telephone jack
- ❽ Power inlet

Removing the shipping tape

Remove the shipping tape (❶) and pad (❷).

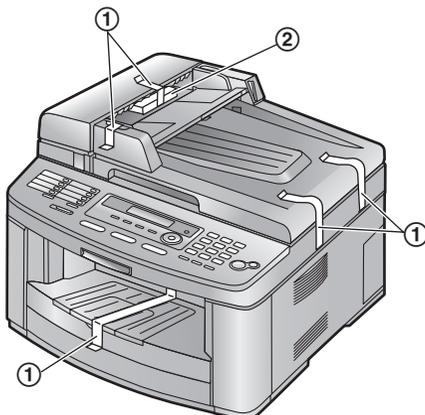

* The shipping tape on the output tray is for KX-FLB801.

1.5 Toner cartridge and drum unit

The included toner cartridge is a starter toner cartridge. It will print about 800 letter-sized pages with a 5 % image area (page 91).

- To replace the toner cartridge and the drum unit, see page 76.


Caution:

- **Read the following instructions before you begin installation. After you have read them, open the drum unit protection bag. The drum unit contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protection bag:**
 - Do not expose the drum unit to light for more than 5 minutes.
 - Do not touch or scratch the black drum surface.
 - Do not place the drum unit near dust or dirt, or in a high humidity area.
 - Do not expose the drum unit to direct sunlight.
- Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.

- 1 Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.




- 2 Remove the toner cartridge and drum unit from the protection bags.

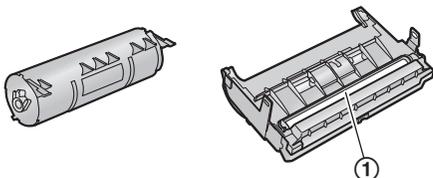


- Do not touch or scratch the black drum surface (①).


- 3 Place the toner cartridge (①) into the drum unit (②).

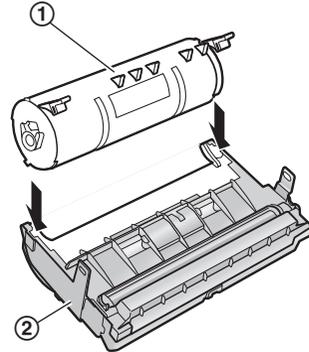

- 4 Firmly press down the toner cartridge to snap into position.

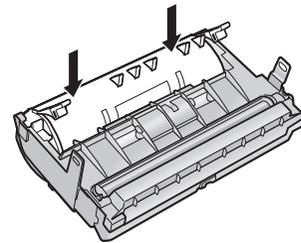


- 5 Turn the two green levers (①) on the toner cartridge firmly.

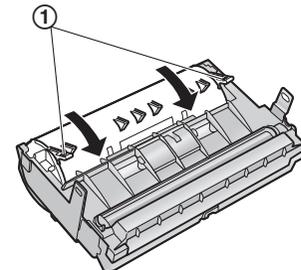


1. Introduction and Installation

- 6 Make sure that the triangles (①) match to install the toner cartridge correctly.

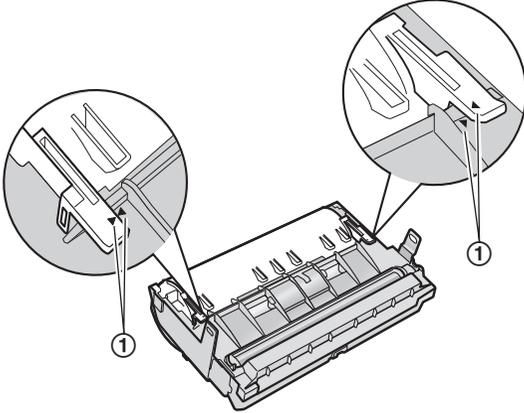


- 8 Install the drum and toner unit (①) by holding the tabs.

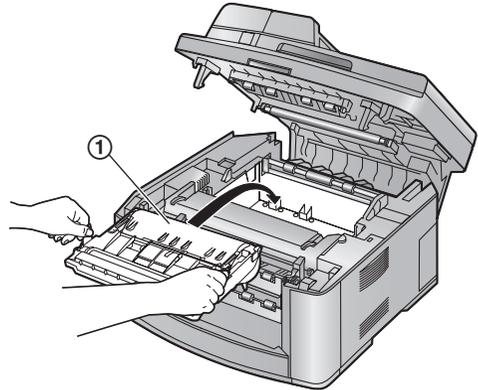


- 7 Lift the top cover release lever (①) and open the top cover (②).

Important:

- Close the manual input tray (③) before opening the top cover.

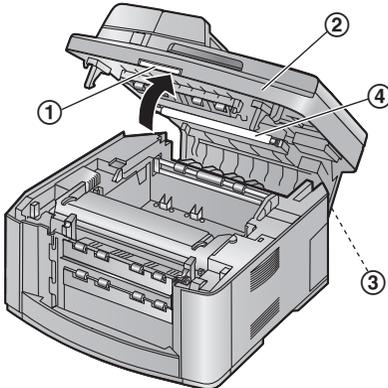



- Make sure that the triangles (②) match to install the drum and toner unit correctly.

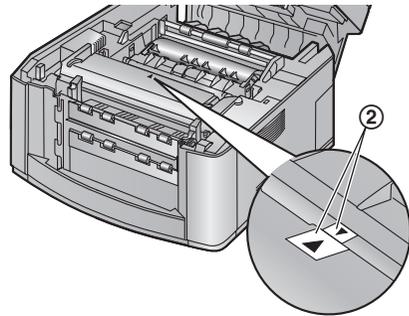

- 9 Close the top cover until locked.


Note:

- Do not touch the transfer roller (④).
- If the lower glass (④) is dirty, clean it with a soft and dry cloth.

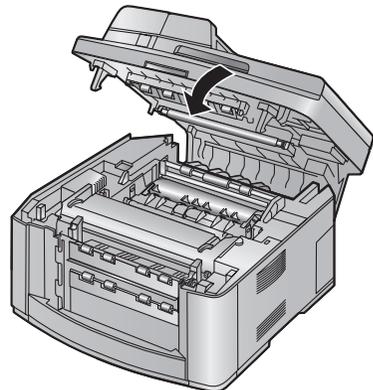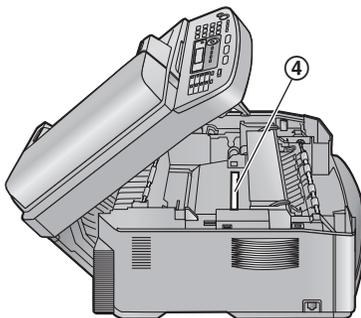

Caution:


- To prevent injuries, be careful not to put your hands under the top cover.

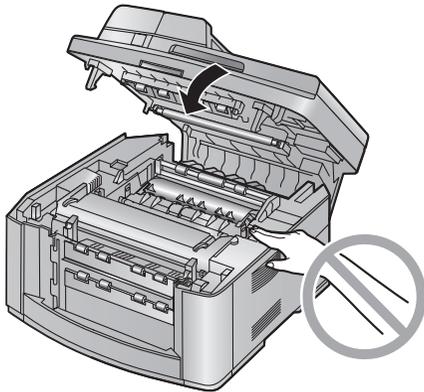**Toner save feature**

If you want to reduce toner consumption, set the toner save setting to ON (feature #482 on page 60). The toner cartridge will last approximately 40 % longer. This feature may lower the print quality.

1.6 Document tray

Insert the document tray (①) into the slot (②) on the unit.

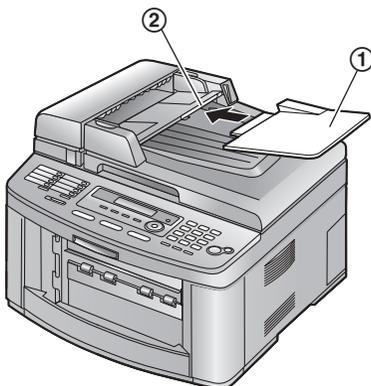

1.7 Output tray

KX-FLB811 has 2 pieces of output tray and KX-FLB801 has 1 output tray pre-installed.

Note:


- Do not place the unit in an area where the output tray may be easily bumped into.

1.7.1 For KX-FLB811 users

As a default setting, printed paper is stacked on the output tray as follows.


- Upper output tray (“#1”): Printed document by using the computer and copied document.
- Lower output tray (“#2”): Received fax document.
- You can change the output tray setting for faxing (feature #441 on page 63) and for copying (feature #466 on page 65). To change the output tray from the computer, set the printer properties. See page 51, 56 for details.

- 1 Insert the output tray (①) into the slots (②), then push the tray down until it latches into place.

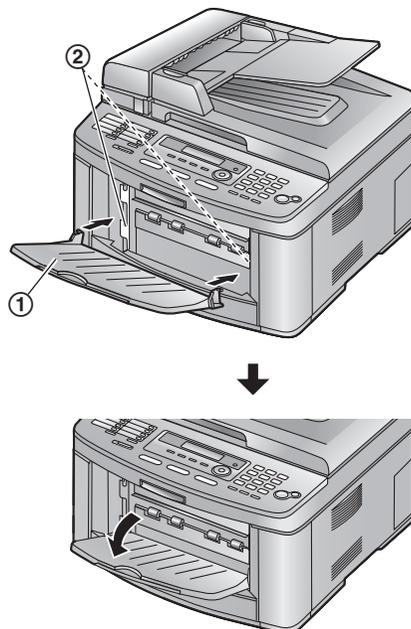

1. Introduction and Installation

- 2 Pull the output tray extender (①) forward gently until it clicks into place, then press the center part of the extender (②) to open.
- Repeat from step 1 to install the upper output tray.

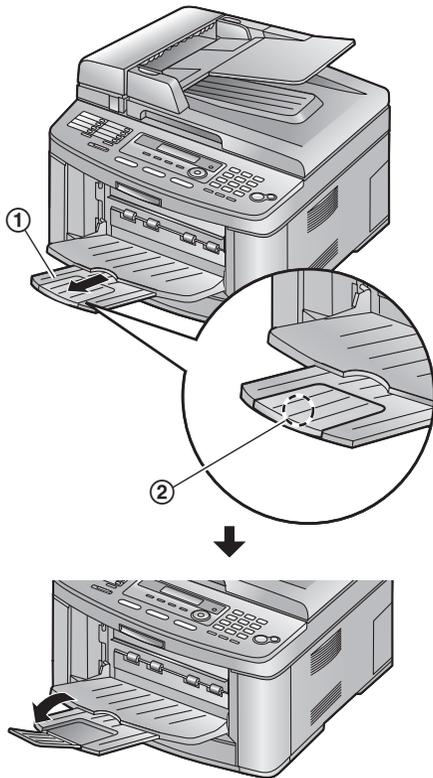


Note:

- The upper output tray can hold up to approximately 100 sheets of printed paper. The lower output tray can hold up to approximately 50 sheets of printed paper. Remove the printed paper before the output tray becomes full.

1.7.2 For KX-FLB801 users

Pull the output tray extender (①) forward gently until it clicks into place, then press the center part of the extender (②) to open.

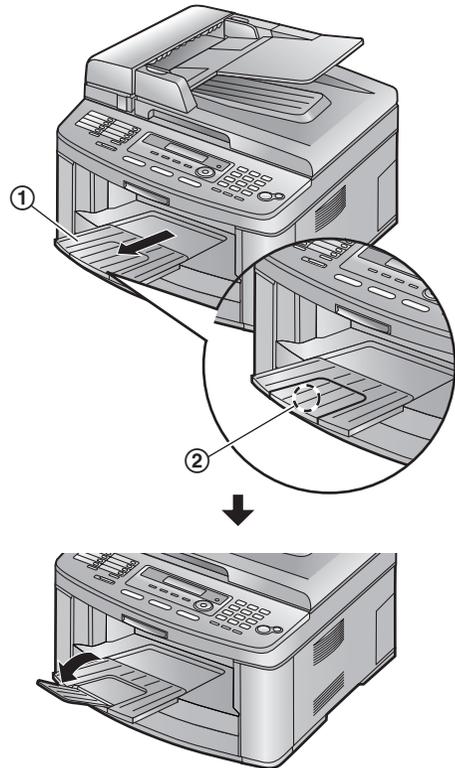


Note:


- The output tray can hold up to approximately 150 sheets of printed paper. Remove the printed paper before the output tray becomes full.

If the top part of the extender is detached

1. With the top part of the extender in the open position, insert the tab (①) into the left hole (②) of the extender.

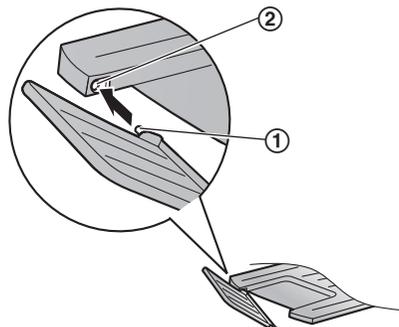


- Slide the other tab (1) into the right hole (2) of the extender from below until it clicks into place.

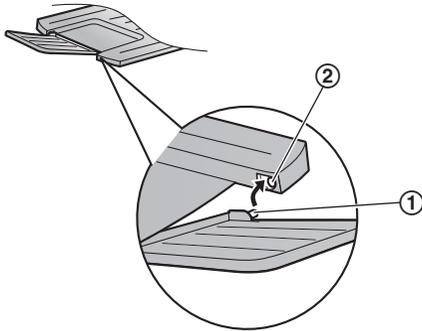


If the extender is detached

■ KX-FLB811

- Line up the extender (1) underneath the output tray (2), and insert the left side of the extender into the output tray.

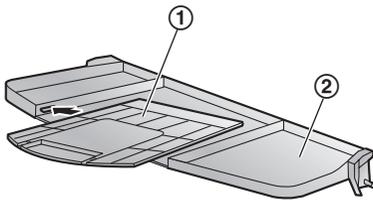


- Attach the extender (1) by bending the side of the output tray downward slightly and pressing the right side of the extender.

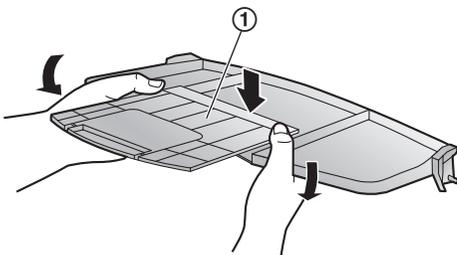


■ KX-FLB801

- Line up the extender (1) with the left side of the output tray. Make sure that the triangles (2) match to attach the extender correctly.

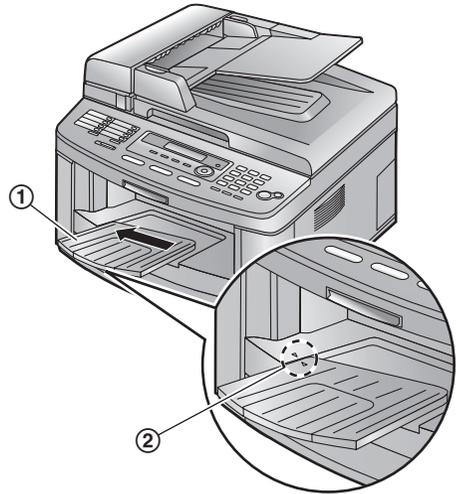

- Snap the extender (1) into the unit by pushing down the right side of the extender.

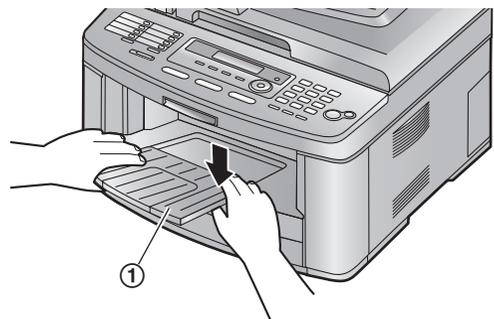

1.8 Recording paper

1.8.1 Using the paper input tray


A4, letter or legal size recording paper can be used.

The paper input tray unit can hold:

- Up to 250 sheets of 60 g/m² to 75 g/m² (16 lb. to 20 lb.) paper.
- Up to 230 sheets of 80 g/m² (21 lb.) paper.
- Up to 200 sheets of 90 g/m² (24 lb.) paper.


- Please refer to page 91 for information on recording paper.
- **The unit is set for letter size paper by default. If you want to use A4 or legal size paper, change the setting (feature #380 on page 60).**

1 Pull the paper input tray (①) completely out.

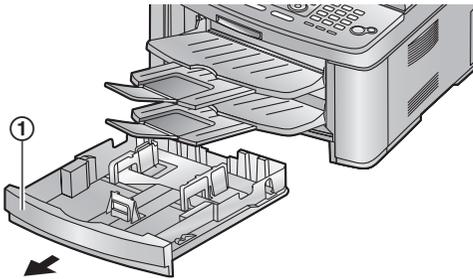


2 Pinch the front side of the recording paper guide (①), then slide it to match the paper size mark.

Pinch the both sides of the recording paper guides (②), then slide them to match the paper size mark.

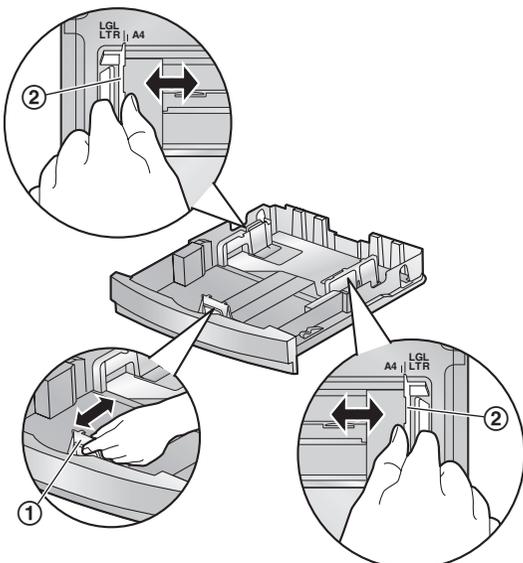


3 Before loading a stack of paper, fan the paper to prevent paper jams.

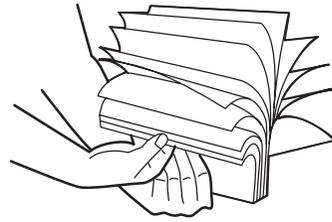


4 Load the paper, print-side up (①).

Important:


- **Push and lock the plate (②) in the paper input tray, if it is lifted.**

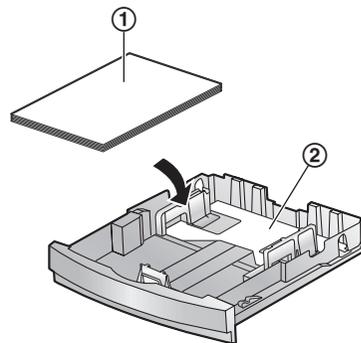

- Make sure that the recording paper guides (①) are at the paper size mark and the recording paper is under the paper limit mark (②). The paper should not be over the snubbers (③).

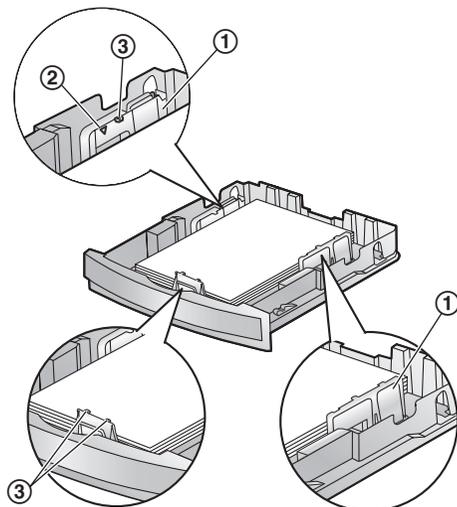

- 5 Insert the paper input tray into the unit.

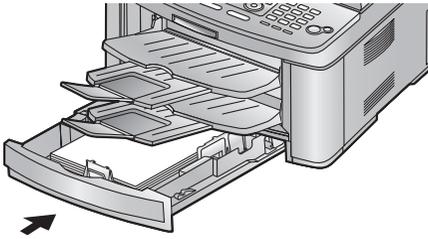


Note:


- If the paper is not loaded correctly, re-adjust the paper guides, or the paper may jam.
- If the paper input tray does not close, the plate in the paper input tray may be lifted. Push the paper and check that the paper is flat in the paper input tray.

Caution for the paper input tray

- Do not drop the input tray.

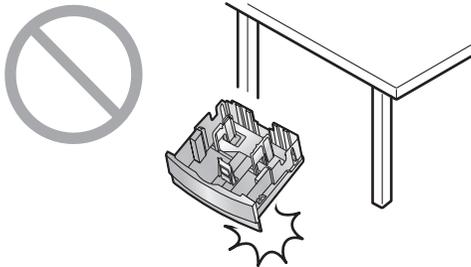

- Hold the paper input tray with both hands when removing or installing. The input tray weights approximately 2 kg (4.4 lb.) when the recording paper is fully installed.

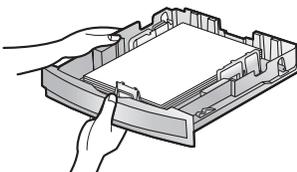

Approx. 2 kg (4.4 lb.)

1.8.2 Using the manual input tray



You can print not only on plain paper but also on special media (transparencies / labels / envelopes).

The manual input tray is used only for printing with the computer (page 50) and can hold one page at a time. When printing multiple pages, add a next page after the first page has been fed into the unit.

- Please refer to page 91 for information on recording paper.


Load the recording paper after you start printing with the computer.

- 1 Pull open the manual input tray (①), then raise the extender (②) gently until it clicks into place.

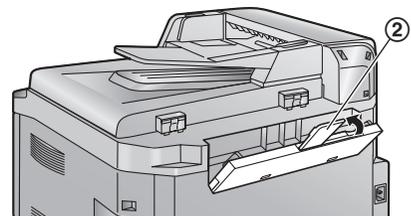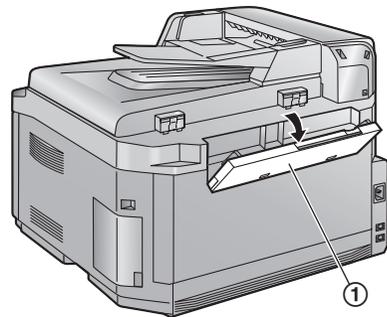

1. Introduction and Installation

- 2 Insert the paper, print-side down (①) until the unit grasps the paper and a single beep is heard.
- Adjust the width of the guides (②) to the size of the recording paper.

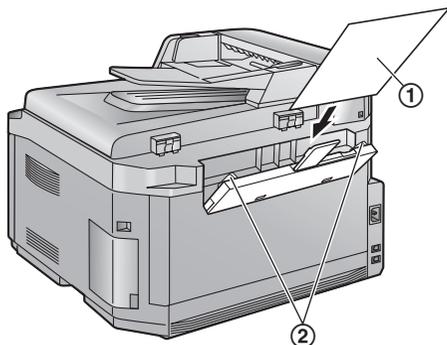

Note:

- If the paper is not inserted correctly, re-adjust the paper, or the paper may jam.
- Make sure the unit grasps the recording paper in step 2. The display shows the following.


<p>PAPER IN TRAY #2 FOR PC PRINTING</p>

2.1 Connections

Caution:

- When you operate this product, the power outlet should be near the product and easily accessible.

- ① Telephone line cord
 - Connect to a single telephone line jack (RJ11).
- ② Power cord
 - Connect to the power outlet (120 V, 60 Hz).
- ③ [EXT] jack
 - You can connect an answering machine or an extension telephone. Remove the stopper if attached.
- ④ Answering machine (not included)
- ⑤ Handset unit (Optional) connection jack
 - You can connect the optional handset unit. Remove the seal if attached.

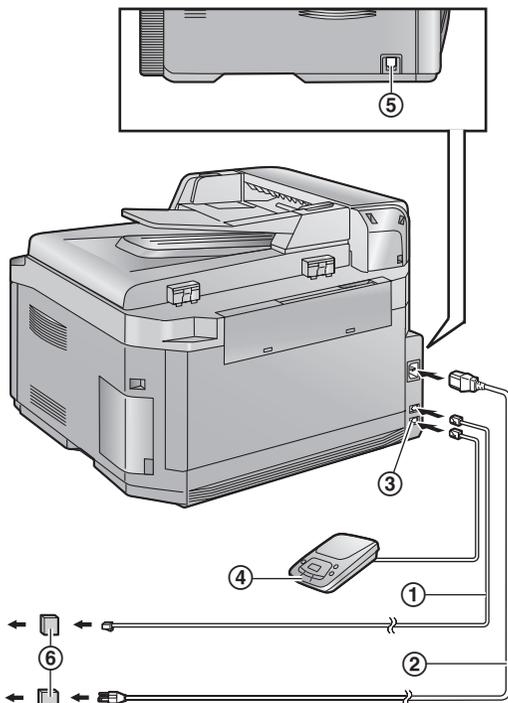


Note:

- To avoid malfunction, do not position the unit near appliances such as TVs or speakers which generate an intense magnetic field.
- If any other device is connected to the same telephone line, this unit may disturb the network condition of the device.

Using the optional handset unit

You can add the optional handset unit (**Model No. KX-FA103**). See page 10 for accessory information.

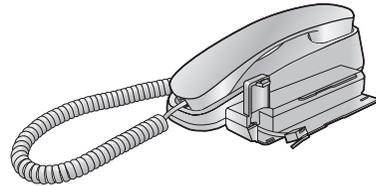


- Connect to the handset unit connection jack (⑤) before use. For more details, please refer to the installation guide for the optional handset unit.

Using surge protectors

- The warranty does not cover damage due to power line surges or lightning. For additional protection, we recommend the use of a surge protector (⑥).


If the fax machine shares a single telephone line with a DSL service

Fax transmission/reception may be disturbed, noise interference may be heard during telephone conversations, or Caller ID (page 40) may not function properly. A filter to prevent this is provided from your DSL provider. Please attach the filter (⑦) to the telephone line cord of the unit.

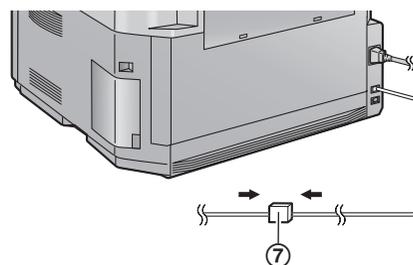

2.2 Dialing mode

If you cannot dial (page 28), change this setting depending on your telephone line service.

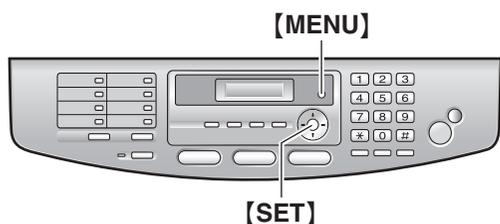

1 Press **[MENU]**.

SYSTEM SETUP
PRESS [◀ ▶]

2 Press **[#]**, then **[1][2][0]**.

DIALING MODE
=TONE [▼▲]

3 Press **[1]** or **[2]** to select the desired setting.

[1] "PULSE": For rotary pulse dial service.

[2] "TONE" (default): For tone dial service.

4 Press **[SET]**.

5 Press **[MENU]** to exit.

2.3 Selecting the operation mode (Fax/Copy/Scan)

This unit has three operation modes. You can select the desired mode by pressing the one of the following buttons.

- **[FAX]**: Select this mode when using the unit as a fax machine (page 28).
- **[COPY]**: Select this mode when using the unit as a copy machine (page 44).
- **[SCAN]**: Select this mode when using the unit as a scanner for the computer (page 54).




Note:

- The default operation mode is the copy mode. You can change the default operation mode (feature #463 on page 60) and the timer before returning to the default operation mode (feature #464 on page 60).

2.4 Help function

The unit contains helpful information which can be printed for quick reference.


- **"BASIC SETTINGS"**:
How to set the date, time, your logo and fax number and note for the quick setup (feature #100 on page 59).
- **"FEATURE LIST"**:
How to program the features.
- **"DIRECTORY"**:
How to store names and numbers in the directory and how to dial them.
- **"FAX SND/RCV"**:
Help with problems sending/receiving faxes.
- **"COPIER"**:
How to use the copier function.
- **"Q and A"**:
Frequently asked questions and answers.
- **"ERRORS"**:
Explanation of error messages shown on the display.
- **"REPORTS"**:
List of available reports.
- **"CALLER ID"**:
How to use the Caller ID features.

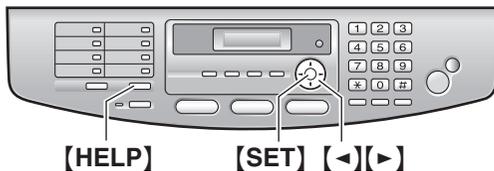

- 1 Press **[HELP]**.
- 2 Press **[◀]** or **[▶]** repeatedly to display the desired item.
- 3 Press **[SET]**.
 - The selected item will be printed.

2.5 Adjusting volume

Before adjusting volume, set the operation mode to the fax mode (page 28) or the copy mode (page 44).

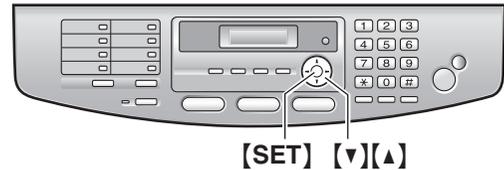

Ringer volume

While the unit is idle, press **[▼]** or **[▲]**.

- If any documents are in the document entrance, you cannot adjust the volume. Confirm that there are no documents in the entrance.

To turn the ringer OFF

1. Press **[▼]** repeatedly to display **"RINGER OFF= OK?"**.
2. Press **[SET]**.
 - When a call is received, the unit will not ring and will display **"INCOMING CALL"**.
 - To turn the ringer back ON, press **[▲]**.

Ringer pattern

- You can select one of three ringer patterns (feature #161 on page 59).


Monitor volume

While using the monitor, press **[▼]** or **[▲]**.

2. Preparation

2.6 Date and time

You must set the date and time.

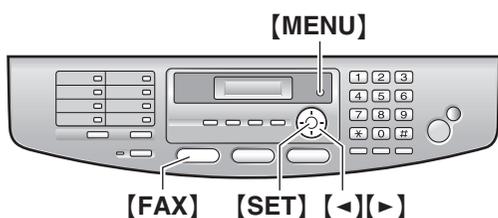

- 1 Press **[MENU]**.

```
SYSTEM SETUP  
PRESS [◀ ▶]
```

- 2 Press **[#]**, then **[1][0][1]**.

```
SET DATE & TIME  
PRESS SET
```

- 3 Press **[SET]**.

- The cursor (■) will appear on the display.

```
M: 01/D: 01/Y: 06  
TIME: 12:00AM
```

- 4 Enter the current month/date/year by selecting 2 digits for each.

Example: August 10, 2006

Press **[0][8][1][0][0][6]**.

```
M: 08/D: 10/Y: 06  
TIME: 12:00AM
```

- 5 Enter the current hour/minute by selecting 2 digits for each. Press **[*]** to select “AM” or “PM”.

Example: 10:15PM (12 hour clock entry)

1. Press **[1][0][1][5]**.

```
M: 08/D: 10/Y: 06  
TIME: 10:15AM
```

2. Press **[*]** repeatedly to display “PM”.

```
M: 08/D: 10/Y: 06  
TIME: 10:15PM
```

- 6 Press **[SET]**.

```
SETUP ITEM [ ]
```

- 7 Press **[MENU]** to exit.

Note:

- The other party's fax machine will print the date and time on the top of each page you send according to your unit's date and time setting.

- The accuracy of the clock is approximately ± 60 seconds a month.
- After setting the date and time, if the unit is in the copy mode, change to the fax mode by pressing **[FAX]**. You can check your unit's date and time setting on the display.

To correct a mistake

Press **[◀]** or **[▶]** to move the cursor to the incorrect number, and make the correction.


If you have subscribed to a Caller ID service

The date and time will be automatically set according to the received caller information.

- If the time has not previously been set, Caller ID will not adjust the clock.

2.7 Your logo

The logo can be your name or the name of your company.

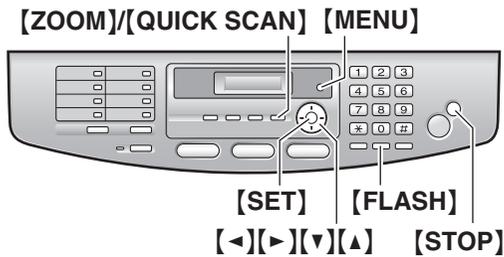

- 1 Press **[MENU]**.

SYSTEM SETUP
PRESS [←] [→]

- 2 Press **[#]**, then **[1][0][2]**.

YOUR LOGO
PRESS SET

- 3 Press **[SET]**.
 - The cursor (█) will appear on the display.

LOGO=█

- 4 Enter your logo, up to 30 characters. See the following character table for details.

- 5 Press **[SET]**.

SETUP ITEM []

- 6 Press **[MENU]** to exit.

Note:

- Your logo will be printed on the top of each page sent from your unit.

To select characters with the dial keypad

Keypad	Characters
[1]	1 [] { } + - / = , . _ ` : ; ?
[2]	A B C a b c 2
[3]	D E F d e f 3
[4]	G H I g h i 4
[5]	J K L j k l 5
[6]	M N O m n o 6
[7]	P Q R S p q r s 7

Keypad	Characters
[8]	T U V t u v 8
[9]	W X Y Z w x y z 9
[0]	0 () < > ! " # \$ % & ¥ * @ ^ ' →
[#]	To change uppercase or lowercase letter.
[FLASH]	Hyphen
[ZOOM]/[QUICK SCAN]	To insert a space
[STOP]	To delete a digit.

Note:

- To enter another character that is located on the same dial key, press **[▶]** to move the cursor to the next space.

To enter your logo

Example: "BILL"

1. Press **[2]** 2 times.

LOGO=B

2. Press **[4]** 3 times.

LOGO=BI

3. Press **[5]** 3 times.

LOGO=BIL

4. Press **[▶]** to move the cursor to the next space and press **[5]** 3 times.

LOGO=BILL

To change uppercase or lowercase letters

Pressing the **[#]** key will change to uppercase or lowercase alternately.

1. Press **[2]** 2 times.

LOGO=B

2. Press **[4]** 3 times.

LOGO=BI

3. Press **[#]**.

LOGO=Bi

2. Preparation

4. Press **[5]** 3 times.

LOGO=Bi1

To correct a mistake

Press **[◀]** or **[▶]** to move the cursor to the incorrect character, and make the correction.

To delete a character

Press **[◀]** or **[▶]** to move the cursor to the character you want to delete and press **[STOP]**.

- To erase all characters, press and hold **[STOP]**.

To insert a character


1. Press **[◀]** or **[▶]** to move the cursor to the position to the right of where you want to insert the character.
2. Press **[ZOOM]/[QUICK SCAN]** to insert a space and enter the character.

To select characters using **[▼]** or **[▲]**

Instead of pressing the dial keys, you can select characters using **[▼]** or **[▲]**.

1. Press **[▼]** repeatedly to display the desired character. Characters will be displayed in the following order:
 - ① Uppercase letters
 - ② Number
 - ③ Symbol
 - ④ Lowercase letters
 - If you press **[▲]**, the order will be reversed.
2. Press **[▶]** to insert the character.
3. Return to step 1 to enter the next character.

2.8 Your fax number

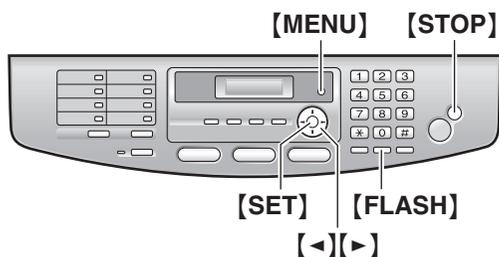

- 1 Press **[MENU]**.

SYSTEM SETUP
PRESS [◀ ▶]

- 2 Press **[*]**, then **[1][0][3]**.

YOUR FAX NO.
PRESS SET

- 3 Press **[SET]**.

- The cursor (█) will appear on the display.

NO. = █

- 4 Enter your fax number, up to 20 digits.

Example: NO. = 1234567 █

- To enter a "+", press **[*]**.
- To enter a space, press **[*]**.
- To enter a hyphen, press **[FLASH]**.

- 5 Press **[SET]**.

SETUP ITEM []

- 6 Press **[MENU]** to exit.

Note:

- Your fax number will be printed on the top of each page sent from your unit.

To correct a mistake

Press **[◀]** or **[▶]** to move the cursor to the incorrect number, and make the correction.

To delete a number

Press **[◀]** or **[▶]** to move the cursor to the number you want to delete and press **[STOP]**.

- To erase all numbers, press and hold **[STOP]**.

3.1 Using the unit as a fax machine

3.1.1 Entering the fax mode

Before sending a fax, set the operation mode to the fax mode.



[FAX]

Press **[FAX]** to turn the **[FAX]** light ON.


Note:

- You can change the default operation mode (feature #463 on page 60) and the timer before returning to the default operation mode (feature #464 on page 60).
- Received documents will be stacked on the lower output tray. You can change the output tray for faxing (Feature #441 on page 63) (KX-FLB811 only).

3.2 Sending a fax manually

3.2.1 Using the auto document feeder

- Confirm that there are no documents on the scanner glass.

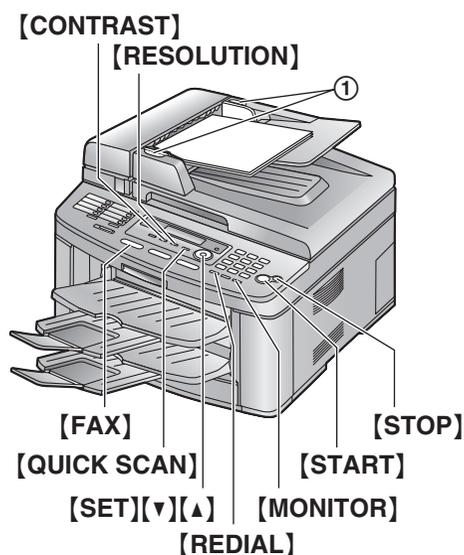

- 1 If the **[FAX]** light is OFF, turn it ON by pressing **[FAX]**.
- 2 Adjust the width of the document guides (①) to fit the actual size of the document.
- 3 Insert the document (up to 40 pages) FACE UP into the feeder until a single beep is heard.
 - If the document guides are not adjusted to fit the document, re-adjust them.
- 4 If necessary, change the following settings according to the type of document.
 - To select the resolution, see page 28.
 - To select the contrast, see page 28.
- 5 Press **[MONITOR]**.
- 6 Dial the fax number.
- 7 Press **[START]**.

Note:

- Any document which can be sent as a fax can also be copied and scanned (page 30).
- Do not open the document cover when sending a fax with the auto document feeder.

To stop sending

Press **[STOP]**.

To select the resolution

1. Press **[RESOLUTION]**.
 2. Press **[v]** or **[^]** repeatedly to select the desired resolution.
 - “**STANDARD**”: For printed or typewritten documents with normal-sized characters.
 - “**FINE**”: For documents with small print.
 - “**SUPER FINE**”: For documents with very small print. This setting is effective only when the other party has a compatible fax machines.
 - “**PHOTO**”: For documents containing photographs, shaded drawings, etc.
- Using the “**FINE**”, “**SUPER FINE**” and “**PHOTO**” settings will increase transmission time.
 - If the resolution setting is changed during feeding, it will be effective from the next page.

To select the contrast

You can adjust this setting depending on the darkness or lightness of the document. 5 levels (light to dark) are available.

1. Press **[CONTRAST]**.
2. Press **[v]** or **[^]** repeatedly to select the desired contrast.

- To make lighter, press [▼].
- To make darker, press [▲].

To redial the last number

1. Press [REDIAL].
2. Press [START].
 - If the line is busy, the unit will automatically redial the number 1 time.
 - To cancel redialing, press [STOP], then press [SET].

To predial a fax number

You can dial the fax number first before inserting the document. This is convenient if you need to refer to the document for the other party's fax number.

1. Enter the fax number.
2. Insert the document.
3. Press [START].

Sending from memory (Quick scan feature)

You can scan the document into memory before sending.

1. Insert the document.
2. Enter the fax number.
3. Press [QUICK SCAN].

Reserving the fax transmission (Dual Access)

You can reserve the fax transmission even when the unit is just receiving a fax or sending a fax from memory.

- Up to 3 reservations when sending
 - Up to 4 reservations when receiving
1. Insert the document during fax reception or fax memory transmission.
 2. Enter the fax number using the dial keypad, one-touch dial or navigator directory.
 3. Press [START].
 - The document will be fed into the unit and scanned into memory. The unit will then send the data. If the document exceeds the memory capacity, transmission will be canceled. You must send the entire document manually.

Printing a confirmation report

A confirmation report provides you with a printed record of transmission results. To print confirmation reports, make sure feature #401 is activated (page 61). For an explanation of error messages, see page 66.


Printing a journal report

A journal report provides you with a printed record of the 30 most recent faxes. To print manually, see page 89. To print automatically after every 30 new fax transmissions and receptions, make sure feature #402 is activated (page 61). For an explanation of error messages, see page 66.

3.2.2 Using the scanner glass

By using the scanner glass, you can send a page from booklets or small sized paper that cannot be sent with the auto document feeder.


- **Confirm that there are no documents in the auto document feeder.**

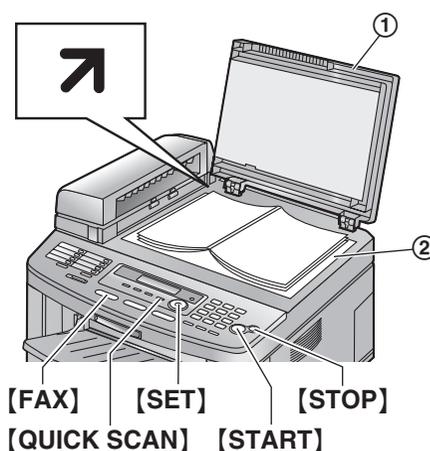

- 1 If the [FAX] light is OFF, turn it ON by pressing [FAX].
- 2 Open the document cover (①).
- 3 Place the document FACE DOWN on the scanner glass (②), matching the top edge of the document to the ↗ mark on the unit.
- 4 Close the document cover.
 - If the original is a thick book, do not close the document cover.
- 5 If necessary, change the following settings according to the type of document.
 - To select the resolution, see page 28.
 - To select the contrast, see page 28.
- 6 Dial the fax number.
 - To send a single page, skip to step 10.
 - To send multiple pages, go to the next step.

3. Fax

- 7 Press **[QUICK SCAN]** to scan the document into memory.

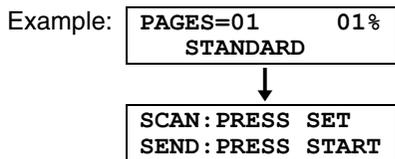

- 8 Place the next page on the scanner glass.
- 9 Press **[SET]**.
- To send more pages, repeat steps 8 and 9.
- 10 Press **[START]**.


To stop sending

Press **[STOP]**.


3.3 Document requirements

3.3.1 Using the auto document feeder

Minimum document size

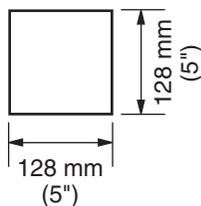


Maximum document size

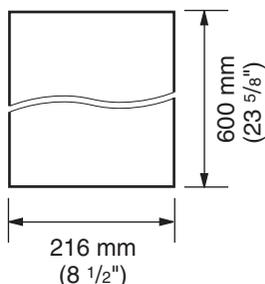

Effective scanning area

- Shaded area will be scanned.

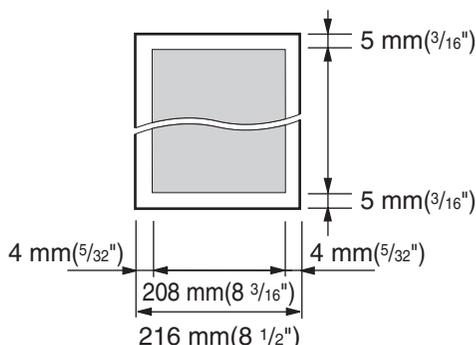


Document weight

- Single sheet:
45 g/m² to 90 g/m² (12 lb. to 24 lb.)
- Multiple sheets:
60 g/m² to 80 g/m² (16 lb. to 21 lb.)

3.3.2 Using the scanner glass

Effective scanning area

- Shaded area will be scanned.

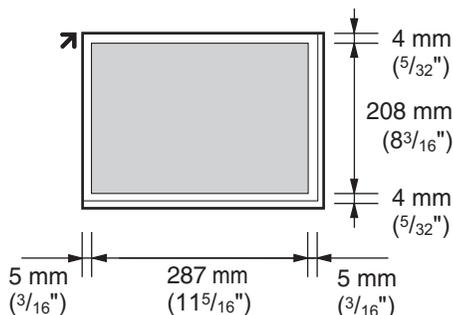

3.3.3 Note for the auto document feeder and the scanner glass

- Check that ink, paste or correction fluid has dried completely.
- To set a document with a width of less than 210 mm (8 1/4 inches) when using the auto document feeder, we recommend using the scanner glass to copy the original document onto A4 or letter-sized paper, then setting the copied document.
- Do not set documents that do not satisfy the requirements of size and weight when using the auto document feeder. Make a copy of the document using the scanner glass and set the copy.
- Remove clips, staples or other fasteners when using the auto document feeder.
- When using the auto document feeder, the total height of the documents when laid flat,


must be less than 10 mm ($\frac{3}{8}$ "). If the documents exceed the capacity of the auto document feeder, they may fall or cause a jam in the feeder.

- Do not set the following types of documents when using the auto document feeder: (Make a copy of the document using the scanner glass and set the copy instead.)
 - Chemically treated paper such as carbon or carbonless duplicating paper
 - Electrostatically charged paper
 - Badly curled, creased or torn paper
 - Paper with a coated surface
 - Paper with printing on the opposite side that can be seen through the other side, such as newsprint

3.4 Storing items for the one-touch dial feature and navigator directory

For rapid access to frequently dialed numbers, the unit provides the one-touch dial feature (14 items) and navigator directory (300 items).

- Station 1 to 3 can be used alternatively as broadcast keys (page 34).
- Make sure that the **[FAX]** light is ON.

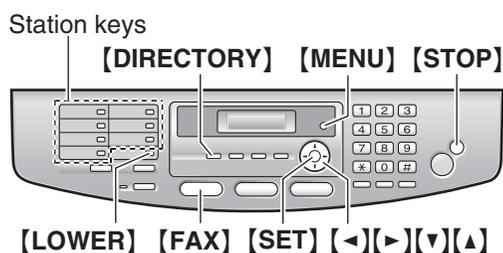

3.4.1 Storing one-touch dial item

- 1 Press **[MENU]** repeatedly to display "DIRECTORY SET".
- 2 Select the desired station key.

For stations 1–3:

1. Press one of the station keys.

Example:

STATION 1 DIAL MODE [▼▲]

2. Press **[SET]**.

For stations 4–7:

Press one of the station keys.

For stations 8–14:

Press **[LOWER]**, then press one of the station keys.

- 3 Enter the name, up to 16 characters (see page 25 for instructions).
- 4 Press **[SET]**.
- 5 Enter the telephone number, up to 32 digits.
- 6 Press **[SET]**.
 - To program other items, repeat steps 2 to 6.
- 7 Press **[STOP]** to exit.

Helpful hints:

- You can confirm the stored items by printing the telephone number list (page 89).

3. Fax

Note:

- A hyphen or a space entered in a telephone number counts as 2 digits.

To correct a mistake

Press [◀] or [▶] to move the cursor to the incorrect character/number, and then make the correction.

To delete a character/number

Press [◀] or [▶] to move the cursor to the character/number you want to delete, and press [STOP].

- To erase all characters/numbers, press and hold [STOP].

3.4.2 Storing navigator directory items

- 1 Press [MENU] repeatedly to display "DIRECTORY SET".
- 2 Press [▶].
 - The display shows the number of items in the navigator directory briefly.
- 3 Enter the name, up to 16 characters (see page 25 for instructions).
- 4 Press [SET].
- 5 Enter the telephone number, up to 32 digits.
- 6 Press [SET].
 - To program other items, repeat steps 3 to 6.
- 7 Press [MENU] to exit.

Helpful hints:

- For your convenience, HELP-FAX (1-800-435-7329) has been stored in the directory. If you cannot solve a problem, call the number. If not needed, you can erase it (page 32).
- You can confirm the stored items by printing the telephone number list (page 89).

Note:

- A hyphen or a space entered in a telephone number counts as 2 digits.

To correct a mistake

Press [◀] or [▶] to move the cursor to the incorrect character/number, and then make the correction.

To delete a character/number

Press [◀] or [▶] to move the cursor to the character/number you want to delete, and press [STOP].

- To erase all characters/numbers, press and hold [STOP].

3.4.3 Editing a stored item

- 1 Press [DIRECTORY].
- 2 Press [▼] or [▲] repeatedly to display the desired item.
- 3 Press [MENU].
- 4 Press [✖].
 - If you do not need to edit the name, skip to step 6.
- 5 Edit the name. For further details, see the storing procedure on page 31.
- 6 Press [SET].
 - If you do not need to edit the telephone number, skip to step 8.
- 7 Edit the telephone number. For further details, see the storing procedure on page 31.
- 8 Press [SET].

3.4.4 Erasing a stored item

- 1 Press [DIRECTORY].
- 2 Press [▼] or [▲] repeatedly to display the desired item.
- 3 Press [MENU].
- 4 Press [‡].
 - To cancel erasing, press [STOP].
- 5 Press [SET].

3.5 Sending a fax using one-touch dial feature and navigator directory

Before using this feature, store the desired names and telephone numbers into one-touch dial feature and navigator directory (page 31).

- Keep the front cover page open for button locations.
- Make sure that the **[FAX]** light is ON.

- 1 Adjust the width of the document guides to fit the actual size of the document.
- 2 Insert the document (up to 40 pages) FACE UP into the feeder until a single beep is heard.
 - **Confirm that there are no documents on the scanner glass.**
 - If the document guides are not adjusted to fit the document, re-adjust them.
- 3 If necessary, change to the desired resolution (page 28) and the desired contrast (page 28).
- 4 Enter the fax number.

Using stations 1–7:

Press the desired station key.

Using stations 8–14:

Press **[LOWER]**, then press the desired station key.

Using navigator directory:

Press **[DIRECTORY]**, then press **[▼]** or **[▲]** repeatedly to display the desired item.

- 5 Press **[START]**.

Note:

- Do not open the document cover when sending a fax with the auto document feeder.

To send a fax using the scanner glass

- **Confirm that there are no documents in the auto document feeder.**

1. Open the document cover.
2. Place the document FACE DOWN, then close the document cover.
3. Enter the fax number using one-touch dial or navigator directory.
 - To send a single page, skip to step 7.
 - To send multiple pages, go to the next step.

4. Press **[QUICK SCAN]** to scan the document into memory.
5. Place the next page.
6. Press **[SET]**.
 - To send more pages, repeat steps 5 and 6.
7. Press **[START]**.

To search for a name by initial

Example: "LISA"

1. Press **[DIRECTORY]**.
2. Press **[▼]** or **[▲]** to initiate the navigator directory.
3. Press **[5]** repeatedly to display any name with the initial "L" (see the character table, page 25).
 - To search for symbols, press **[*]**.
4. Press **[▼]** or **[▲]** repeatedly to display "LISA".
 - To stop the search, press **[STOP]**.

Fax auto redial

If the line is busy or if there is no answer, the unit will automatically redial the number 1 time.

- To cancel redialing, press **[STOP]**, then press **[SET]**.

If your unit does not send a fax

- Confirm that you have entered the number correctly, and that the number is a fax number.
- Confirm that the other party's fax machine is answering by turning ON the connecting tone feature (feature #416 on page 62).

3.6 Broadcast transmission

By storing one-touch dial and navigator directory items (page 31) into the broadcast memory, you can send the same document to multiple parties (up to 20). Your programmed items will remain in the broadcast memory, allowing frequent re-use.

- The broadcast function utilizes stations 1–3. The one-touch dial function will be canceled.
- Keep the front cover page open for button locations.
- Make sure that the **[FAX]** light is ON.

3.6.1 Programming items into the broadcast memory

1 Press **[MENU]** repeatedly to display “**DIRECTORY SET**”.

2 Select the desired broadcast key.

For **BROADCAST 1-2**:

1. Press the desired **[BROADCAST]** key.
2. Press **[▼]** or **[▲]** repeatedly to select “**BROADCAST**”.

For **MANUAL BROADCAST**:

1. Press **[MANUAL BROAD]**.
2. Press **[▼]** or **[▲]** repeatedly to select “**MANUAL BROAD**”.

3 Press **[SET]**.

4 Program items.

Using stations 1–7:

Press the desired station key.

Using stations 8–14:

Press **[LOWER]**, then press the desired station key.

Using navigator directory:

Press **[▼]** or **[▲]** repeatedly to display the desired item, and press **[SET]**.

Using the dial keypad (only for **MANUAL BROAD**):

Enter the fax number and press **[SET]**.

- To program other items, repeat this step (up to 20 items).
- If you program the wrong item, press **[STOP]** to erase the item.

5 Press **[SET]** after programming all of the desired items.

- To program another broadcast key, repeat steps 2 to 5.

6 Press **[STOP]** to exit.

Note:

- Confirm the stored items by printing a broadcast programming list (page 89).

3.6.2 Adding a new item into the broadcast memory

After initial programming, you can add new items (up to a combined total of 20).

1 Press **[DIRECTORY]**.

2 Press **[▼]** or **[▲]** repeatedly to display the desired broadcast memory (“**<BROADCAST1>**”, “**<BROADCAST2>**” or “**<MANUAL BROAD>**”).

3 Press **[MENU]**.

4 Press **[*]**.

5 Press **[▼]** or **[▲]** repeatedly to display the desired item you want to add.

6 Press **[SET]**.

- To add other items, repeat steps 5 and 6 (up to 20 items).

7 Press **[STOP]** to exit.

Note:

- When adding new items to the **MANUAL BROADCAST** memory, you can only select stored items.

3.6.3 Erasing a stored item from the broadcast memory

1 Press **[DIRECTORY]**.

2 Press **[▼]** or **[▲]** repeatedly to display the desired broadcast memory (“**<BROADCAST1>**”, “**<BROADCAST2>**” or “**<MANUAL BROAD>**”).

3 Press **[MENU]**.

4 Press **[#]**.

5 Press **[▼]** or **[▲]** repeatedly to display the desired item you want to erase.

- To cancel erasing, press **[STOP]**.

6 Press **[SET]**.

7 Press **[SET]**.

- To erase other items, repeat steps 5 to 7.

8 Press **[STOP]** to exit.

3.6.4 Sending the same document to pre-programmed parties

- Make sure that the **[FAX]** light is ON.
- 1 Insert the document FACE UP into the feeder.
 - **Confirm that there are no documents on the scanner glass.**
 - 2 If necessary, change to the desired resolution (page 28) and the desired contrast (page 28).
 - 3 Press the desired **[BROADCAST]** (1-2) or **[MANUAL BROAD]**.
 - The document will be fed into the unit and scanned into memory. The unit will then send the data to each party, calling each number sequentially.
 - After transmission, the stored document will be erased from memory automatically, and the unit will automatically print a report (**broadcast sending report**).

Note:

- Do not open the document cover when sending a fax with the auto document feeder.
- If you select **"FINE"**, **"SUPER FINE"** or **"PHOTO"** resolution, the number of pages that the unit can send will decrease.
- If the document exceeds the memory capacity, sending will be canceled.
- If a party is busy or does not answer, it will be skipped and redialed later 1 time.

To send the same document using the scanner glass

- **Confirm that there are no documents in the auto document feeder.**
1. Open the document cover.
 2. Place the document FACE DOWN, then close the document cover.
 3. Press the desired **[BROADCAST]** (1-2) or **[MANUAL BROAD]**.
 - To send a single page, skip to step 6.
 - To send multiple pages, go to the next step.
 4. Place the next page.
 5. Press **[SET]**.
 - To send more pages, repeat steps 4 and 5.
 6. Press **[START]**.

To cancel broadcast transmission

1. Press **[STOP]** repeatedly until **"SEND CANCELED?"** is displayed.
2. Press **[SET]**.


3.7 Receiving a fax automatically – Auto answer ON

3.7.1 Activating FAX ONLY mode

- 1 Press **[FAX AUTO ANSWER]** repeatedly to display the following.

FAX ONLY MODE
3 RINGS [▼▲]

- The display will show the ring setting in FAX ONLY mode.
 - The **[FAX AUTO ANSWER]** indicator is ON.
- 2 If you wish to change the ring setting, press **[▼]** or **[▲]** repeatedly to display the desired setting, and press **[SET]**.

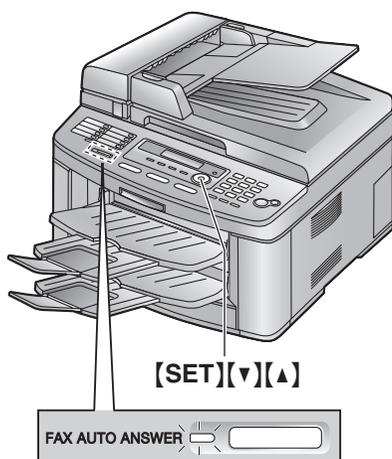

How faxes are received

When receiving calls, the unit will automatically answer all calls and only receive fax documents.

If you have subscribed to a Distinctive Ring service

See page 42.

3.8 Receiving a fax manually – Auto answer OFF


Use this mode with an extension telephone or the optional handset unit.

3.8.1 Activating TEL mode

Set the unit to TEL mode by pressing **[FAX AUTO ANSWER]** repeatedly to display the following.

TEL MODE

- The **[FAX AUTO ANSWER]** indicator is OFF.

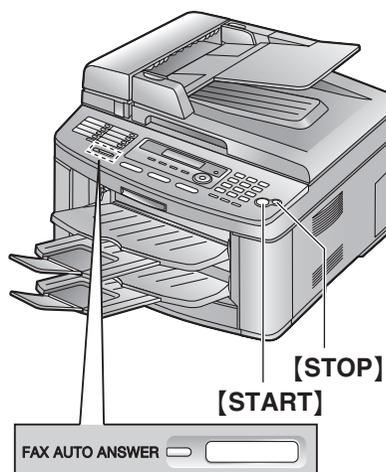

Note:

- If you do not answer the call within 10 rings, the unit will temporarily switch to fax reception. The other party can then send a fax.

How to receive faxes with an extension telephone

If you have another telephone connected to the **[EXT]** jack or the same line (extension telephone), you can use the extension telephone to receive faxes.

1. When the extension telephone rings, lift the handset of the extension telephone.
2. When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,press **[*] [†] [9]** (default fax activation code) **firmly**.
 - The unit will start reception.

3. Replace the handset.

Note:

- To receive fax documents using the extension telephone, make sure remote fax activation is turned ON (feature #434 on page 63) beforehand. The default setting is ON. The fax activation code can also be changed.

How to receive faxes with the optional handset unit

1. Lift the handset to answer the call.
2. When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
 press **[START]**.
 - The unit will start fax reception.


To stop receiving

Press **[STOP]**.

3.9 Using the unit with an answering machine

3.9.1 Setting up the unit and an answering machine

- 1 Connect the answering machine (①).
 - Answering machine is not included.
 - Remove the stopper (②) if attached.

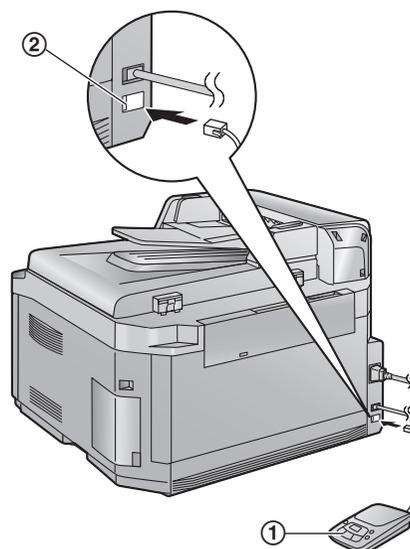

- 2 Set the number of rings on the answering machine to 4 rings or less.
 - This will allow the answering machine to answer the call first.
- 3 Record a greeting message on the answering machine.
 - We recommend you record a message up to 10 seconds long, and not to pause for more than 4 seconds during the message. Otherwise, both machines will not function correctly.
- 4 Activate the answering machine.
- 5 Set the unit to the desired receiving mode (page 36).
 - If you set to FAX ONLY mode, **change the ring setting in FAX ONLY mode to "5 EXT. TAM"** (feature #210 on page 60).
- 6 Check all or part of the following are not the same:
 - the remote access code of the answering machine

3. Fax

- the fax activation code (feature #434 on page 63)
- remote access to Phone Companies Voice Mail (if you subscribed)

Receiving a voice message and fax document in one call

The caller can leave a voice message and send a fax document during the same call. Inform the caller of the following procedure beforehand.

1. The caller calls your unit.
 - The answering device will answer the call.
2. The caller can leave a message after the greeting message.
3. The caller presses **[*][#][9]** (pre-selected fax activation code).
 - The unit will activate the fax function.
4. The caller presses the start button to send a document.

Note:

- To use this feature, make sure remote fax activation is turned ON (Feature #434 on page 63). The fax activation code can also be changed.
- If there is no room left in memory of your answering machine, the unit may not be able to receive documents. See the operating instructions of the answering machine and erase unnecessary messages.

3.10 Junk fax prohibitor (preventing fax reception from undesired callers)

If you subscribe to Caller ID service (page 40), this feature prevents fax reception from calls that do not show caller information.

Additionally, the unit will not accept faxes originating from numbers that match a programmable junk fax prohibitor list.

- Keep the front cover page open for button locations.

Important:

- **This feature does not work when manual reception is performed.**

3.10.1 Activating the junk fax prohibitor

- 1 Press **[MENU]** repeatedly to display “**JUNK FAX PROH.**”.
- 2 Press **[▶]**.
- 3 Press **[▼]** or **[▲]** repeatedly to select “**ON**”.
- 4 Press **[SET]**.
- 5 Press **[MENU]** to exit.
 - While the junk fax prohibitor is activated, “**JUNK FAX ON**” is displayed.

3.10.2 Storing undesired callers

You can register up to 10 undesired numbers from the Caller ID list (page 40) if you do not wish to receive faxes from them.

- 1 Press **[MENU]** repeatedly to display “**JUNK FAX PROH.**”.
- 2 Press **[▶]** repeatedly to display “**JUNK LIST SET**”.
- 3 Press **[SET]**.
- 4 Press **[▼]** or **[▲]** repeatedly to display the party you wish to prevent fax reception from.
- 5 Press **[SET]**.
 - To program other parties, repeat steps 4 to 5.
- 6 Press **[STOP]** 2 times to exit.

Note:

- If there is no space to store new items, “**LIST FULL**” is displayed in step 3 or step 5. Erase unnecessary items.

To display the junk fax prohibitor list

1. Press **[MENU]** repeatedly to display “**JUNK FAX PROH.**”.
2. Press **[▶]** repeatedly to display “**JUNK LIST DISP.**”.
3. Press **[SET]**.
4. Press **[▼]** or **[▲]** to display the items on the list.
5. Press **[MENU]** to exit the program.

To print the junk fax prohibitor list

1. Press **[MENU]** repeatedly to display “**JUNK FAX PROH.**”.
2. Press **[▶]** repeatedly to display “**JUNK LIST PRINT**”.
3. Press **[SET]**.
4. Press **[MENU]** to exit the list.

To erase an item from the junk fax prohibitor list

1. Press **[MENU]** repeatedly to display “**JUNK FAX PROH.**”.
2. Press **[▶]** repeatedly to display “**JUNK LIST DISP.**”.
3. Press **[SET]**.
4. Press **[▼]** or **[▲]** repeatedly to display the desired item.
5. Press **[◀]**.
 - To cancel erasing, press **[STOP]**, then press **[MENU]**.
6. Press **[SET]**.
 - The item is erased.
 - To erase other items, repeat steps 4 to 6.
7. Press **[MENU]** to exit the list.

4.1 Caller ID service

This unit is compatible with the Caller ID service offered by your local telephone company. To use this unit's Caller ID features, you must subscribe to Caller ID service.

Make sure the following ring setting is set to 2 or more rings beforehand.

- FAX ring setting (feature #210 on page 60)

4.1.1 How Caller ID is displayed

The calling party's name or telephone number will be displayed after the 1st ring. You then have the option of whether or not to answer the call. The unit will automatically store caller information (name, telephone number and the time of the call) of the 30 most recent calls. Caller information is stored by the most recent to the oldest call. When the 31st call is received, the oldest call is deleted.

Caller information can be viewed on the display one item at a time (page 40) or confirmed by printing the Caller ID list (page 89).

- When caller information is received and it matches a telephone number stored in the unit's one-touch dial or navigator directory, the stored name will be displayed.
- If the unit is connected to a PBX (Private Branch Exchange) system, caller information may not be received properly. Consult your PBX supplier.
- If the unit cannot receive caller information, the following will be displayed:
 - "OUT OF AREA": The caller dialed from an area which does not provide Caller ID service.
 - "PRIVATE CALLER": The caller requested not to send caller information.
 - "LONG DISTANCE": The caller made a long distance call.

To confirm caller information by printing the Caller ID list


- To print manually, see page 89.
- To print automatically after every 30 new calls, activate feature #216 (page 60).

4.2 Viewing and calling back using caller information

You can easily view caller information and call back. When calling back, we recommend you use the optional handset unit.

Important:


- Calling back will not be possible in the following cases:
 - The telephone number includes data other than numbers (i.e., * or #).
 - The caller information does not include a telephone number.

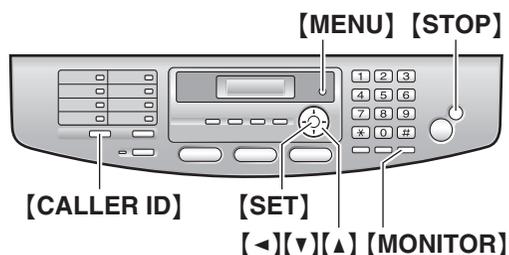

- 1 Press **[CALLER ID]**.
- 2 Press **[↓]** to search from the recently received caller information.
 - If you press **[↑]**, the display order will be reversed.
- 3 Press **[MONITOR]** to return the call.
 - The unit will start dialing automatically.
 - To send a fax using the auto document feeder, see page 28.

To change the way caller information is displayed

Press **[CALLER ID]** repeatedly after step 2.

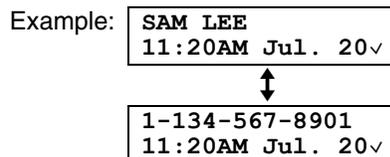

- Check mark (√) on the display means the call has already been viewed or answered.

Display while viewing

- When the unit could not receive a name, the display will show "NO NAME RCVD".
- When no calls have been received, the display will show "NO CALLER DATA".

To edit a telephone number before calling back

Press [*****] repeatedly after step 2. Each time you press [*****], the telephone number will be changed as follows:

- ① 1 - Area code - Local telephone number ("1" added)
- ② Local telephone number only (area code omitted)
- ③ Area code - Local telephone number
- ④ 1 - Local telephone number ("1" added and area code omitted)

To stop viewing

Press [**STOP**] after step 2.

4.2.1 Erasing all caller information

- 1 Press [**MENU**] repeatedly to display "CALLER SETUP".
- 2 Press [**SET**].
 - "CALL LIST ERASE" will be displayed.
- 3 Press [**SET**].
 - To cancel erasing, press [**STOP**], then [**MENU**].
- 4 Press [**SET**].
- 5 Press [**STOP**] to exit.

4.2.2 Erasing specific caller information

- 1 Press [**CALLER ID**].
- 2 Press [**▼**] or [**▲**] repeatedly to display the desired item.
- 3 Press [**◀**].
 - To cancel erasing, press [**STOP**].
- 4 Press [**SET**].
 - To erase other items, repeat steps 2 to 4.
- 5 Press [**STOP**] to exit.

4.3 Storing caller information

- Keep the front cover page open for button locations.

4.3.1 Into the one-touch dial feature and navigator directory

Important:

- This feature is not available in the following cases.
 - The telephone number includes data other than numbers (i.e., * or #).
 - The caller information does not include a telephone number.

- 1 Press [**CALLER ID**].
- 2 Press [**▼**] or [**▲**] repeatedly to display the desired item.
- 3 Press [**MENU**].
- 4 Select the station key or navigator directory.

For stations 1–3:

1. Press the desired station key.
2. Press [**▼**] or [**▲**] repeatedly to select "DIAL MODE".
3. Press [**SET**].
4. Press [**SET**].

For stations 4–7:

1. Press the desired station key.
2. Press [**SET**].

For stations 8–14:

1. Press [**LOWER**], then press the desired station key.
2. Press [**SET**].

For navigator directory:

1. Press [**◀**] or [**▶**].
2. Press [**SET**].

- 5 Press [**SET**].

Note:

- You can confirm the stored items by printing the telephone number list (page 89).
- The unit can only store a name of up to 16 characters long.
- To edit a name or number, see page 32.
- If caller information does not include the caller's name, enter the name manually. See the instructions on page 31.
- If you assign an item to a station key which already contains an item, the previous item will be replaced.
- Station 1 to 3 can be used alternatively as broadcast keys (page 34).

5.1 Distinctive Ring service from your phone company


This service is convenient if you wish to have a different number for your fax machine and telephone, even when you use them on a single telephone line.

Distinctive Ring is a service offered by your local telephone company which allows you to use several telephone numbers on one telephone line. When a call is made to one of your phone numbers, the telephone company sends a ring pattern to your telephone line to indicate which number the call is intended for. By setting up this unit for Distinctive Ring, you can make the unit automatically start fax reception when a call comes to the fax number.

To use this service, you must subscribe to the Distinctive Ring service offered by your local telephone company.

5.2 Using two or more phone numbers on a single telephone line

5.2.1 Activating the Distinctive Ring feature

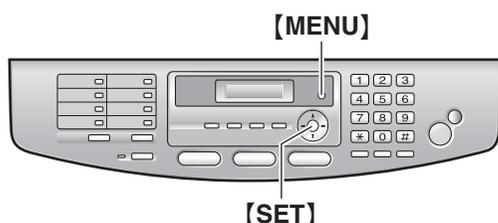

- 1 Press **[MENU]**.
- 2 Press **[*]**, then **[4][3][0]**.
- 3 Press **[1]** to select "ON".
- 4 Press **[SET]**.
 - The **[FAX AUTO ANSWER]** indicator is ON.
- 5 Press **[MENU]** to exit.

How phone calls and faxes are received

If the incoming call is for the fax number, the unit will ring with the assigned ring pattern and automatically start fax reception.

If the incoming call is for the phone number, the unit will keep on ringing.

5.3 Using three or more phone numbers on a single telephone line


You may wish to use three or more phone numbers for a single telephone line. In order to distinguish which number the call was addressed to, a different ring pattern must be assigned for each number.

Example: Using three phone numbers

Telephone number	Ring pattern	Use
012 1234	Standard ring	Personal
012 5678	Double ring	Business
012 9876	Triple ring	Fax

To use one phone number for the fax, program the ring pattern assigned for the fax in feature #431 (page 43). In the example, the ring pattern assigned for fax is a triple ring, so you should program "c" (triple ring).

Ring pattern	Settings in feature #431
Standard ring (one long ring)  1st ring 2nd ring	"A"
Double ring (two short rings)  1st ring 2nd ring	"B"
Triple ring (short-long-short rings)  1st ring 2nd ring	"C"

Ring pattern	Settings in feature #431
Other triple ring (short-short-long rings) 	“D”


5.4 Programming the ring pattern assigned for fax

- Keep the front cover page open for button locations.
- 1 Set feature #430 to “ON” (page 42).
 - 2 Press **[MENU]**.
 - 3 Press **[⇄]**, then **[4][3][1]**.
 - 4 Press **[1]** to **[5]** to select the ring pattern assigned for fax.
 - [1]“A”**: Standard ring (one long ring)
 - [2]“B”**: Double ring (two short rings)
 - [3]“C”**: Triple ring (short-long-short-rings)
 - [4]“D”**: Other triple ring (short-short-long rings)
 - [5]“B-D”** (default): The fax will respond to calls with any of ring tone patterns “B”, “C” and “D”
 - 5 Press **[SET]**.
 - 6 Press **[MENU]** to exit.

6.1 Using the unit as a copy machine

6.1.1 Entering the copy mode

Before copying, set the operation mode to the copy mode.

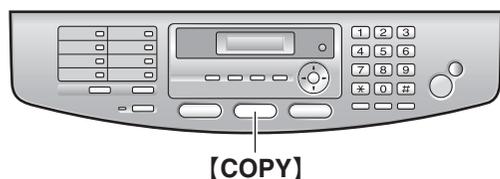

Press **[COPY]** to turn the **[COPY]** light ON.


Note:

- You can change the default operation mode (feature #463 on page 60) and the timer before returning to the default operation mode (feature #464 on page 60).
- Copied documents will be stacked on the upper output tray. You can change the output tray for copying (feature #466 on page 65) (KX-FLB811 only).
- If the **[FAX AUTO ANSWER]** indicator is ON, the unit can receive faxes automatically even in the copy mode.

6.2 Making a copy

6.2.1 Using the auto document feeder

- Confirm that there are no documents on the scanner glass.

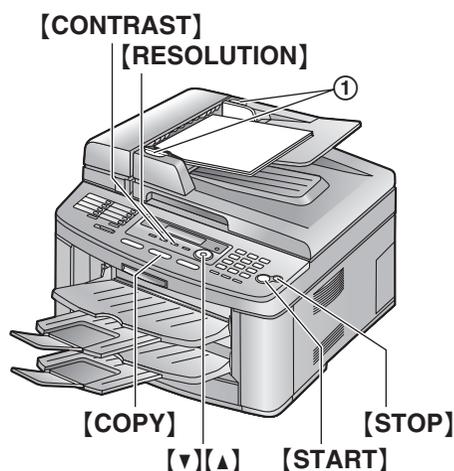

- 1 If the **[COPY]** light is OFF, turn it ON by pressing **[COPY]**.
- 2 Set the original.
 1. Adjust the width of the document guides (①) to fit the actual size of the document.
 2. Insert the document (up to 40 pages) FACE UP into the feeder until a single beep is heard.
- 3 If necessary, change the following settings according to the type of document.
 - To select the resolution, see page 45.
 - To select the contrast, see page 45.
- 4 If necessary, enter the number of copies (up to 99).
- 5 Press **[START]**.
 - The unit will start copying.
- 6 After you finish copying, press **[STOP]** to reset the settings you set in step 3 and 4.

Note:

- Any document which can be sent as a fax can also be copied and scanned (page 30). The effective scanning area is changed depending on the setting of the paper size.
- Do not open the document cover when making a copy with the auto document feeder.

To stop copying

Press **[STOP]**.

To select the resolution

1. Press **[RESOLUTION]**.
2. Press **[▼]** or **[▲]** repeatedly to select the desired resolution.
 - “**TEXT/PHOTO**”: For documents containing both text and photographs.
 - “**TEXT**”: For documents containing only text.
 - “**PHOTO**”: For documents containing photographs, shaded drawings, etc.

Note:

- You can change the default resolution in feature #461 (page 65).
-

To select the contrast

You can adjust this setting depending on the darkness or lightness of the document. 5 levels (light to dark) are available.


1. Press **[CONTRAST]**.
2. Press **[▼]** or **[▲]** repeatedly to select the desired contrast.
 - To make lighter, press **[▼]**.
 - To make darker, press **[▲]**.

Note:

- You can save the previous contrast setting in feature #462 (page 65).
-

6.2.2 Using the scanner glass

- Confirm that there are no documents in the auto document feeder.

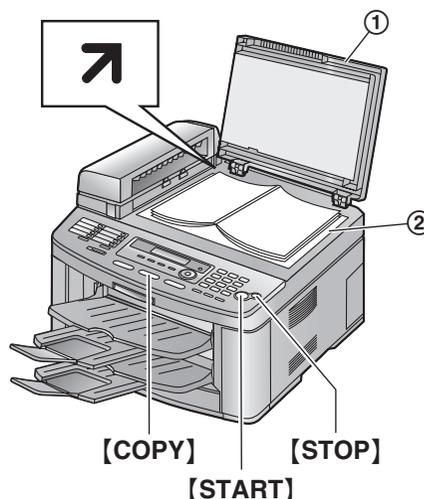

- 1 If the **[COPY]** light is OFF, turn it ON by pressing **[COPY]**.
- 2 Set the original.
 1. Open the document cover (①).
 2. Place the document **FACE DOWN** on the scanner glass (②), matching the top edge of the document to the ↗ mark on the unit.
 3. Close the document cover.
 - If the original is a thick book, do not close the document cover.
- 3 If necessary, change the following settings according to the type of document.
 - To select the resolution, see page 45.
 - To select the contrast, see page 45.
- 4 If necessary, enter the number of copies (up to 99).
- 5 Press **[START]**.
 - The unit will start copying.
- 6 After you finish copying, press **[STOP]** to reset the settings you set in step 3 and 4.

Note:

- The effective scanning area is changed depending on the setting of the paper size (feature #380 on page 60). If you select “**LEGAL**” for the paper size, the effective scanning area will be maximized (page 30).
-

To stop copying

Press **[STOP]**.

6.3 More copying features

- Keep the front cover page open for button locations.
- Make sure that the **[COPY]** light is ON.

6.3.1 To enlarge a document


- 1 Set the original.
- 2 Press **[ZOOM]**.
- 3 Press **[▲]** repeatedly to select from “105%” to “200%” by changing the enlargement rate 5% at a time.
- 4 Press **[START]**.
- 5 After you finish copying, press **[STOP]** to reset this feature.

- **When using the auto document feeder**, the unit will only enlarge the center of the upper part of the document. To make an enlarged copy of the bottom of the document, turn the document around, and then make a copy.
- **When using the scanner glass**, the unit will only enlarge the right top corner of the document starting from the ↗ mark on the unit.

Example: 150% enlarged copy


Using the auto document feeder:

Original document Enlarged copy

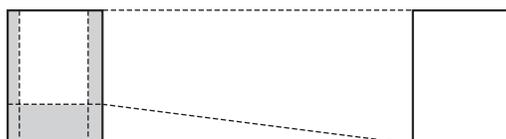

Using the scanner glass (①):

Original document Enlarged copy

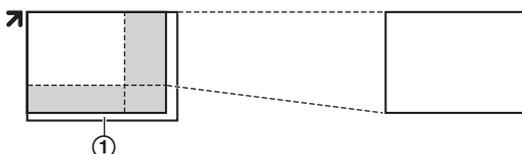


6.3.2 To reduce a document

- 1 Set the original.
- 2 Press **[ZOOM]**.
- 3 Press **[▼]** repeatedly to select from “95%” to “50%” by changing the reduction rate 5% at a time.
- 4 Press **[START]**.
- 5 After you finish copying, press **[STOP]** to reset this feature.

Example: 70% reduced copy


Using the auto document feeder:

Original document Reduced copy

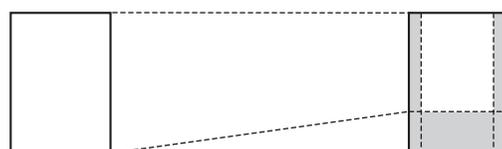

Using the scanner glass (①):


Original document Reduced copy

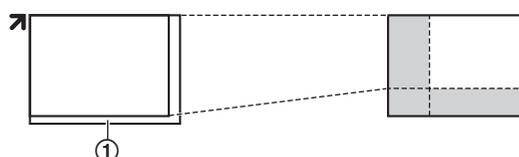

6.3.3 To collate multiple copies (Auto document feeder only)

The unit can collate multiple copies in the same order as the original document pages.

- 1 Set the original.
- 2 Press **[COLLATE]**.
- 3 Press **[▼]** or **[▲]** repeatedly to display “ON”.
- 4 Press **[SET]**.
- 5 Enter the number of copies (up to 99).
- 6 Press **[START]**.

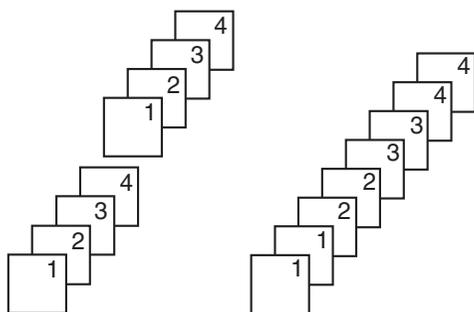Example: Making 2 copies of a 4-page original document

Collated pages

Uncollated pages

Note:

- The unit will store the documents into memory while collating the copies. The number of original document for collating copies depends upon the contents of pages, resolution and contrast. Approximately 50 pages of ITU-T No.1 Test Chart in “**TEXT/PHOTO**” mode can be stored at a time, if the unit has no documents in memory. See page 90 of the specifications in detail.
- If memory becomes full while storing, the unit will only print out the stored pages.
- The collating feature is effective only for this time. After copying, this feature will turn OFF automatically.

7.1 Connecting to a computer

Panasonic Multi-Function Station software enables the unit to carry out the following functions:

- Printing on plain paper, transparencies, labels and envelopes
- Scanning documents and converting an image into text with Readiris OCR software
- Scanning from other applications for Microsoft® Windows® that support TWAIN scanning
- Storing, editing or erasing items in directories using your computer
- Programming the features using your computer
- Sending, receiving fax documents using your computer

To use Multi-Function Station on your computer, the following are required:

Operating System:

Works with Windows 98/Me/2000/XP*1

CPU:

Windows 98: Pentium® 90 MHz or faster

Windows Me: Pentium 150 MHz or faster

Windows 2000: Pentium 166 MHz or faster

Windows XP*1: Pentium 300 MHz or faster

RAM:

Windows 98: 24 MB (32 MB or more recommended)

Windows Me: 32 MB (64 MB or more recommended)

Windows 2000: 64 MB or more

Windows XP*1: 128 MB or more

Other Hardware:

CD-ROM drive

Hard disk drive with at least 100 MB of available space


USB interface

*1 Multi-Function Station software does not work with Windows XP Professional x64 Edition (64bit), a new version of Windows XP Professional that was released in and after April, 2005.


Important notice for the connection

- Do not connect the USB cable before installing Multi-Function Station. Be sure to connect the USB cable in step 6 on page 49.


- 1 Remove the USB interface cover (①).

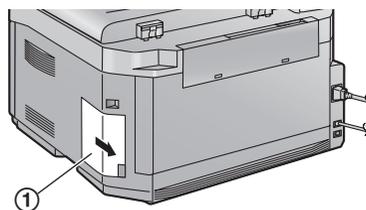

- 2 Connect the USB cable (①) to the USB port.

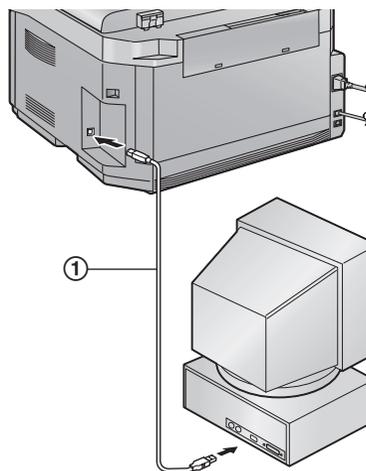

- 3 Attach the USB interface cover (①).

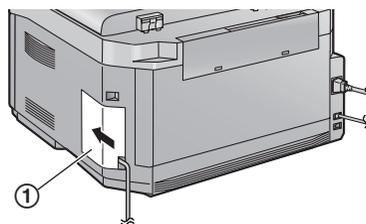

Note:

- Be sure to use a Hi-Speed USB 2.0 certified cable if your computer is equipped with the Hi-Speed USB 2.0 interface.
- USB cable is not included. Please purchase a shielded Type-A male/Type-B male USB cable maximum length 2 meters.

Warning:


- To assure continued emission limit compliance, use only shielded USB cable (2 m or less in length).

7.2 Installing Multi-Function Station

- The screenshots shown in these instructions are for Windows XP and are included for reference only.

- The screenshots shown in these instructions may differ slightly from those of the actual product.
- Software features and appearance are subject to change without notice.

- 1 Start Windows and exit all other applications.
 - For Windows XP and Windows 2000 users, you must be logged in as an administrator in order to install Multi-Function Station.
 - **Install Multi-Function Station before connecting the unit to a computer. If the unit is connected to a computer before installing Multi-Function Station, the [Found New Hardware Wizard] dialog box will appear. Click [Cancel] to close it.**
- 2 Insert the included CD-ROM into your CD-ROM drive.
 - The **[Choose Setup Language]** dialog box will appear. Select the desired language that you want to use with this software from the drop-down list. Click **[OK]**. The installation will automatically start.
 - If the **[Choose Setup Language]** dialog box does not appear: The installation will automatically start.
 - If the installation does not start automatically: Click **[Start]**. Choose **[Run...]**. Type **"D:\setup"** (where **"D:"** is the drive letter of your CD-ROM drive). Click **[OK]**. (If you are not sure what the drive letter is for your CD-ROM drive, use Windows Explorer and look for the CD-ROM drive.)

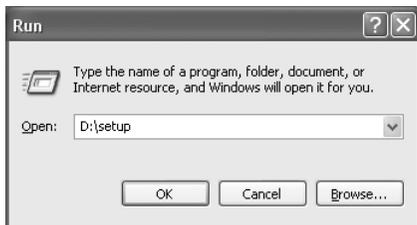

The installation will start.

- 3 When the setup program starts, follow the on-screen instructions.
- 4 When the **[Setup Type]** dialog box appears, select **[Standard]**, then click **[Next]**.
 - Readiris OCR software (page 54) and Device Monitor (page 56) will also be installed.

- 5 When the **[Connect Type]** dialog box appears, select **[Connect directly with a USB cable.]**, then click **[Next]**.
 - The **[Connect Device]** dialog box will appear.
- 6 Connect the unit with the USB cable (page 48), then click **[Next]**.
 - If the unit is connected to your computer, the model name will be automatically detected.
 - You can change the names for the printer, PC fax, and scanner if necessary.
- 7 Click **[Install]**, then follow the on-screen instructions.
 - The files will be copied to your computer.

Important notice for Windows XP users

- If you use Windows XP, the following message may appear after step 6:
"The software you are installing for this hardware has not passed Windows Logo testing to verify its compatibility with Windows XP"
This is normal and the software will not cause any difficulties with your operating system. You can continue the installation with no problem.

Note:

- If the screen prompts to insert the CD-ROM for operating system when installing Multi-Function Station, insert it into your CD-ROM drive.

To use the other unit with the computer

You need to add the printer driver for each unit, as follows.

Click **[Start]**, then select **[All Programs]** or **[Programs]** → **[Panasonic]** → **[KX-FLB800_FLM650 Series]** → **[Add Printer Driver]**. Then follow the on-screen instructions.

Note:

- You cannot connect more than one unit to the same computer at the same time.

To modify the software

You can select the components to install anytime after the installation.

For Windows XP and Windows 2000 users, you must be logged in as an administrator in order to modify Multi-Function Station.

1. Click **[Start]**, then select **[All Programs]** or **[Programs]** → **[Panasonic]** → **[KX-FLB800_FLM650 Series]** → **[Uninstall or Modify]**.

7. Multi-Function Station software

2. Select [**Modify**] and click [**Next**], then follow the on-screen instructions.

To uninstall the software

For Windows XP and Windows 2000 users, you must be logged in as an administrator in order to uninstall Multi-Function Station.

1. Click [**Start**], then select [**All Programs**] or [**Programs**] → [**Panasonic**] → [**KX-FLB800_FLM650 Series**] → [**Uninstall or Modify**].
2. Select [**Uninstall**] and click [**Next**], then follow the on-screen instructions.


Note:

- If you want to uninstall each component, select [**Modify**] and click [**Next**] in step 2, then follow the on-screen instructions.

7.3 Starting Multi-Function Station

Click [**Start**], then select [**All Programs**] or [**Programs**] → [**Panasonic**] → [**KX-FLB800_FLM650 Series**] → [**Multi-Function Station**].

- Multi-Function Station will appear.

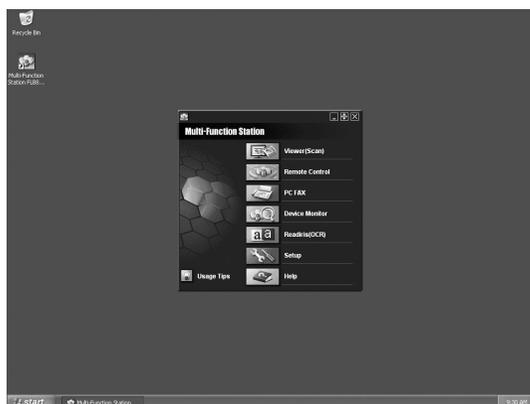

Viewer(Scan) (page 53)

- To display the images which support TIFF, JPEG, PCX, DCX and BMP formats.
- To create an image file by scanning the document set in the unit (TIFF, JPEG, PCX, DCX, BMP and PDF formats).

Remote Control (page 54)

- To store, edit or erase items in directories.
- To program the features.
- To view items in the journal report or Caller ID list.
- To store caller information into directories.

PC FAX (page 55)

- To send a document created on the computer.
- To display a document received on the computer.

Device Monitor (page 56)

- To display the current status of the unit.

Readiris(OCR) (page 54)

- To convert an image into editable text data.

Setup

- To change the setting for OCR.

Help

- For detailed instructions on Multi-Function Station.

Usage Tips

- To display usage tips.

Note:

- You can confirm if the unit is connected to your computer on Device Monitor.
- Computer features (printing, scanning, PC Fax, etc.) may not function properly in the following situations:
 - When the unit is connected to a computer that was custom-built by the user.
 - When the unit is connected to the computer via a PCI card or other expansion card.
 - When the unit is connected to another piece of hardware (such as a USB hub or interface adapter) and not connected directly to the computer.

7.4 Using the unit as a printer


You can print not only on plain paper but also on special media (transparencies / labels / envelopes).

7.4.1 Printing from Windows applications

You can print a file created in a Windows application. For example, to print from WordPad, proceed as follows.

- 1 Open the document you want to print.
- 2 Select [**Print...**] from the [**File**] menu.
 - The [**Print**] dialog box will appear.

For details about the **[Print]** dialog box, click **[?]**, then click the desired item.

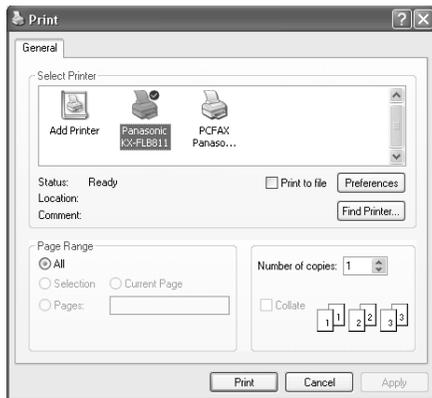

Note:

- For Microsoft PowerPoint®, select **[Color]** or remove the check next to **[Grayscale]** in the print dialog so that colored text will be printed in grayscale.

3 Select **[Panasonic KX-FLB811]/ [Panasonic KX-FLB801]** as the active printer.

- If you have changed the name of the unit when installing, select that name from the list.
- To change the printer settings, proceed as follows.

For Windows 98/Windows Me:

Click **[Properties]**, then click the desired tab. Change the printer settings, then click **[OK]**.

For Windows 2000:

Click the desired tab and change the printer settings.

For Windows XP:

Click **[Preferences]**, then click the desired tab. Change the printer settings, then click **[OK]**.

4 Click **[Print]** or **[OK]**.

- The unit will start printing.

Note:

- To load paper, see page 18, 19.
- When using the manual input tray, load the recording paper after step 4.
- For details about the paper specifications, see page 51, 91.

Setting the printer properties

You can change the printer setting in step 3. We recommend that you test paper (especially special sizes and types of paper) on the unit before purchasing large quantities.

You can change the settings on following tabs.

Paper: Paper size, paper type, etc.

Output: Pages per sheet, output tray (KX-FLB811 only), etc.

Quality: Graphics mode, resolution, toner save feature, etc.

Note:

- To select **[Envelope]** for paper type on the **[Paper]** tab, you need to select **[Envelope #10]** or **[Envelope DL]** for paper size.
- You can select the output tray for each printing on the **[Output]** tab. To change the default output tray, see page 56 (KX-FLB811 only).
- When printing from a computer, the toner save feature on the **[Quality]** tab overrides the unit's toner save setting (feature #482 on page 60).

7.4.2 Transparencies

Use transparencies designed for laser printing. We recommend the following:

3M® CG3300/CG5000

- Use the manual input tray to print transparencies.
- Load transparency sheets one page at a time for printing, print-side down.
- Printed transparency will be stacked on the upper output tray (KX-FLB811 only).
- Remove each transparency after printing and place it on a flat surface to cool and to prevent it from curling.
- Do not re-use transparencies that have already been fed through the unit. This includes transparencies that have been fed through and ejected without being printed on.
- Some types of transparencies have instructions recommending which side to print on. If the print quality is poor, try printing on the other side.

7.4.3 Labels

Use labels designed for laser printing. We recommend the following:

Avery®

5160/5161/5162/5163/5164/5165/5167/5168


XEROX®

LWH100/LWH110/LWH120/LWH130/LWH140

- Use the manual input tray to print labels.
- Load label sheets one page at a time for printing, print-side down.
- Printed label will be stacked on the upper output tray (KX-FLB811 only).
- Remove each label after printing.
- Do not use the following types of labels:

7. Multi-Function Station software


- Labels that are wrinkled, damaged or separated from the backing sheet.
- Any sheet of labels that has spaces in it where some of the labels have been removed.
- Labels that do not completely cover the backing sheet as follows.

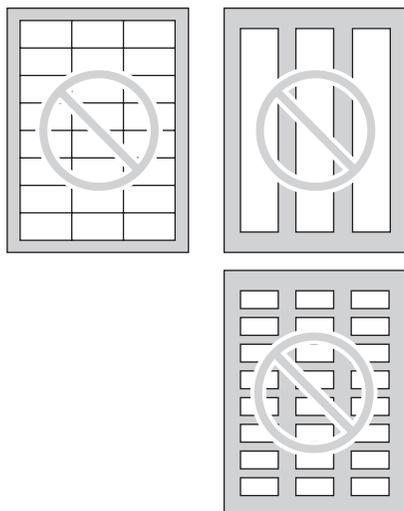

7.4.4 Envelopes


Use envelopes designed for laser printing. We recommend the following:

- High quality envelopes of 90 g/m² (24 lb.) paper,
- Envelopes that have thin, sharply creased leading edges,
- Envelopes that have diagonal seams, and
- Envelopes with a moisture content of 4% to 6% by weight.

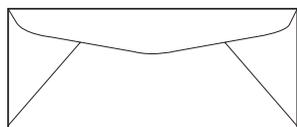

- Use the manual input tray to print envelopes.

- You can load 1 envelope of 90 g/m² (24 lb.) paper at a time for printing, print-side down (①).

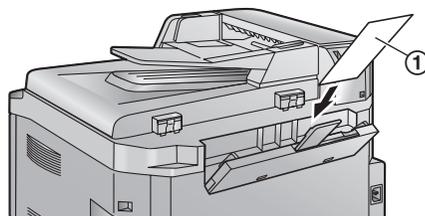

- Printed envelope will be stacked on the upper output tray (KX-FLB811 only).
- Remove each envelope after printing.

Note:

- Wrinkles and waving may occur in some cases, even if high quality envelopes are used.
- Avoid printing in high humidity. High humidity may cause the envelope to curl or seal the envelope.
- Store envelopes away from moisture and humidity, where they can lay flat and their edges will not be bent or damaged.

Do not use envelopes with any of the following characteristics (using these may result in paper jams):


- Irregularly shaped envelopes
- Envelopes with curls, wrinkles, nicks, twists, dog-ears or other damage
- Envelopes with side seam construction
- Highly textured envelopes, or envelopes with extremely shiny surfaces
- Envelopes that seal by removing a peel-off strip
- Envelopes with more than one flap to be sealed
- Self-adhesive envelopes
- Envelopes that are baggy or not sharply creased
- Embossed envelopes
- Envelopes that have previously been printed on
- Envelopes that include cotton and/or fiber material



Side seam construction



Peel-off strip



Multiple flaps



Twisted



Curled



Bent-edged



Waved



Dog-eared



Self adhesive

Do not attempt to print on any of the following types of envelopes (these may cause damage to the unit):

- Envelopes with clasps, snaps or tie strings
- Envelopes with transparent windows
- Envelopes that use encapsulated types of adhesive that do not require moistening but rely on pressure to seal them



Clasp



Transparent window

7.5 Using the unit as a scanner

- Keep the front cover page open for button locations.

7.5.1 Using Multi-Function Viewer

- 1 Set the original.

Using the auto document feeder

Insert the document (up to 40 pages) FACE UP into the feeder until a single beep is heard.

- Confirm that there are no documents on the scanner glass.

Using the scanner glass

Place the document FACE DOWN on the scanner glass, matching the top edge of the document to the **7** mark on the unit.

- Confirm that there are no documents in the auto document feeder.

- 2 Start Multi-Function Station.

- 3 Select [**Viewer(Scan)**].

- [**Multi-Function Viewer**] will appear.

- 4 Click the [**Scan**] icon in the [**Multi-Function Viewer**] window.

- The [**Panasonic KX-FLB811**]/ [**Panasonic KX-FLB801**] (default name) dialog box will appear.

- 5 If necessary, change the scanning settings on your computer.

- To preview the scanned image, click [**Preview**]. Only first page will be displayed. You can drag the frame to specify the scanned area. If you change the scan mode, brightness, or contrast setting, click [**Preview**] to refresh the scanned image. If you use the auto document feeder, set the document again before refreshing the scanned image.
- If you select [**B/W Graphic**] for scan mode, the resolution range will be from 150 to 600 dpi.

- 6 Click [**Scan**].

- If you preview the scanned image using the auto document feeder in step 5, set the document again and click [**Scan**].
- The scanned image will be displayed in the [**Multi-Function Viewer**] window after scanning.

7. Multi-Function Station software

- To save the scanned image, select [**Save As...**] from the [**File**] menu.
- To cancel scanning while the document is being scanned, click [**Cancel**].

Note:

- You can display the images which support TIFF, JPEG, PCX, DCX and BMP formats.
- You can save the images in TIFF, JPEG, PCX, DCX, BMP or PDF formats.
- You can move, copy and delete a file or page.
- You cannot change the scanning settings on the unit.
- Any document which can be sent as a fax can also be scanned (page 30).
- Do not open the document cover when scanning documents with the auto document feeder.
- When scanning a document, we recommend using the scanner glass rather than the auto document feeder for better results.

To scan documents quickly

1. Set the original.
2. Press [**SCAN**] on the unit.
 - The previous settings will be displayed on your computer. You can change them if necessary.
3. Press [**START**] on the unit.
 - The scanned image will be displayed in the [**Multi-Function Viewer**] window after scanning.
 - To cancel scanning while the document is being scanned, click [**Cancel**].

Note:

- For details, see the help file by selecting [**Usage Tips**] from Multi-Function Station.

Readiris OCR software

With OCR software, you can convert an image into text data that can be edited with word processor software. Readiris OCR software can be installed when installing Multi-Function Station.

To use this software, click the [**OCR**] icon in the [**Multi-Function Viewer**] window or select [**Readiris (OCR)**] from Multi-Function Station. For detailed instructions about OCR, select [**Help**].

7.5.2 Using other applications

Multi-Function Station includes a TWAIN compliant scanner driver. You can also scan using other applications that support TWAIN scanning. For example, proceed as follows.

- 1 Set the original.

Using the auto document feeder

Insert the document (up to 40 pages) FACE UP into the feeder until a single beep is heard.

- Confirm that there are no documents on the scanner glass.

Using the scanner glass

Place the document FACE DOWN on the scanner glass, matching the top edge of the document to the ↗ mark on the unit.

- Confirm that there are no documents in the auto document feeder.

- 2 Start an application that supports TWAIN scanning.
- 3 Select [**Select Device...**] from the [**File**] menu, then select the [**Panasonic KX-FLB811**]/[**Panasonic KX-FLB801**] (default name) in the dialog box.
- 4 Select [**Acquire Image...**] from the [**File**] menu.
 - The [**Panasonic KX-FLB811**]/[**Panasonic KX-FLB801**] (default name) dialog box will appear.
- 5 If necessary, change the scanning settings on your computer.
 - If you select [**B/W Graphic**] for scan type, the resolution range will be from 150 to 600 dpi.
- 6 Click [**Scan**].
 - The scanned image will be displayed in the application window after scanning.
 - To cancel scanning while the document is being scanned, click [**Cancel**].

Note:


- Depending on the application used, the appearance may differ slightly.

7.6 Operating the unit from your computer

You can easily operate the following functions from your computer.

- Storing, editing or erasing items in directories (page 31, 34)
- Programming the features (page 59 to page 65)
- Viewing items in the journal report (page 29)
- Storing the journal report as the computer file
- Viewing items in the Caller ID list (page 40)

- Storing caller information into directories (page 41)
 - Storing the Caller ID list as the computer file
- 1 Start Multi-Function Station.
 - 2 Select [**Remote Control**].
 - The [**Multi-Function Remote Control**] window will appear.

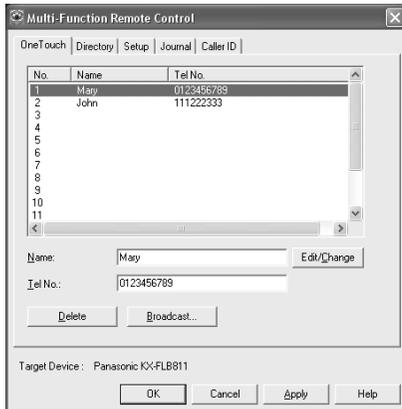

- 3 Select the desired tab.
 - The latest data in the unit will be displayed.
- 4 Perform the desired operation.
 - For details about each function, click [**Help**].
 - To stop the operation, click [**Cancel**].
- 5 Click [**OK**].
 - The new data will be transferred to the unit and the window will close.
 - You can also click [**Apply**] to continue the next operation without closing the window.

Note:

- Some of the features cannot be programmed from your computer.
- For details, see the help file by selecting [**Usage Tips**] from Multi-Function Station.

7.7 Fax sending/receiving using Multi-Function Station

- Keep the front cover page open for button locations.

7.7.1 Sending a computer document as a fax message from your computer

You can access the fax function from a Windows application using Multi-Function Station. For example, to send a document created from WordPad, proceed as follows.

- 1 Open the document you want to send.
- 2 Select [**Print...**] from the [**File**] menu.
 - The [**Print**] dialog box will appear.
- 3 Select [**PCFAX Panasonic KX-FLB811**]/[**PCFAX Panasonic KX-FLB801**] (default name) as the active printer.
- 4 Click [**Print**] or [**OK**].
 - The [**Send a Fax**] dialog box will appear.



- 5 Enter the fax number using the keypad display or the directory.
 - To stop the operation, click [**Cancel**].
- 6 Click [**Send**].
 - The document will be sent through the unit from your computer.

Note:

- To stop sending, press [**STOP**] on the unit while sending the document.
- If the document exceeds the memory capacity of the unit, sending will be canceled.

7. Multi-Function Station software

- Check the journal from Remote Control after sending or receiving faxes.
- For details, see the help file by selecting [**Usage Tips**] from Multi-Function Station.


7.7.2 Receiving a fax into your computer

You can receive a fax document on your computer. The received fax document is saved as an image file (TIFF-G4 format).

To receive a fax document using your computer, make sure the following features are set beforehand.

- PC fax reception (feature #442 on page 64)

- 1 Press [**FAX AUTO ANSWER**] repeatedly to turn the auto answer setting ON (page 36).
- 2 Start Multi-Function Station.
- 3 Select [**PC FAX**].

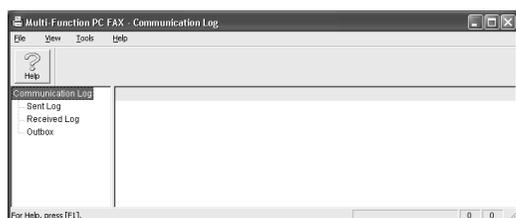


- 4 When a fax call is received, your computer will receive a document through the unit.

Note:

- You can view, print or transfer the received document using your computer.

Viewing a received document

1. Select [**PC FAX**] from Multi-Function Station.
2. Select [**Received Log**] in [**Communication Log**].

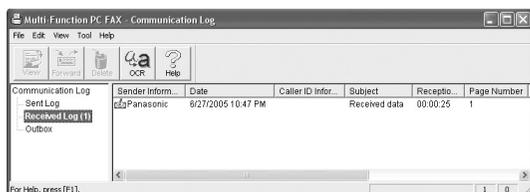

3. Click the item you want to view.
4. Click [**File**] in the menu bar, then select [**View**], or click [**View**] icon in the toolbar.
 - The received fax will be displayed.

If the unit's memory stores a received fax document

You can load the document into your computer.

1. Select [**PC FAX**] from Multi-Function Station.

2. Select [**Received Log**] in [**Communication Log**].
3. Click [**File**] in the menu bar, then click [**Receive a Fax**].
 - If feature #442 is activated, the received fax document will be automatically transferred to the computer.

7.8 Confirming the status of the unit

You can confirm the setting information and current status of the unit from your computer.

- 1 Start Multi-Function Station.
- 2 Select [**Device Monitor**].
 - If the [**Device Select**] dialog box appears, select the unit from the list, then click [**OK**].
 - The [**Device Monitor**] window will appear.
- 3 You can confirm the status of the unit.
Status: Current status of the unit

Note:

- Additional information (toner and recording paper status, etc.) will be displayed in [**Status**] tab by clicking [**Advanced Information**].
- The status of the unit will be updated automatically.
- If the printing error occurs, Device Monitor will be started automatically and display the error information.
- For details, see the help file by selecting [**Usage Tips**] from Multi-Function Station.

7.9 Other information (KX-FLB811 only)

7.9.1 Changing the default output tray

To change the default output tray when printing, proceed as follows.

- 1 Click [**Start**].
- 2 Open the printer window.

For Windows 98/Windows Me/Windows 2000:

Select [**Settings**], then click [**Printers**].

For Windows XP Professional:
Click [**Printers and Faxes**].


For Windows XP Home:

Click [**Control Panel**], [**Printers and Other Hardware**], then click [**Printers and Faxes**].

- 3 Select [**Panasonic KX-FLB811**] (default name).
- 4 Select [**Properties**] from the [**File**] menu.
 - The printer properties window will appear.
 - For Windows XP and Windows 2000 users, click [**Printing Preferences...**] on the [**General**] tab.
- 5 Select the desired output tray on the [**Output**] tab.
 - The selected output tray will be set as default.
 - For details, see the help file by selecting [**Usage Tips**] from Multi-Function Station.
- 6 Click [**OK**].

7. Press **[MENU]** to exit.

8.1 Programming

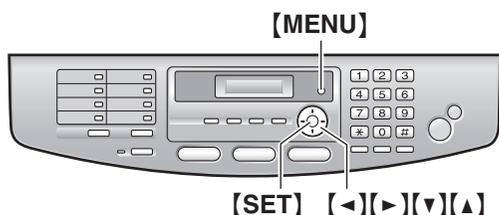

- 1 Press **[MENU]**.
- 2 Press **[#]** and the 3-digit code (page 59 to page 65).
- 3 Press the desired selection to display the desired setting.
 - This step may be slightly different depending on the feature.
- 4 Press **[SET]**.
- 5 Press **[MENU]** to exit.

To cancel programming

Press **[MENU]**.

To select features by using the navigator key

You can select a feature by using the navigator key instead of directly entering the program code (# and a 3-digit number).

1. Press **[MENU]**.
2. Select the feature's category you wish to program.
Press **[◀]** or **[▶]** repeatedly to display the desired feature's category.
 - “**BASIC FEATURE**”
 - “**FAX FEATURE**”
 - “**COPY FEATURE**”
3. Press **[SET]**.
4. Select the feature you wish to program.
Press **[◀]** or **[▶]** repeatedly to display the desired feature.
 - The current setting of the feature will be displayed.
5. Press **[▼]** or **[▲]** repeatedly to display the desired setting.
 - This step may be slightly different depending on the feature.
6. Press **[SET]**.
 - The setting you selected is set, and the next feature will be displayed.

8.2 Basic features

Feature/Code	Selection
Setting the quick setup [#][1][0][0]	<p>You can print out the quick fax setup guide and select the desired receiving mode depending on your situation.</p> <p>[1] "FAX ONLY" (default): Use only as a fax (page 36). [2] "DIST. RING": With the Distinctive Ring service (page 42). [3] "EXT. TAM": With an external telephone answering machine (page 37). [4] "TEL ONLY": Mostly phone calls (page 36).</p> <ol style="list-style-type: none"> 1. Press [MENU]. 2. Press [#], then [1][0][0]. 3. Press [SET]. 4. Press [SET] again to print the quick fax setup guide. <ul style="list-style-type: none"> • If you do not wish to print it, press [STOP]. 5. Press [1] to [4] to display the desired setting. 6. Press [SET]. 7. Press [MENU].
Setting the date and time [#][1][0][1]	Enter the date and time using the dial keypad. See page 24 for details.
Setting your logo [#][1][0][2]	Enter your logo using the dial keypad. See page 25 for details.
Setting your fax number [#][1][0][3]	Enter your fax number using the dial keypad. See page 27 for details.
Setting the dialing mode [#][1][2][0]	<p>[1] "PULSE" [2] "TONE" (default) See page 22 for details.</p>
Setting flash time [#][1][2][1]	<p>The flash time depends on your telephone exchange or host PBX.</p> <p>[1] "700ms" (default) [2] "600ms" [3] "400ms" [4] "300ms" [5] "250ms" [6] "110ms" [7] "100ms" [8] "90ms"</p> <p>Note:</p> <ul style="list-style-type: none"> • If the unit is connected via a PBX, PBX functions (transferring a call, etc.) might not work correctly. Consult your PBX supplier for the correct setting.
Changing the LCD display contrast [#][1][4][5]	<p>[1] "NORMAL" (default): For normal contrast. [2] "DARKER": Used when the display contrast is too light.</p>
Setting the ringer pattern [#][1][6][1]	<p>[1] "A" (default) [2] "B" [3] "C"</p>

8. Programmable Features

Feature/Code	Selection
Changing the ring setting in FAX ONLY mode [#][2][1][0]	To change the number of rings before the unit answers a call in FAX ONLY mode. [1] "1" [2] "2" [3] "3" (default) [4] "4" [5] "5 EXT. TAM" (External Telephone Answering Machine)
Setting the Caller ID list to print automatically [#][2][1][6]	[0] "OFF" (default): The unit will not print the Caller ID list, but will keep records of the information for the last 30 callers. [1] "ON": The unit will print the Caller ID list automatically after every 30 new calls (page 40).
Setting the recording paper size in the paper input tray [#][3][8][0]	[1] "LETTER" (default): Letter size paper [2] "A4": A4 size paper [3] "LEGAL": Legal size paper
Setting the waiting time for the power save mode [#][4][0][3]	To set the length of time before the unit enters the power save mode. [1] "5min": 5 minutes [2] "15min" (default): 15 minutes [3] "30min": 30 minutes [4] "1h": 1 hour Note: <ul style="list-style-type: none"> • During the power save mode, the unit needs to preheat the fuser unit before printing.
Setting the default operation mode [#][4][6][3]	To select the default operation mode when the selected time of the mode timer (feature #464) passes. [1] "COPY" (default): Copy mode is selected as default. [2] "FAX": Fax mode is selected as default. Note: <ul style="list-style-type: none"> • You cannot select the scan mode using this feature.
Setting the default operation mode timer [#][4][6][4]	To set the timer before returning to the default operation mode (feature #463). [0] "OFF": Deactivates this feature. [1] "30s": 30 seconds [2] "1min" (default): 1 minute [3] "2min": 2 minutes [4] "5min": 5 minutes
Setting toner save feature [#][4][8][2]	[0] "OFF" (default): Deactivates this feature. [1] "ON": The toner cartridge will last longer. Note: <ul style="list-style-type: none"> • This feature may lower the print quality by reducing toner consumption.

8.3 Fax features

Feature/Code	Selection
Printing a confirmation report [#][4][0][1]	To print a confirmation report for fax transmission results (page 29). [0] “OFF”: Confirmation reports will not be printed. [1] “ON”: A confirmation report will be printed after every transmission. [2] “ERROR” (default): A confirmation report will be printed only when fax transmission fails.
Setting the journal report to print automatically [#][4][0][2]	[0] “OFF”: The unit will not print a journal report, but will keep a record of the last 30 fax transmissions and receptions. [1] “ON” (default): The unit will print a journal report automatically after every 30 new fax transmissions and receptions (page 29).
Sending documents overseas [#][4][1][1]	If you cannot send a fax overseas even if the number is correct and the line is connected, activate this feature before sending the fax. This feature improves the reliability by reducing the transmission speed. [0] “OFF”: Deactivates this feature. [1] “NEXT FAX”: This setting is effective only for the next attempted fax transmission. After transmission, the unit will return to the previous setting. [2] “ERROR” (default): When the previous fax transmission fails and you wish to re-send the document. Note: <ul style="list-style-type: none"> • This feature is not available for broadcast transmission. • Calling charges may be higher than usual.

8. Programmable Features

Feature/Code	Selection
<p>Sending a fax at a specific time [#][4][1][2]</p>	<p>This feature allows you to take advantage of low-cost calling hours offered by your telephone company. This feature can be set up to 24 hours in advance of the desired time.</p> <p>[0] "OFF" (default) [1] "ON"</p> <p>To send a document:</p> <ol style="list-style-type: none"> If the [FAX] light is OFF, turn it ON by pressing [FAX]. Insert the document into the auto document feeder. If necessary, change to the desired resolution (page 28) and the desired contrast (page 28). Press [MENU]. Press [#], then [4][1][2]. Press [1] to select "ON". Press [SET]. Enter the fax number. <ul style="list-style-type: none"> To enter an item using one-touch dial feature and navigator directory, see step 4 on page 33. (When using navigator directory, you do not have to press [DIRECTORY] before pressing [v] or [^].) Press [SET]. Enter the transmission start time. <ul style="list-style-type: none"> Press [*] repeatedly to select "AM" or "PM". Press [SET]. <ul style="list-style-type: none"> The document will be fed into the unit and scanned into memory. The unit will then send the data at the specified time. <p>Note:</p> <ul style="list-style-type: none"> To cancel after programming, press [STOP] then [SET]. You can also send a document using the scanner glass. Press [SET] in step 11, then press [START].
<p>Setting the Error Correction Mode (ECM) [#][4][1][3]</p>	<p>This feature is available when the sending / receiving fax machines are ECM compatible.</p> <p>[0] "OFF": Deactivates this feature. [1] "ON" (default): If there is an error during fax transmission / reception, the unit will support the communication.</p>
<p>Setting the connecting tone [#][4][1][6]</p>	<p>If you often have trouble when sending faxes, this feature allows you to hear connecting tones: fax tone, ring back tone and busy tone. You can use these tones to confirm the status of the other party's machine.</p> <p>[0] "OFF": Deactivates this feature. [1] "ON" (default): You will hear connecting tones.</p> <p>Note:</p> <ul style="list-style-type: none"> If the ring back tone continues, the other party's machine may not be a fax machine or may have run out of paper. Check with the other party. The connecting tone volume cannot be adjusted.
<p>Activating the Distinctive Ring feature [#][4][3][0]</p>	<p>[0] "OFF" (default) [1] "ON" See page 42 for details.</p>

Feature/Code	Selection
Setting the ring pattern for fax (Distinctive Ring feature) [#][4][3][1]	[1] "A" [2] "B" [3] "C" [4] "D" [5] "B-D" (default) See page 43 for details.
Receiving other size documents [#][4][3][2]	To receive a fax document that is longer than your recording paper. [0] "OFF": The unit will print the original size. [1] "ON" (default): The unit will fit received documents onto your recording paper.
Changing the fax activation code [#][4][3][4]	If you wish to use an extension telephone to receive faxes, activate this feature and program the activation code. Important: <ul style="list-style-type: none"> • The fax activation code must be different from the code that you programmed on the answering machine. [0] "OFF" [1] "ON" (default) <ol style="list-style-type: none"> 1. Press [MENU]. 2. Press [#], then [4][3][4]. 3. Press [1] to select "ON". 4. Press [SET]. 5. Enter your code from 2 to 4 digits, using 0–9, [*] and [#]. <ul style="list-style-type: none"> • The default code is *#9. • Do not enter "0000". 6. Press [SET]. 7. Press [MENU].
Setting the memory reception alert [#][4][3][7]	To alert you with a beeping sound when a received fax document is stored into memory due to some existing problem. The slow beeps will continue until you clear the printing problem and make sure the unit is supplied with enough paper to print the stored document. [0] "OFF": Deactivates this feature. [1] "ON" (default): You will be alerted to a reception problem by a beeping sound.
Setting friendly reception [#][4][3][8]	To receive a fax automatically when you answer a call and hear a fax calling tone (slow beep). [0] "OFF": You have to press [START] for fax reception. [1] "ON" (default): You do not have to press [START] for fax reception.
Setting the output tray to use for faxing [#][4][4][1] (KX-FLB811 only)	You can select the output tray that will be used for printing received faxes. [1] "#1": Upper output tray (Up to approx. 100 sheets). [2] "#2" (default): Lower output tray (Up to approx. 50 sheets). Note: <ul style="list-style-type: none"> • Lists or reports printed by pressing [HELP] (page 23) or [MENU] (page 89) will be stacked on the upper output tray.

8. Programmable Features

Feature/Code	Selection
Receiving a fax into the computer [✱][4][4][2]	If you wish to receive a fax into the computer, activate this feature and run [PC FAX] from Multi-Function Station. [0] "OFF" (default): Deactivates this feature. [1] "ALWAYS": If the unit recognizes the connection to the computer, it will transfer a received document to the computer. If the unit cannot recognize the connection, it will store a received document in the memory once, then transfer the data after recognition of the connection. [2] "CONNECTED": If the unit recognizes the connection to the computer, it will transfer a received document to the computer. If the unit cannot recognize the connection, it will print out the data.
Resetting fax features to their default settings [✱][4][5][9]	[0] "NO" (default) [1] "YES" To reset the fax features: 1. Press [MENU]. 2. Press [✱], then [4][5][9]. 3. Press [1] to select "YES". 4. Press [SET]. 5. Press [SET] again. 6. Press [MENU].

8.4 Copy features

Feature/Code	Selection
Changing the default copy resolution [#][4][6][1]	To change the default resolution setting for copying. [1] “TEXT/PHOTO” (default): For documents containing both text and photographs. [2] “TEXT”: For documents containing only text. [3] “PHOTO”: For documents containing photographs, shaded drawings, etc.
Saving the previous contrast setting [#][4][6][2]	[0] “OFF” (default): Deactivates this feature. [1] “ON”: The unit will save the previous contrast setting.
Setting the output tray to use for copying [#][4][6][6] (KX-FLB811 only)	You can select the output tray that will be used for copying. [1] “#1” (default): Upper output tray (Up to approx. 100 sheets). [2] “#2”: Lower output tray (Up to approx. 50 sheets).

9.1 Error messages – Reports

If a problem occurs during fax transmission or reception, one of the following messages will be printed on the confirmation and journal reports (page 29).

Message	Code	Cause & Solution
COMMUNICATION ERROR	40-42 46-72 FF	<ul style="list-style-type: none"> ● A transmission or reception error occurred. Try again or check with the other party.
	43 44	<ul style="list-style-type: none"> ● A line problem occurred. Connect the telephone line cord to a different jack and try again. ● An overseas transmission error occurred. Try using the overseas mode (feature #411 on page 61).
DOCUMENT JAMMED	----	<ul style="list-style-type: none"> ● The document is jammed. Remove the jammed document (page 83).
ERROR-NOT YOUR UNIT	53 54 59 70	<ul style="list-style-type: none"> ● A transmission or reception error occurred because of a problem with the other party's fax machine. Check with the other party.
JUNK FAX PROH. REJECT	----	<ul style="list-style-type: none"> ● The junk fax prohibitor feature of this unit rejected fax reception.
MEMORY FULL	----	<ul style="list-style-type: none"> ● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 18) or clear the jammed paper (page 79). ● If feature #442 is set to “ALWAYS” (page 64), check the connection between the computer and the unit.
NO DOCUMENT / FAILED PICKUP	----	<ul style="list-style-type: none"> ● The document was not fed into the unit properly. Re-insert it and try again.
OTHER FAX NOT RESPONDING	----	<ul style="list-style-type: none"> ● The other party's fax machine is busy or has run out of recording paper. Try again. ● The other party's fax machine rings too many times. Send the fax manually (page 28). ● The other party's machine is not a fax machine. Check with the other party. ● The number you dialed is not in service.
PRESSED THE STOP KEY	----	<ul style="list-style-type: none"> ● [STOP] was pressed and fax communication was canceled.
THE COVER WAS OPENED	----	<ul style="list-style-type: none"> ● The top cover was opened. Close it and try again.
OK	----	<ul style="list-style-type: none"> ● Fax transmission or reception was successful.

9.2 Error messages – Display

If the unit detects a problem, one or more of the following messages will appear on the display.

Display	Cause & Solution
“CALL SERVICE”	<ul style="list-style-type: none"> There is something wrong with the unit. Contact our service personnel.
“CARRIAGE ERROR”	<ul style="list-style-type: none"> There is something wrong with the carriage sensor. Contact our service personnel.
“CHANGE DRUM” “CHANGE SUPPLIES”	<ul style="list-style-type: none"> There is something wrong with the drum unit. Replace the drum unit and the toner cartridge (page 76).
“CHECK DOCUMENT”	<ul style="list-style-type: none"> The document was not fed into the unit properly. Re-insert the document. If misfeeding occurs frequently, clean the document feeder rollers (page 87) and try again.
“CHECK DRUM”	<ul style="list-style-type: none"> The drum unit is not inserted properly. Re-insert it correctly (page 13).
“CHECK MEMORY”	<ul style="list-style-type: none"> The memory (telephone numbers, parameters, etc.) has been erased. Re-program.
“CHECK PICK UP INPUT TRAY #1”	<ul style="list-style-type: none"> Recording paper was not fed into the unit properly. Re-insert the recording paper (page 82). <p>Note:</p> <ul style="list-style-type: none"> “#1”: Paper input tray “#2”: Manual input tray
“CLOSE ADF COVER”	<ul style="list-style-type: none"> The ADF cover is open. Close it.
“DIRECTORY FULL”	<ul style="list-style-type: none"> There is no space to store new items in navigator directory. Erase unnecessary items (page 32).
“DRUM LIFE LOW REPLACE SOON”	<ul style="list-style-type: none"> The drum life is near to an end. Replace the drum unit as soon as possible (page 76).
“FAX IN MEMORY”	<ul style="list-style-type: none"> The unit has a document in memory. See the other displayed message instructions to print out the document. For fax memory capacity, see page 90. If feature #442 is set to “ALWAYS” (page 64), check the connection between the computer and the unit.
“KEEP COPYING”	<ul style="list-style-type: none"> Copying has stopped due to a lack of recording paper or misfeeding of recording paper. See the other displayed message instructions to continue copying.
“LOW TEMP.”	<ul style="list-style-type: none"> The inside of the unit is extremely cold and cannot be operated. Use the unit in a warmer area. While the unit cannot be operated, the received documents are temporarily stored into the memory, and will be printed out automatically when the unit warms up.
“MEMORY FULL”	<ul style="list-style-type: none"> When performing memory transmission, the document being stored exceeded the memory capacity of the unit. Send the entire document manually. When making a copy, the document being stored exceeded the memory capacity of the unit. Press [STOP] to clear the message. Divide the document into sections.

Display	Cause & Solution
"MODEM ERROR"	<ul style="list-style-type: none"> There is something wrong with the unit's modem. Contact our service personnel.
"NO FAX REPLY"	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
"OUT OF PAPER INPUT TRAY #1"	<ul style="list-style-type: none"> Recording paper is not installed or the input tray has run out of paper. Install paper (page 18, 19). Recording paper is not fed into the unit properly. Reinstall paper (page 18, 19). The paper input tray is not installed or is not inserted completely. Insert the paper input tray into the unit. <p>Note:</p> <ul style="list-style-type: none"> "#1": Paper input tray "#2": Manual input tray
"PAPER JAMMED" "OPEN TOP COVER"	<ul style="list-style-type: none"> A recording paper jam occurred. Clear the jammed paper (page 79).
"PC FAIL OR BUSY"	<ul style="list-style-type: none"> The cable or the computer power cord is not connected correctly. Check the connections (page 48). The software is not running on the computer. Restart the software and try again.
"PLEASE WAIT"	<ul style="list-style-type: none"> The unit is warming up. Wait for a while.
"REDIAL TIME OUT"	<ul style="list-style-type: none"> The other party's fax machine is busy or has run out of recording paper. Try again.
"REMOVE DOCUMENT"	<ul style="list-style-type: none"> The document is jammed. Remove the jammed document (page 83). Attempted to send or copy a document longer than 600 mm (23⁵/₈") using the auto document feeder. Press [STOP] to remove the document. Divide the document into two or more sheets and try again.
"REMOVE PAPER IN INPUT TRAY #2"	<ul style="list-style-type: none"> The recording paper is installed in the manual input tray when trying to copy, receive faxes or print reports. Remove the recording paper from manual input tray.
"REPLACE DRUM" "CHANGE SUPPLIES"	<ul style="list-style-type: none"> The drum life is complete. Replace the drum unit immediately (page 76).
"RX MEMORY FULL"	<ul style="list-style-type: none"> The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 18) or clear the jammed paper (page 79). If feature #442 is set to "ALWAYS" (page 64), check the connection between the computer and the unit.
"TONER EMPTY" "CHANGE SUPPLIES"	<ul style="list-style-type: none"> The toner life is complete. Replace the toner cartridge immediately (page 76).
"TONER LOW" "CHANGE SUPPLIES"	<ul style="list-style-type: none"> The toner life is near to an end. Replace the toner cartridge as soon as possible (page 76).
"TOP COVER OPEN"	<ul style="list-style-type: none"> The top cover is open. Close it.
"TRANSMIT ERROR"	<ul style="list-style-type: none"> A transmission error occurred. Try again.
"WARMING UP"	<ul style="list-style-type: none"> The inside of the unit is cold. Let the unit warm up. Wait for a while.

Display	Cause & Solution
"WRONG PAPER"	<ul style="list-style-type: none">• The fax message was printed on paper which is shorter than letter size paper. Use the appropriate size paper (page 91).

9.3 When a function does not work, check here

9.3.1 Initial settings

Problem	Cause & Solution
I cannot hear a dial tone.	<ul style="list-style-type: none"> • The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 21). • If you use a splitter/coupler to connect the unit, remove the splitter/coupler and connect the unit to the wall jack directly. If the unit operates properly, check the splitter/coupler. • Disconnect the unit from the telephone line and connect a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone company. • The power cord or telephone line cord is not connected. Check the connections. • If you connected the unit through a computer modem, connect the unit directly to a telephone line jack.
I cannot make calls.	<ul style="list-style-type: none"> • The dialing mode setting may be wrong. Change the setting (feature #120 on page 22).
The unit does not ring.	<ul style="list-style-type: none"> • The ringer volume is turned OFF. Adjust it (page 23).

9.3.2 General

Problem	Cause & Solution
The other party complains they only hear a fax tone and cannot talk.	<ul style="list-style-type: none"> • FAX ONLY mode is set. Tell the other party the number is only used for faxes. • If you use a Distinctive Ring service, make sure you have set the same ring pattern assigned by the telephone company (page 42).
The [PAUSE] button does not function properly.	<ul style="list-style-type: none"> • If this button is pressed during dialing, a pause will be inserted. If pressed immediately after a dial tone is obtained, the last number dialed will be redialed.
The receiving mode does not function properly.	<ul style="list-style-type: none"> • Distinctive Ring is set (feature #430 on page 42).
The unit beeps.	<ul style="list-style-type: none"> • The memory reception alert of feature #437 is ON (page 63), and the unit has a document in memory. Press [STOP] to stop the beeps, then see the displayed message instructions to solve the problem.
Whenever I try to retrieve my voice mail messages, I am interrupted by the fax tone.	<ul style="list-style-type: none"> • You are probably entering [*] [#] [9]. This is the default setting for the fax activation code. If you use a voice mail service, turn the fax activation feature OFF or reprogram the activation code (feature #434 on page 63).
The output tray becomes full quickly or the recording paper does not stack properly on the output tray.	<ul style="list-style-type: none"> • High humidity may cause the recording paper to curl. Try turning the paper over and re-inserting it. If the curl on the paper is heavy, please remove it from the output tray. If you still have this problem, contact our service personnel.

Problem	Cause & Solution
I cannot operate the help function, adjust volumes or program the features.	<ul style="list-style-type: none"> The unit is set to the scan mode. Press [COPY] or [FAX] to switch to the copy mode or fax mode. If you still have this problem, contact our service personnel.

9.3.3 Fax – sending

Problem	Cause & Solution
I cannot send documents.	<ul style="list-style-type: none"> The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 21). The other party's fax machine is busy or has run out of recording paper. Try again. The other party's machine is not a fax machine. Check with the other party. The other party's fax machine failed to answer the fax automatically. Send the fax manually (page 28).
I cannot send a fax overseas.	<ul style="list-style-type: none"> Use the overseas transmission mode (feature #411 on page 61). Add two pauses at the end of the telephone number or dial manually.
The other party complains that letters on their received document are distorted.	<ul style="list-style-type: none"> If your line has special telephone services such as call waiting, the service may have been activated during fax transmission. Connect the unit to a line that does not have these services. Another telephone on the same line is off the hook. Hang up the extension telephone and try again.
The other party complains that letters on their received document are not clear.	<ul style="list-style-type: none"> Try copying the document. If the copied image is clear, there may be something wrong with the other party's machine. The original document is too dark or too light. Change the contrast setting by pressing [CONTRAST], then [▼] or [▲], and try again.
The other party complains that black lines, white lines or smudges appear on their received document.	<ul style="list-style-type: none"> The glass or rollers are dirty with correction fluid, etc. Clean them (page 84, 87). Please do not insert a document before correction fluid has dried completely.

9.3.4 Fax – receiving

Problem	Cause & Solution
I cannot receive documents.	<ul style="list-style-type: none"> You may have subscribed to a voice mail service due to service packs offered by your telephone company. Fax reception may not be possible when voice mail is activated so we recommend you to: <ul style="list-style-type: none"> contact your telephone company and request to deactivate voice mail service, or subscribe to a Distinctive Ring service (page 42). The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 21).

Problem	Cause & Solution
<p>I cannot receive documents automatically.</p>	<ul style="list-style-type: none"> ● The receiving mode is set to TEL mode. Set to FAX ONLY mode by pressing [FAX AUTO ANSWER]. ● The time taken to answer the call is too long. Decrease the number of rings before the unit answers a call (feature #210 on page 60). ● Make sure that the Distinctive Ring of feature #430 is set properly (page 42). If you do not subscribe to the Distinctive Ring service offered by your local telephone company, this feature should be OFF.
<p>The display shows “CONNECTING . . .”, but faxes are not received.</p>	<ul style="list-style-type: none"> ● The incoming call is not a fax. Change the receiving mode to TEL mode by pressing [FAX AUTO ANSWER].
<p>A blank sheet is ejected.</p>	<ul style="list-style-type: none"> ● The other party placed the document in their fax machine the wrong way. Check with the other party.
<p>The printing quality is poor.</p>	<ul style="list-style-type: none"> ● If documents can be copied properly, the unit is working normally. The other party may have sent a faint document or there may be something wrong with the other party’s machine. Ask them to send a clearer copy of the document or to check their fax machine. ● Some paper has instructions recommending which side to print on. Try turning the paper over. ● You may have used paper with a cotton and/or fiber content that is over 20%, such as letterhead or resume paper. ● The remaining toner is low. Replace the toner cartridge (page 76). ● To check the drum life and quality, please print the printer test list (page 89). If printing quality is still poor, replace the toner cartridge and drum unit. ● The toner save mode is ON (feature #482 on page 60). ● The glass or rollers are dirty with correction fluid, etc. Clean them (page 84, 87). Please do not insert a document before correction fluid has dried completely.
<p>The other party complains that they cannot send a document.</p>	<ul style="list-style-type: none"> ● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 18) or clear the jammed paper (page 79). ● If feature #442 is set to “ALWAYS” (page 64), check the connection between the computer and the unit. ● The unit is not in FAX ONLY mode. Press [FAX AUTO ANSWER] repeatedly to turn ON the [FAX AUTO ANSWER] indicator.
<p>I cannot select the desired receiving mode.</p>	<ul style="list-style-type: none"> ● If you want to set FAX ONLY mode: <ul style="list-style-type: none"> – press [FAX AUTO ANSWER] repeatedly to turn ON the [FAX AUTO ANSWER] indicator. ● If you want to set TEL mode: <ul style="list-style-type: none"> – press [FAX AUTO ANSWER] repeatedly to turn OFF the [FAX AUTO ANSWER] indicator. ● The Distinctive Ring of feature #430 is activated (page 42).
<p>I cannot receive documents even though paper is installed.</p>	<ul style="list-style-type: none"> ● Feature #442 is activated and the received fax documents are automatically transferred to the computer. View the received documents using the computer (page 56). ● Recording paper is installed in the manual input tray. Remove the recording paper from the manual input tray.

Problem	Cause & Solution
When an extension telephone is connected, I cannot receive documents by pressing [*][#][9].	<ul style="list-style-type: none"> You must set remote fax activation to ON (feature #434 on page 63) beforehand. Press [*][#][9] firmly. You may have changed the remote fax activation code from [*][#][9] (default setting). Verify the remote fax activation code (feature #434 on page 63). The memory is full of received documents due to a lack of recording paper or a recording paper jam. Install paper (page 18) or clear the jammed paper (page 79). If feature #442 is set to "ALWAYS" (page 64), check the connection between the computer and the unit.

9.3.5 Copying

Problem	Cause & Solution				
The unit will not make a copy.	<ul style="list-style-type: none"> You cannot make a copy during programming. Make the copy after programming. The document was not fed into the unit properly. Re-insert the document. Recording paper is not installed or the unit has run out of paper. Install paper (page 18). Recording paper is installed in the manual input tray. Remove the recording paper from the manual input tray. 				
A black line, a white line or smudge appears on the copied document.	<ul style="list-style-type: none"> The glass or rollers are dirty with correction fluid, etc. Clean them (page 84, 87). Please do not insert a document before correction fluid has dried completely. 				
The printing quality is poor.	<table style="width: 100%; border: none;"> <tr> <td style="text-align: center; width: 50%;">Original</td> <td style="text-align: center; width: 50%;">Copy</td> </tr> <tr> <td style="text-align: center;">  </td> <td style="text-align: center;">  </td> </tr> </table> <ul style="list-style-type: none"> Some paper has instructions recommending which side to print on. Try turning the paper over. You may have used paper with a cotton and/or fiber content that is over 20%, such as letterhead or resume paper. The remaining toner is low. Replace the toner cartridge (page 76). To check the drum life and quality, please print the printer test list (page 89). If printing quality is still poor, replace the toner cartridge and drum unit. The toner save mode of feature #482 is ON (page 60). 	Original	Copy		
Original	Copy				
					

9.3.6 Using an answering machine

Problem	Cause & Solution
I cannot receive documents automatically.	<ul style="list-style-type: none"> Your greeting message on the answering machine is too long. Shorten the message. Record a message up to 10 seconds long. The answering machine rings too many times. Set to 1 or 2 rings.
I cannot receive voice messages.	<ul style="list-style-type: none"> Check if the answering machine is turned ON and connected to the unit properly (page 37). Set the number of rings on the answering machine to 1 or 2.

Problem	Cause & Solution
I pressed the remote access code to access the answering machine remotely, but the line was disconnected.	<ul style="list-style-type: none"> The code may include “#” which is used for certain features provided by telephone companies. Change the code on the answering machine to another number which does not include “#”.
Callers complain that they cannot send a document.	<ul style="list-style-type: none"> There is no room left in memory of your answering machine to record voice messages. See the operating instructions of the answering machine and erase unnecessary messages. You set the answering machine to only give a greeting message.

9.3.7 Multi-Function Station

Problem	Cause & Solution
I cannot recognize the last part of an item in the list of the [One Touch], [Directory], [Journal] or [Caller ID] when using Remote Control.	<ul style="list-style-type: none"> Put the cursor on the line between the buttons. The cursor changes shape and you can expand the area by dragging or double-clicking.
I cannot scan.	<ul style="list-style-type: none"> When scanning at a high resolution, a large amount of available memory is required. If your computer warns of insufficient memory, close other applications and try again. The unit is in use. Try again later. There is not enough space on the hard disk. Delete unnecessary files and try again. Restart the computer, and try again. Check the connection between the computer and the unit (page 48). You attempted to scan a document longer than the paper size which you set. Change the setting or divide the document into the appropriate paper size, and try again. If you use the Fast User Switching feature in Windows XP, make sure no other users are logged in to your computer.
The document is not fed into the unit when using the unit as a scanner.	<ul style="list-style-type: none"> Remove the document in the auto document feeder and re-insert it.
Even after clicking [Cancel], scanning continues.	<ul style="list-style-type: none"> Please wait. It may take a while for the cancel request to be accepted.
I cannot find the unit as the target device from the list when using PC FAX and Remote Control.	<ul style="list-style-type: none"> The unit will be displayed after the printer driver has been installed.
A printing error occurred while using PC FAX and Remote Control.	<ul style="list-style-type: none"> The printer driver is used for PC FAX and Remote Control. The transmission error will be displayed as the printing error.

Problem	Cause & Solution
Multi-Function Station does not work properly.	<ul style="list-style-type: none"> ● If you connect the USB cable to USB hub, connect it to the USB port of your computer directly. ● Make sure you have installed the latest Service Pack available for the version of Windows installed on your computer. See the Microsoft web site for details. ● Confirm the BIOS setting of your computer, and select USB port mode. Please refer to your computer's operating instructions or consult the manufacturer. ● If you have any other multifunction softwares installed on your computer, uninstall them. ● If you use the Fast User Switching feature in Windows XP, make sure no other users are logged in to your computer. ● Check that your computer has enough memory and hard disk space. If your computer warns of insufficient memory, close other applications. If there is not enough space on the hard disk, delete unnecessary files.
The fax sending from the computer has been completed, but the other party cannot receive the document.	<ul style="list-style-type: none"> ● The transmission error may be occurred in the unit. Check the confirmation report in the journal from Remote Control.
Colored text is printed in black instead of grayscale when printing from Microsoft PowerPoint or other applications.	<ul style="list-style-type: none"> ● Select [Color] or remove the check next to [Grayscale] in the print dialog so that colored text will be printed in grayscale.
I cannot install or uninstall Multi-Function Station.	<ul style="list-style-type: none"> ● Some of the files needed to install or uninstall Multi-Function Station may be corrupted. Use the MfsCleaner utility (found on the included CD-ROM) to solve the problem. <ol style="list-style-type: none"> 1. Insert the included CD-ROM into your CD-ROM drive. <ul style="list-style-type: none"> ● The setup program will start automatically. 2. Click [Cancel], then click [Yes] to quit the setup. 3. Open the folder "D:\Tools\Uninstall" (Where "D:" is the drive letter of your CD-ROM drive). 4. Double-click the [MfsCleaner] icon. <ul style="list-style-type: none"> ● The [MfsCleaner for KX-FLB800/FLM650 Series] window will appear. 5. Click [Clean], then click [Yes] to restart the computer. <p>Note:</p> <ul style="list-style-type: none"> ● To install Multi-Function Station again, see page 48.

9.3.8 If a power failure occurs

- The unit will not function.
- The unit is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.
- Fax transmission and reception will be interrupted.
- Any sending documents stored in the memory or any documents during reception will be lost. When power is restored, a power down report will be printed out stating which contents in the memory have been erased.

9.4 Replacing the toner cartridge and the drum unit

When the display shows the following, replace the toner cartridge.

TONER LOW

TONER EMPTY

To check the drum life and quality, please print the printer test list (page 89) and refer to page 92 for information on the drum life. If printing quality is still poor or “**REPLACE DRUM**” appears on the display, replace the toner cartridge and drum unit. To ensure that the unit operates properly, we recommend the use of **Panasonic toner cartridge (Model No. KX-FA87/KX-FA85) and drum unit (Model No. KX-FA86)**. See page 10 for accessory information.

To maintain print quality and machine life, we recommend you to clean slots and openings (page 5) and the inside of the unit (page 84, 87) when replacing the toner cartridge and/or drum unit.

Caution:

- We cannot be responsible for any damage to the unit or degradation of print quality which may occur from the use of a non-Panasonic toner cartridge and drum unit.
- The drum unit contains a photosensitive drum. Exposing it to light may damage the drum.


Once you have opened the protection bag:

- Do not expose the drum unit to light for more than 5 minutes.
- Do not touch or scratch the black drum surface.
- Do not place the drum unit near dust or dirt, or in a high humidity area.
- Do not expose the drum unit to direct sunlight.
- Do not disconnect the power cord. Loss of fax documents in memory may occur.
- Do not leave the toner cartridge out of the protection bag for a long time. It will decrease the toner life.
- Do not add toner to the toner cartridge.

- 1 Before opening the protection bag of the new toner cartridge, shake it vertically more than 5 times.




- 2 Remove the new toner cartridge from the protection bag.

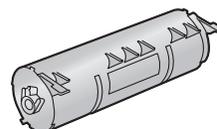

- 3 Lift the top cover release lever (1) and open the top cover (2).

Important:

- Close the manual input tray (3) before opening the top cover.

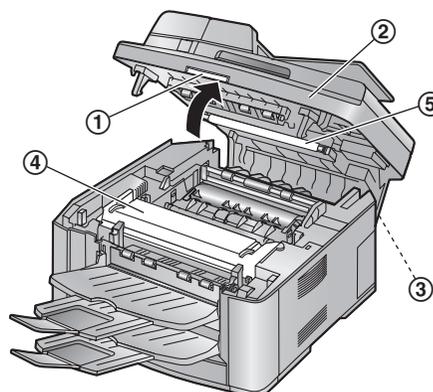


Caution:

The fuser unit (4) gets hot. Do not touch it.

Note:


- Do not touch the transfer roller (5).

- 4** Remove the drum and toner unit (①) by holding the tabs.

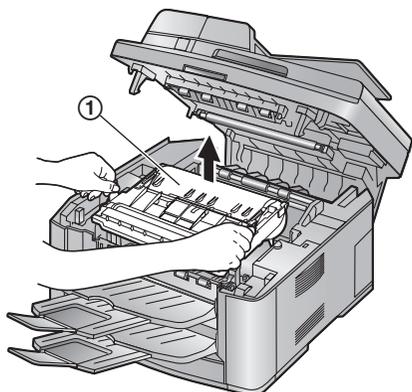


- If you replace the toner cartridge and the drum unit at the same time, skip to step 7.

- 5** Turn the two green levers (①) on the used toner cartridge firmly.

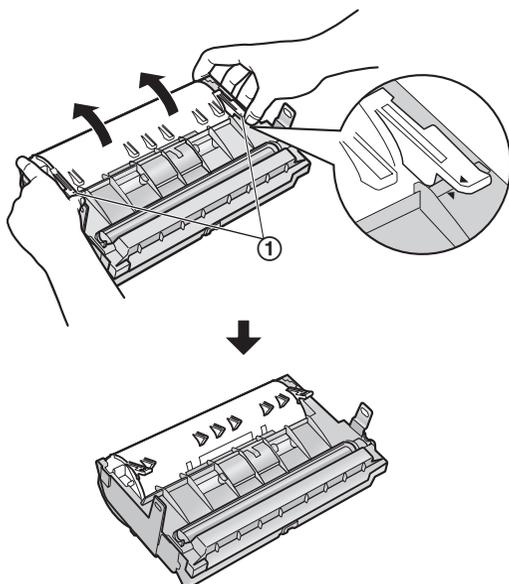


- 6** Remove the used cartridge (①) from the drum unit (②).

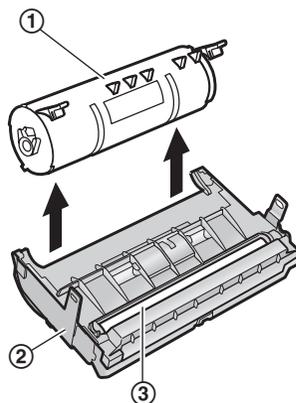


- The toner may stick to the cartridge and the drum unit. Be careful when handling. See page 4 for details.
- Do not drop the toner on the black drum surface (③).
- Put the used toner cartridge into the protection bag.

- 7** If you replace the drum unit at the same time, remove the new drum unit from the protection bag.

Place the new toner cartridge (①) into the drum unit (②).

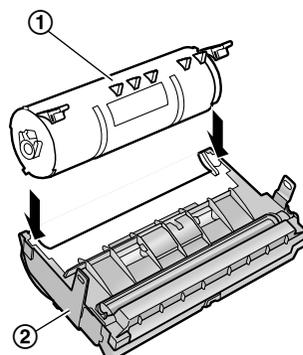


- 8** Firmly press down the toner cartridge to snap into position.

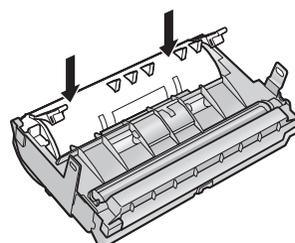


9. Help


- 9 Turn the two green levers (①) on the toner cartridge firmly.

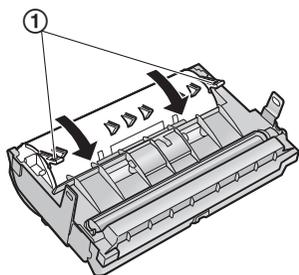


- 10 Make sure that the triangles (①) match to install the toner cartridge correctly.

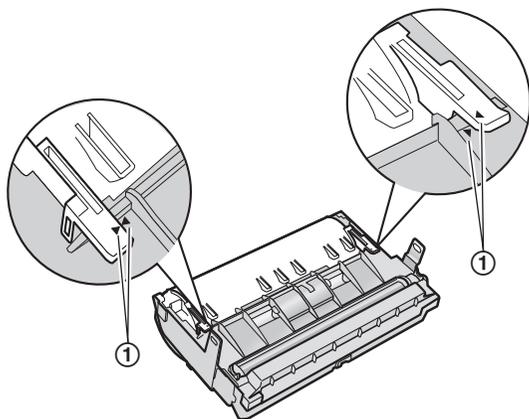


- If the lower glass (②) is dirty, clean it with a soft and dry cloth.

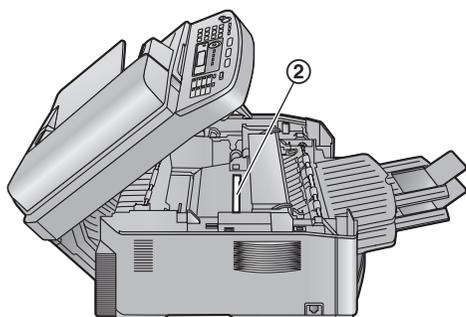


- 11 Install the drum and toner unit (①) by holding the tabs.

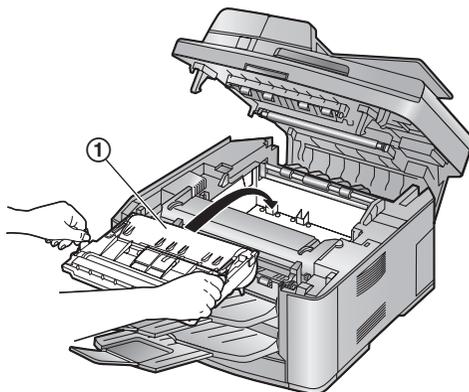

- Make sure that the triangles (②) match to install the drum and toner unit correctly.

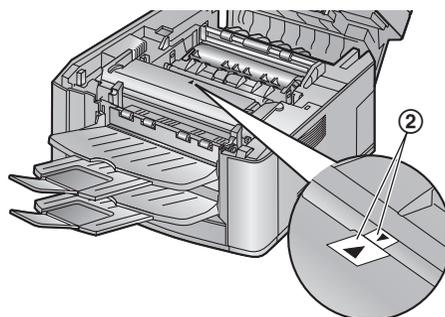

- 12 Close the top cover until locked.

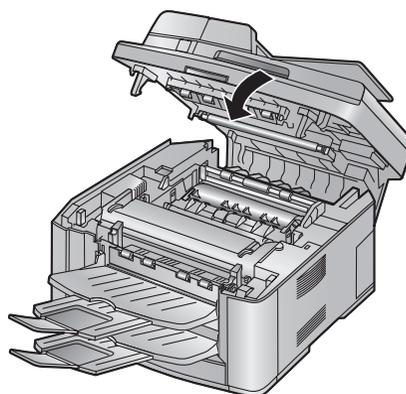

Caution:

- To prevent injuries, be careful not to put your hands under the top cover.

Note:


- While the unit displays “PLEASE WAIT”, do not open the top cover, or disconnect the power cord.

Waste disposal method


Waste material should be disposed of under conditions which meet all national and local environmental regulations.

9.5 Recording paper jam**9.5.1 When the recording paper has jammed inside of the unit**

The display will show the following.

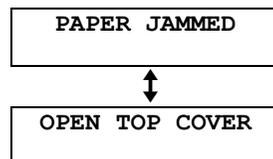**Caution:**


- Do not pull out the jammed paper forcibly before opening the top cover.

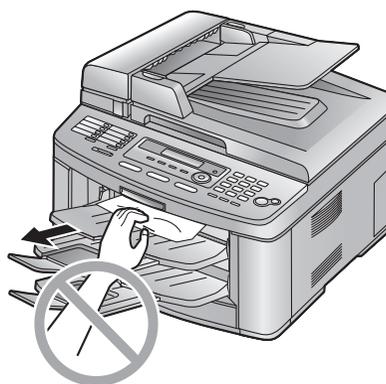

- 1 Lift the top cover release lever (①) and open the top cover (②).

Important:

- Close the manual input tray (③) before opening the top cover.

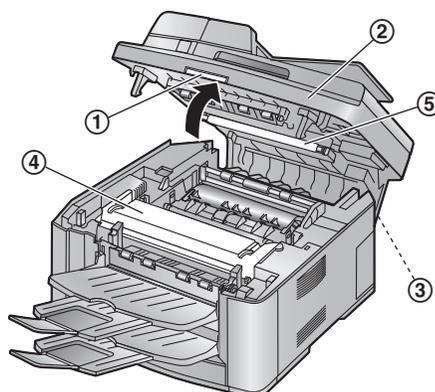**Caution:**

The fuser unit (④) gets hot. Do not touch it.

Note:


- Do not touch the transfer roller (⑤).

2 Remove the jammed paper.


Case 1:

When the recording paper has jammed near the drum and toner unit:

1. Pull the paper input tray completely out.
2. Remove the jammed paper (①) carefully by pulling it upwards.

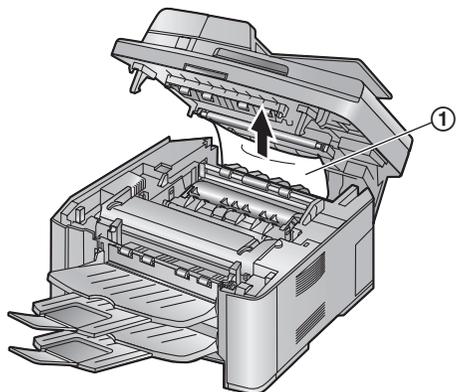

Remove the jammed paper (①) carefully by pulling it toward you.

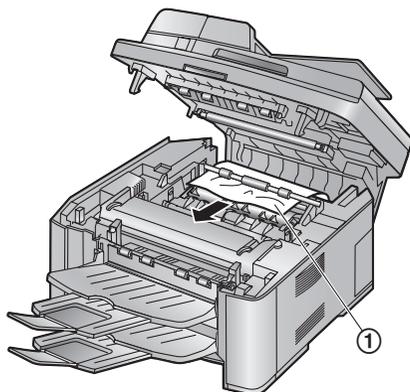


3. Insert the paper input tray into the unit.


Case 2:

When the recording paper has jammed near the fuser unit:


1. Lift both green levers (①) until they stop.

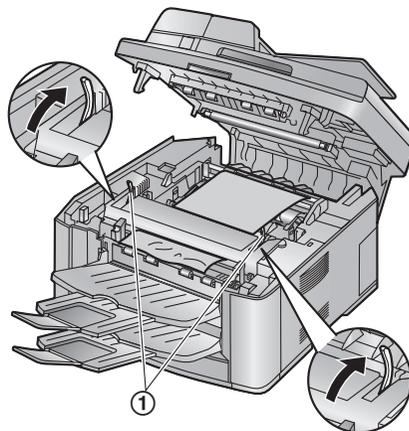

2. Remove the jammed paper (①) carefully by pulling it upwards.

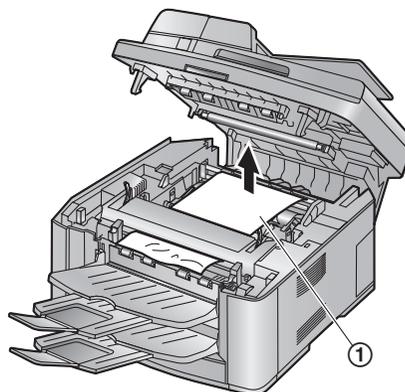


3. Push back the green levers (①) to the original position.

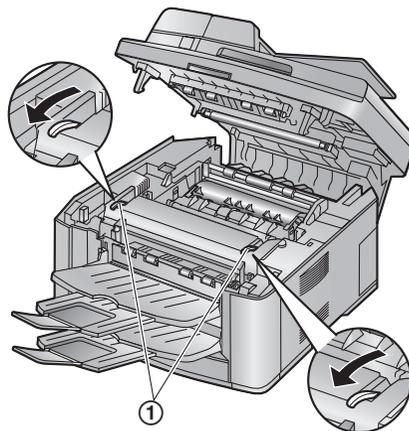


Case 3:

When the recording paper has jammed near the output tray (KX-FLB811 only):


1. Pull and hold the lever (①) to release the jammed paper.

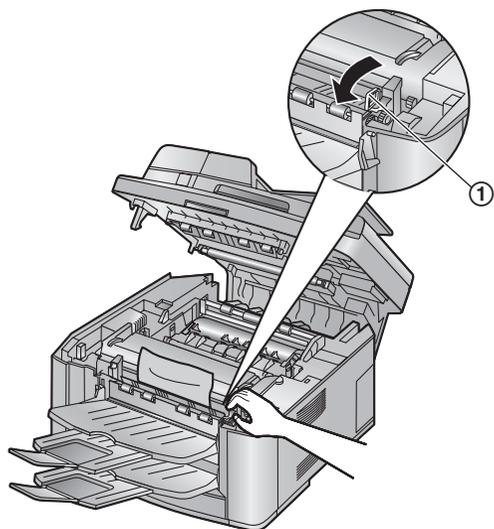


2. Remove the jammed paper (①) carefully by pulling it upwards.

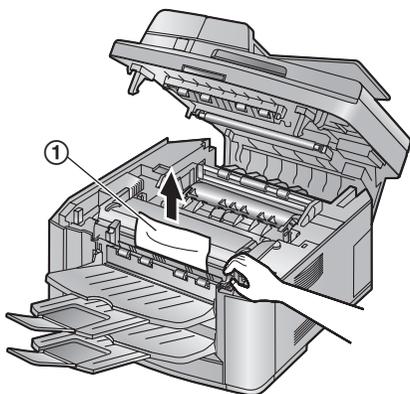

3. Close the top cover until locked.

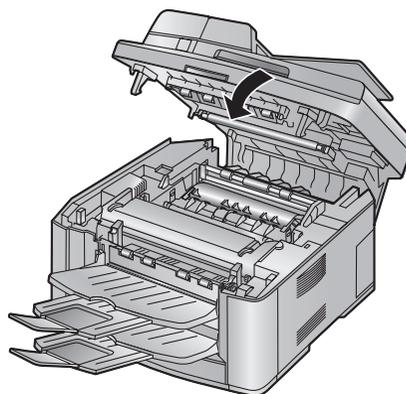**Caution:**

- To prevent injuries, be careful not to put your hands under the top cover.

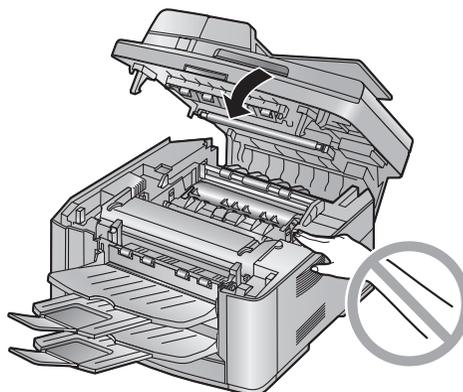


9.5.2 When the recording paper is not fed into the unit properly

The display will show the following.

CHECK PICK UP
INPUT TRAY #1

- 1 Pull the paper input tray completely out, then remove the recording paper and straighten.
- 2 Re-load the recording paper.

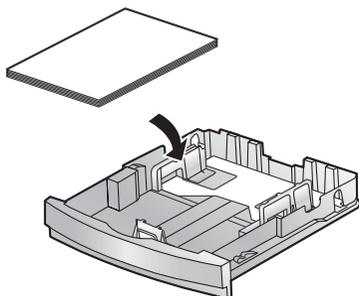

- 3 Insert the paper input tray into the unit.

Note:


- If the error message is still displayed, check the recording paper specifications and re-install recording paper. See page 18 for details.

9.5.3 When the recording paper in the manual input tray is not fed into the unit properly

The display will show the following.

CHECK PICK UP
INPUT TRAY #2

- 1 Remove the recording paper.
- 2 Re-insert the recording paper.

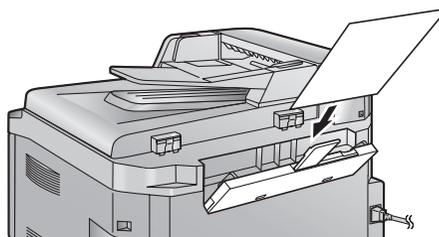


Note:

- If the error message is still displayed, check the recording paper specifications and re-install recording paper. See page 19 for details.


9.6 Document jams (Auto document feeder)

Caution:

- Do not pull out the jammed document forcibly before lifting the ADF cover.

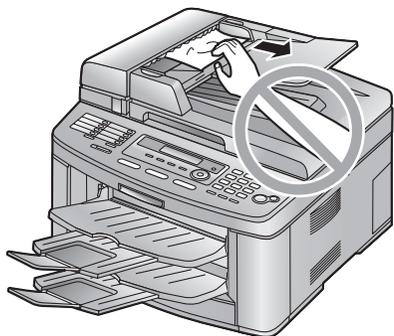


- Hold the ADF cover firmly and lift it to open the upper part (①) of the ADF cover.

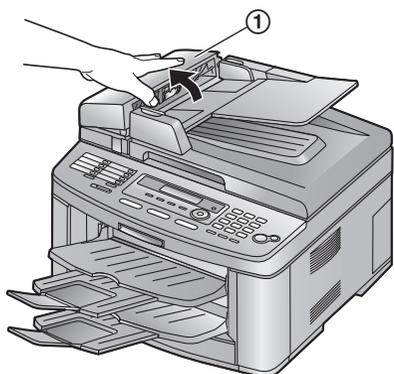


- When the document has jammed near the document entrance:

Remove the jammed document (①) carefully.

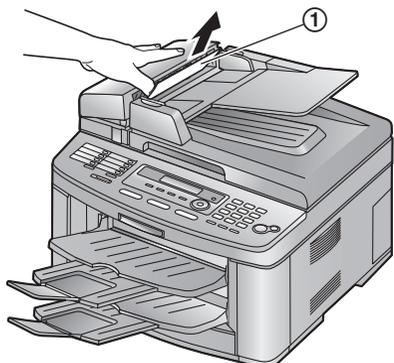


When the document has jammed near the document exit:

Press the ADF cover release button (①) and open the middle part (②) of the ADF cover. Remove the jammed document (③) carefully.

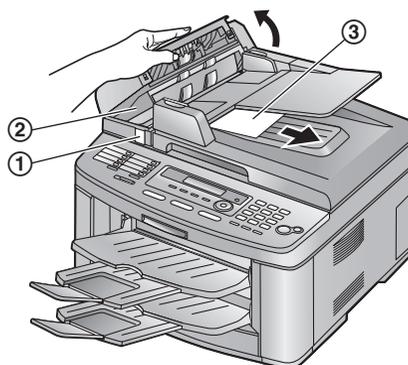

- Close the ADF cover.

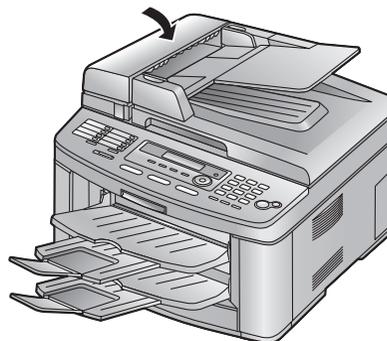

9.7 Cleaning the white plate and glasses

Clean the white plate and glasses when a black line, a white line or a dirty pattern appears on:


- your recording paper,
- the original document,
- the data scanned by the computer, or
- the fax document received by the other party.

Caution:


- Be careful when handling the drum and toner unit. See the caution for the drum unit on page 76 for details.
- Do not use paper products, such as paper towels or tissues, to clean the inside of the unit.

9.7.1 White plate and scanner glasses


- 1 Disconnect the power cord.
- 2 Open the document cover (①).

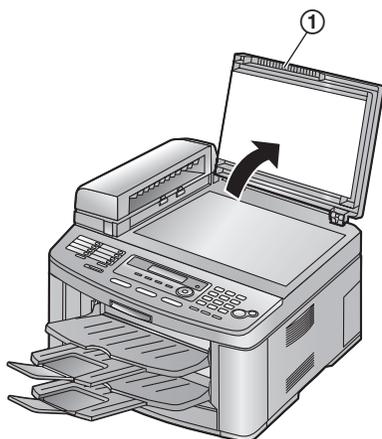


- 3 Press the ADF cover release button (①) and open the middle part (②) of the ADF cover.

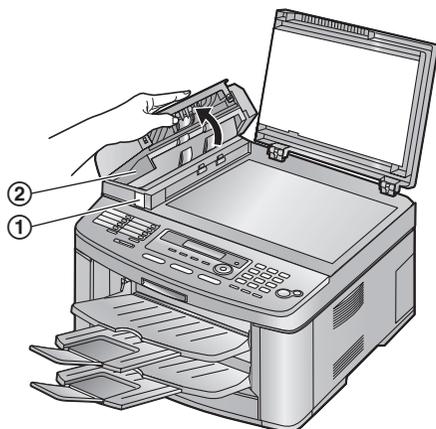


- 4 Clean the scanner glass (①) and the white cover sheet (②) and its circumference (③) with a soft and dry cloth.
 - Clean the white cover sheet carefully to avoid damaging it.

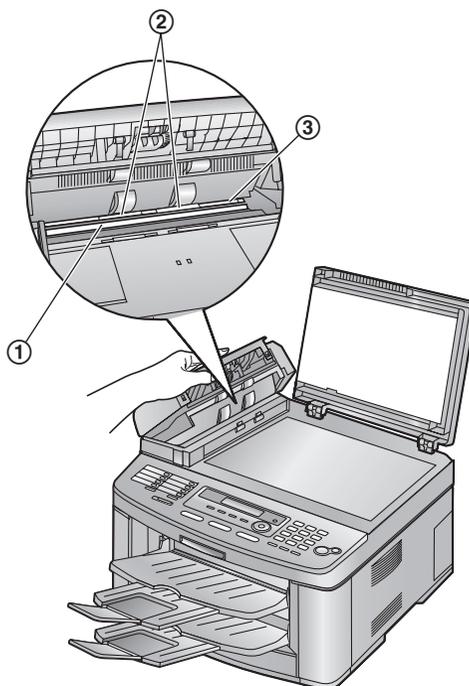

- 5 Close the ADF cover (①), then hold the document cover (②) while cleaning the white plate (③) and the scanner glass (④).

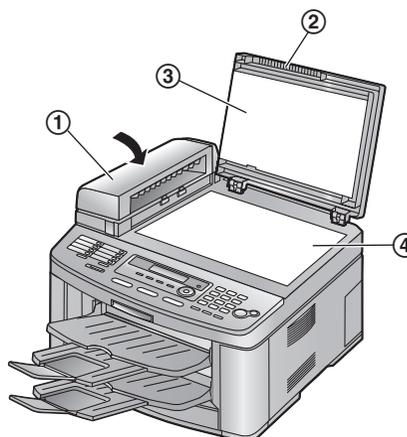


- 6 Close the document cover (①).

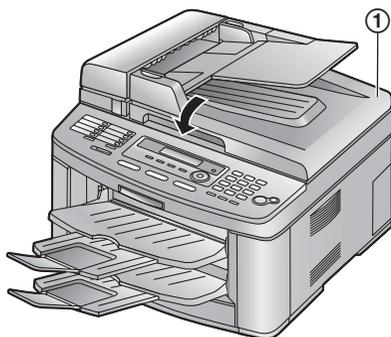


- 7 Re-connect the power cord.

If the document cover comes off from the unit


1. Attach the hinges (①) to the document cover (②).
- Make sure that the inserted direction is correct. Otherwise, the hinges cannot be inserted into the slots in step 3.

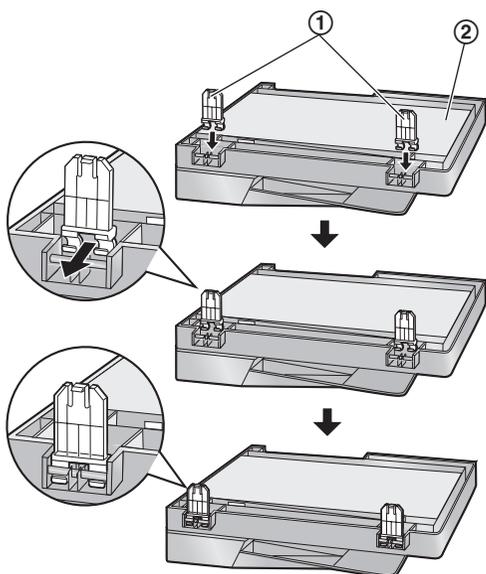

2. Lay down the hinges (①).

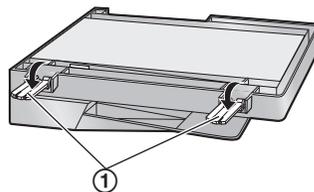

3. Insert the hinges (①) into the slots (②) on the unit.

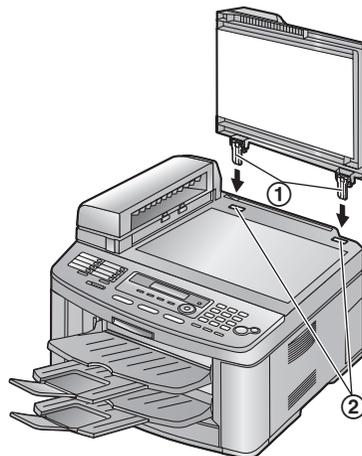


4. Close the document cover.

9.7.2 Lower glass

- 1 Disconnect the power cord.
- 2 Lift the top cover release lever (①) and open the top cover (②).

Important:

- Close the manual input tray (③) before opening the top cover.

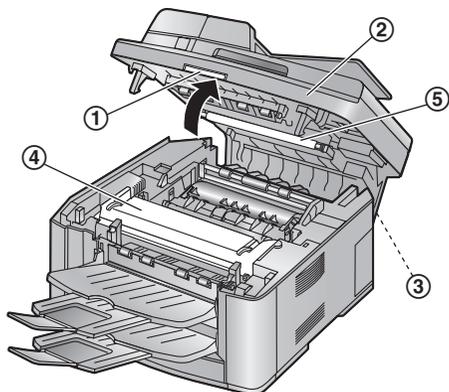


Caution:
The fuser unit (④) gets hot. Do not touch it.


Note:

- Do not touch the transfer roller (⑤).


- 3 Remove the drum and toner unit (①) by holding the tabs.

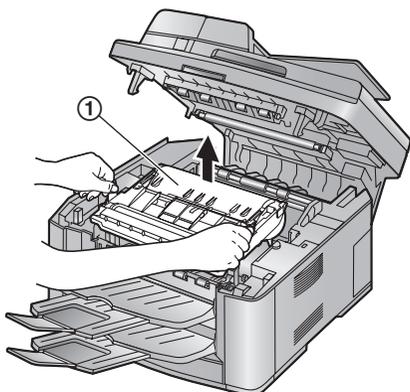


- 4 Clean the lower glass (①) with a soft and dry cloth.

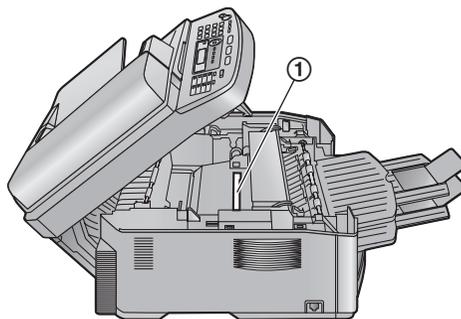


- 5 Reinstall the drum and toner unit (①) by holding the tabs.

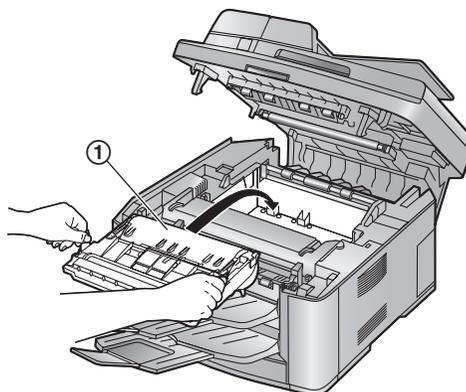

- Make sure that the triangles (②) match to install the drum and toner unit correctly.

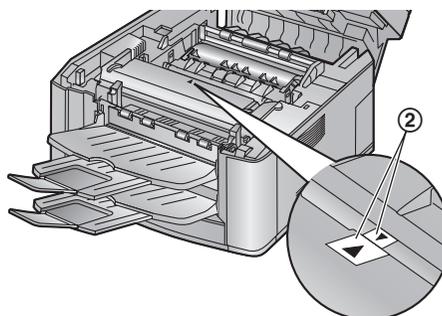

- 6 Close the top cover until locked.

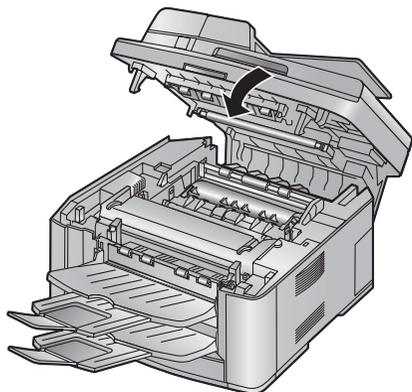

Caution:


- To prevent injuries, be careful not to put your hands under the top cover.

- 7 Re-connect the power cord.


9.8 Cleaning the document feeder rollers

Clean the rollers when the document or recording paper frequently misfeeds.

- 1 Disconnect the power cord.
- 2 Hold the ADF cover firmly and lift it to open the upper part (①) of the ADF cover.

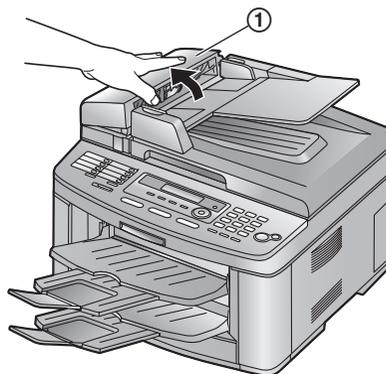


- 3 Press the ADF cover release button (①) and open the middle part (②) of the ADF cover.

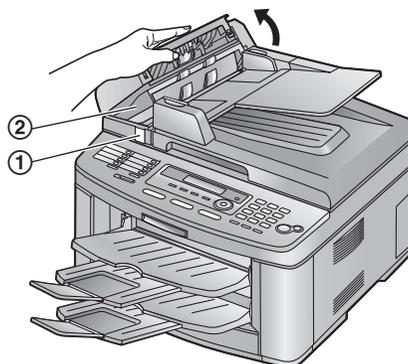


9. Help

- 4 Clean the document feeder rollers (①) with a cloth moistened with isopropyl rubbing alcohol, and let all parts dry thoroughly.
- Clean the rollers in the direction of the arrow to avoid the discharge brush (②) from being pulled.

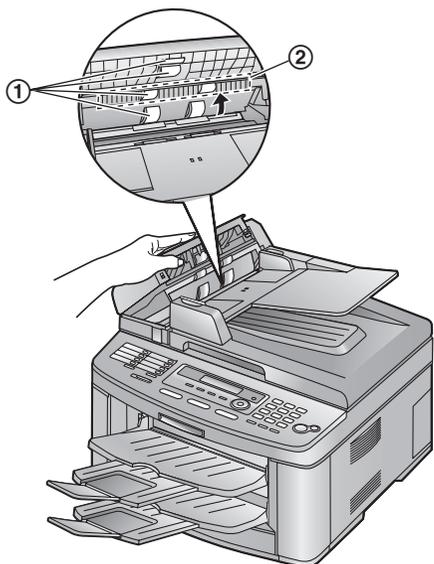

- 5 Close the ADF cover.

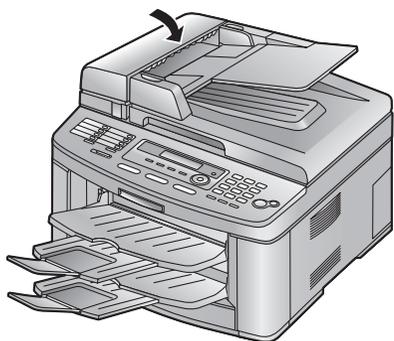


- 6 Re-connect the power cord.

10.1 Reference lists and reports

You can print out the following lists and reports for your reference.

- **“SETUP LIST”**:
Provides you with the current settings of the programming features (page 59 to page 65).
- **“TEL NO. LIST”**:
Provides you with names and numbers which are stored in the one-touch dial feature and navigator directory.
- **“JOURNAL REPORT”**:
Keeps records of fax transmission and reception. This report can be printed automatically after every 30 fax communications (feature #402 on page 61).
- **“BROADCAST LIST”**:
Provides you with names and numbers which are stored in the broadcast memory (page 34).
- **“PRINTER TEST”**:
Allows you to check the print quality of your unit. If the test print has a dirty pattern, or blurred points or lines, clean the inside of the unit (page 84, 87). If printing quality is still poor, replace the toner cartridge and drum unit.
- **“CALLER ID LIST”**:
Keeps a record of the last 30 different callers after subscribing to a Caller ID service. To print automatically after every 30 new calls, activate feature #216 (page 60).

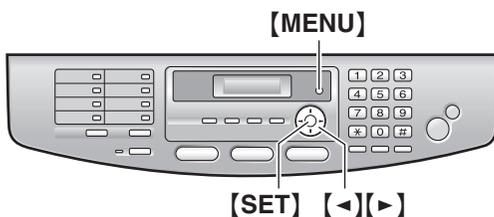

- 1 Press **[MENU]** repeatedly to display “**PRINT REPORT**”.
- 2 Press **[◀]** or **[▶]** repeatedly to display the desired item.
- 3 Press **[SET]** to start printing.
- 4 Press **[MENU]**.

10.2 Specifications

■ Applicable lines:

Public Switched Telephone Network

■ Document size:

Max. 216 mm (8¹/₂") in width, Max. 600 mm (23⁵/₈") in length

■ Effective scanning width:

208 mm (8³/₁₆")

■ Effective printing width:

Letter/Legal: 208 mm (8³/₁₆")
A4: 202 mm (7¹⁵/₁₆")

■ Transmission time*1:

Approx. 4 s/page (ECM-MMR Memory transmission)*2

■ Scanning density:

Fax resolution:

Horizontal: 8 pels/mm (203 pels/inch)
Vertical: 3.85 lines/mm (98 lines/inch)-in standard resolution,
7.7 lines/mm (196 lines/inch)-in fine/photo resolution,
15.4 lines/mm (392 lines/inch)-in super fine resolution

Copy resolution:

Up to 600 × 600 dpi

Scanning resolution:

Up to 600 × 1,200 dpi (Optical)
Up to 9,600 × 9,600 dpi (Interpolated)

■ Photo resolution:

64-level

■ Scanner type:

Color Contact Image Sensor

■ Printer type:

Laser Printer

■ Data compression system:

Modified Huffman (MH), Modified READ (MR),
Modified Modified READ (MMR)

■ Modem speed:

33,600 / 31,200 / 28,800 / 26,400 / 24,000 /
21,600 / 19,200 / 16,800 / 14,400 / 12,000 /
9,600 / 7,200 / 4,800 / 2,400 bps; Automatic
Fallback

■ Operating environment:

10 °C – 32.5 °C (50 °F – 90.5 °F), 20 % – 80 %
RH (Relative Humidity)

■ Dimensions:

Approx. height 318 mm × width 440 mm × depth
445 mm (12¹/₂" × 17⁵/₁₆" × 17¹/₂")

■ Mass (Weight):

Approx. 16 kg (35.3 lb.)

■ Power consumption:

Standby: Approx. 8.5 W
Preheat: Approx. 70 W
Copy: Approx. 430 W
Maximum: Approx. 900 W (When the fuser lamp
turns on)

■ Power supply:

120 V AC, 60 Hz

■ Fax memory capacity:

2 MB in total
Approx. 170 pages of memory reception
Approx. 150 pages of memory transmission
(Based on the ITU-T No. 1 Test Chart in standard
resolution.)

■ Laser diode properties:

Laser output: Max. 5 mW
Wave length: 760 nm – 800 nm
Emission duration: Continuous

■ Print speed:


Approx. 18 ppm (pages per minute)

■ Printing resolution:

600 × 600 dpi

- *1 Transmission speed depends upon the contents of the pages, resolution, telephone line conditions and capability of the other party's machine.
- *2 Transmission speed is based upon the ITU-T No. 1 Test Chart. If the capability of the other party's machine is inferior to your unit, the transmission time may be longer.

ITU-T No.1 Test Chart

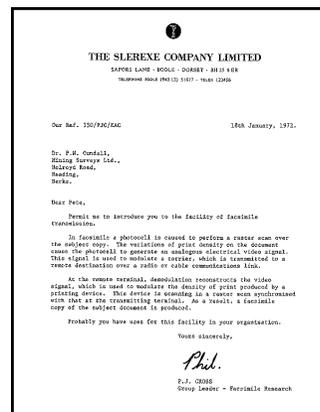

Note:

- Design and specifications are subject to change without notice.
- The pictures and illustrations in these instructions may vary slightly from the actual product.

Recording paper specifications

Recording paper / Transparency / Label size:

Letter: 216 mm × 279 mm (8¹/₂" × 11")
 Legal: 216mm × 356 mm (8¹/₂" × 14")
 A4: 210 mm × 297 mm (8¹/₄" × 11¹¹/₁₆")

Envelope size:

#10: 105 mm × 241 mm (4¹/₈" × 9¹/₂")
 DL: 110 mm × 220 mm (4⁵/₁₆" × 8⁵/₈")

Recording paper weight:

60 g/m² to 90 g/m² (16 lb. to 24 lb.)

Note for recording paper:

- We recommend that you test paper (especially special sizes and types of paper) on the unit before purchasing large quantities.
- Do not use the following types of paper:
 - Paper with a cotton and/or fiber content that is over 20 %, such as letterhead paper or paper used for resumes
 - Extremely smooth or shiny paper, or paper that is highly textured
 - Coated, damaged or wrinkled paper
 - Paper with foreign objects attached, such as tabs or staples
 - Paper which has dust, lint or oil stains
 - Paper that will melt, vaporize, discolor, scorch or emit dangerous fumes near 200 °C (392 °F), such as vellum paper. These materials may transfer onto the fusing roller and cause damage.
 - Moist paper
 - Inkjet paper
- Some paper only accepts print on one side. Try using the other side of the paper if you are not happy with the print quality or if misfeeding occurs.
- For proper paper feeding and best print quality, we recommend using long-grained paper.
- Do not use paper of different types or thickness at the same time. This may cause a paper jam.
- Avoid double-sided printing.
- Do not use paper printed from this unit for double-sided printing with other copiers or printers. This may cause a paper jam.
- To avoid curling, do not open paper packs until you are ready to use the paper. Store unused paper in the original packaging, in a cool and dry location.

Toner life

Toner life depends on the amount of content in a received, copied or printed document. The following is the approximate relationship between image area and toner life for replacement toner cartridge (Model No. KX-FA87/KX-FA85). Toner life varies in actual usage.


5 % image area

Approx. 2,500 sheets (KX-FA87)/5,000 sheets (KX-FA85) of letter size paper can be printed.



10 % image area

Approx. 1,250 sheets (KX-FA87)/2,500 sheets (KX-FA85) of letter size paper can be printed.

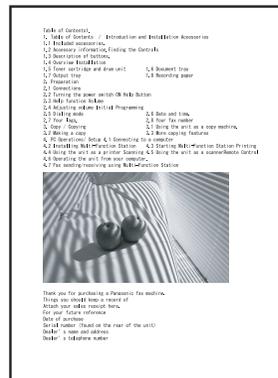

15 % image area

Approx. 800 sheets (KX-FA87)/1,600 sheets (KX-FA85) of letter size paper can be printed.



10. General Information

Note:

- The image area changes with the depth, thickness and size of the characters.
- If you turn on the toner save feature, the toner cartridge will last approx. 40% longer.

Drum life

The drum unit is a consumable item and needs to be replaced regularly. There are various factors that determine the actual drum life, such as temperature, humidity, type of paper and how much toner you use for the number of sheets per print job. The estimated drum life is approx. 10,000 sheets. The actual number of sheets your drum will print may be significantly less than these estimates. Because many of the factors that determine the actual drum life cannot be controlled, we cannot guarantee a minimum number of sheets that will be printed by your drum.

10.3 FCC and Other Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the rear of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

- Registration No(found on the rear of the unit)
- Ringer Equivalence No. (REN)
.....(found on the rear of the unit)

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Servicenter or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

10. General Information

the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible Party:

Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

Technical Support:

Panasonic Consumer Electronics Company
Division of Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094
Telephone: 1-800-HELP-FAX (1-800-435-7329)

10.4 Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF PANASONIC CORPORATION OF
NORTH AMERICA
One Panasonic Way, Secaucus, New Jersey 07094

PANASONIC PUERTO RICO, INC.
San Gabriel Industrial Park,
Ave. 65 de Infantería, Km. 9.5,
Carolina, Puerto Rico 00985

Panasonic Facsimile Product Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“Limited Warranty period”), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

FAX categories	Parts	Labor
Thermal Transfer Facsimile	6 Months	6 Months
Laser Facsimile	1 (one) Year	1 (one) Year

Batteries, antennas, ink film, toner cartridge, drum unit, and ink cartridge (as may be applicable), and cosmetic parts (cabinet) are not warranted under this Limited Warranty.

During the “Labor” Limited Warranty period there will be no charge for labor. During the “Parts” Limited Warranty period, there will be no charge for parts. You must carry-in or mail-in your product during the Limited Warranty period. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

Carry-In or Mail-In Service

For Carry-In or Mail-In Service in the United States call 1-800-HELP-FAX (1-800-435-7329)
For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor such as non Panasonic ink film, toner cartridge or drum unit, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, signal reception problems, misadjustment of consumer controls, improper maintenance, power line surge, improper voltage supply, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicer or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER “LIMITED WARRANTY COVERAGE”. THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

10. General Information

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

For In Limited Warranty product service

- Call toll-free 1-800-HELP-FAX (1-800-435-7329) for the location of an authorized servicenter.

For out of Limited Warranty technical and troubleshooting support: Panasonic offers two value based, cost effective, solutions:

1. Panasonic Continued Services 900 fee based support: 1-900-FAX-HELP (1-900-329-4357)

This exceptional service is charged directly to your telephone bill at only \$2.49 per minute.

2. Panasonic Premier Service Club (PPSC): 1-800-435-7329

PPSC provides toll free troubleshooting support at only \$7.99 for a one time sampler or \$23.95 for a one year or 5 call membership. These services are billed directly to your major credit card.

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom or problem, to the outside of the carton.
- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company or to any executive or regional sales office. These locations do not repair consumer products.

Both of these comprehensive programs provide real time, live agent support for customers who are not eligible for coverage under the limited warranty.

Terms and prices are subject to change without notice.

10.5 Customer Services directory

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or E-mail us via:

consumer_fax@us.panasonic.com

Contact:

For in Limited Warranty programming and Troubleshooting Support:

Fax Advantage assistance and Service Location finder: 1-800-HELP-FAX (435-7329)

For out of Limited Warranty technical and troubleshooting support:

Panasonic offers two value based, cost effective, solutions:

1. Panasonic Continued Services 900 fee based support: 1 900 FAX HELP (1 900 329 4357)

This exceptional service is charged directly to your telephone bill at only \$2.49 per minute.

2. Panasonic Premier Service Club (PPSC): 1 800 435 7329

PPSC provides toll free troubleshooting support at only \$7.99 for a one time sampler or \$23.95 for a one year or 5 call membership. These services are billed directly to your major credit card.

Both of these comprehensive programs provide real time, live agent support for customers who are not eligible for coverage under the limited warranty. Terms and prices are subject to change without notice.

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

Service in Puerto Rico

Panasonic Puerto Rico, Inc.

San Gabriel Industrial Park, Ave. 65 de Infantería, Km. 9.5, Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910 (Monday - Friday 8:30 am to 4:30 pm, EST.)

10.6 User record

For your future reference

Date of purchase
Serial number (found on the rear of the unit)
Dealer's name and address
Dealer's telephone number

Attach your sales receipt here.

--

11.1 Index

- # #100 Quick setup: 59
- #101 Date and time: 24
- #102 Your logo: 25
- #103 Your fax number: 27
- #120 Dialing mode: 22, 59
- #121 Flash time: 59
- #145 LCD display contrast: 59
- #161 Ringer pattern: 59
- #210 FAX ring count: 60
- #216 Automatic Caller ID list: 60
- #380 Paper size in the paper input tray: 60
- #401 Confirmation report: 29, 61
- #402 Automatic journal report: 29, 61
- #403 Power save: 60
- #411 Overseas mode: 61
- #412 Delayed send: 62
- #413 ECM selection: 62
- #416 Connecting tone: 62
- #430 Distinctive Ring: 42
- #431 Fax ring pattern: 43
- #432 Auto reduction: 63
- #434 Fax activation code: 63
- #437 Memory reception alert: 63
- #438 Friendly reception: 63
- #441 Output tray setting for faxing: 63
- #442 PC fax reception setting: 64
- #459 Set fax features to default: 64
- #461 Default copy resolution: 65
- #462 Contrast save: 65
- #463 Default operation mode: 60
- #464 Mode timer: 60
- #466 Output tray setting for copying: 65
- #482 Toner save: 60
- A** Accessories
 - Document tray: 15
 - Output tray: 15
- Answering machine: 37
- Auto document feeder: 28, 44
- Auto reduction (Feature #432): 63
- B** Basic features: 59
- Broadcast transmission: 34
- C** Caller ID
 - Calling back: 40
 - Storing: 41
- Caller ID list (Feature #216): 40, 60, 89
- Character table: 25
- Cleaning: 84, 87
- Confirmation report (Feature #401): 29, 61
- Connecting tone (Feature #416): 62
- Connections: 21
- Contrast save (Feature #462): 65
- Copy: 44
 - Collation: 46
 - Enlarge: 46
 - Reduce: 46
- Copy features: 65
- D** Date and time (Feature #101): 24
- Default copy resolution (Feature #461): 65
- Default operation mode (Feature #463): 60
- Delayed transmission (Feature #412): 62
- Dialing mode (Feature #120): 22, 59
- Directory: 31
- Display
 - Contrast (Feature #145): 59
 - Error messages: 67
- Distinctive Ring service (Feature #430): 42
- Document size: 30
- Drum life: 92
- Drum unit: 13, 76
- E** ECM selection (Feature #413): 62
- Envelope: 52
- Error messages: 66, 67
- Extension telephone: 36
- F** Fax activation code (Feature #434): 63
- Fax features: 61
- Fax number (Feature #103): 27
- FAX ONLY mode: 36
- FAX ring count (Feature #210): 60
- Flash time (Feature #121): 59
- Friendly reception (Feature #438): 63
- H** Help: 23
- J** Jams
 - Document: 83
 - Recording paper: 79
- Journal report (Feature #402): 29, 61
- Junk fax prohibitor: 38
- L** Label: 51
- Logo (Feature #102): 25
- M** Memory reception alert (Feature #437): 63
- Mode timer (Feature #464): 60
- Multi-Function Station software
 - Activating: 50
 - Installing: 48
- N** Navigator directory
 - Sending faxes: 33

11. Index

- Storing: 32
- O** OCR software: 54
- One-touch dial
 - Sending faxes: 33
 - Storing: 31
- Optional handset unit: 10, 21
- Output tray setting
 - Copy (Feature #466): 65
 - Fax (Feature #441): 63
- Overseas mode (Feature #411): 61
- P** Paper size
 - Paper input tray (Feature #380): 60
 - PC fax reception setting (Feature #442): 64
 - Power failure: 75
 - Power save (Feature #403): 60
 - Programming: 58
- Q** Quick scan: 29
- Quick setup (Feature #100): 59
- R** Receiving faxes
 - Automatically: 36
 - Manually: 36
- Recording paper: 18
- Recording paper size: 91
- Redialing: 29, 33
- Reports
 - Broadcast programming: 89
 - Broadcast sending: 35
 - Caller ID: 60, 89
 - Confirmation: 29, 61
 - Journal: 29, 89
 - Power down: 75
 - Printer test: 89
 - Setup: 89
 - Telephone number: 89
- Reset fax features (Feature #459): 64
- Resolution: 28, 45
- Ringer pattern (Feature #161): 23, 59
- Ring pattern for Distinctive Ring (Feature #431): 43
- S** Scanner glass: 29, 45
- Sending faxes
 - Broadcast: 35
 - From memory: 29
 - Manually: 28
 - Navigator directory: 33
 - One-touch dial: 33
- Set fax default (Feature #459): 64
- Storing
 - Broadcast: 34
 - Navigator directory: 32
- One-touch dial: 31
- T** TEL mode: 36
- Toner cartridge
 - Installing: 13
 - Replacing: 76
- Toner life: 91
- Toner save (Feature #482): 15, 60
- Transparency: 51
- V** Volume: 23

Notes

Notes

Notes

Panasonic
KX-FLB801
KX-FLB811
Proof of Purchase

Panasonic FAX ADVANTAGE PROGRAM

*Free peace of mind,
direct from Panasonic*

NO EXTRA COST



- **1-year limited warranty¹: parts, labor, and toll-free help line²**
- **Free overnight replacement³ and repair program**

The Panasonic Fax Advantage Consumer Service Program. Panasonic knows that if your fax machine is not up and running, neither is your business. That's why we created the Panasonic Fax Advantage Program. Included at no extra cost with the purchase of a new and unused Panasonic Fax Machine, the Fax Advantage Program can provide a free replacement unit³ overnight if your original unit is in need of repair.

Here's how it works:

1. If you have a problem with your fax that you purchased new and unused while it is covered by the period of limited warranty¹, call our toll-free help-line at 1-800-HELP-FAX².
2. Talk to one of our technical experts to diagnose your problem over the phone.
3. If repairs are necessary and you are entitled to service under the terms and conditions of the limited warranty⁴, we will send a refurbished replacement unit to you by overnight service delivery.

A second option available under our limited warranty is to mail-in or carry-in your fax to one of our Regional Service centers, where the unit will be repaired and returned to you.

Instructions:

If you choose to receive a replacement unit under the Fax Advantage Program, Panasonic will provide a replacement unit which will be completely refurbished, quality-tested by Panasonic technicians and individually hand-inspected before it is shipped to you. You will keep the replacement unit and send the original unit to us in the replacement unit's box. Contact the shipper who will pick up the unit at no charge to you, should it be determined that you are entitled to warranty service. A proof-of-purchase must be included with the returned product. Any unit that is replaced by Panasonic and not shipped with proper proof-of-purchase by you will be subject to a minimum \$100.00 charge. The original unit must be properly packaged in the same manner as the replacement unit, utilizing the packing materials provided. Damage due to improper or inadequate packing will be charged to you as an out-of-warranty cost.

If our 1-800-HELP-FAX technicians determine that your unit may be an "out-of-box failure"⁵, we will attempt to provide you with a factory-new replacement unit⁶. You must ship a copy of your receipt with your original unit to verify that you purchased the unit within 10 days prior to your 1-800-HELP-FAX call.

Requirements:

You must give our technicians a valid credit card number (Discover, VISA, Master Card, or American Express/Optima). Product that is not returned to Panasonic by 10 business days after shipment of the replacement product will be charged to your credit card account at Panasonic's Suggested Retail Price (see dealer for details). If your original unit is not eligible for warranty service, your card will be charged for the non-warranty repair of the unit at Panasonic's current rate for parts and labor and for any shipping charges associated with this program. If you do not wish to pay out-of-warranty repair costs, you will be responsible for returning the replacement unit to Panasonic and for paying all shipping charges associated with this program including the overnight delivery of the replacement product to you, shipment of the problem unit to Panasonic, shipment of the replacement unit back to Panasonic and the return of your original unit back to you. Credit status will be verified prior to sending the replacement product.

1. See dealer for limited warranty details.
2. After the fax advantage program, contact our Continued Services Technical Support Line at 1-900-FAX-HELP (1-900-329-4357), for fee based technical support.
3. Replacement unit is refurbished.
4. Replacement program is only available in the 50 United States and is subject to termination at any time without advance notice.
5. "Out-of-box failure" is an inoperable unit that was purchased no more than 10 days prior to your 1-800-HELP-FAX call, and would otherwise qualify for warranty service under the terms and conditions of the limited warranty.
6. Panasonic reserves the right to send a refurbished unit.

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of
North America**

One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Puerto Rico, Inc.

San Gabriel Industrial Park,
Ave. 65 de Infantería, Km. 9.5,
Carolina, Puerto Rico 00985