

Multifunctional Presentation Kit YP-100

User's Guide

- Be sure to read the precautions in the separate Getting Started Guide. The Getting Started Guide also includes information about connecting the YP-100 to a projector.
- Be sure to keep all user documentation handy for future reference.

- Microsoft, Windows, Windows XP, the Windows logo, and PowerPoint are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Other company and product names may be registered product names or trademarks of their respective owners.

- The contents of this manual are subject to change without notice.
- Copying of this manual, either in part or its entirety, is forbidden. You are allowed to use this manual for your own personal use. Any other use is forbidden without the permission of CASIO COMPUTER CO., LTD.
- CASIO COMPUTER CO., LTD. shall not be held liable for any lost profits or claims from third parties arising out of the use of this product or this manual.
- CASIO COMPUTER CO., LTD. shall not be held liable for any loss or lost profits due to loss of data due to malfunction or maintenance of this product, or any other reason.
- The sample screens shown in this manual are for illustrative purposes only, and may differ somewhat from the screens actually produced by the product.

Contents

About this manual.....	5
Terms and Conventions	5
About the YP-100's USB Functions.....	6
Connecting a USB Device to the YP-100	9
Turning On the YP-100 after Connecting a USB Device	9
Connecting to a USB Device while the YP-100 is On	9
Installing YP-100 Software	10
Minimum System Requirements	10
To install software	11
Projecting Presentation Images from a USB Memory Device	13
Supported USB Memory Devices	13
Supported Playback Data Types	14
Preparing a Presentation with EZ-Converter	14
Presentation Data	14
Main EZ-Converter Functions	15
Starting Up and Exiting EZ-Converter	15
Creating New Presentation Data.....	16
Creating Presentation Data by Converting a PowerPoint File	16
Creating Presentation Data by Inserting Image Files Manually	18
Configuring the Option Setting	19
Editing Presentation Data	20
Configuring Presentation Data Playback Settings	22
Saving Presentation Data	25
Opening Presentation Data	27
Viewing Help	27
Viewing Version Information	27
EZ-Converter Menu and Button Reference	28

Playing a Presentation with Viewer	29
To connect a USB memory device to the YP-100.....	29
File Menu Operations.....	30
Using the Presentation Menu.....	35
Operations during Image File Content Projection	37
Operations during a Slideshow	38
Slideshow Start Error	39
Using Viewer to Play a Movie	39
Configuring Viewer Setup Menu Settings	41
Viewer Error Messages.....	45
Viewer Troubleshooting.....	46

Performing a Presentation Using a Wireless LAN (Projecting Computer Screen Contents Over a Wireless LAN)..... 47

Supported Wireless LAN Devices	47
Computer Requirements.....	47
Preparing the Computer for Wireless LAN Connection with the YP-100	48
About the YP-100's Wireless LAN.....	49
Wireless Function and Wireless Connection Software	49
About Connection Profiles.....	49
Establishing a Wireless LAN Connection between the YP-100 and a Computer	50
Wireless LAN Connection Basics	51
Establishing a Wireless LAN Connection with a Single Computer Using a Simple Connection.....	52
Establishing a Wireless LAN Connection with Multiple Computers Using a Manual Connection	54
Advanced Wireless LAN Connection Settings.....	64
Web Setup	64
Enabling and Disabling Web Setup.....	66
Switching the YP-100 Connection Profile	67
Assigning a Name to a YP-100 Unit.....	70
Configuring a Connection Keyword.....	71
Modifying YP-100 Manual Connection Settings.....	73
Creating a Computer Connection Profile	74
Deleting a Computer Connection Profile.....	77
Assign a User Name to a Computer for Projection	78

Specifying the Quality of Images Sent from a Computer	78
Manual Connection Setting Reference	79
Returning YP-100's Wireless Settings to Their Initial Defaults	83
Viewing Wireless Connection Help	84
Viewing Wireless Connection Version Information	84
Wireless LAN Connection Troubleshooting	85
Check the following on the computer.	85
Check the following on the YP-100.	85
Also check the following.	85
Wireless Connection Menus and Button Reference	89
Using Wireless LAN for Projection	90
Operations while a Single Computer is Connected to the YP-100 over a Wireless LAN	90
Operations while Multiple Computers are Connected to the YP-100 over a Wireless LAN	93
Performing a Presentation Using the YC-400 Document Camera	95
YC Camera Application Function and Operation Overview	95
Connecting the Document Camera to the YP-100	95
YC Camera Application Operations	99
YC Camera Application Projection Operations	99
Configuring YC Camera Application Setup Menu Settings	104
Appendix	108
Specifying the Display Language	108
To specify the display language	108
Returning the Setup Menu to Its Initial Default Settings	109
To restore all settings on the setup menu to their initial defaults	109
Hanging the YP-100 from the Ceiling	110

About this manual...

This manual explains how to perform various operations that are enabled when you connect an external device to the USB port of the YP-100 (Multifunctional Presentation Kit).

Terms and Conventions

In this manual, there are many procedures that require parallel operations on the YP-100 and your computer. The following are special terms and conventions used in this manual to differentiate between the YP-100 and computer.

- **projection area**

This is the entire rectangular area that is projected by the projector connected to the YP-100. Certain YP-100 operations will cause messages and menus to appear within the projection area.

- **computer screen**


This is the physical display device of your computer.

About the YP-100's USB Functions

The USB port that is built into the YP-100 lets you connect an external USB device and use it as an input source for image projection.

USB Memory Device

You can connect a commercially available USB memory device to the USB port of the YP-100 and project images and movies stored on the device from the projector also connected to the YP-100.

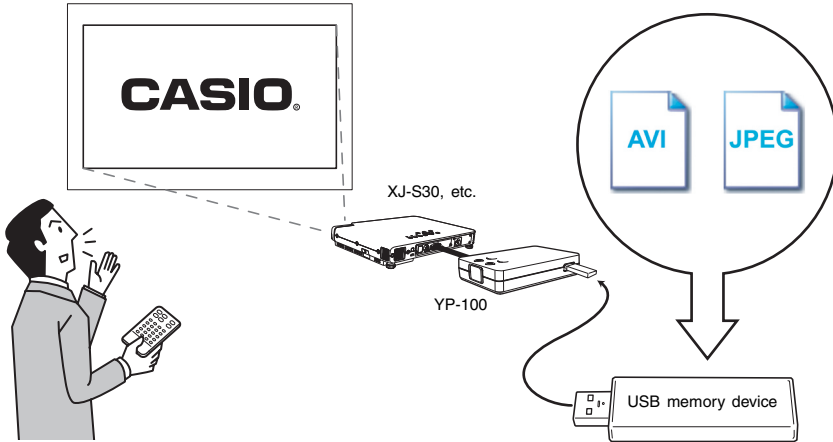


Refer to the following for details.


For more information about this:	Refer to this section of this manual:
Supported USB memory devices	"Supported USB Memory Devices" (page 13)
Supported image and movie file formats	"Supported Playback Data Types" (page 14)
Saving image data to a USB memory device	"Preparing a Presentation with EZ-Converter" (page 14)
Projecting image and movie data from a USB memory device	"Playing a Presentation with Viewer" (page 29)

Wireless Adapter (CASIO YW-2)

Establishing a connection between the YP-100 and a computer over a wireless LAN makes it possible to project the display contents of the computer's screen from the projector connected to the YP-100.

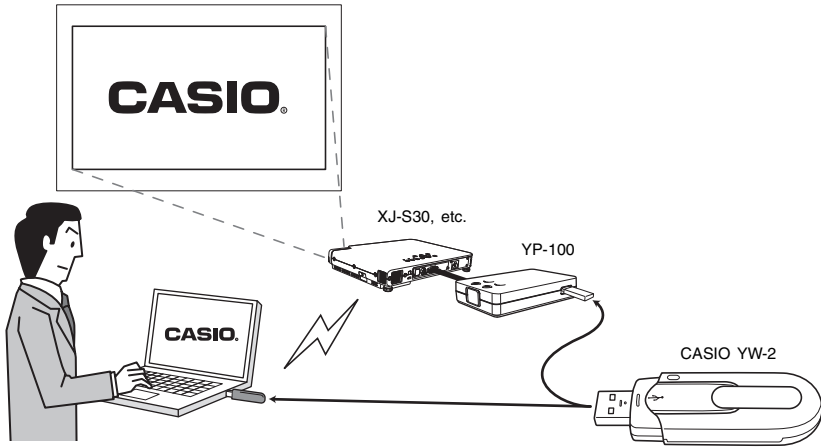

You can have up to four computers connected to the YP-100 over a wireless LAN at the same time. Use the remote controller that comes with the YP-100 to select which of the four computer screens you want to project.

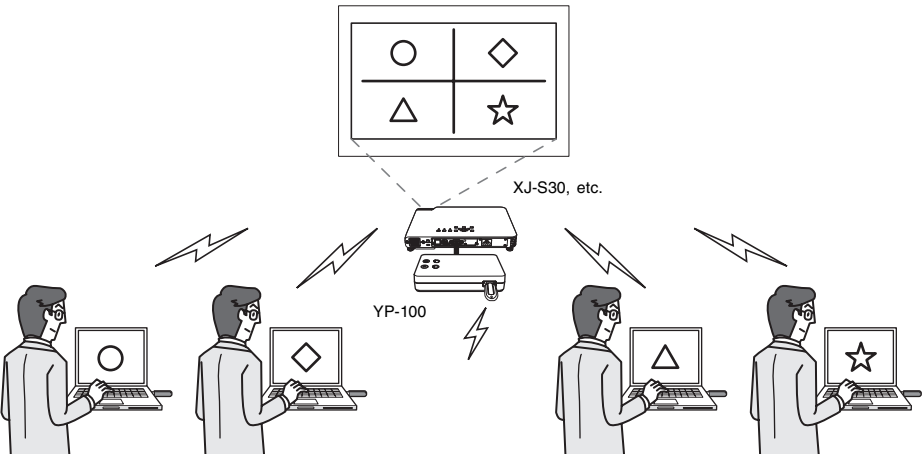


Refer to the following for details.

For more information about this:	Refer to this section of this manual:
Supported wireless LAN devices	"Supported Wireless LAN Devices" (page 47)
Setup required to establish a wireless LAN connection between the YP-100 and a computer	"Wireless LAN Connection Basics" (page 51), "Advanced Wireless LAN Connection Settings" (page 64)
Projecting the screen contents of a computer connected via a wireless LAN	"Using Wireless LAN for Projection" (page 90)

Document Camera (CASIO YC-400)

You can connect a CASIO YC-400 Document Camera to the USB port of the YP-100 and project the images of documents placed on the document stage of the YC-400.

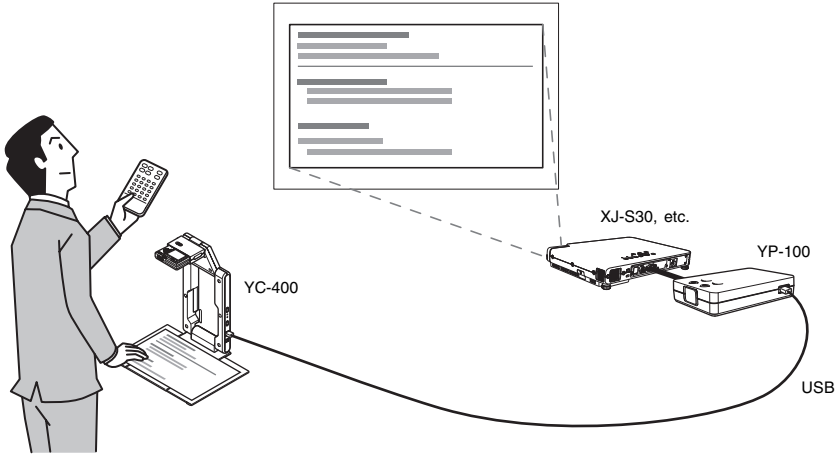

For more information, see “Performing a Presentation Using the YC-400 Document Camera” on page 95.

Connecting a USB Device to the YP-100

What happens when you connect a USB device to the YP-100 depends on whether you connect them and then turn on the YP-100, or whether the YP-100 is already on when you connect them.

Turning On the YP-100 after Connecting a USB Device

The YP-100 will perform the following operations if you turn it on while a USB device is connected to its USB port.

When this type of device is connected:	The YP-100 does this automatically when turned on:
USB memory device	Starts up Viewer (page 29) and projects the Viewer screen from the projector connected to the YP-100.
YW-2 Wireless Adapter	Starts up Wireless (page 49) and projects the Wireless screen from the projector connected to the YP-100.
YC-400 Document Camera	The YC-400 Document Camera is not detected automatically, so the message "Connect a USB device." appears in the projection area.

Connecting to a USB Device while the YP-100 is On

The YP-100 will perform the following operations if you connect a USB device to its USB port while it is turned on.

When this type of device is connected:	The YP-100 does this automatically:
USB memory device	Starts up Viewer (page 29) and projects the Viewer screen from the projector connected to the YP-100.
YW-2 Wireless Adapter	Starts up Wireless (page 49) and projects the Wireless screen from the projector connected to the YP-100.
YC-400 Document Camera	When the YC-400 Document Camera is turned on, the YP-100 will start up the YC Camera application (page 95) and then project the YC Camera application screen from the projector connected to the YP-100.

Installing YP-100 Software

Use the procedures in this section to install the software that comes bundled with the YP-100 onto your computer.

When you want to do this:	Install this software:
Convert files created with PowerPoint to image (JPEG) files and store them on a USB memory device	EZ-Converter
Send computer screen contents to the YP-100 over a wireless connection and project them from the projector connected to the YP-100	Wireless Connection

Minimum System Requirements


The following describes minimum computer system requirements to run the bundled software.

- Operating System: Microsoft® Windows® XP or 2000 Professional
- Computer: IBM PC/AT or compatible that conforms to the following conditions.
 - Windows® XP or 2000 Professional pre-installed
 - PowerPoint 2000, 2002, or 2003 installed (to use EZ-Converter)
 - CPU: Pentium III or higher
 - USB port (Type A, USB1.1/2.0)
 - Memory: 256 MB minimum or amount of memory recommended for operating system being run
 - Hard Disk: At least 40 MB for installation or at least 60 MB when running
 - Display: Full-color display with resolution of at least 800 × 600 that is supported by above operating systems and the computer being used.
 - Pointing Device: Mouse or other equivalent device supported by above operating systems.
- Keyboard
- CD-ROM drive
- Other requirements of operating system being used
- Normal operation may not be possible under certain hardware configurations.
- Operation is not supported on a computer running Windows® NT, Me, 98SE, 98, 95, or 3.1, or on a Macintosh or Mac OS computer.
- Operation on a computer upgraded to Windows® XP, 2000 Professional from another operating system is not supported.
- Operation on a computer running Windows® XP Professional x64 Edition is not supported.

To install software

1 Place the bundled CD-ROM into your computer's CD-ROM drive.

- This displays the dialog box shown below.

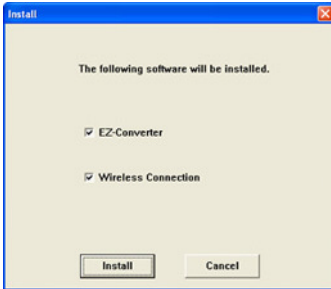

2 Select the check box of the software you want to install.

3 Click the [Install] button.

- This will start installation.


4 Keep clicking the [Next] button on the dialog boxes that appear.

- If your computer is running Windows XP and the dialog box shown below appears, click the [Continue Anyway] button.



- If your computer is running Windows 2000 and the message “The software you are about to install does not contain a Microsoft digital signature.” appears, click the [Yes] button.

- The dialog box shown below will appear after installation is complete.

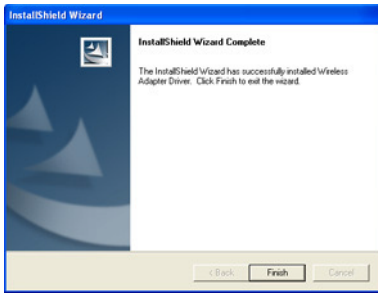

5 Click the [Finish] button.

Projecting Presentation Images from a USB Memory Device

This section explains how to perform the following operations.

- Using the bundled EZ-Converter software to save a presentation file to a USB memory device
- Connecting a USB memory device to the YP-100 and using Viewer to project image or movie data contained on the device



Important!

In order to perform the procedures in this section, you will first need to install the EZ-Converter software from the bundled CD-ROM onto your computer. For more information, see “Installing YP-100 Software” (page 10).

Supported USB Memory Devices

The YP-100 supports connection of the following types of FAT/FAT32 format USB memory devices.

- USB memory
- USB Mass Storage Class compatible digital cameras
- USB Mass Storage Class compatible hard disk drives (excluding types that require power supply from the USB port)

For details about supported USB memory devices (products whose operation has been confirmed), see the CASIO website at <http://world.casio.com/projector/support/en/>.

Supported Playback Data Types

The image data types listed below can be played back using the YP-100's Viewer.

- JPEG format (jpg, jpeg, jpe) and BMP format (bmp) image files
 - Playback of image files of approximately 6 Mbytes is supported.
 - Progressive JPEG image files are not supported.
- MP4 format (mp4) movie files and AVI format (avi) movie files recorded with a CASIO digital camera

For details about movie files supported for playback by the YP-100 and playback specifications, visit the CASIO website at: <http://world.casio.com/projector/support/en>.

Preparing a Presentation with EZ-Converter


EZ-Converter is software that runs on a Window computer. You can use EZ-Converter to convert a file (ppt) created with Microsoft PowerPoint to presentation data that can be played back using the YP-100's Viewer feature.

Following conversion the presentation data can be stored on a USB memory device, which can then be connected to the YP-100 for the presentation.

Note that the conversion process may result in some differences between the original PowerPoint file and the resulting presentation data.

Presentation Data

The presentation data produced by EZ-Converter consists of presentation (plf) files and image (jpg) files. When you convert a PowerPoint file that includes 10 pages of data, EZ-Converter will create 10 image (jpg) files and one presentation (plf) file that is linked to the image files. The presentation file will contain information about the sequence that the 10 image files should be projected, along with other playback settings.

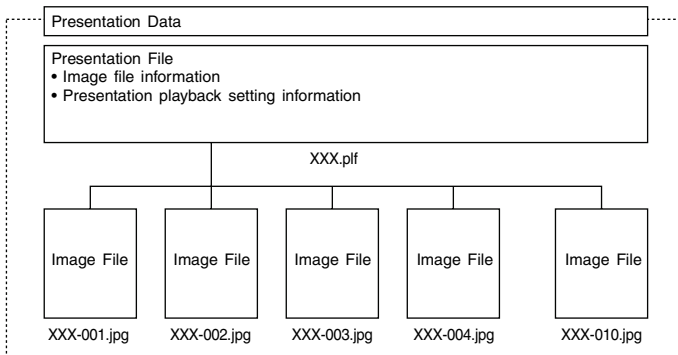

Main EZ-Converter Functions

PowerPoint File Conversion

- Conversion of PowerPoint files up to 500 pages in size
- Support for files created using PowerPoint 2000, 2002, 2003 for Windows
- Editing of converted presentation data with EZ-Converter



Important!

PowerPoint file animations are not supported. The image transition effect used is the one specified by the EZ-Converter presentation file.

Adding Image Files Directly to Presentation Files


In addition to converting PowerPoint pages to image files, you can also add individual image files directly to presentation data.

- You can add up to 500 JPEG format or BMP format image files directly to presentation data.

Starting Up and Exiting EZ-Converter

To start up EZ-Converter

On your computer's Windows Start menu, select [All Programs] - [CASIO] - [EZ-Converter]. This will cause the EZ-Converter window shown below to appear.

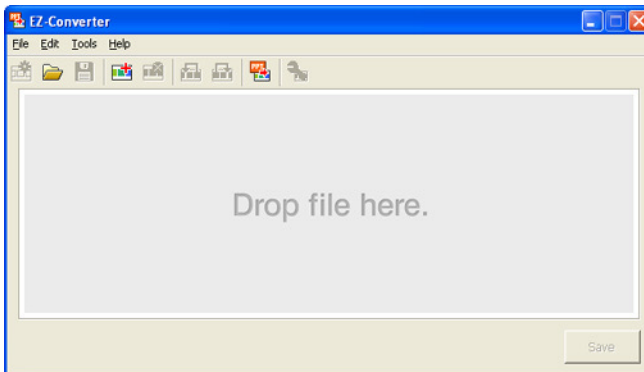

The above window indicates that there is no presentation data currently open. This is what we call an “empty” EZ-Converter window.



Important!

In order to start up EZ-Converter, PowerPoint 2000, 2002, or 2003 will need to be installed on the computer.

To exit EZ-Converter

On the [File] menu, select [Exit].

Creating New Presentation Data


There are two ways that you can use EZ-Converter to create new presentation data: by converting a PowerPoint file (see below) or by inserting image files into the presentation data manually (page 18).

Creating Presentation Data by Converting a PowerPoint File

This procedure creates presentation data that includes all of the pages of the PowerPoint file. In order to perform this procedure, you will first need to prepare the PowerPoint file that you want to convert.

To create presentation data by converting a PowerPoint File

1 Start up EZ-Converter.


- This will display the empty EZ-Converter window.
- If EZ-Converter is already running on your computer and if there is already presentation data in the EZ-Converter window, click  to clear the data from the EZ-Converter window.

2 Configure presentation options as required.

- For more information, see “Configuring the Option Setting” (page 19).


3 Either click or select [Convert PowerPoint File] on the [File] menu.

- This displays a dialog box for selecting PowerPoint files.

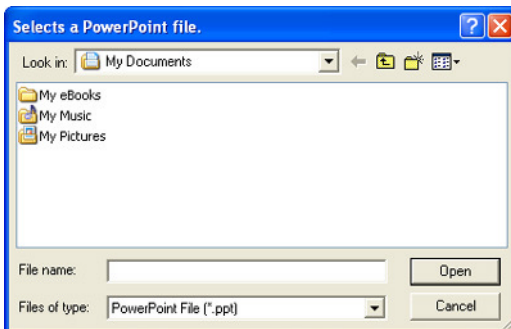


4 Select the PowerPoint file you want to convert and then click [Open].

- This starts conversion of the PowerPoint file, which is indicated by the appearance of a dialog box that shows the progress of the conversion.

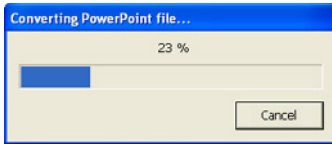

- After conversion is complete, the EZ-Converter window will reappear with thumbnails of the converted images.

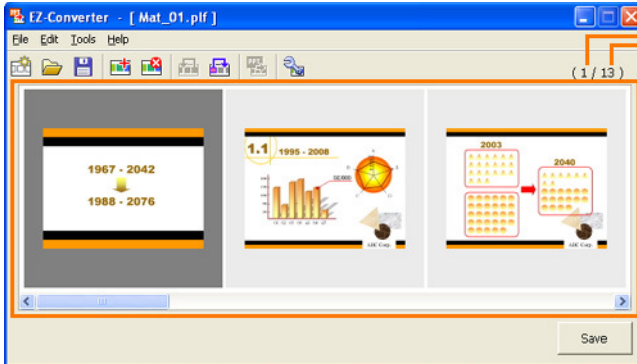

Selected image number
(from beginning)

Total number of files

Image file display area

5 Add, delete, move, and otherwise edit the images as required.

- For details, see “Editing Presentation Data” (page 20).

6 Configure presentation playback settings.

- For more information, see “Configuring Presentation Data Playback Settings” (page 22).


7 To save the presentation data, click the [Save] button.

- For details, see “Saving Presentation Data” (page 25).



Note

- Instead of steps 3 and 4 of the above procedure, you could also drop a single PowerPoint file into the EZ-Converter window.

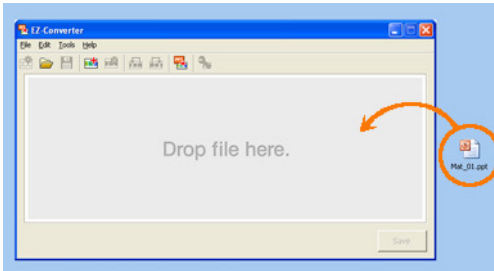

- Converting a PowerPoint file to presentation data will generate the following folder, image files and presentation file.

Example: When converting a 50-page PowerPoint file named “MeetingDocuments”




Creating Presentation Data by Inserting Image Files Manually

You can create new presentation data by dropping multiple image (jpg or bmp) files into the EZ-Converter window. In order to perform this procedure, you will first need to prepare the image files that you want to include in the presentation data.


To create presentation data by inserting image files manually

1 Start up EZ-Converter.

- This will display the empty EZ-Converter window.
- If EZ-Converter is already running on your computer and if there is already presentation data in the EZ-Converter window, click  to clear the data from the EZ-Converter window.

2 Use Windows Explorer to select all of the image files you want to include in the presentation data.

3 Drag the selected files into the EZ-Converter window.

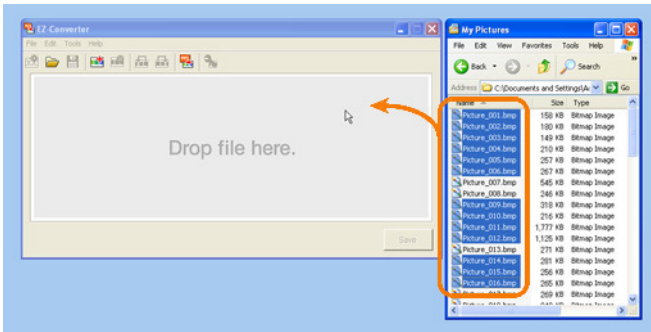

- This will insert the image files into the presentation data and display their thumbnails in the EZ-Converter window.

4 Add, delete, move, and otherwise edit the images as required.

- For details, see “Editing Presentation Data” (page 20).

5 Configure presentation playback settings.

- For more information, see “Configuring Presentation Data Playback Settings” (page 22).

6 To save the presentation data, click the [Save] button.

- For details, see “Saving Presentation Data” (page 25).

Configuring the Option Setting

You can use option settings to specify the resolution of image files that are saved as EZ-Converter presentation data.




Important!

Any changes you make to image settings using the procedure below will go into effect the next time you convert a PowerPoint file. Changed settings are not applied to presentation data that has already been created by converting PowerPoint files. Note that you cannot change the resolution of image data that is included in existing presentation data.

To configure the option setting

1 On the [Tools] menu, select [Options].

- This will display a dialog box for configuring the option setting.

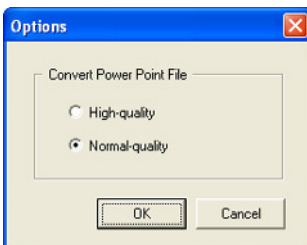

2 Configure the setting on the dialog box as described below.

When you want to do this when converting a PowerPoint file to presentation data:	Select this setting:
Save image files as high-quality JPEG files	[High-quality]
Save image files as higher compression JPEG files	[Normal-quality]

3 After selecting the setting you want, click the [OK] button.

- This will apply the setting and close the dialog box.

Editing Presentation Data

After you create presentation data by converting a PowerPoint file or by inserting image files manually, you can add, delete, and change the positions of image files as required. Before performing the procedures here, you will need to display the EZ-Converter window that contains the presentation data that you want to edit. For details about how to do this, see “Creating New Presentation Data” (page 16) and “Opening Presentation Data” (page 27).

To add image files to presentation data

1 On the EZ-Converter window, click the thumbnail of the image that will come either before or after the image you are about to add.

2 Use Windows Explorer to select the image file you want to add to the presentation data.


- You can select one or more image files.

3 Drag the selected files into the EZ-Converter window.

- If you want the image file(s) to be inserted immediately following the image you selected in step 1, simply drop the image file(s) into the EZ-Converter window. If you want the image file(s) to be inserted in front of the selected image, hold down your computer's [Ctrl] key as you drop the image file(s) into the window.
- This will add the image file(s) and update the thumbnails in the EZ-Converter window.



Note

Instead of steps 2 and 3 of the above procedure, you could click  or you could select [Add Image to Presentation File] on the [Edit] menu. Then on the dialog box that appears, select one image file that you want to add to the presentation data. This will insert the image file into the presentation data immediately following the image you selected in step 1, above.

To delete an image file from presentation data



- 1** On the EZ-Converter window, click the thumbnail of the image you want to delete so it is selected.
- 2** Either click  or select [Delete Image from Presentation File] on the [Edit] menu.
 - This will delete the selected image.
 - In place of step 2, you could also press the [Delete] key on your computer keyboard.



Note

Deleting an image file from the presentation data does not delete the image data file from your computer's hard disk.

To move an image file forward or back within presentation data

- 1** On the EZ-Converter window, click the thumbnail of the image you want to move so it is selected.
- 2** To move the selected image one position to the left (towards the beginning), click  or select [Move Image Back] on the [Edit] menu. To move the image one position to the right (towards the end), click  or select [Move Image Forward] on the [Edit] menu.

To undo an image operation

Select [Undo] on the [Edit] menu, or press [Ctrl] + [z] on your computer keyboard. You can use the above operation to undo the last image file add, delete, or move operation you performed.

Configuring Presentation Data Playback Settings

You can configure the following playback settings for playback of EZ-Converter presentation data with the Viewer of the YP-100.


- Manual or auto image change
- Display time of each image file during auto image change
- Repeat play on/off
- Image transition effect




Note

The playback settings you configure are stored in the presentation (plf) file.

To configure presentation data playback settings

- 1 On the EZ-Converter window, display the presentation data whose playback settings you want to configure.**
 - For details about how to do this, see “Creating New Presentation Data” (page 16) and “Opening Presentation Data” (page 27).
- 2 Click  or select [Presentation File Setup] on the [Tools] menu.**
 - This displays a dialog box for configuring presentation file settings.

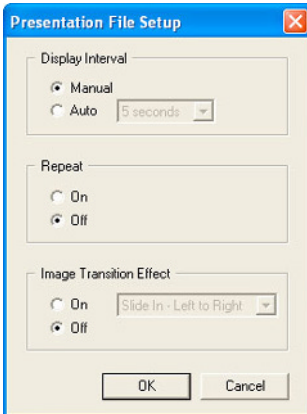










3 Configure the following settings on the dialog box.

When you want to do this:	Do this:
Change images manually during a presentation	Select [Manual] for [Display Interval].
Have images change automatically during a presentation	Select [Auto] for [Display Interval].
Specify the display interval during auto image change <ul style="list-style-type: none">● This setting is available only while [Auto] is selected for [Display Interval].	Tap the down arrow button of the box under [Display Interval] and select an interval value (5 seconds, 10 seconds, 30 seconds, 1 minute, and 5 minutes).
Have the presentation restart from the beginning after the final image file is reached	Select [On] under [Repeat].
Have the presentation stop after the final image is reached.	Select [Off] under [Repeat].
Turn off the image transition effect	Select [Off] under [Image Transition Effect].
Turn on the image transition effect	Select [On] under [Image Transition Effect].
Specify the effect to be applied when transitioning from one image file to the next <ul style="list-style-type: none">● This setting is available only while [On] is selected for [Image Transition Effect].	Click the down arrow button of the box under [Image Transition Effect] and select an effect. <ul style="list-style-type: none">● For details, see "Image Transition Effects" (page 24).

4 After configuring all the settings you want, click the [OK] button.

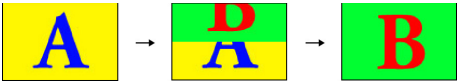Image Transition Effects

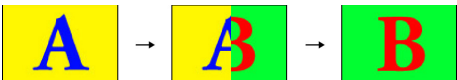When “On” is selected for the “Image Transition Effect” setting on the “Presentation File Setup” dialog box, you can select a visual effect to be applied any time you transition from one image file to another. The following shows examples of each of the available effects.

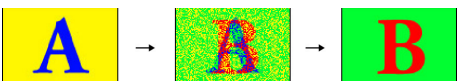Effect Name	Example
Slide In - Left to Right	
Slide In - Right to Left	
Slide In - Top to Bottom	
Slide In - Bottom to Top	
Wipe - Left to Right	
Wipe - Right to Left	
Wipe - Top to Bottom	
Wipe - Bottom to Top	
Dissolve	




Note


For information about performing a presentation using playback settings that are different from those that were stored with presentation data using EZ-converter, see “Configuring Viewer Setup Menu Settings” (page 41).

Saving Presentation Data

Use the procedures in this section to save presentation data to a USB memory device or to your computer's hard disk.

To save presentation data to a new file

- 1 Perform the procedure under “Creating New Presentation Data” (page 16).**
- 2 If you want to save the presentation data to a USB memory device, connect the device to your computer's USB port.**
 - For details about how to connect a USB device, see the user documentation that comes with your computer and the USB memory device you are using.
- 3 Click  or select [Save Presentation File As] on the [File] menu.**
 - This will display a dialog box for specifying a file name.

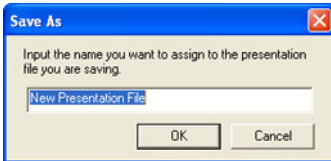


- If you are saving presentation data produced by converting a PowerPoint file, the name of the PowerPoint file will be inserted in the dialog box automatically. In other cases, “New Presentation File” will be displayed in the dialog box.
- 4 Enter the file name you want and then click the [OK] button.**
 - This will display a dialog box for specifying the location where you want to store the file.
 - 5 Specify the location where you want to store the file and then click the [OK] button.**
 - This will create a folder with the name you specified in step 4 and store the presentation data in the folder.
 - If there is already a folder with the same name as the one you specified at the location you specified, a confirmation message will appear asking if you want to replace the existing folder with the new one. If you do, click [Yes] on the dialog box. If you do not want to replace the existing folder with the new one, click [No]. This will return to the dialog box in step 3 of this procedure so you can enter a different name.



Note

Performing this procedure will generate the presentation files shown below.

Example: When you input the folder name “Market Data 2006” for a 50-image presentation

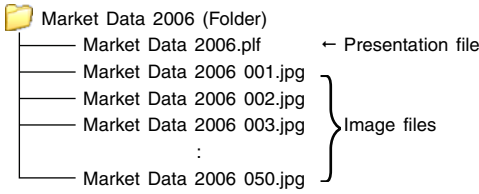

To overwrite existing presentation data with newly edited data

1 Perform the procedure under “Editing Presentation Data” (page 20) or “Configuring Presentation Data Playback Settings” (page 22).

2 Click  or select [Save Presentation File] on the [File] menu.


- This saves the existing presentation data with the edited data.

To save existing presentation data under a different name

1 On the EZ-Converter window, display the presentation data you want to save under a different name.

2 Click  or select [Save Presentation File As] on the [File] menu.

- This will display a dialog box for specifying a file name.

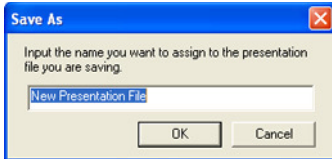

- For the remainder of this procedure, perform the steps starting from step 4 under “To save presentation data to a new file” (page 25).

Opening Presentation Data


Use the procedure below to open existing presentation data in order to edit it or to save it under a different name.



Note

To open presentation data, specify a presentation file (plf).

To open a presentation file

- 1** If the presentation data you want to open is stored on a USB memory device, connect the device to your computer's USB port.
- 2** Click  or select **[Open Presentation File]** on the **[File]** menu.
 - This displays a dialog box for opening presentation files.
- 3** Select the presentation (plf) file you want to open and then click **[Open]**.
 - This will open the presentation file and display the EZ-Converter window.

Viewing Help












To view EZ-Converter help, select **[Help]** on the **[Help]** menu.

Viewing Version Information

To view EZ-Converter version information, select **[About EZ-Converter...]** on the **[Help]** menu.

EZ-Converter Menu and Button Reference

This section provides detailed information about the EZ-Converter menu commands and about the buttons that appear on the EZ-Converter window.

To do this:	Perform this menu operation:	Or click this button:
Convert a PowerPoint file to presentation data and display it in the EZ-Converter window	[File] - [Convert PowerPoint File]	
Clear presentation data currently in the EZ-Converter window	[File] - [Clear Presentation File]	
Open an existing presentation (.plf) file and display its contents in the EZ-Converter window	[File] - [Open Presentation File]	
Save the presentation data currently in the EZ-Converter window to an existing file, which overwrites the current contents of the existing file	[File] - [Save Presentation File]	
Save the presentation data currently in the EZ-Converter window to a new file	[File] - [Save Presentation File As]	
Save the presentation data currently in the EZ-Converter window under a different name	[File] - [Save Presentation File As]	
Exit EZ-Converter	[File] - [Exit]	–
Undo the last editing operation you performed on the EZ-Converter window	[Edit] - [Undo]	–
Add an image file to the presentation data currently in the EZ-Converter window	[Edit] - [Add Image to Presentation File]	
Delete an image file from the presentation data currently in the EZ-Converter window	[Edit] - [Delete Image from Presentation File]	
Move an image file in the presentation data currently in the EZ-Converter window one position to the left (towards the beginning)	[Edit] - [Move Image Back]	
Move an image file in the presentation data currently in the EZ-Converter window one position to the right (towards the end)	[Edit] - [Move Image Forward]	
Configure playback settings of the presentation data currently in the EZ-Converter window	[Tools] - [Presentation File Setup]	
Specify the resolution and size of image files that are saved as EZ-Converter presentation data	[Tools] - [Options]	–
Display EZ-Converter help	[Help] - [Help]	–
Display EZ-Converter version information	[Help] - [About EZ-Converter...]	–

Playing a Presentation with Viewer


Viewer is an application built into the YP-100 that lets you display image files and play back movie files that are stored on a USB memory device that is connected to the YP-100. Viewer starts up automatically whenever you connect a supported USB memory device (see “Supported USB Memory Devices” on page 13) to the USB port of the YP-100.

To connect a USB memory device to the YP-100


1 Connect the AC adaptor that comes with the YP-100 to the AC adaptor terminal, and plug the AC adaptor into a power outlet.

- This will cause the YP-100 to turn on automatically.
- This will cause the YP-100's [POWER] indicator to light green. The YP-100 logo screen also will be projected by the connected projector.

2 Plug the USB memory device that contains the data you want to project with Viewer into the USB port of the YP-100.

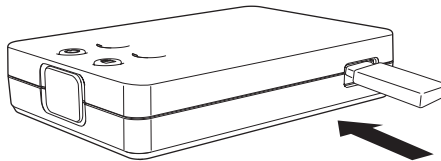

- Once the YP-100 recognizes the USB memory device, Viewer will start up automatically and a menu of the files contained on the USB memory device will be projected in the projection area.

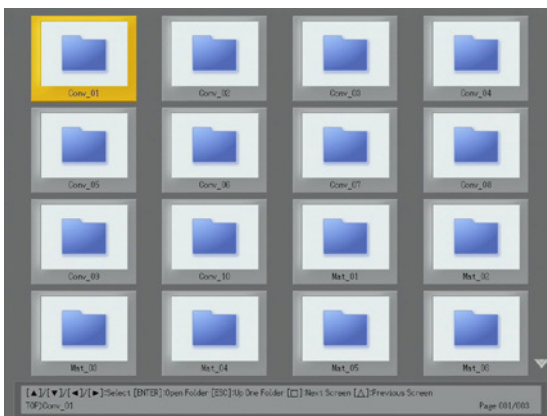




Note


- Only files of formats that are recognized by the YP-100 (jpg, jpeg, jpe, bmp, avi, mp4) appear in the file menu. Note that even if a file appears in the file menu, it does not mean that the file can be displayed or played back by the YP-100.
- The file menu displays USB memory device contents in the following sequence: folders, movie files, image files. For details about how to play back a movie file, see “Using Viewer to Play a Movie” (page 39).

File Menu Operations

When Viewer starts up, it initially projects a menu of files contained on the USB memory device. There are two different views for the file menu: a thumbnail view and a tree view.

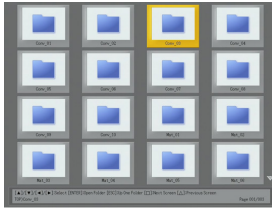

Thumbnail View

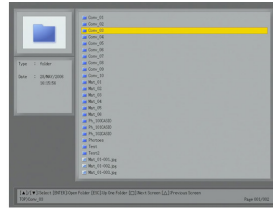

Tree View

Thumbnail View

This View shows thumbnails of the image files and movie files contained on the USB memory device. Folders are shown as icons.



Note

A question mark (?) in place of a thumbnail indicates an image file that cannot be displayed by Viewer for some reason.

Tree View

This view shows a Windows Explorer type tree representation of the folders, image files, and movie files on the USB memory device.

To switch between the thumbnail view and the tree view

1 Press the [FUNC] key.

- This displays the Viewer function menu shown below.



2 Use the [▼] key to move the highlighting to "Screen Format" and then press the [ENTER] key.

- This toggles between the thumbnail view and the tree view


To scroll file menu pages

To scroll to the next menu page press the [□] key. To scroll back to the previous page, press the [△] key.



Note


Arrow indicators appear on right side of the file menu to indicate that there are more files above (▲) or below (▼) the current screen. Press the [□] key to scroll down when ▼ is indicated, or [△] key when ▲ is indicated.

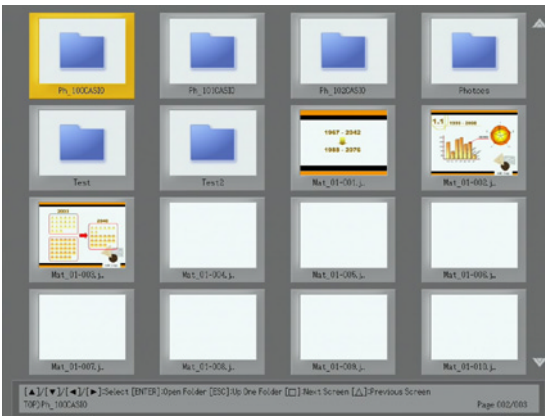

To select a file or a folder


Thumbnail View

Use the cursor keys to move the highlighting to the file or folder you want to select.

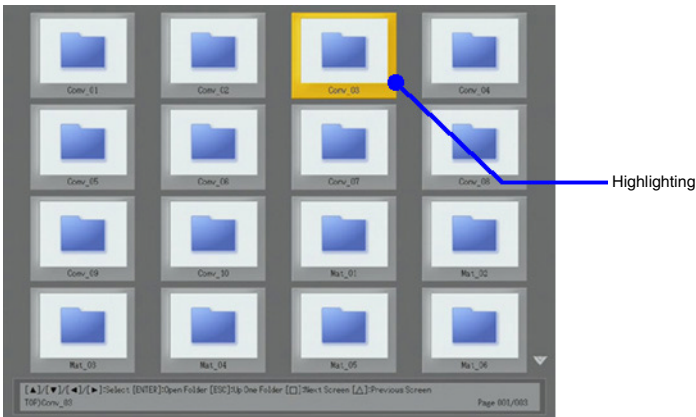

Tree View

Use the [▲] and [▼] cursor keys to move the highlighting to the file or folder you want to select.

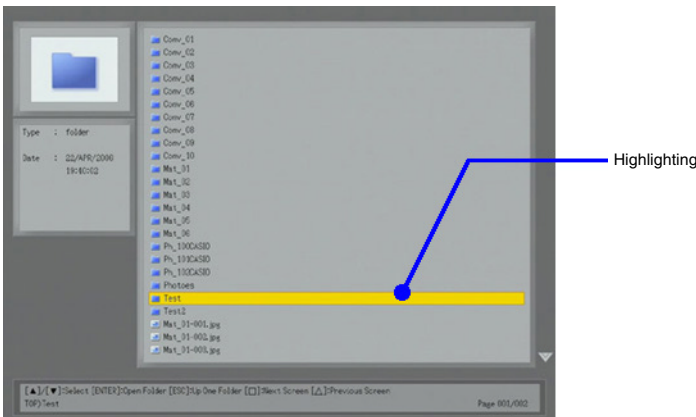

To open a folder

- 1 Use the cursor keys to select the file you want to open.
- 2 Press the [ENTER] key.
 - This opens the selected folder and displays a menu of its contents.
 - With the tree view, you could also press the [▶] key instead of the [ENTER] key.

To close the current folder and move up to the next level

Thumbnail View

Press the [ESC] key.

Tree View

Press the [ESC] key or the [◀] key. This will collapse the folder where the highlighting is currently located and move the highlighting to the next higher level.

To select a file menu item and display its image

- 1 Use the cursor keys to select the file whose image you want to display.
- 2 Press the [ENTER] key.
 - This will display a full-size version of the image that fills the projection area.
- 3 To return to the file menu, press the [ESC] key.



Note

- If the selected file is too large to fit within the projection area, the message “Cannot display an image file.” will appear.
- For information about operations you can perform while the image of a file is being projected, see “Operations during Image File Content Projection” (page 37).

To start a slideshow from a particular image file

- 1 Use the cursor keys to select the file whose image from which you want to start the slideshow.
- 2 Press the [○] key.
 - This will display a full-size version of the image that fills the projection area. Now the YP-100 will advance to the next image automatically at a regular interval (default: 5 seconds).
 - If “Manual” is selected for the “Image Switching” setting, the image will not change automatically. In this case, press the [▶] key to advance to the next image.
- 3 To stop the slideshow and return to the file menu, press the [ESC] key.




Note

- A slideshow displays the image files (jpg or bmp) that are included in the same folder as the image file you select in step 1 of the above procedure. All other files are ignored.
- For details about operations you can perform during a slideshow, see “Operations during a Slideshow” (page 38).
- For information about how you can specify the interval between images, image transition effects, and other playback settings, see “Configuring Viewer Setup Menu Settings” (page 41).
- A slideshow that uses presentation data created with EZ-Converter will be played back in accordance with the playback settings included in the presentation data. For details, see “Configuring Presentation Data Playback Settings” (page 22).

To move the highlighting to the previously projected image file

- 1 While the thumbnail view or tree view is being projected, press the [FUNC] key.**
 - This will display the Viewer function menu.

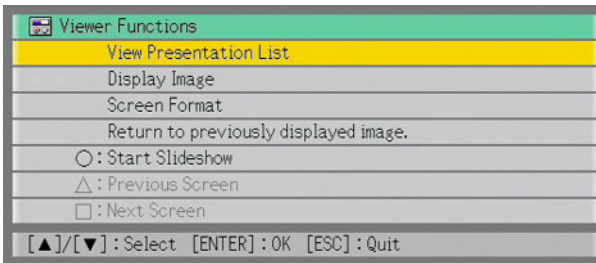

- 2 Use the [▼] key to move the highlighting to “Return to previously displayed image.” and then press the [ENTER] key.**
 - This returns to the image file that was projected immediately before the last projected file.



Note

This function comes in handy in the following cases.

- To return the highlighting to the last projected image file after projecting a movie file.
- To return the highlighting to the image where a slideshow was paused in order to project a movie file.

Using the Presentation Menu


The folder that contains the presentation file created using the EZ-Converter software (page 14) that comes bundled with the YP-100 is called a “presentation folder”.

Presentation folders appear along with other folders on the Viewer file menu, and they are indistinguishable from other folders. Because of this, Viewer also provides a “presentation menu” that makes it easy to find all of the presentation folders that are included on a USB memory device.

To view the presentation menu


1 While the Viewer file menu is shown, press the [FUNC] key.

- This displays the Viewer function menu shown below.

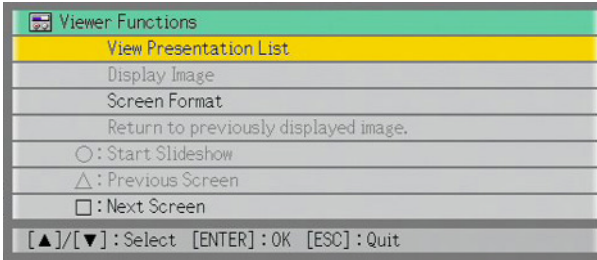

2 Check to make sure that “View Presentation List” is selected and then press the [ENTER] key.

- This displays a presentation menu like the one shown below.

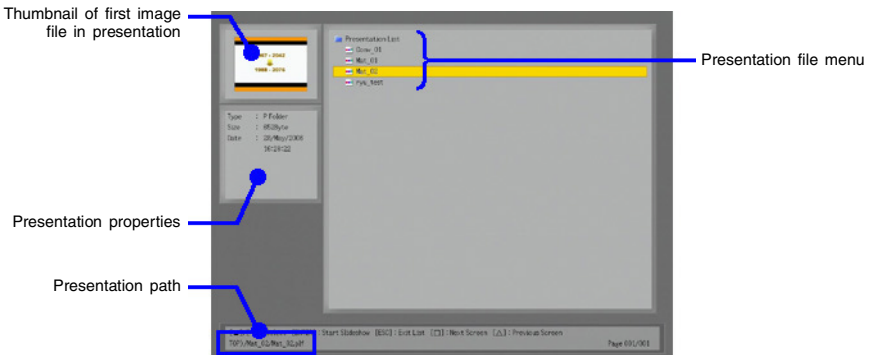

To perform a slideshow by running a presentation file

- 1 Use the [▼] and [▲] keys to move the highlighting to the presentation file you want to run.
- 2 Press the [ENTER] key or the [O] key.
 - This will start the currently selected presentation file.
 - The image file sequence, display time for each image, and image transition effect will all be in accordance with the settings stored in the presentation file. For more information, see “Configuring Presentation Data Playback Settings” on page 22.
- 3 To stop the slideshow, press the [ESC] key.



Note

- The file menu (not the presentation menu) will reappear after the slideshow stops when you press the [ESC] key or after it stops automatically.
- For details about operations you can perform during a slideshow, see “Operations during a Slideshow” (page 38).

To return to the file menu from the presentation menu

Press the [ESC] key.

Operations during Image File Content Projection

To scroll between image files

Use the [▶] and [◀] keys.

To do this:	Press this key:
Display the content of the next image file	[▶]
Display the content of the previous image file	[◀]



Note

Scrolling to a file that is too large to fit within the projection area will cause the message “Cannot display an image file.” to appear.

To rotate an image


Use the [▲] and [▼] keys.

To do this:	Press this key:
Rotate the image 90 degrees right	[▲]
Rotate the image 90 degrees left	[▼]



Note

You can also rotate an image by pressing the [FUNC] key to display the Viewer function menu. Move the highlighting to “Rotate Right” or “Rotate Left” and then press the [ENTER] key.

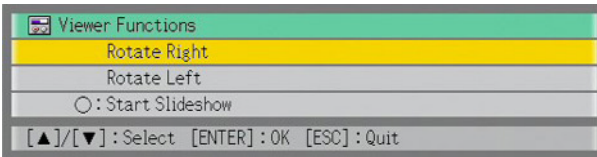

To start a slideshow from the currently displayed image file content

Press the [○] key.



Note

You can also start a slideshow from the currently displayed image file content by pressing the [FUNC] key to display the Viewer function menu. Move the highlighting to “Start Slideshow” and then press the [ENTER] key.

To return to the file menu from image file content

Press the [ESC] key.

Operations during a Slideshow

To pause a slideshow while auto image change is turned on

Press the [□] key.

To unpause a slideshow while auto image change is turned on

Press the [○] key.

To scroll between image files during a slideshow

Use the cursor keys.

To do this:	Press this key:
Scroll to the content of the next image file	[▶]
Scroll to the content of the previous image file	[◀]



Note

After scrolling to an image file, the slideshow will scroll to the next image file automatically after the preset time interval if “Auto” is selected for the “Image Switching” setting. Note, however, that this is not true while the slideshow is paused.

To stop a slideshow and return to the file menu

Press the [ESC] key.

Slideshow Start Error

The error message shown below may appear when you attempt to start a slideshow using one of the procedures under “To start a slideshow from a particular image file” (page 33), “To perform a slideshow by running a presentation file” (page 36), or “To start a slideshow from the currently displayed image file content” (page 37).

There is a problem with the slideshow setup file. Cannot start the slideshow.

If this happens, use EZ-Converter to create a new presentation file and store it on the USB memory device. Next, use the new presentation file to run the slideshow.

Using Viewer to Play a Movie

This section explains procedures you can use to play a movie using Viewer.

To play a movie file

- 1 On the file menu, select the movie file you want to play.**
 - For information about how to select a particular file on the file menu, see “To select a file or a folder” (page 32).
- 2 Press the [ENTER] key.**
 - This will start playback of the selected movie file.
- 3 To stop movie playback and return to the file menu, press the [ESC] key.**



Note

Pressing the [ENTER] key while a file whose playback is not supported by the YP-100 is selected will cause the error message “This movie file cannot be played back.” to appear. For more information, see “Supported Playback Data Types” (page 14).

Operations during Movie File Playback

You can perform the operations described below during movie file playback.

To do this:	Perform this operation:
Pause movie playback	Press the [ENTER] key. To restart movie playback after it has been pause, press the [ENTER] key again.
Fast reverse	Press the [◀] key.
Fast forward	Press the [▶] key.
Stop movie playback	Press the [ESC] key.
Jump to the beginning of the currently playing movie file and pause there	<ol style="list-style-type: none">1. Press the [FUNC] key to display the viewer function menu.<ul style="list-style-type: none">● "Jump to Beginning" should be selected by default.2. Press the [ENTER] key.
Jump to the end of the currently playing movie file and pause there	<ol style="list-style-type: none">1. Press the [FUNC] key to display the viewer function menu.2. Use the [▼] key to move the highlighting to "Jump to End" and then press the [ENTER] key.
Skip to the beginning of the next movie file (on the file menu) and pause there	<ol style="list-style-type: none">1. Press the [FUNC] key to display the viewer function menu.2. Use the [▼] key to move the highlighting to "Skip to Next Movie" and then press the [ENTER] key.
Skip to the beginning of the previous movie file (on the file menu) and pause there	<ol style="list-style-type: none">1. Press the [FUNC] key to display the viewer function menu.2. Use the [▼] key to move the highlighting to "Skip to Previous Movie" and then press the [ENTER] key.
Turn display of the playback time on and off	Press the [○] key or perform the following steps. <ol style="list-style-type: none">1. Press the [FUNC] key to display the viewer function menu.2. Use the [▼] key to move the highlighting to "Time Indicator On/Off" and then press the [ENTER] key.




Note

Pressing the [FUNC] key during movie playback will pause playback and display the Viewer function menu. Playback will resume when you press the [ESC] key to close the Viewer function menu.

Configuring Viewer Setup Menu Settings

You can use the Viewer Setup Menu to configure viewer display settings and to perform a presentation using playback settings that are different from those that were stored with presentation data using EZ-Converter.

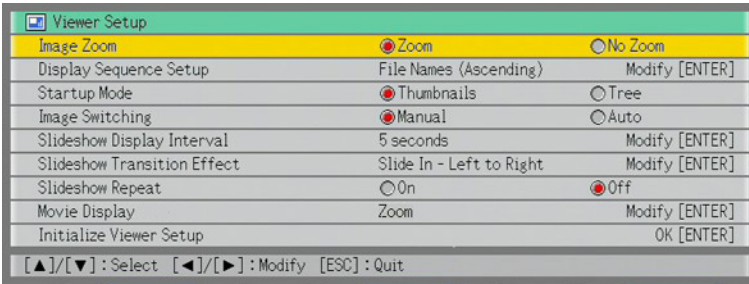

Note

- When you perform a slideshow by running a presentation file created with EZ-Converter, the slideshow settings on the Viewer setup menu (Image Switching, Slideshow Display Interval, Slideshow Transition Effect, and Slideshow Repeat) are changed automatically to the playback settings (page 22) saved in the presentation file you are running.
- In order to modify slideshow settings for which “Auto” was selected for the presentation file’s “Image Switching” setting when the file was created with EZ-Converter, you need to pause the slideshow, open the menu, and then change the settings as required.

To configure Viewer setup menu settings


- 1 Press the [MENU] key to display the Viewer setup menu.
- 2 Use [▼] and [▲] to select the menu item whose setting you want to change.

3 What you should do next depends on whether or not [ENTER] is displayed at the far right of the setting you are configuring (the one that is highlighted).

If [ENTER] is displayed:

- a. Press the [ENTER] key.
- b. On the submenu that appears, use [▼] and [▲] to move the highlighting to the setting you want to select.

Example: The following is the submenu that appears when “Display Sequence Setup” is selected in step 2, above.

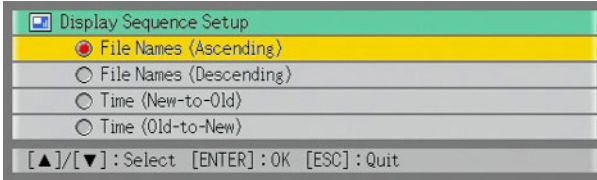

- c. Press the [ENTER] key.
 - This will return to the Viewer setup menu.

If [ENTER] is not displayed:

Press the [◀] or [▶] key to select the setting you want (so its button is ●).

4 Repeat steps 4 and 5 to configure other settings, if you want.


5 After all the settings are the way you want, press the [MENU] key to exit the Viewer setup menu.

To restore all settings on the Viewer setup menu to their initial factory defaults

1 Press the [MENU] key to display the Viewer setup menu.

2 Press the [▼] key to move the highlighting to “Initialize Viewer Setup” and then press the [ENTER] key.

- This displays the dialog box shown below.

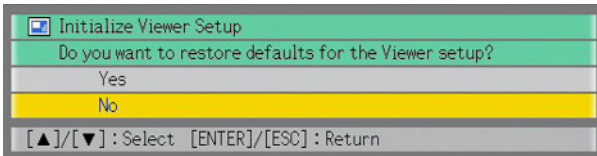

3 Use the [▲] key to select “Yes”.

4 To restore all the settings to their initial defaults, press the [ENTER] key.

- To exit the operation without doing anything, press [ESC] instead of [ENTER].

5 To exit the Viewer setup menu, press the [ESC] key.


Viewer Setup Menu Contents

This section provides detailed explanations of all of the items included on the Viewer setup menu.

Setting Name	Description
Image Zoom	<p>In the case of image sizes other than XGA, specifies whether or not to enlarge or reduce (zoom) images to fit the projection area.</p> <p>Zoom: Turns on image zooming.</p> <p>No Zoom: Turns off image zooming.</p>
Display Sequence Setup	<p>Specifies the sequence of images in the file menu or presentation menu.</p> <p>File Names (Ascending): Displays files in file name ascending order.</p> <p>File Names (Descending): Displays files in file name descending order.</p> <p>Time (New-to-Old): Displays files by the time they were last modified, from the newest to the oldest.</p> <p>Time (Old-to-New): Displays files by the time they were last modified, from the oldest to the newest.</p>
Startup Mode	<p>Specifies whether the initial view when Viewer is started up is the thumbnail view or tree view. See "File Menu Operations" (page 30) for more information.</p> <p>Thumbnails: Specifies thumbnail view.</p> <p>Tree: Specifies tree view.</p>
Image Switching	<p>Specifies the slideshow image change method.</p> <p>Manual: Specifies manual image change.</p> <p>Auto: Specifies auto image change.</p>
Slideshow Display Interval	<p>Specifies how long each image will remain displayed during a slideshow.</p> <p>5 seconds, 10 seconds, 30 seconds, 1 minute, 5 minutes</p>
Slideshow Transition Effect	<p>Specifies the image transition effect to be used during a slideshow. For more information see "Image Transition Effects" (page 24).</p> <p>Off, Slide In - Left to Right, Slide In - Right to Left, Slide In - Top to Bottom, Slide In - Bottom to Top, Wipe - Left to Right, Wipe - Right to Left, Wipe - Top to Bottom, Wipe - Bottom to Top, Dissolve</p>

Setting Name	Description
Slideshow Repeat	<p>Specifies whether or not slideshows and movie file playback should repeat when the end it reached.</p> <p>On: Slideshows and movie playback are repeated.</p> <p>Off: Slideshows and movie playback are not repeated.</p>
Movie Display	<p>Specifies the display size during movie playback.</p> <p>Zoom: Enlarges to the size of the projection area.</p> <p>No Zoom: Specifies the original size of the movie file.</p>
Initialize Viewer Setup	<p>Returns all Viewer setting menu items to their initial default settings. For details, see "To restore all settings on the Viewer setup menu to their initial factory defaults" on page 42.</p>

Viewer Error Messages

Message	Cause	Required Action
There is a problem with the slideshow setup file. Cannot start the slideshow.	There is some problem with the presentation file created with EZ-Converter.	Use EZ-Converter to regenerate the entire set of presentation data (presentation file and image files) and save the new data to the USB memory device.
Folder does not contain any image files.	There is no displayable folder, image file, or movie file in the folder you are trying to access with Viewer.	<ul style="list-style-type: none"> ● Use EZ-Converter to generate presentation data and save it to the USB memory device. ● Copy image files or movie files from your computer to the folder on the USB memory device.
Cannot display an image file.	The image file cannot be displayed because it is too large to display within the projection area or because there is something wrong with it.	<p>Make sure the image files on the USB memory device are no larger than 6 Mbytes.</p> <p> Important! _____ Progressive JPEG image files are not supported.</p>
Could not find an image file.	One or more image files that were saved as presentation data cannot be found.	Use EZ-Converter to regenerate the entire set of presentation data (presentation file and image files) and save the new data to the USB memory device.
This movie file cannot be played back.	The file you are trying to play back is an unsupported format or there is something wrong with it.	<ul style="list-style-type: none"> ● Convert the unsupported file to a file format that is supported and copy it to the USB memory device. ● Copy a movie file that is a format supported by Viewer to the USB memory device.

Viewer Troubleshooting

Some folders and/or files are not displayed in the file menu

- All the folders and/or files contained in a folder will not be displayed if there are more than 999 folders and/or files inside the folder. If this happens, reduce the number of folders and/or files in the folder.
- Viewer supports up to 10 folder nesting levels on a USB memory device. Anything past the 10th nested folder is not displayed by Viewer.

How can I get images to appear more quickly?

When you select a BMP image or a large image file recorded with a digital camera on the Viewer's image menu, it takes considerable time before the image appears. To ensure that images appear quickly during your presentation, use EZ-Converter to convert the images to presentation data. This will cause images to be converted to JPEG images, which appear on the display more quickly.

I am having a hard time getting the results I want when playing a slideshow.

- Use EZ-Converter to convert the images you want to use in the slideshow to presentation data.
- In order to start a slideshow by highlighting an image file in a folder that is not a presentation data folder, you first need to use the Viewer Setup menu to configure slideshow settings (Slideshow Display Interval, Slideshow Transition Effect, Image Switching, Slideshow Repeat).

This section explains how to establish a wireless LAN connection between the YP-100 and a computer and project the computer's screen contents over the wireless LAN.

Supported Wireless LAN Devices

CASIO YW-2S wireless adapters are required in order to establish a wireless LAN connection between a computer and the YP-100. The YW-2S package includes two YW-2 USB type wireless adapters, one for the YP-100 and one for the computer.



Important!

- Note that use of any other wireless adapter besides the YW-2 is not supported.
- Use of the stickers that come with the YW-2 Wireless LAN adapter is not necessary when you connect a YW-2 to the YP-100.

Computer Requirements

In addition to the “Minimum System Requirements” (page 10), the computer must also conform to any one of the following in order to establish a wireless LAN connection with the YP-100.

- a. YW-2 wireless adapter plugged into a USB port
 - b. Built-in wireless LAN function conforming to IEEE 802.11b standard
 - c. Add-on wireless LAN function (other than YW-2) conforming to IEEE 802.11b standard
- All of the explanations in this manual are based on a computer that conforms to “a. YW-2 wireless adapter plugged into a USB port”.



Important!

There is no guarantee that all computers conforming to one of the above conditions will be able to establish a wireless LAN connection with the YP-100.

Preparing the Computer for Wireless LAN Connection with the YP-100

Before attempting the operations in this section, be sure to prepare the computer by following the steps below.

If you are using the YW-2 wireless adapter

- 1** On your computer, install “Wireless Connection” from the CD-ROM that comes bundled with the YP-100.
 - For more information, see “Installing YP-100 Software” (page 10).
- 2** Connect the YW-2 wireless adapter to your computer’s USB port.

If you are using another wireless LAN adapter (including a computer’s built-in wireless LAN)

- 1** Make sure that the wireless LAN of the computer (either a built-in wireless LAN or add-on wireless LAN) conforms to the IEEE 802.11b standard.
- 2** On your computer, install “Wireless Connection” from the CD-ROM that comes bundled with the YP-100.
 - For more information, see “Installing YP-100 Software” (page 10).

Wireless Function and Wireless Connection Software

The YP-100 has a built-in function named “Wireless”, which you can use to configure YP-100 settings for wireless LAN connection with a computer, and perform YP-100 operations (such as displaying connection information, switching computers when there are multiple computers connected over a wireless LAN, etc.) after a connection is established. Wireless starts up automatically whenever you connect a CASIO YW-2 wireless adapter to the YP-100's USB port.

Wireless Connection is software that runs on a Windows computer. It lets you configure computer settings for wireless LAN connection with the YP-100, and perform computer operations (such as sending computer screen contents to the YP-100) after a connection is established. You can also use Wireless Connection to display the “Web Setup” page for configuring advanced wireless LAN connection settings (see “Advanced Wireless LAN Connection Settings” on page 64).

About Connection Profiles

A setup for a wireless LAN connection is called a “connection profile”. There are two types of connection profiles: “simple connections” and “manual connections”.

The YP-100 comes with a following connection profiles built in. You can use the YP-100's Wireless function to switch the current connection profile. Since Wireless Connection is already equipped with the same Simple Connection 1, 2, and 3 profiles as the Wireless function, all you need do is select the same profiles with Wireless and Wireless connection to establish a wireless LAN connection. Note, however, that this is true only when a CASIO YW-2 wireless adapter is connected to the computer.

Connection Profile	Initial Profile Name	Description
Simple Connection 1	—	These profiles mainly are for establishing a simple connection between the YP-100 and a single computer with a CASIO YW-2 wireless adapter. The settings of these profiles are fixed and cannot be changed.
Simple Connection 2	—	
Simple Connection 3	—	
Manual Connection 1	Sample 1	These profiles mainly are for wireless LAN connection of multiple computers to the YP-100 at the same time. The initial default setup of each profile can be used to configure a wireless LAN connection, or you can modify the settings of a profile to improve security and save the profile under a new name.
Manual Connection 2	Sample 2	
Manual Connection 3	Sample 3	

Establishing a Wireless LAN Connection between the YP-100 and a Computer

The method you should use to establish a connection between the YP-100 and a computer depends on the type of connection you want to establish. One important consideration is whether you want to use a Simple Connection or a Manual Connection profile.

■ One YP-100 unit and One Computer

In this case, connect using Simple Connection. Make sure that the same Simple Connection profile (Simple Connection 1 or Simple Connection 2, Simple Connection 3) is selected on both the YP-100 and on the computer.

If there are multiple 1-to-1 wireless LAN connections in the same area, use a different connection profile (Simple Connection 1, Simple Connection 2, Simple Connection 3) for each one.

For more information, see “Establishing a Wireless LAN Connection with a Single Computer Using a Simple Connection” (page 52).

■ One YP-100 unit and Multiple (Up to 4) Computers

Configure this connection using the Manual Connection Ad Hoc Mode. Make sure that all of the profile contents (except for the IP address) of the YP-100 and the computer are identical.

For more information, see “Establishing a Wireless LAN Connection with Multiple Computers Using a Manual Connection” (page 54).

■ Connection over a Wireless Network

Configure this connection using the Manual Connection Access Point Mode (page 80). Note that technical knowledge about network connections is required to configure a connection over a wireless network.

For information about configuring settings, see “To create a new computer connection profile” (page 74). Supplementary information is also available on the CASIO website (<http://world.casio.com/projector/support/en/>).

■ Connection Using a Notebook Computers Built-in Wireless LAN

Use Manual Connection for this type of connection. Note that technical knowledge about network connections is required to configure a connection over a wireless network.

Supplementary information is available on the CASIO website (<http://world.casio.com/projector/support/en/>).

Wireless LAN Connection Basics

This section explains the basic procedures for configuring settings for a wireless LAN connection between the YP-100 and a computer.

- This section includes the basics for establishing a wireless LAN connection between the YP-100 and a single computer, or between the YP-100 and multiple computers. For details about increasing security and settings required for connection to a wireless LAN access point, see “Advanced Wireless LAN Connection Settings” (page 64).
- For details about projection operations after establishing a connection, see “Using Wireless LAN for Projection” (page 90).



Important!

The operations described here assume that the CASIO YW-2 wireless LAN adapter is connected to the computer. In the case of a computer equipped with another manufacturer’s wireless LAN adapter or a built-in wireless LAN adapter, configure settings in accordance with the user documentation that comes with the adapter you are using.

Establishing a Wireless LAN Connection with a Single Computer Using a Simple Connection

To establish a wireless LAN connection between a single computer and the YP-100



Note


The following explains the simplest type of connection. It shows how to use the YP-100's built-in connection profile named "Simple Connection 1" to establish a wireless LAN connection with a single computer.

1 Connect the AC adaptor that comes with the YP-100 to the AC adaptor terminal, and plug the AC adaptor into a power outlet.

- This will cause the YP-100 to turn on automatically.
- This will cause the YP-100's [POWER] indicator to light green. The YP-100 logo screen also will be projected by the connected projector.

2 Connect the CASIO YW-2 wireless adapter to the YP-100's USB port.

- You could also turn on the YP-100 with the wireless adapter already connected to the USB port.
- The YP-100 will detect the wireless adapter and start up its Wireless function automatically. The message shown below will appear in the projection area.

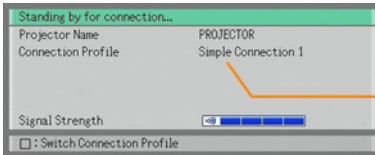

Check to make sure that "Simple Connection 1" is shown.

3 Turn on your computer and start up Windows.

4 If your computer is already connected to a network, disable the connection.

- On the Windows Control Panel, click "Network Connections" ("Network and Dial-up Connection" in the case of Windows 2000). If "Local Area Connection", "Wireless Network Connection" or "Network Bridge" is displayed on the window that appears, right-click the icon and then click "Disable" on the dialog box that appears.


5 Connect the YW-2 wireless adapter to your computer's USB port.

- The first time you connect a wireless adapter, the message shown below may appear on your computer screen. If it does, click the [Continue Anyway] button.




6 Start up Wireless Connection by double-clicking the icon on your computer desktop, or select the following from the windows Start menu: [All Programs] - [CASIO] - [Wireless Connection].

- This will cause the dialog box shown below to appear.

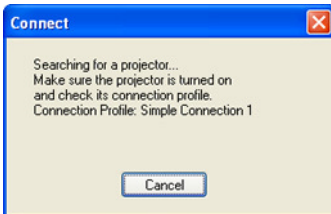

- When the computer finds the YP-100, communication will start between them.
- This will establish a wireless LAN connection between the computer and YP-100 automatically and cause the Wireless Connection window shown below to appear on the computer screen.

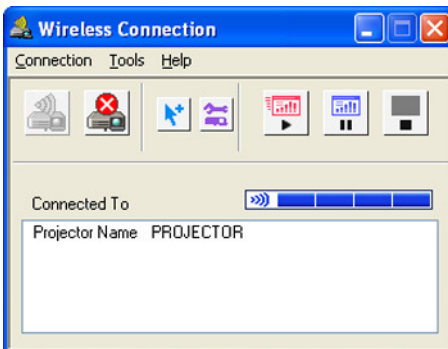

- The contents of the computer screen will be projected automatically at this time.
- For details about Wireless Connection window operations and YP-100 remote controller operations you can perform after establishing a connection, see "Using Wireless LAN for Projection" (page 90).



Note

A message like “Wireless Connection.exe is trying to access the Internet” may appear when the computer you are using has security software installed. If this happens, select “Always allow (access)” on the dialog box.

7 To terminate Wireless Connection operation, click the [x] button in the upper right corner of the Wireless Connection window or select [Exit] on the [Connection] menu.

- This will close the Wireless Connection window and terminate the connection between the computer and YP-100. At this time, the projected image will return to the message in step 2 of this procedure.



Important!

The above procedure will not establish a wireless LAN connection if the connection profile of the YP-100 is different from the profile used the first time a connection was established between the computer and YP-100 (Simple Connection 1 in this example). In this case, press the YP-100's remote controller [□] key to display the “Connection Profile” menu and then select the original connection profile (Simple Connection 1 for this example). For details, see “To switch the YP-100 connection profile” (page 68).

Establishing a Wireless LAN Connection with Multiple Computers Using a Manual Connection

This section explains how to connect up to four computers to a single YP-100 (over a wireless LAN access point) at the same time. The following are the general steps that are required.

- ① Prepare for wireless LAN connection of the YP-100 and the computers (below).
- ② Create connection profiles for the computers (page 55).
- ③ Use the Manual Connection profile to establish a wireless LAN connection between the first computer and the YP-100 (page 57).
- ④ Use the Manual Connection profile to establish a wireless LAN connection between the other computers and the YP-100 (page 62).

① To prepare for wireless LAN connection of the YP-100 and the computers

- 1 Install Wireless Connection on all of the computers.**
- 2 Connect YW-2 wireless adapters to the USB port of each of the computers.**

② To create connection profiles for the computers

1 Start up Wireless Connection on the first computer.


- Wireless Connection should start up automatically when you connect the YW-2 wireless adapter to the computer's USB port. If it does not, go to the Windows [Start] menu and select [All Programs] - [CASIO] - [Wireless Connection].

2 On the Wireless Connection window of the first computer, select "Switch Connection Profile" on the "Connection" menu.

- This will display a dialog box for switching the connection profile.

3 Click the [New] button.

- This will display a dialog box for configuring a new manual connection profile.

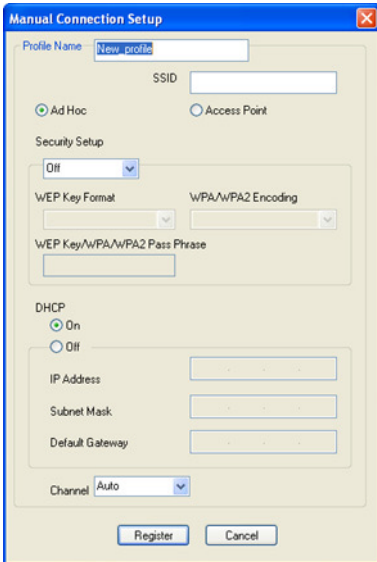

The image shows a "Manual Connection Setup" dialog box with the following fields and options:

- Profile Name:
- SSID:
- Connection Type: Ad Hoc, Access Point
- Security Setup:
 - Security:
 - WEP Key Format:
 - WPA/WPA2 Encoding:
 - WEP Key/WPA/WPA2 Pass Phrase:
- DHCP: On, Off
- IP Address:
- Subnet Mask:
- Default Gateway:
- Channel:
- Buttons: Register, Cancel

4 Configure the settings on the dialog box.

- In this example, we will use the following settings.

Dialog Box Item	Setting
Profile Name	Test
SSID	CASIO_DPJ
Access Mode	Ad Hoc
Security Setup	WEP
WEP Key Format	ASCII/128bit
WEP Key/WPA/WPA2 Pass Phrase	1234567890abc
DHCP	Off
IP Address	192.168.100.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
Channel	Auto

- For details about each of the settings on the dialog box, see “Manual Connection Setting Reference” (page 79).

5 After configuring all of the settings you want, click the [Register] button.

6 On the confirmation dialog box that appears, click the [OK] button.

- This will register your settings as a new connection profile (named “Test” here) and return to the connection profile switching dialog box in step 1. The newly created profile (Test) will be selected on the dialog box.

7 Repeat steps 1 through 5 for all of the other computers.

- For the settings in step 4, simply change the IP address as shown below.
Computer 2: 192.168.100.10
Computer 3: 192.168.100.11
Computer 4: 192.168.100.12

③ To use the Manual Connection profile to establish a wireless LAN connection between the first computer and the YP-100



Note

Perform the following steps while the connection profile dialog box is on the display at the end of the procedure under “② To create connection profiles for the computers” (page 55).

1 Use the Simple Connection profile to establish a wireless LAN connection between the first computer and the YP-100.

- See “Establishing a Wireless LAN Connection with a Single Computer Using a Simple Connection” on page 52 for more information.
- If a Simple Connection is already established between the first computer and the YP-100, proceed to step 2.


2 On the Wireless Connection window of the first computer, select “Switch Connection Profile” on the “Connection” menu.

- This will display a dialog box for switching the connection profile.

3 Click the “Profile Name” down arrow button and then select “Test” from the menu that appears.


4 Click the [Send Settings] button.

- This will display a dialog box for sending the setup.

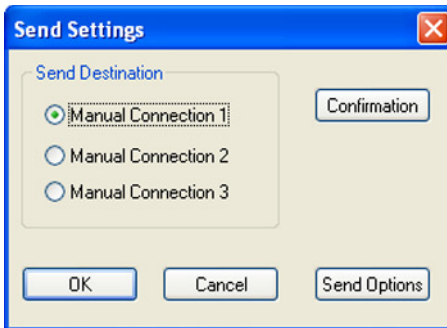

5 Select “Manual Connection 1” for “Send Destination”, and then click the [OK] button.

- This will display a dialog box prompting you to enter the current password.

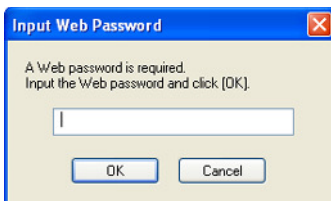

- Enter the password that you use when logging in to Web Setup (page 64). The initial default password is “casio”.

6 Enter the password and then click the [OK] button.


7 Keep clicking the [OK] button on the dialog boxes that appear.

- Clicking the [OK] button in response to the “Overwrite it?” message will cause the settings of the first computer to be sent to the YP-100. At this time, the Manual Connection 1 settings of the YP-100 will be overwritten with the “Test” settings of the connection profile of the computer (see step 3 above). The IP address setting will be the IP address of the computer’s connection profile plus 1.

8 To return to the Send Settings dialog box, click the [Cancel] button.


9 Click the [Close] button.

- This will cause the dialog box shown below to appear.

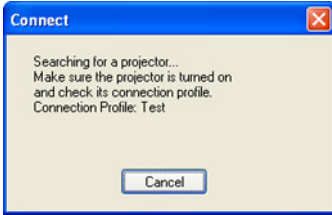


10 On the YP-100 remote controller, press the [□] key.

- This will cause the connection profile menu to appear in the projection area.

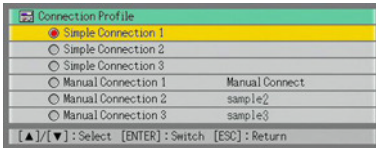


11 Use the [▼] key to move the highlighting to “Manual Connection 1” and then press the [ENTER] key.

- This will display the dialog box shown below.

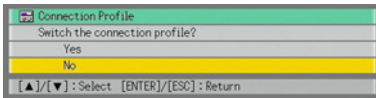

12 Press the [▲] key to move the highlighting to “Yes” and then press the [ENTER] key.


- This will cause the message shown below to appear in the projection area.

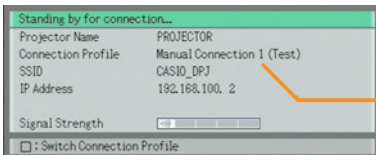

Check to make sure that “Manual Connection 1 (Test)” is shown.

13 Check the message that appears on the computer screen.


- When the computer finds the YP-100, the display will change to a dialog box like the one shown below for selecting the connected device.

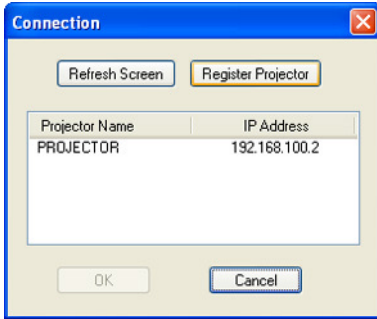

If there are other YP-100 units (or XJ-S35 Data Projectors) with wireless adapters connected in the area, all of them that are detected will appear in the list.

14 Move the highlighting to the YP-100 unit to which you want to connect and then click the [OK] button.


- The computer will connect with the YP-100 and the above dialog box will close. Confirm that the “Connection Profile” setting for the connected device information on the Wireless Connection window shows “Manual Connection 1” (Test).

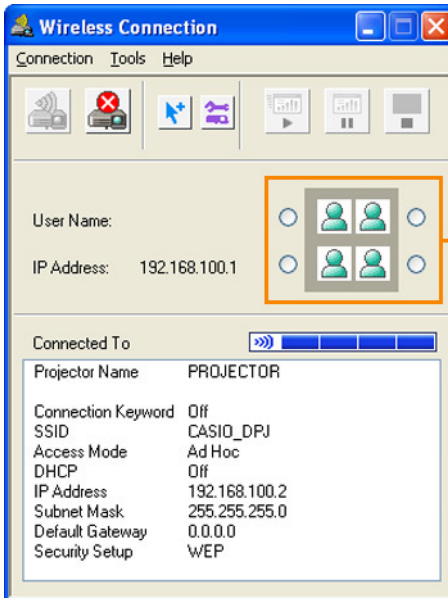

Projection area position buttons
(Used in step 18).

15 On the **Wireless Connection** window, select **“Options”** on the **“Tools”** menu.


- This will display a dialog box for configuring the option setting.

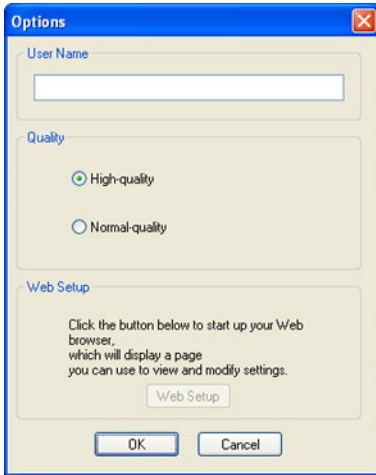


16 In the **“User Name”** box, enter the user name (the name you want to appear in the projection area when projecting the screen contents of this computer) for the computer whose settings you are configuring.

- You can input up to 10 characters for the user name.

17 Click the **[OK]** button.

18 On the Wireless Connection window, click one of the projection area position buttons and then click the  button.

- This will cause the contents of the computer screen to be projected so they fill the entire projection area. At this time the user name will appear in the upper left corner of the projection area.

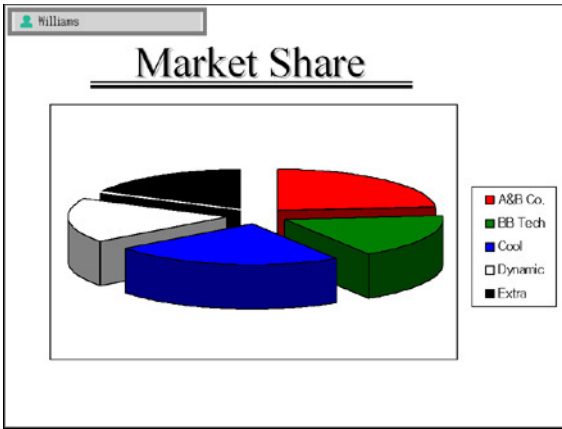

19 On the YP-100's remote controller, press the [○] key.

- This will display a user menu like the one shown below. You can use the user menu when multiple computers are connected to the YP-100 to select which computer's screen image will fill the entire projection area. The location of each computer's image on the user menu screen will be in accordance with the projection area position button you selected for the computer.



User Names

"Not connected" appears in place of the user name for all positions that do not have a computer assigned using the projection area position buttons.

④ To use the Manual Connection profile to establish a wireless LAN connection between the other computers and the YP-100



Note

Perform the following steps after finishing the procedures under “② To create connection profiles for the computers” (page 55) and “③ To use the Manual Connection profile to establish a wireless LAN connection between the first computer and the YP-100” (page 57).


1 On the connection profile switching dialog box for each of the other computers, click the “Profile Name” down arrow button and then select “Test” from the menu that appears.

2 Click the [Close] button.

- This will cause the dialog box shown below to appear.





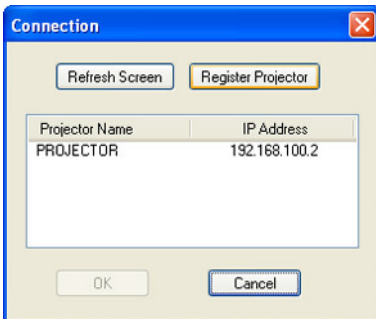

- When the computer finds the YP-100, the display will change to a dialog box like the one shown below for selecting the connected device.



3 Move the highlighting to the YP-100 unit to which you want to connect and then click the [OK] button.

- The computer will connect with the YP-100 and the above dialog box will close. Confirm that the “Connection Profile” setting for the connected device information on the Wireless Connection window shows “Manual Connection 1 (Test)”.

- 4** On the **Wireless Connection** window, select **“Options”** on the **“Tools”** menu.
 - This will display a dialog box for configuring the option setting.
- 5** In the **“User Name”** box, enter the user name (the name you want to appear in the projection area when projecting the screen contents of this computer) for the computer whose settings you are configuring
 - You can input up to 10 characters for the user name.
- 6** Click the **[OK]** button.
- 7** On the **Wireless Connection** window, click one of the projection area position buttons and then click the  button.
 - A projection area that is available for selection is indicated by , while an area that is already selected is indicated by . You can select any one of the areas that has  indicated.
 - The screen contents of the second computer will appear in the area of the projection area position button you select here.
- 8** Repeat steps 1 through 7 for the third and fourth computers.
 - The screen contents of the third and fourth computer will appear in the area of the projection area position buttons you select here.



- 9** To use the entire projection area to display a particular computer’s screen image, use the cursor keys to move the highlighting to the desired image and then press the **[ENTER]** key (or **[○]** key).
 - This will cause the contents of the highlighted computer screen to fill the entire projection area.
 - For details about Wireless Connection window operations and YP-100 remote controller operations you can perform after establishing a connection, see “Using Wireless LAN for Projection” (page 90).

Advanced Wireless LAN Connection Settings

This section explains how to configure advanced settings for a wireless LAN connection between the YP-100 and a computer.

- All of the operations in this section assume that you have already configured the settings under “Wireless LAN Connection Basics” (page 51).
- For details about projection operations after establishing a connection, see “Using Wireless LAN for Projection” (page 90).

Web Setup


In order to modify the settings of a YP-100 manual setup profile and to configure advanced settings of other YP-100 settings, you need first to display a special web browser page named “Web Setup” on you computer screen. To display Web Setup, use a web browser running on a computer that is connected to the YP-100 over a wireless LAN.


To display and log into the Web Setup page

1 Use the Simple Connection profile to establish a wireless LAN connection between a computer and the YP-100.

- See “Establishing a Wireless LAN Connection with a Single Computer Using a Simple Connection” on page 52 for more information.
- If a Simple Connection is already established between the first computer and the YP-100, proceed to step 2.

2 On the Wireless Connection window of the computer, click the button.

- This will start up the computer’s default browser and display an initial page like the one shown below.
- The Web Setup page may not appear if your browser is running already. In this case, quit the browser and then click the  button again.

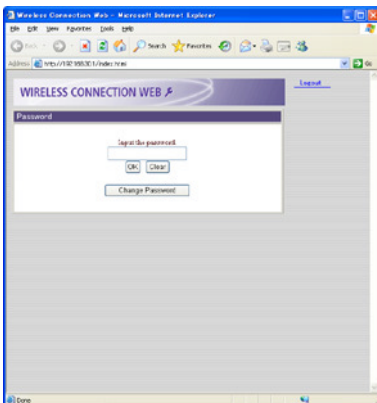

3 Enter the password and then click the [OK] button.

- The initial default password is “casio”.
- The above step will display the Web Setup top page like the one shown below.



Note

- For security reasons, be sure to change the password to something else as soon as possible. For details, see “To change the Web Setup login password” (page 65).
- You also can display the Web Setup page by selecting “Options” on the Wireless Connection window’s “Tools” window. On the option dialog box that appears, click the [Web Setup] button.

To log out of Web setup

Click “Logout” in the upper right corner of the page.



Note

You also will be logged out automatically if you do not perform any Web Setup page operation for about five minutes.

To change the Web Setup login password

1 On the initial Web Setup page, click the [Change Password] button.

- This will display the change password page.

2 In the “Current Password” box, enter the current password (“casio” if you have not yet changed the initial default password) and then enter the new password into the “New Password” box.

- A password must have at least four single-byte characters and it can be up to 16 characters long.

3 Input the new password again into the lower “New Password” box.

4 Click the [Change] button.

- If you input all of the required information correctly, your password will be changed and the Web Setup top page will reappear.

Enabling and Disabling Web Setup

This section explains how you can disable the Web Setup page so it is not displayed when you perform YP-100 operations. You can disable the Web Setup page when you want to restrict access to Web Setup while there are multiple computers connected to the YP-100.

To enable and disable Web Setup

1 While **Wireless** is shown in the projection area, press the [MENU] key on the YP-100 remote controller.

- This will display the Wireless setup menu.



2 Press the [▼] key to move the highlighting to “Web Setup”.

3 Use [▶] and [◀] to select “Enable” or “Disable”.

- Selecting “Disable” will make it impossible to access the Web Setup page from any computer.

4 To exit the Wireless setup menu, press the [ESC] key.

Switching the YP-100 Connection Profile

The YP-100 uses one of its six connection profiles to connect to a computer over a wireless LAN. You can use the following procedure to switch the connection profile as required.

To view the YP-100's current connection profile information

1 While Wireless is shown in the projection area, press the [FUNC] key on the YP-100 remote controller.


- This will display the Wireless function menu.



- The contents of the Wireless function menu will differ according to the operational status of the YP-100 when you press the [FUNC] key. The above example shows the menu when the [FUNC] key is pressed while “Standing by for connection...” is displayed in the projection area.

2 Check to make sure that “View Connection Info” is selected and then press the [ENTER] key.

- This will display the connection information window, which shows the currently selected profile and the settings of the profile.

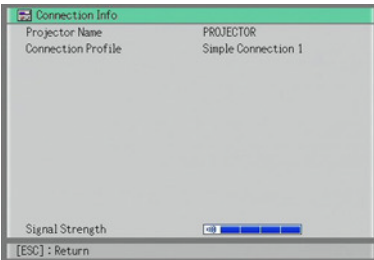

(Simple Connection Profile)



(Manual Connection Profile)

3 To close the connection information window, press the [ESC] key of the YP-100 remote controller.




Note

You can also view the YP-100's current connection profile information using the Web Setup top page. For more information, see “To display and log into the Web Setup page” (page 64).

To switch the YP-100 connection profile


- 1 On the YP-100 remote controller, press the [□] key.
 - This will cause the connection profile menu to appear in the projection area.

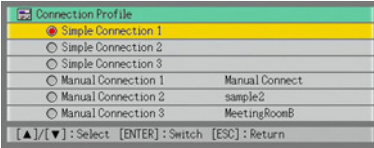

The currently selected connection profile is highlighted.


- 2 Use the [▼] and [▲] keys to move the highlighting to the connection profile you want to select and then press the [ENTER] key.

- This displays the dialog box shown below.

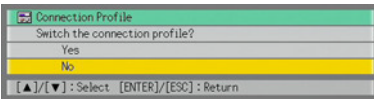

- 3 Press the [▲] key to move the highlighting to “Yes” and then press the [ENTER] key.

- This will switch to the YP-100 connection profile you highlighted in step 2 and then display the “Standing by for connection...” message.

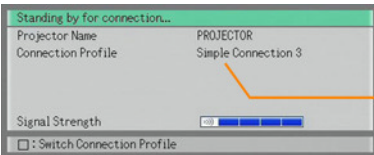

This is the display of the connection profile name after switching.


To use Web Setup to modify the YP-100 connection profile from a computer



Important!

Performing the procedure below will terminate the current wireless LAN connection between the YP-100 and computer. To re-establish a connection, reconfigure the computer's wireless LAN settings so they match those of the new YP-100 connection profile.

- 1 Perform the procedure under “To display and log into the Web Setup page” (page 64) to display the Web Setup top page.
- 2 Click the “Connection Profile” down arrow button and then select the connection profile you want from the menu that appears.

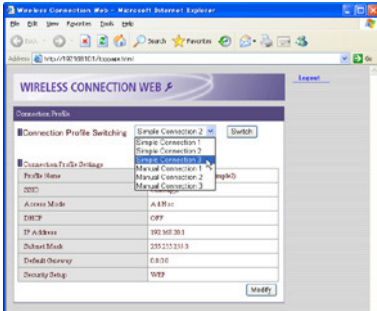

- 3 Click the [Switch] button.

- This will display the following message on the Web Setup page.

The connection profile has been changed.
Switch the settings on the computer and then re-connect.

- 4 Click the [OK] button.

- This will switch the YP-100 to the connection profile you selected in step 2 and terminate the current wireless LAN connection between YP-100 and computer.
- At this time, the message “Standing by for connection..” will appear in the projection area, along with the connection profile you switched with “Connection Profile” in step 2 above.


Assigning a Name to a YP-100 Unit

You can use Web Setup to assign a unique name to each YP-100 unit, which comes in handy when you are using multiple YP-100 units. The projector name you assign is displayed in the following locations.

- In the “Projector Name” box of the Wireless “Standing by for connection...” message
- In the “Projector Name” box of the Wireless Connection data window (page 67)
- In the “Projector Name” box of the Wireless Connection window (page 53)
- In the “Projector Name” box of the Connection dialog box (page 58)

To assign a name to YP-100 unit

- 1** Perform the procedure under “To display and log into the Web Setup page” (page 64) to display the Web Setup top page.
- 2** In the “Projector Setup” area, click the [Edit] button.
 - This will display a projector setup page.

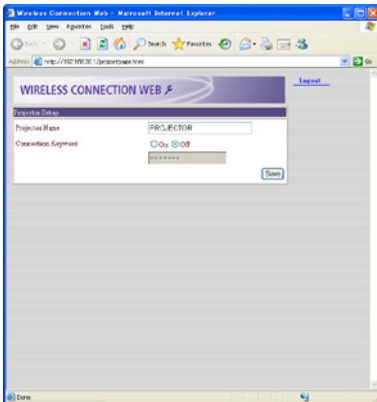

- 3** Enter up to 12 characters for the name into the “Projector Name” box.
- 4** Click the [Save] button.



Note

You also can use the projector setup page to define a connection keyword (see next page).

Configuring a Connection Keyword

A connection keyword protects the YP-100 against unauthorized access when there are multiple computers connected over a wireless LAN using a manual connection profile. You can specify whether or not input of the connection keyword is required (connection keyword on/off) to establish a wireless LAN connection with the YP-100 from a computer, and you can register and modify the connection keyword as required.

You can turn the connection keyword on or off using either Web Setup or the Wireless setup menu. Connection keyword registration and modification can be performed using Web Setup.

To modify an existing connection keyword

- 1** Perform the procedure under “To display and log into the Web Setup page” (page 64) to display the Web Setup top page.
- 2** In the “Projector Setup” area, click the [Edit] button.
 - This will display a projector setup page.
- 3** Enter up to 16 single-byte characters or symbols into the “Connection Keyword” box.
- 4** Select “On” when you want to require input for connection from a computer to the YP-100 over a wireless LAN, or “Off” to turn off the connection keyword.
- 5** After the settings are the way you want, click the [Save] button.

To turn connection keyword input on or off on the YP-100

- 1** While Wireless is shown in the projection area, press the [MENU] key on the YP-100 remote controller.
 - This will display the Wireless setup menu with “Connection Keyword” highlighted.



- 2** Use [▶] and [◀] to select “On” or “Off”.
 - Selecting “On” will require connection keyword input whenever a computer tries to connect to the YP-100.
- 3** To exit the Wireless setup menu, press the [ESC] key.

To connect to the YP-100 from a computer over a wireless LAN when connection keyword input is required


1 On the computer, perform the required operation to connect to the YP-100.

- To do this, perform the procedures under “Establishing a Wireless LAN Connection with Multiple Computers Using a Manual Connection” (page 54).

2 On the Wireless Connection window, click the button.

- This will display a dialog box for inputting a connection keyword.

3 Enter the connection keyword that is preset for the YP-100 and then click the [OK] button.

- If the input connection keyword is correct, a wireless LAN connection will be established between the YP-100 and computer and the computer screen contents will be sent to the YP-100.
- The connection keyword you input will be cleared if it does not match the one that is assigned to the YP-100. Re-enter the correct keyword.
- If you input the wrong keyword three times in a row, the connection keyword input dialog box will not appear again when you click the [OK] button on the error dialog box. To display the connection keyword input dialog box again, click the  button.

Modifying YP-100 Manual Connection Settings

The following are example cases in which you may want to modify YP-100 manual connection settings.

- When you want to configure YP-100 settings to be compatible with information configured on the wireless LAN access point you are using
- When you want to enhance security by modifying initial default settings
- When you want to establish a wireless LAN connection using a fixed IP address
- When using another manufacturer's wireless LAN adapter or a wireless LAN adapter built into the computer

You can modify manual connection settings using Web Setup.

To modify YP-100 manual connection settings



Important!

Performing the procedure below to modify the connection profile being used for the wireless LAN connection between the YP-100 and computer will terminate the current connection. To re-establish a connection, reconfigure the computer's wireless LAN settings so they match those of the new YP-100 connection profile.

- 1 Perform the procedure under “To display and log into the Web Setup page” (page 64) to display the Web Setup top page.**
- 2 In the “Connection Profile Setup” area, click the [Edit] button.**
 - This will display a dialog box for configuring the connection profile.
- 3 Click a tab (Manual Connection 1, 2, or 3) to display the connection profile whose settings you want to modify.**
- 4 Configure the settings on the tab that is displayed.**
 - For details about each of the settings on the dialog box, see “Manual Connection Setting Reference” (page 79).
- 5 To save your settings, click the [Save] button.**
 - This should cause the message “Your settings have been saved.” to appear.
 - If there is anything wrong with the settings, the message “Some input items are missing.” will appear. If this happens, click [Return] in the lower left corner of the page to return to the connection profile setup page, and correct the settings as required. When checking your settings, refer to “Manual Connection Setting Reference” (page 79).



Note

To use a modified connection profile for a wireless LAN connection, you will need to switch to the profile (unless you modified the connection profile that you are currently using). For details, see “To switch the YP-100 connection profile” (page 68).

Creating a Computer Connection Profile

After you modify the settings of the YP-100's manual setting profile, you will also need to modify the existing wireless LAN connection settings (connection profile) of the computer accordingly, or you will have to create a new connection profile. This section explains the procedure for using Wireless Connection to create a new profile or to modify the existing profile of a computer that has a CASIO YW-2 wireless adapter connected.



Important!

For the required computer wireless LAN connection settings when you are using another manufacturer's wireless LAN adapter or the computer's built-in LAN adapter, see the user documentation that comes with the wireless LAN adapter or the computer you are using.

To create a new computer connection profile



Note

This procedure shows how to create a new computer connection profile to match modifications made in the settings of the YP-100's connection profile named "Manual Connection 3". In this example, the YP-100 name (page 70) is "Projector A".


- 1 Perform the procedure under "To modify YP-100 manual connection settings" (page 73) to modify YP-100 "Manual Connection 3" profile settings as shown below.**

Dialog Box Item	Setting
Profile Name	RoomB
SSID	ROOM_B
Access Mode	Access Point
Security Setup	WPA-PSK
WPA/WPA2 Encoding	TKIP
WEP Key/WPA/WPA2 Pass Phrase	1234567890abc
DHCP	Off
IP Address	192.168.10.1
Subnet Mask	255.255.255.0
Default Gateway	(To match wireless LAN access point settings.)
Channel	Auto

- The above settings are provided as an example only. When you are establishing a wireless LAN connection using the Access Point Mode, you need to configure settings to match the actual access point. When configuring the IP address of the YP-100 (and the computer connecting to the YP-100 over the wireless LAN connection), you need to make sure that the IP address of the access point is different from all other IP addresses within the same network.
- The wireless LAN access point used for connection is also assumed to be configured with the above settings.
- For details about each of the settings on the dialog box, see "Manual Connection Setting Reference" (page 79).

2 Perform the procedure under “To switch the YP-100 connection profile” (page 68) to switch the YP-100 connection profile to “Manual Connection 3”.

- This will cause the “Standing by for connection...” screen to appear in the projection area. Confirm that the screen shows “Manual Connection 3” for the connection profile.

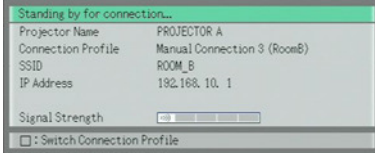


3 On the Wireless Connection window, select “Switch Connection Profile” on the “Connection” menu.

- This will display a dialog box for switching the connection profile.

4 Click the [New] button.

- This will display a dialog box for configuring a new manual connection profile.

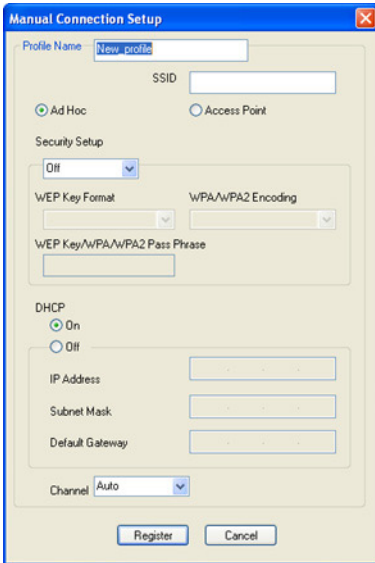

5 On the dialog box for configuring the manual connection setup, configure the settings so they are the same as those that you configured for Manual Connection 3 in step 1 of this procedure.

- Make sure that the IP address is different from the IP address you set in step 1, the IP address of the access point, and any other IP address within the same network.
- For details about each of the settings on the dialog box, see “Manual Connection Setting Reference” (page 79).


6 After configuring all of the settings you want, click the [Register] button.

7 On the confirmation dialog box that appears, click the [OK] button.


- This will register your settings as a new connection profile and return to the connection profile switching dialog box in step 1.

8 Click the [Close] button.

- This closes the connection profile switching dialog box and displays the dialog box shown below.

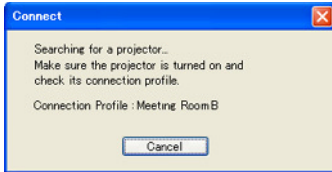


- When the computer finds the YP-100, the display will change to a dialog box like the one shown below for selecting the connected device.

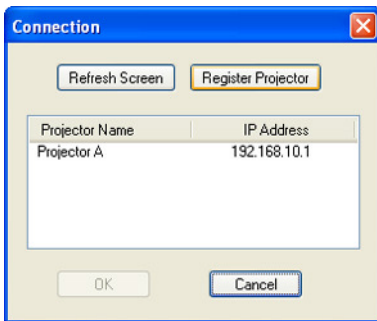


9 Move the highlighting to “Projector A” for the projector name and then click the [OK] button.


- This will establish a wireless LAN connection between the computer and YP-100.
- This will close the connected device selection dialog box and display the Wireless Connection dialog box on the computer screen.

10 On the Wireless Connection window, click one of the projection area position buttons and then click the  button.

- This will cause the contents of the computer screen to be projected so they fill the entire projection area.
- For details about Wireless Connection window operations and YP-100 remote controller operations you can perform after establishing a connection, see “Using Wireless LAN for Projection” (page 90).

To modify an existing computer connection profile

- 1 Display the Wireless Connection window by double-clicking the  icon on your computer desktop, or select the following from the windows Start menu: [All Programs] - [CASIO] - [Wireless Connection].**
 - This step is not necessary if the Wireless Connection window is already displayed.
- 2 On the Wireless Connection window, select “Switch Connection Profile” on the “Connection” menu.**
 - This will display a dialog box for switching the connection profile.
- 3 Click the “Profile Name” down arrow button and then select the connection profile you want to modify from the menu that appears.**
- 4 Click the [Change Setup] button.**
 - This will display a dialog box for configuring a new manual connection profile.
- 5 On the dialog box, modify the settings as required.**
 - For details about each of the settings on the dialog box, see “Manual Connection Setting Reference” (page 79).
- 6 After configuring all of the settings you want, click the [Register] button.**
 - This will cause the dialog box shown below to appear.

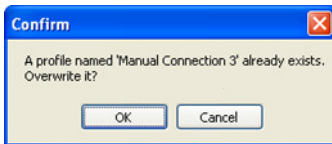


- 7 Click the [OK] button.**
 - This registers the settings you modified in the manual setting in step 5 and returns to the connection profile switching dialog box.

Deleting a Computer Connection Profile

You can use the procedure in this section to delete computer connection profiles you created with Wireless Connection when you no longer need them. Wireless Connection can also be used to delete the default connection profiles (Manual Connection 1, 2, and 3).

To delete a computer connection profile

- 1 Display the Wireless Connection window by double-clicking the  icon on your computer desktop, or select the following from the windows Start menu: [All Programs] - [CASIO] - [Wireless Connection].**
 - This step is not necessary if the Wireless Connection window is already displayed.
- 2 On the Wireless Connection window, select “Switch Connection Profile” on the “Connection” menu.**
 - This will display a dialog box for switching the connection profile.
- 3 Click the “Profile Name” down arrow button and then select the connection profile you want to delete from the menu that appears.**

- 4** After the settings are the way you want, click the [Delete] button.
- 5** To close the connection profile switching dialog box, click the [Close] button.
 - This will return to the Wireless Connection window.

Assign a User Name to a Computer for Projection

User names make it possible to identify each computer when multiple computers are connected to the YP-100 at the same time. The user name assigned to a computer will appear in the projection area when the computer's screen contents are projected. Use Wireless Connection to assign a user name to each computer.

To assign a user name to a computer for projection

- 1** On the Wireless Connection window, select “Options” on the “Tools” menu.
 - This will display a dialog box for configuring the option setting.
- 2** In the “User Name” box, enter the user name for the computer.
 - Input up to 10 characters.
- 3** Click the [OK] button.
 - This will register the user name.

Specifying the Quality of Images Sent from a Computer

Use the procedure below to specify the quality of images you send from a computer. The “High-quality” setting provides better image quality, while the “Normal-quality” setting makes the send operation faster.

To specify image quality

- 1** On the Wireless Connection window, select “Options” on the “Tools” menu.
 - This will display the [Options] dialog box.
- 2** Under [Quality], select the quality setting you want.
- 3** When the setting is the way you want, click [OK].
 - This will apply your setting.


Manual Connection Setting Reference

This section provides detailed explanations of all of the manual connection settings.

- See “To modify YP-100 manual connection settings” (page 73) for information about how to change YP-100 manual connection settings.
- For information about creating a computer manual connection setting profile for wireless LAN connection with the YP-100, refer to “To create a new computer connection profile” (page 74). For information about modifying a manual connection setting profile, refer to “To modify an existing computer connection profile” (page 77).




YP-100 Manual Connection Setting Screen
Connection Profile Setting Page

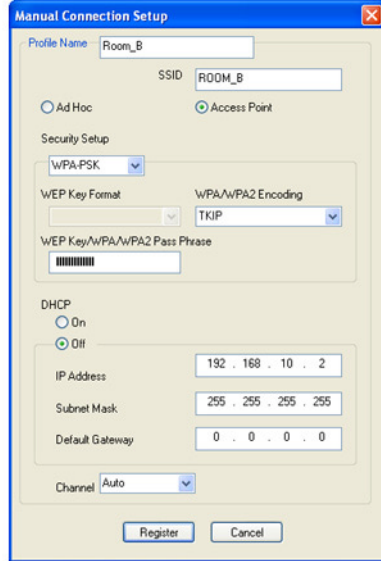

Computer Manual Connection Setting Screen
Wireless Connection Manual Connection Setting
Dialog Box

**Note**

The initial default setting for each item is indicated by an asterisk (*).

Setting Name	Description
Profile Name	This is a name assigned to identify each individual manual connection. Input up to 10 characters.
SSID	Wireless network ID name. This is normally referred to as the SSID, ESS-ID, or network name. Input up to 32 single-byte alphanumeric characters.
Access Mode	Specifies either wireless LAN connection through an access point or direct connection between the YP-100 and computer without going through an access point. Access Point: Specifies wireless LAN connection through an access point. Ad Hoc*: Specifies direct wireless LAN connection between the YP-100 and computer.
Security Setup	Specifies whether or not communication over the wireless LAN connection is encrypted. A setting to select the encryption type is also provided. The YP-100 supports three types of encryption: WEP, WPA-PSK, and WPA2-PSK. Off*: Encryption turned off. WEP: Turns on WEP encryption. When this option is selected, you also must specify a WEP key format and a WEP key. <ul style="list-style-type: none"> ● The letters “WEP” stand for “Wired Equivalent Privacy”. It is a security protocol that uses a character string to encrypt data and protect against unauthorized access to wireless communications. WPA-PSK: Turns on WPA-PSK encryption. When this option is selected, you also must specify a WPA/WPA2 encoding and a WPA/WPA2 pass phrase. <ul style="list-style-type: none"> ● The letters “WPA” stand for “Wi-Fi Protected Access”. Like WEP, it is a security protocol that encrypts communication data. WPA uses an automatically generated encryption key that is changed at preset intervals, which provides stronger security than WEP. WPA2-PSK: Turns on WPA2-PSK encryption. When this option is selected, you also must specify a WPA/WPA2 encoding and a WPA/WPA2 pass phrase. <ul style="list-style-type: none"> ● WPA2 is a new standard of WPA.  Note You cannot select WPA-PSK or WPA2-PSK when “Ad Hoc” is selected for the “Access Mode” setting.
WEP Key Format	You only need to configure this setting when “WEP” is selected for “Security Setup”. You can specify any one of the following formats for input of the WEP key. ASCII/64bit, ASCII/128bit, HEX/64bit, HEX/128bit* For more information about inputting the WEP key using the format specified here, see the “WEP Key / WPA/WPA2 Pass Phrase” item below.

Setting Name	Description
WPA/WPA2 Encoding	<p>You only need to configure this setting when “WPA-PSK” or “WPA2-PSK” is selected for “Security Setup”.</p> <p>TKIP*: Select “TKIP” as the encryption type.</p> <p>AES: Select “AES” as the encryption type.</p>
WEP Key/ WPA/WPA2 Pass Phrase	<p>Use this input box to enter a WEP key or WPA/WPA2 pass phrase. What you need to input depends on the encryption type you selected for “Security Setup”.</p> <p>● When “WEP” is selected for “Security Setup” Enter the WEP key. The WEP key character string should be input using one of the following formats, in accordance with the “WEP Key Format” setting.</p> <p>ASCII/64bit Five single-byte alpha-numeric characters (Example: “MyKey”)</p> <p>ASCII/128bit 13 single-byte alpha-numeric characters (Example: “MyKey12345678”)</p> <p>HEX/64bit 10-digit hexadecimal value (Example: 11AA22BB33)</p> <p>HEX/128bit 26-digit hexadecimal value (Example: 00112233445566778899AABBCC)</p> <p>● When “WPA-PSK” or “WPA2-PSK is selected for “Security Setup” Enter the WPA/WPA2 pass phrase (encryption key). Enter the same encryption key that is currently set on the wireless LAN access point to which you are planning to connect. You should enter at least eight and up to 63 single-byte characters, or 64-digit hexadecimal value.</p>
DHCP	<p>Specifies whether the IP address that is set manually on the device being configured (YP-100 or computer) or the IP address assigned automatically by the DHCP server should be used during wireless LAN connection.</p> <p>On*: Specifies use of the IP address assigned automatically by the DHCP server. You do not need to configure the “IP Address”, “Subnet Mask”, or “Default Gateway” settings when this option is selected.</p> <p>Off: Specifies use of the manually set IP address. You need to configure the “IP Address”, “Subnet Mask”, and “Default Gateway” settings when this option is selected.</p>
IP Address	<p>Configuration of this setting is required when “Off” is selected for “DHCP”. Enter the IP address that is assigned to the YP-100/computer. The IP address consists of four values in the range of 0 to 255, separated by periods (such as 192.168.10.3).</p>

Setting Name	Description
Subnet Mask	Configuration of this setting is required when "Off" is selected for "DHCP". Enter a subnet mask value, which specifies the range of the IP address of the subnet to which the YP-100/computer belongs. The subnet mask consists of four values in the range of 0 to 255, separated by periods (such as 255.255.255.0).
Default Gateway	Configuration of this setting is required when "Off" is selected for "DHCP". When "Access Point" is selected for "Access Mode", specify the same value as the wireless LAN access point.
Channel	<p>Configuration of this setting is required when "Ad Hoc" is selected for "Access Mode". When there is a large number of devices performing wireless LAN communication using frequencies in the same frequency band (2.4 GHz) used by the YP-100, you can improve communication performance by assigning different channels to each wireless LAN network. Normally you should leave this item set to "Auto" (initial default setting).</p> <p>Auto*: Automatically assigns a communication channel for wireless LAN communication. If "Auto" is selected on the YP-100, also select "Auto" for the computer as well.</p> <p>1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11: Specify a channel that should be used for wireless LAN communication. The same channel must be set on the YP-100 and the computer that will be communicating with each other over the wireless LAN connection.</p>

Returning YP-100's Wireless Settings to Their Initial Defaults

You can return all YP-100's Wireless function settings to their initial defaults by executing "Initialize Wireless Setup". The following are the Wireless initial default settings configured by this operation.

Dialog Box Item	Initial Default
Connection Keyword (page 71)	Off (no keyword)
Show User Name Display (page 94)	On
Web Setup (page 66)	Enable

To return YP-100's Wireless function settings to their initial defaults

1 While Wireless is shown in the projection area, press the [MENU] key on the YP-100 remote controller.


- This will display the Wireless setup menu.



2 Press the [▼] key to move the highlighting to "Initialize Wireless Setup".

3 Press the [ENTER] key.

- This displays the dialog box shown below.

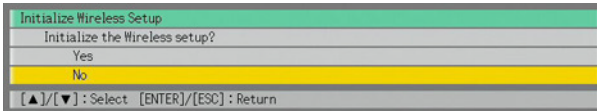

4 Press the [▲] key to move the highlighting to "Yes" and then press the [ENTER] key.

- This initializes all Wireless settings.

Viewing Wireless Connection Help

To view Wireless Connection help, select “Help” on the Wireless Connection window “Help” menu.

Viewing Wireless Connection Version Information

To view Wireless Connection version information, select “About Wireless Connection...” on the Wireless Connection window “Help” menu.

Wireless LAN Connection Troubleshooting

Whenever you experience problems with the wireless LAN connection between the YP-100 and the computer, check the following points first.

Check the following on the computer.

- **Did you disable “Network Connection” before connecting the YW-2 wireless LAN adapter to your computer’s USB port?**
On the Windows Control Panel, click “Network Connections” (“Network and Dial-up Connection” in the case of Windows 2000). If you see “Local Area Connection”, “Wireless Network Connection” or “Network Bridge” on the window that appears, right-click the icon and then click “Disable”.
- **Is a wireless LAN utility other than Wireless Connection (which comes with the YP-100) running?**
If so, shut down the other utility.

Check the following on the YP-100.

- **Is the same connection profile selected on the computer and on the YP-100?**
Wireless LAN connection is not possible when different connection profiles are selected on the computer and the YP-100 (such as “Manual Connection 1” on the computer and “Simple Connection 1” on the YP-100). Make sure the same connection profile is selected on both.

Also check the following.

- **Are the YP-100 and computer too far apart or are they separated by a wall or other barrier?**
Try moving the YP-100 and computer so they are closer to each other.
- **Is a microwave oven or a Bluetooth device being used nearby?**
Operation of a device that uses the 2.4 GHz frequency band (which is the same frequency band as the IEEE802.11b wireless standard used by the YP-100) in the vicinity of the YP-100 can cause radio interference, resulting in a wireless communication error. Avoid using the nearby microwave oven or Bluetooth device when performing YP-100 wireless LAN communication.

If the above countermeasures do not resolve your problem, try the following depending on the problem you are experiencing.

You cannot establish a Manual Connection between the YP-100 and a single computer or multiple computers.

Except for the IP address setting, all of the settings configured for the YP-100 and the computer(s) must match in order to establish a Manual Connection. Use the following procedures to display and check the YP-100 and computer settings. If there are any differences in the settings, change the settings on the computer(s) so they match. It is important to remember here, however, that the IP addresses must be different.

To check YP-100 settings

Press the [FUNC] key, confirm that “View Connection Info” is highlighted, and then press the [ENTER] key.

To check computer settings

- 1** On the Wireless Connection window, select “Switch Connection Profile” on the “Connection” menu.
- 2** On the connection profile switching dialog box that appears, click the “Profile Name” down arrow button and select the connection profile whose settings you want to view.
- 3** Click the [Change Setup] button.
 - This will display a dialog box for configuring a new manual connection profile. Use the dialog box to check the settings and make any changes that are required.



Important!

When establishing wireless LAN connections between the YP-100 and multiple computers, the YP-100 and each of the computers must have their own unique IP addresses. For example, you could assign the IP address 192.168.1.100 to the YP-100, and assign the following IP addresses to the computers: 192.168.1.10, 192.168.1.20, 192.168.1.30, etc.

When you establish a wireless LAN connection between the YP-100 and a computer, it takes a long time before the contents of the computer screen is projected.

It can take some time for a wireless LAN connection to be established between the YP-100 and computer if any other network connection besides the wireless network connection used by the YW-2 wireless adapter is enabled on the computer. If this happens, perform the following steps to disable the other network connections.

- 1 On the Windows Control Panel, click “Network Connections” (“Network and Dial-up Connection” in the case of Windows 2000).**
 - This will display a “Network Connections” window (“Network and Dial-up Connection” window).
- 2 On the window, right click any wireless network connection that is not the one being used by the YW-2 wireless adapter, and then click “Disable” on the shortcut menu that appears.**
 - The wireless network connection used by the YW-2 wireless adapter is the one with the adapter name “CASIO 802.11b/g Wireless LAN USB Adapter (3887A)”. Disable all wireless network connections that have any other name.
- 3 If you see a “Local Area Connection” on the window, right-click its icon and then click “Disable” on the dialog box that appears.**

The wireless LAN connection between the YP-100 and computer keeps dropping.

This can be caused by the following.

- Data communication can slow down and the connection may tend to drop when the YP-100 and computer are far from each other (in different rooms, on different floors, etc.) Move the YP-100 and computer as close together as possible.
- Operation of a device that uses the 2.4 GHz frequency band (which is the same frequency band as the IEEE802.11b wireless standard used by the YP-100) in the vicinity of the YP-100 can cause radio interference that results in a wireless communication error. Avoid using the nearby microwave oven or Bluetooth device when performing YP-100 wireless LAN communication.

After checking the above two points, select [Exit] on the [Connection] menu of the Wireless Connection window to exit Wireless Connection, and then restart Wireless Connection.

You cannot display the Web Setup page








The Web Setup page can be displayed only while there is a wireless LAN connection between the YP-100 and computer. Use a Simple Connection or Manual Connection to establish a wireless connection between the YP-100 and computer, and then display the Web Setup page. For more information, see “Web Setup” (page 64).

If the Web Setup page does not appear even though there is a wireless LAN connection between the YP-100 and computer, check the following points.

- The Web Setup of the YP-100 may be disabled. Use the procedure under “To enable and disable Web Setup” (page 66) to check the current setting. If it is “Disable”, change it to “Enable”.
- The browser you are using may be configured to use a proxy server. This can make it impossible to display the Web Setup page, and so the proxy server settings should be canceled. See the help and other user documentation for your browser for information about proxy server settings.

Wireless Connection Menus and Button Reference

This section provides detailed information about the Wireless Connection window menu commands and buttons.

To do this:	Perform this menu operation:	Or click this button:
Use the currently selected connection profile to open a wireless LAN connection between a computer and the YP-100	[Connection] - [Connect]	
Terminate a wireless LAN connection between a computer and the YP-100	[Connection] - [Disconnect]	
On the computer, switch the connection profile used for wireless connection between a computer and the YP-100	[Connection] - [Switch Connection Profile]	–
Terminate the wireless LAN connection between a computer and the YP-100 and quit Wireless Connection	[Connection] - [Exit]	–
Select the mouse cursor shape for the projection screen or turn mouse cursor display off	[Tools] - [Mouse Cursor Emulation]	
Display the Wireless Connection option setting dialog box (for specifying a user name or to display the Web Setup page)	[Tools] - [Options]	–
Display the Web Setup page	–	
Pause computer screen contents as they are being projected	–	
Project computer screen contents	–	
Stop projection of computer screen contents while maintaining the connection	–	
View Wireless Connection Help	[Help] - [Help]	–
View Wireless Connection version information	[Help] - [About Wireless Connection...]	–


Using Wireless LAN for Projection


This section explains operations you can perform after a connection is established between the YP-100 and computer.


For this type of connection:	Refer to this section of this manual:
Single computer connected to the YP-100 over a wireless LAN	“Operations while a Single Computer is Connected to the YP-100 over a Wireless LAN” (below)
Multiple computers connected to the YP-100 at the same time over a wireless LAN	“Operations while a Single Computer is Connected to the YP-100 over a Wireless LAN” (below) and “Operations while Multiple Computers are Connected to the YP-100 over a Wireless LAN” (page 93)


Operations while a Single Computer is Connected to the YP-100 over a Wireless LAN

To project computer screen contents

On the computer screen, click the  button on the Wireless Connection window.

- An image of the computer screen contents will be projected automatically, immediately after a connection using Simple Connection is established. This means you do not have to click the  button to project the image.

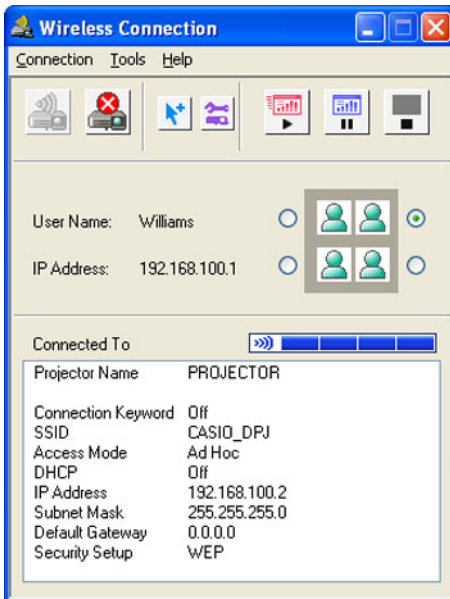



- This will send the contents of the computer screen to the YP-100, which will project it. The color of the  button at this time will change from black to green.




Note



While the computer screen contents are being projected, the mouse cursor will be displayed in accordance with the Mouse Cursor Emulation settings configured with Wireless Connection. For details, see “To display a mouse cursor in the projection area” (page 91).


To pause computer screen contents as they are being projected

On the computer screen, click the  button on the Wireless Connection window. This will cause the  button color to change from black to green, and pause the screen contents in the projection area.

To un-pause projection of the image, click the  button.

To stop projection of computer screen contents while maintaining the connection


On the computer screen, click the  button on the Wireless Connection window. This will cause the  button color to change from black to green the projection area to go black.

To resume projection of the image, click the  button.

To display a mouse cursor in the projection area

1 Click the button or select [Mouse Cursor Emulation] on the [Tools] menu.

- This will display a mouse cursor emulation dialog box.

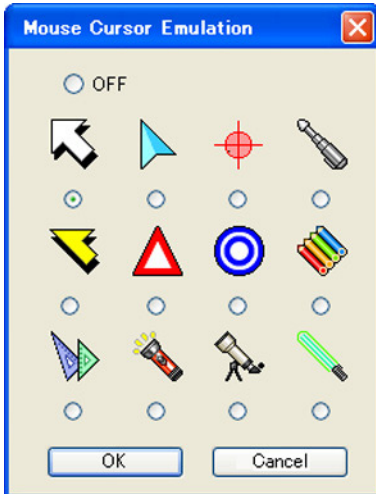

2 Select the type of mouse cursor you want to use and then click the [OK] button.


- This will display the selected mouse cursor in the projection area. The mouse cursor will be located at the same location as the mouse cursor on the computer screen.



Note


- The mouse cursor displayed using mouse cursor emulation is not the same mouse cursor as displayed on the computer screen. Wireless Connection detects the location of the mouse cursor on the computer screen and displays the mouse cursor emulation in the projection area.
- If you do not want a mouse cursor in the projection area, select “Off” in step 2 above.

To terminate the wireless LAN connection between a computer and YP-100 from the computer

On the computer screen, click the  button on the Wireless Connection window, or select “Disconnect” on the “Connection” menu.

This will terminate the wireless LAN connection between the computer and YP-100 and display “Standing by for connection...” in the projection area.

To restore the wireless LAN connection between a computer and YP-100 from the computer

On the computer screen, click the  button on the Wireless Connection window, or select “Connect” on the “Connection” menu.

Operations while Multiple Computers are Connected to the YP-100 over a Wireless LAN

While multiple computers are connected to the YP-100 over a wireless LAN, you can check which computer's screen contents currently are being projected, and you can switch projection between computer screens as required. Use the YP-100 remote controller to perform these operations.

To check which computer's screen contents currently are being projected.

On the YP-100 remote controller, press the [Δ] key. This will display the user name of the computer whose screen contents are currently being projected.

To switch projection from the screen contents of one computer to another

1 While the screen contents of one of the computer's connected over a wireless LAN connection are being projected, press the [O] key on the YP-100 remote controller.

- This will switch to the user menu that shows thumbnails of the screen contents of all the connected computers along with their user names, as shown below.



2 Use the cursor keys on the YP-100 remote controller to move the highlighting to the thumbnail you want to select.

3 Press the [ENTER] key or the [O] key.

- This will cause the contents of the selected computer screen to be projected so they fill the entire projection area.

To turn display of user names in the projection area on and off



Note

Under initial default settings, the user name is displayed in the upper left corner of the projection area whenever you switch projection from the contents of one computer screen to another, or when a single computer is connected to the YP-100 over a wireless LAN.

1 While Wireless is shown in the projection area, press the [MENU] key on the YP-100 remote controller.

- This will display the Wireless setup menu.



2 Press the [▼] key to move the highlighting to “Show User Name Display”.

3 Use [▶] and [◀] to select “On” (user name displayed) or “Off” (user name not displayed).

4 To exit the Wireless setup menu, press the [ESC] key.

This section explains how to connect the CASIO YC-400 Multi PJ Camera System (document camera) to the YP-100 in order to project the images of documents placed on the document stage of the document camera. The YP-100's built-in application named YC Camera is used to project document images.



Important!

A YC-400 document camera can be connected to the YP-100 only if the camera is running firmware version 1.1 or higher. For information about checking the firmware version of your YC-400 document camera, visit the CASIO website at: http://world.casio.com/projector/download/en/yc_400_firmap/

YC Camera Application Function and Operation Overview

YC Camera is an application built into the YP-100 that makes it possible to control the YC-400 document camera from the YP-100. With the YC Camera application you can project the image of documents placed on the document stage of the document camera. Connecting the document camera to the YP-100 USB port and turning on the document camera will cause the YC Camera application to start up automatically.

Connecting the Document Camera to the YP-100


This section provides the basic steps you need to perform in order to connect the document camera to the YP-100 and project the image of documents placed onto the document camera's document stage.

To connect the document camera to the YP-100 and project the image of a document

1 Connect the AC adaptor that comes with the YP-100 to the AC adaptor terminal, and plug the AC adaptor into a power outlet.


- This will cause the YP-100 to turn on automatically.
- This will cause the YP-100's [POWER] indicator to light green. The YP-100 logo screen also will be projected by the connected projector.

2 Connect the document camera to the YP-100 using the USB cable that comes bundled with the document camera.

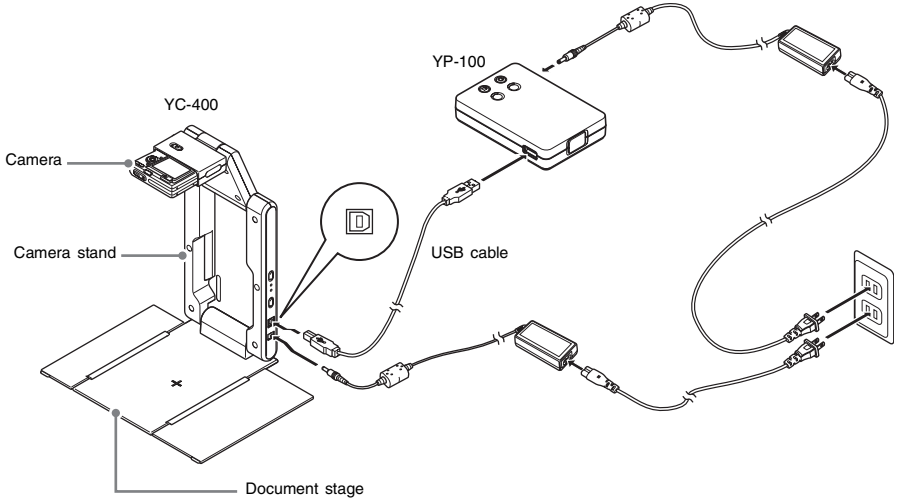

3 With nothing on the document stage, press the [⏻] (power) button on the camera stand.


- This will turn on the document camera, which will cause its lens to extend.
- The YP-100 will recognize the document camera and start up the YC Camera application automatically. When the YC Camera application starts up, the YP-100 will project an image of the document stage along with a dialog box for adjusting the document camera position.

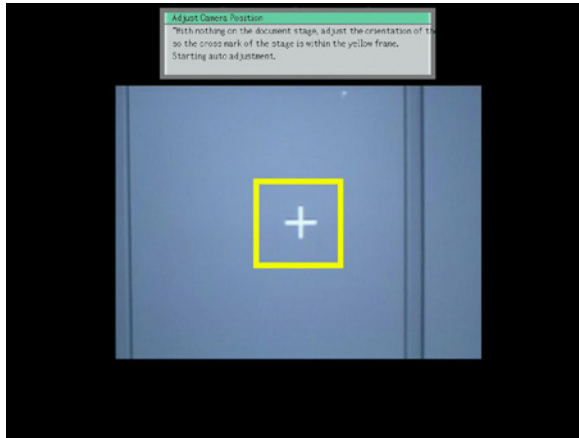

- If the document camera is positioned correctly, position adjustment will end automatically and the dialog box will close. At this time the monitor screen (the image being picked up by the document camera) will be projected.
- If the document camera is not positioned correctly, a message prompting you to adjust the document camera position will appear. Follow the instructions shown in the message to adjust the document camera position.

4 Place the document whose image you want to project onto the document camera's document stage.


- Be sure to place the document in the center of the stage, and do not let any part of the document extend off the edges of the stage.
- When placing a landscape orientation document onto the document stage, the top of the page should face towards the camera stand.
- Initially the monitor image will be projected, and so the image will appear a bit fuzzy.

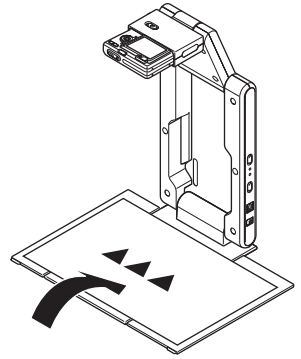

- When the document camera senses that the document on the stage is not being moved, it will record its image and switch from the fuzzy monitor image to a high-resolution image (recorded image) automatically.



Rough (Monitor) Image

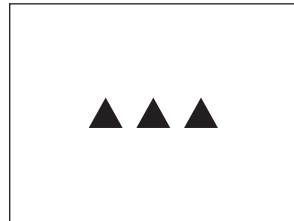

Recorded Image

5 Now you can replace the document currently on the stage with another one.

- This will switch to the recorded image of the next document automatically.



Note

Step 5 above is what happens while the YP-100's YC Camera application is configured with its initial default settings. The recorded image will not switch automatically if you have changed the "Operation Mode" setting of the YC Camera application to "Manual Capture". For more information, see "YC Camera Application Setup Menu Contents" on page 106.

YC Camera Application Operations

This section explains the various types of projection operations you can perform with the YC Camera application and how to configure YC Camera application settings.




Important!

The procedures in this section assume that you have already connected the YC-400 Document Camera to the YP-100 as explained under “Connecting the Document Camera to the YP-100” (page 95), and that the YP-100’s YC Camera application is running.

YC Camera Application Projection Operations

The operations in this section are performed using the YC Camera function menu, which appears when you press the [FUNC] key while the YC Camera application is running.

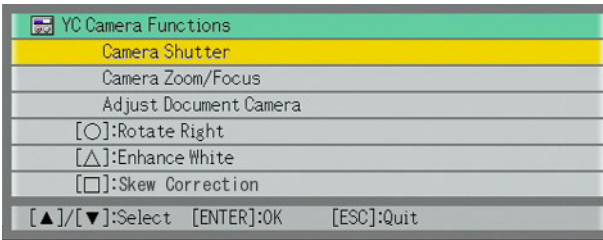

Some operations can be performed using the remote controller’s [O], [Δ], and [□] keys.

To release the document camera shutter manually

- 1 Press the [FUNC] key to display the YC Camera application function menu.**
 - The “Camera Shutter” item should be highlighted by default.
- 2 Press the [ENTER] key to release the document camera shutter.**
 - This will cause the image recorded with the document camera to be projected.




Note

While a rough monitor image or recorded image is projected, you can release the shutter manually by pressing the [ENTER] key, without pressing the [FUNC] key.

To adjust the document camera's zoom setting

- 1 Press the [FUNC] key to display the YC Camera application function menu.
- 2 Use the [▼] key to move the highlighting to “Camera Zoom/Focus” and then press the [ENTER] key.
 - This causes the YC Camera Zoom/Focus dialog box to appear in the projection area. The “Optical Zoom” item should be highlighted by default.

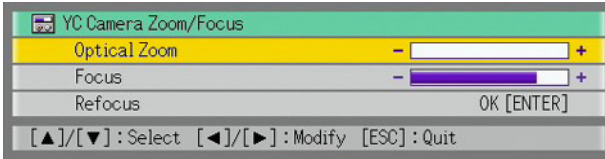

- 3 Use the [▶] and [◀] keys to adjust the document camera's zoom setting.
- 4 After the zoom setting is the way you want, press the [ESC] key.
 - This will close the YC Camera Zoom/Focus dialog box.

To adjust document focus manually

- 1 Press the [FUNC] key to display the YC Camera application function menu.
- 2 Use the [▼] key to move the highlighting to “Camera Zoom/Focus” and then press the [ENTER] key.
 - This causes the YC Camera Zoom/Focus dialog box to appear in the projection area.



- 3 Press the [▼] key to move the highlighting to “Focus”.
- 4 Use the [▶] and [◀] keys to adjust the document camera's focus.
- 5 After the focus is the way you want, press the [ESC] key.
 - This will close the YC Camera Zoom/Focus dialog box.

To adjust the camera position

- 1** Remove all documents and objects from the document stage.
- 2** Press the [FUNC] key to display the YC Camera application function menu.
- 3** Use the [▼] key to move the highlighting to “Adjust Camera Position” and then press the [ENTER] key.
 - This displays the camera position adjustment dialog box.
- 4** Point the document camera downwards so the lens is pointed towards the document stage.
 - Aim the camera as instructed by the text that appears in the projection area.



- When the document camera is positioned correctly, position adjustment will end and the dialog box will close. At this time the monitor screen (the image being picked up by the document camera) will be projected.

To rotate the currently projected image



Note

This operation will affect only the image that is currently being projected. The projection image produced the next time you release the shutter will be projected in accordance with the settings on the YC Camera Application Setup Menu (page 104).

- 1 Press the [FUNC] key to display the YC Camera application function menu.**
- 2 Use the [▼] key to move the highlighting to “Rotate Right” and then press the [ENTER] key.**
 - This will rotate the projected image 90 degrees to the right.
 - Instead of steps 1 and 2 above, you can also rotate the projected image by pressing the [○] key.

To perform white enhancement on the currently projected image



Note

- White enhancement causes the background of the projected image to be white enhanced, which helps to make the text on a document easier to read.
- This operation will affect only the image that is currently being projected. The projection image produced the next time you release the shutter will be projected in accordance with the settings on the YC Camera Application Setup Menu (page 104).



Important!

You can perform white balance only on a projected image that has been skew corrected. For more information, see the note under “To perform manual skew correction on the currently projected image” (page 103).

- 1 Press the [FUNC] key to display the YC Camera application function menu.**
- 2 Use the [▼] key to move the highlighting to “Enhance White” and then press the [ENTER] key.**
 - This will enhance the white of the projected image.
 - Instead of steps 1 and 2 above, you can also white enhance the projected image by pressing the [△] key.

To perform manual skew correction on the currently projected image




Note

- Skew correction automatically straightens the image of a document that is misaligned on the document stage of the document camera. Under its initial defaults, the YC Camera application is configured to perform skew correction automatically. You can also turn off auto skew correction. If you do, you can use the following procedure to adjust image alignment manually.
- This operation will affect only the image that is currently being projected. The projection image produced the next time you release the shutter will be projected in accordance with the settings on the YC Camera Application Setup Menu (page 104).

- 1 Press the [FUNC] key to display the YC Camera application function menu.**
- 2 Use the [▼] key to move the highlighting to “Skew Correction” and then press the [ENTER] key.**
 - This will straighten the projected image.
 - Instead of steps 1 and 2 above, you can also perform skew correction of the projected image by pressing the [□] key.

Configuring YC Camera Application Setup Menu Settings

You can use the YC Camera setup menu to configure various YC Camera application operation settings.

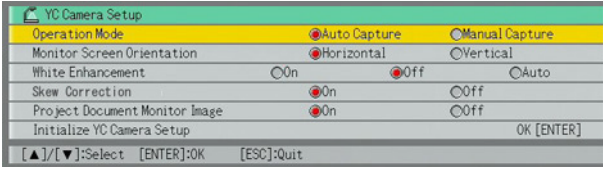

To configure YC Camera application setup menu settings

- 1 Press the [MENU] key to display the YC Camera application setup menu.
- 2 Use [▼] and [▲] to select the menu item whose setting you want to change.
- 3 Press the [◀] or [▶] key to select the setting you want (so its button is ●).
- 4 Repeat steps 2 and 3 to configure other settings, if you want.
- 5 After you are finished, press the [ESC] key to exit the setup menu.




Note

Anytime you change the “White Enhancement” or “Skew Correction” setting, the new setting goes into effect from the next image you record with the document camera after exiting the setup menu. Other settings go into effect as soon as you exit the setup menu.

To restore all settings on the YC Camera application setup menu to their initial factory defaults




- 1 Press the [MENU] key to display the YC Camera application setup menu.
- 2 Press the [▼] key to move the highlighting to “Initialize YC Camera Setup” and then press the [ENTER] key.
 - This displays the dialog box shown below.

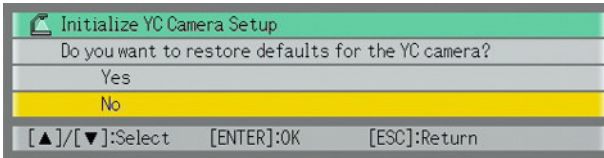

- 3 Use the [▲] key to select “Yes”.
- 4 To restore all the settings to their initial defaults, press the [ENTER] key.
 - To exit the operation without doing anything, press [ESC] instead of [ENTER].
- 5 After you are finished, press the [ESC] key to exit the setup menu.

YC Camera Application Setup Menu Contents

This section provides detailed explanations of all of the items included on the YC Camera application setup menu. The initial default setting for each item is indicated by an asterisk (*).

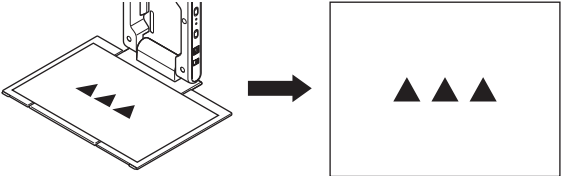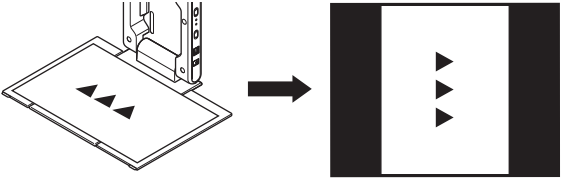Setting Name	Description
Operation Mode	<p>Specifies whether recording of documents placed on the document stage of the document camera should be performed automatically or manually.</p> <p>Auto Capture*: Automatically records the image of a document whenever it is placed on the document stage.</p> <p>Manual Capture: Requires manual release of the shutter each time a document is placed on the document stage.</p>
Monitor Screen Orientation	<p>Switches the monitor screen orientation.</p> <p>Horizontal*: Records the document on the document stage horizontally.</p>  <p>Vertical: Records the document on the document stage vertically.</p> 
White Enhancement	<p>Specifies whether or not white enhancement should be performed on the projected image.</p> <p>Off*: Turns off white enhancement.</p> <p>On: Turns on white enhancement.</p> <p>Auto: The decision whether or not to perform white enhancement is made automatically in accordance with the image being recorded.</p> <p> Important! _____ White enhancement cannot be performed while the "Skew Correction" setting is "Off".</p>


Setting Name	Description
Skew Correction	<p>Specifies whether or not skew correction should be performed automatically on the projected image.</p> <p>On*: Turns on automatic skew correction.</p> <p>Off: Turns off automatic skew correction.</p>
Project Document Monitor Image	<p>Specifies whether or not the camera's monitor image should be projected when a document is removed from the document stage.</p> <p>On*: Displays the monitor image.</p> <p>Off: Does not display the monitor image.</p>
Initialize YC Camera Setup	<p>Returns all YC Camera application setup menu items to their initial default settings. For details, see "To restore all settings on the YC Camera application setup menu to their initial factory defaults" on page 105.</p>

Specifying the Display Language


You can use the following procedure to change the display language setting of the YP-100 at any time.

To specify the display language

- 1 While there is nothing connected to the USB port of the YP-100, press the [MENU] key.
 - This will display a setup menu like the one shown below with “Language” highlighted.

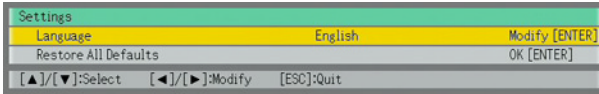

- 2 Press the [ENTER] key.
 - This displays the language selection dialog box shown below.

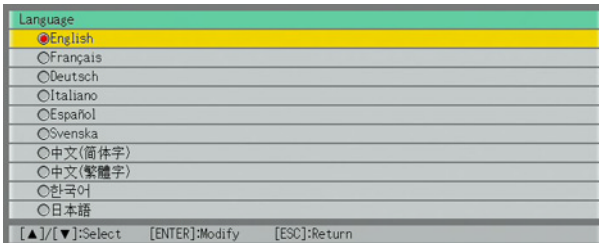


- 3 Use the [▼] and [▲] keys to move the highlighting to the language you want to select and then press the [ENTER] key.
 - Pressing the [ENTER] key will change the display language setting to the currently selected language.
- 4 After you are finished, press the [ESC] key twice to exit the setup menu.

Returning the Setup Menu to Its Initial Default Settings


You can use the following procedure to restore all of the settings on the Viewer setup menu (page 41), Wireless setup menu (page 83), and the YC Camera setup menu (page 104) to their initial default settings.

To restore all settings on the setup menu to their initial defaults

- 1** While there is nothing connected to the USB port of the YP-100, press the [MENU] key.
 - This will display the setup menu shown below.

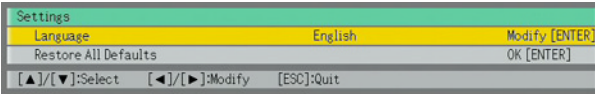

- 2** Press the [▼] key to move the highlighting to “Restore All Defaults” and then press the [ENTER] key.
 - This displays the dialog box shown below.

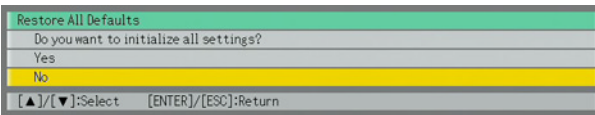


- 3** Use the [▲] key to select “Yes”.
- 4** To restore all the settings to their initial defaults, press the [ENTER] key.
 - To exit the operation without doing anything, press [ESC] instead of [ENTER].
- 5** After you are finished, press the [ESC] key to exit the setup menu.


Hanging the YP-100 from the Ceiling

The YP-100 can be hung from the ceiling or mounted on another secure surface for connection to a ceiling-mounted projector.

- For this type of installation, you will need to provide a mounting bracket for the YP-100 like the one shown in the illustration below.
- When securing the YP-100 to the bracket, use of the screws that come with the YP-100 is recommended. When required, you can also use other screws to suit the thickness of the bracket plate, etc.
- If you prefer to use other screws for anchoring the YP-100, use the following screw type.
Screw Type: M3
- Select anchor screws in accordance with the thickness of the bracket. The tip of the anchor screws should enter the holes of the YP-100 no more than 2.5 mm.

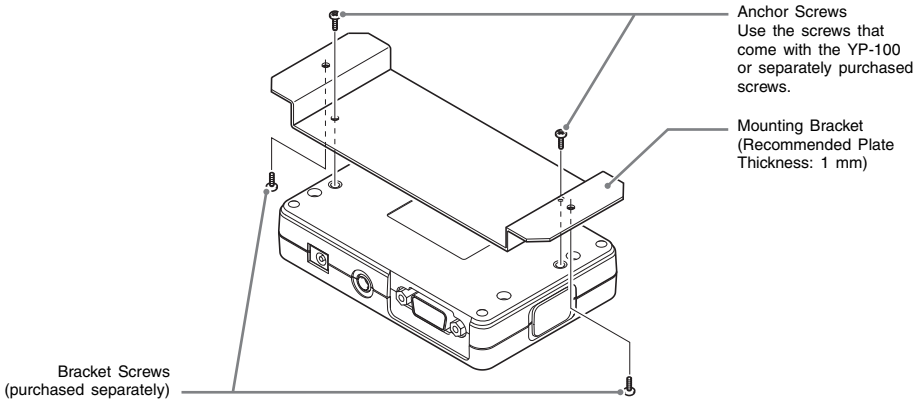

Dimensions (mm)

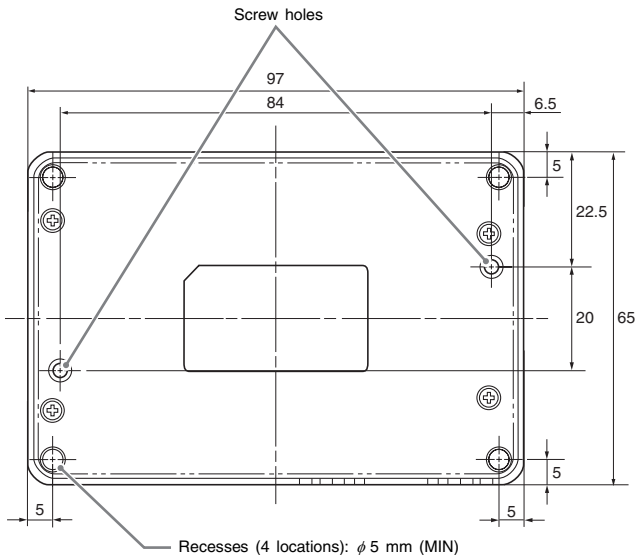



Important!

- Damage resulting from improper installation is not covered by the YP-100's warranty.
- Be sure to request the services of a qualified specialist whenever mounting or maintaining the YP-100.
- After installing the YP-100 with a mounting bracket, check the screws periodically to make sure that they are not loose.
- For full details, contact the retailer where you purchased the YP-100.

CASIO®

CASIO COMPUTER CO.,LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan